



testo printer  
0554 0549




99 Washington Street  
Melrose, MA 02176  
Phone 781-665-1400  
Toll Free 1-800-517-8431

Visit us at [www.TestEquipmentDepot.com](http://www.TestEquipmentDepot.com)

## Application Information

## Product description

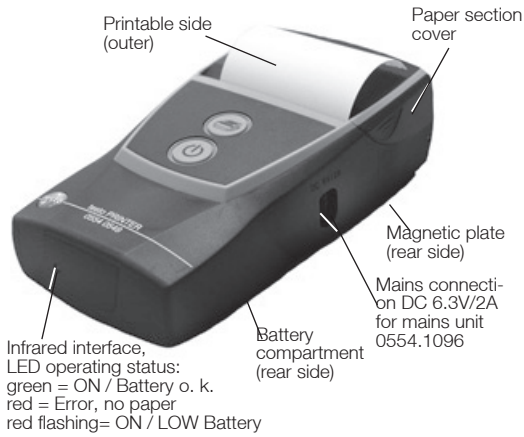

**WARNING**  
Magnetic field!  
May be harmful to those with pacemakers.  
> Keep a minimum distance of 15 cm between pacemaker and instrument.

Transmission distance



## Technical Data

Description	Values
Type	Infrared thermal printer
Operating temperature	±0...+50°C
Storage / transport temp.	-40...+60°C
Dimensions	150 x 88 x 50 mm
Weight	330g (incl. batteries)
Power supply	4 AA batteries 1,5V or mains unit from testo 330/327 (0554 1096)
EU Directive	2004/108/EEC
Warranty	2 years (excluding printing mechanism)

## Initial operation

### Inserting a paper roll

- 1 Pull up paper section cover.
- 2 Insert the paper roll, see diagram.
- 3 Close paper section cover.



### Inserting batteries

- 1 Remove screw of battery compartment.
- 2 Pull battery compartment cover up.
3. Insert four batteries (AA). Watch out for +/-.  
See inscription in the battery compartment.
- 4 Close battery compartment cover and tighten screw.

## Operation

The printer switches off after 2 minutes of inactivity.

Keep the window of the infrared interface clean.

- Switch on (press briefly). Switch off (press and hold down for 2 s).
- Printer switched on: paper feed..
- Printer switched off: self-test.  
Printer switched on: set the contrast (55%-145%).

## Accessories

Name	Article no.
Spare thermal paper (6 rolls), Measurement data documentation legible for up to 10 years	0554 0568
Mains unit 6.3V/2A	0554 1096