



# HAKKO 152

MOTOR DRIVE

## INSTRUCTION MANUAL



99 Washington Street  
Melrose, MA 02176  
Phone 781-665-1400  
Toll Free 1-800-517-8431




Visit us at [www.TestEquipmentDepot.com](http://www.TestEquipmentDepot.com)

**PLEASE READ THIS INSTRUCTION MANUAL THOROUGHLY BEFORE OPERATING THE HAKKO 152.**

## ■ OPERATING INSTRUCTIONS

1. Loosen the Setscrew with hexagon hole securing the handle of the 150B.C/151 and remove the handle.
2. Insert the coupling into the 150B.C/ 151. (where the handle was just removed) and secure it with the Setscrew with hexagon hole.
3. Remove the 4 Hexagon Headed Bolts securing the 2 securing bands and remove the bands.
4. Attach the 150B.C/ 151 coupling to the motor coupling so that the gear mesh.

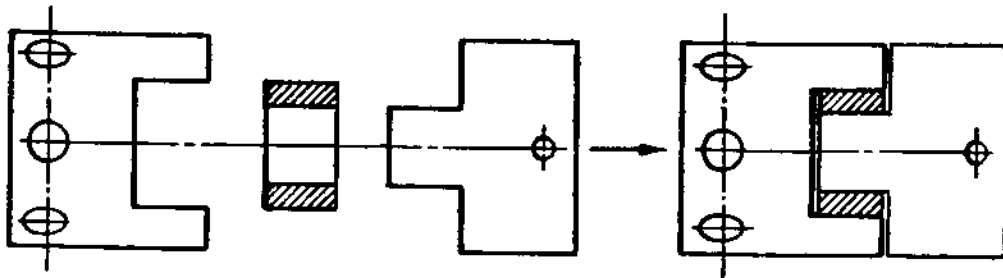

5. Secure the 150B.C./151 with the two securing bands.
6. Adjust the gearing of the 150B.C./ 151 and lead by inserting a driver or other tool into the coupling hole and rotating the tool. Finally, turn the power switch to On and adjust the Speed Control Knob.

■ SPECIFICATIONS

NAME	HAKKO 152
POWER CONSUMPTION	70W
ROTATION SPEED	40 Rpm (50Hz); 48Rpm (50Hz)
OUTER DIMENSIONS	360(W) X 150(H) X 140(D)mm [14.17 X 5.9X 5.5in]
WEIGHT	5.1kg [11.21 lbs]
PROCESSING CAPACITY (MAX.)	WITH 150B.C: 60,000pcs/hr [60Hz] 50,000PCS/hr [50Hz] with 151: 30,000pcs/hr [60Hz] 25,000pcs/hr [ 50Hz]

\*\* Specifications written here may be subject to change without notice.

■ NAMES OF PARTS

