

BK PRECISION®

Model 1747

Dual Range DC Power Supply

INSTRUCTION MANUAL



1 Safety Summary

The following safety precautions apply to both operating and maintenance personnel and must be observed during all phases of operation, service, and repair of this instrument. Before applying power, follow the installation instructions and become familiar with the operating instructions for this instrument.

GROUND THE INSTRUMENT

To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. This instrument is grounded through the ground conductor of the supplied, three-conductor ac power cable. The power cable must be plugged into an approved three-conductor electrical outlet. Do not alter the ground connection. Without the protective ground connection, all accessible conductive parts (including control knobs) can render an electric shock. The power jack and mating plug of the power cable meet IEC safety standards.

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

KEEP AWAY FROM LIVE CIRCUITS

Instrument covers must not be removed by operating personnel. Component replacement and internal adjustments must be made by qualified maintenance personnel. Disconnect the power cord before removing the instrument covers and replacing components. Under certain conditions, even with the power cable removed, dangerous voltages may exist. To avoid injuries, always disconnect power and discharge circuits before touching them.

DO NOT SERVICE OR ADJUST ALONE

Do not attempt any internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

DO NOT SUBSTITUTE PARTS OR MODIFY THE INSTRUMENT

Do not install substitute parts or perform any unauthorized modifications to this instrument. Return the instrument to B&K Precision for service and repair to ensure that safety features are maintained.

WARNINGS AND CAUTIONS

WARNING and **CAUTION** statements, such as the following examples, denote a hazard and appear throughout this manual. Follow all instructions contained in these statements.

A **WARNING** statement calls attention to an operating procedure, practice, or condition, which, if not followed correctly, could result in injury or death to personnel.

A **CAUTION** statement calls attention to an operating procedure, practice, or condition, which, if not followed correctly, could result in damage to or destruction of parts or the entire product.

WARNING: *Do not alter the ground connection. Without the protective ground connection, all accessible conductive parts (including control knobs) can render an electric shock. The power jack and mating plug of the power cable meet IEC safety standards.*

WARNING: *To avoid electrical shock hazard, disconnect power cord before removing covers. Refer servicing to qualified personnel.*

CAUTION: *Before connecting the line cord to the AC mains, check the rear panel AC line voltage indicator. Applying a line voltage other than the indicated voltage can destroy the AC line fuses. For continued fire protection, replace fuses only with those of the specified voltage and current ratings.*

CAUTION: *This product uses components which can be damaged by electrostatic discharge (ESD). To avoid damage, be sure to follow proper procedures for handling, storing and transporting parts and subassemblies which contain ESD-sensitive components.*

SAFETY SYMBOLS



Connect to safety earth ground using the wire recommended in the user manual.



This symbol on an instrument indicates that the user should refer to the operating instructions located in the manual.

Certification

We certify that this product met its published specifications at time of shipment from the factory.

Compliance Statements

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This product is subject to Directive 2002/96/EC of the European Parliament and the Council of the European Union on waste electrical and electronic equipment (WEEE), and in jurisdictions adopting that Directive, is marked as being put on the market after August 13, 2005, and should not be disposed of as unsorted municipal waste. Please utilize your local WEEE collection facilities in the disposition of this product and otherwise observe all applicable requirements.

Contents

- 1 Safety Summary 1**
- 2 Introduction 5**
- 3 Quick Reference 6**
 - 3.1 Front Panel..... 6
 - 3.2 Rear Panel..... 7
- 4 Operating Instructions..... 8**
 - 4.1 Instrument Hook-Up 9
 - 4.2 Typical Constant Voltage Operation..... 11
 - 4.3 Setting Current Limit..... 12
 - 4.4 Typical Constant Current Operation 12
 - 4.5 Constant Voltage/Constant Current Characteristic..... 13
 - 4.6 Saving the Power Supply’s Current State..... 14
 - 4.7 Connecting Two Power Supplies in Series 15
 - 4.8 Connecting Two Power Supplies in Parallel 15
- 5 Remote Operation.....17**
 - 5.1 RS232 Configuration Overview 18
 - 5.2 RS232 Commands..... 18
 - 5.3 Application Software 20
- 6 Maintenance21**
 - 6.1 Fuse Replacement..... 21
 - 6.2 Adjustments..... 22
 - 6.3 Calibration 22
 - 6.4 Instrument Repair Service 27
- 7 Error Messages28**
 - 7.1 Self-Test Errors 28
 - 7.2 Calibration Errors..... 28
 - 7.3 Command Errors..... 29
- 8 Specifications31**
- 9 Service Information33**
- 10 Limited Two-Year Warranty.....34**

2 Introduction

Description

The B&K Precision model 1747 is a general purpose dual range DC power source. This power supply can output more voltage at a lower current or more current at a lower voltage. The 1747 provides 0-60 V DC output, adjustable with both coarse and fine voltage controls for precise setting. The current output for the 1747 is 0-10 A for the 0-35 V range, and 0-5 A for the 35-60 V range, adjustable with both coarse and fine current controls.

The 1747 exhibits excellent regulation and low ripple characteristics. Its mechanical configuration conserves bench space and allows for easy portability. Additionally, the power supply can be operated locally from the front panel or remotely through the RS-232 interface.

This power supply is well suited for a wide variety of electrical and electronics applications in service shops, engineering labs, production facilities, school laboratories, and home use.

Features

- Low ripple and noise
- Excellent regulation
- Constant voltage (CV) and constant current (CC) mode operation
- Two 4-digit LED displays provide good visibility in bright or low light
- LED indication for CV and CC modes
- Automatic recall of last settings on power up
- RS-232 interface
- Isolated output
- Overload protection
- Reverse polarity protection

3 Quick Reference

3.1 Front Panel

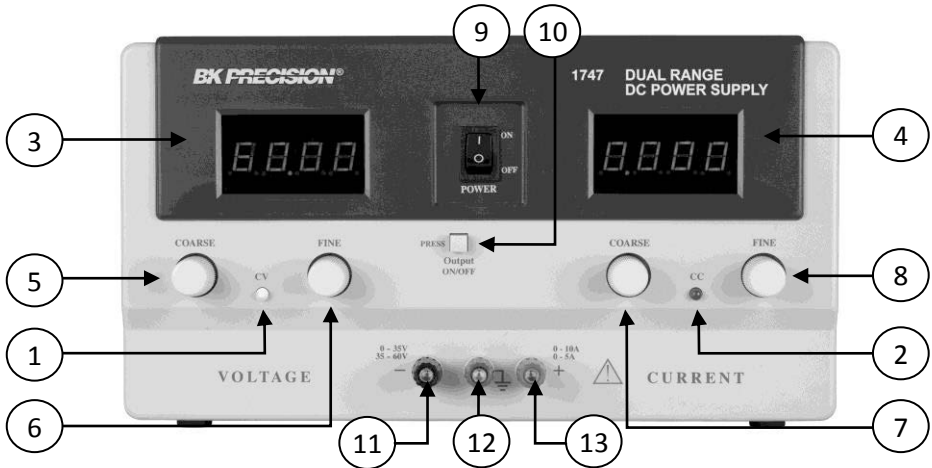


Figure 1 - Front Panel

INDICATORS

Either the CC or CV LED indicators will be lit whenever the unit is operating. The unit automatically changes from CV to CC operation when the preset current limit is reached.

- 1) CV (Constant Voltage) Indicator. The green LED is lit in constant voltage mode. Unit regulates output voltage at the value set by voltage controls.
- 2) CC (Constant Current) Indicator. The red LED is lit in constant current mode. Unit regulates output current at the value set by current controls.
- 3) Green LED Display. 4-digit display continuously monitors voltage.
- 4) Red LED Display. 4-digit display continuously monitors current.

VOLTAGE CONTROLS

- 5) Voltage Coarse Control. Coarse adjustment of output voltage. Read value on the green LED display.
- 6) Voltage Fine Control. Fine adjustment of output voltage. Read value on the green LED display.

CURRENT CONTROL

- 7) Current Coarse Control. Coarse adjustment of current limit. Read value on the red LED display.
- 8) Current Fine Control. Fine adjustment of current limit. Read value on the red LED display.

POWER CONTROLS

- 9) Power ON-OFF Switch.
- 10) Output ON-OFF Switch.

OUTPUT TERMINALS

- 11) “-” Terminal (Black). Negative polarity output terminal.
- 12) GND Terminal. Earth and chassis ground.
- 13) “+” Terminal (Red). Positive polarity output terminal.

3.2 Rear Panel

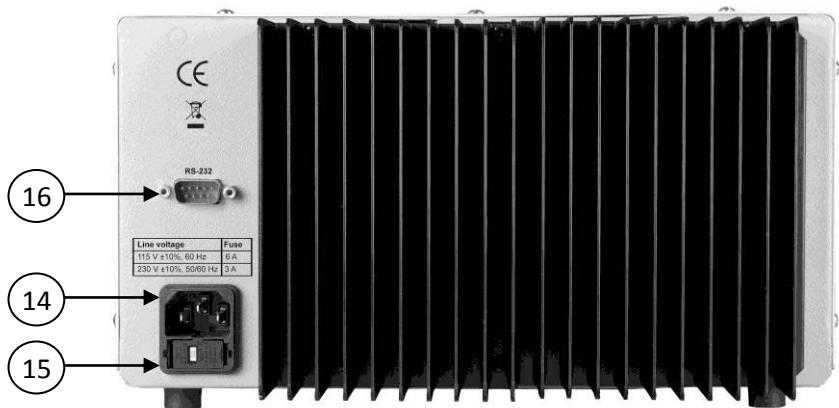


Figure 2 - Rear Panel

- 14) Power Cord
- 15) Fuse
- 16) RS-232 Interface Connector

4 Operating Instructions

Safety Precautions

Use only a polarized 3-wire AC outlet. This assures that the power supply chassis, case, and ground terminal are connected to a good earth ground and reduces danger from electrical shock.

There is little danger of electrical shock from the power supply output, which produces a maximum of 60 volts dc. However, there may be great danger of electrical shock if the power supply output is connected to an external high voltage. Some equipment being powered may contain high voltage and present a shock hazard. Observe caution. If the power supply output is floated (referenced to a voltage rather than earth ground) turn off the power supply and the equipment under test when making connections. Never float the power supply to a potential greater than 100 volts peak with respect to earth ground.

Equipment Precautions

Avoid using the power supply in ambient temperatures above +40° C. Always allow sufficient air space around the heat sink at the rear of the power supply for effective radiation to prevent internal heat build-up.


Although the power supply is protected against reverse polarity damage, the circuit being powered may not include such protection. Always carefully observe polarity; incorrect polarity may damage the equipment under test.

Do not exceed the voltage rating of the circuit being powered. Many transistors and integrated circuits will not withstand voltage of 60 volts.


There is no need to worry about voltage spikes or overshoot damaging the equipment under test. The voltage between the output terminals of the power supply never exceeds the preset value as the POWER switch is turned on or off.

4.1 Instrument Hook-Up

1. Turn off the power supply and the equipment to be powered during hook-up.
2. Connect the positive polarity of the device being powered to the red (+) terminal of the power supply.
3. Connect the negative polarity of the device being powered to the black (-) terminal of the power supply.
4. Figure 3 illustrates the grounding possibilities.
 - a. If the negative polarity of the equipment or circuit being powered is also the chassis or common, it may be grounded to earth by strapping the black (-) terminal to the green (\perp) terminal as shown in Figure 3A.
 - b. Similarly, the positive polarity can be grounded by strapping the red (+) terminal to the green (\perp) terminal as shown in Figure 3B.
 - c. If an earth ground reference is not required, the configuration of Figure 3C may be used. The scheme in Figure 3C should also be used where it is not known whether the chassis is common with either the positive or negative polarity.
 - d. If the chassis or common of the equipment being powered is separate from both the positive and negative polarity power inputs, use the connection shown in Figure 3D.
6. Observe proper polarity. If the circuit being powered is not equipped with reverse polarity protection, damage to the circuit can result from reverse polarity. Use color coded hook-up leads, for convenience in identifying polarity, red for (+) and black for (-).
7. Make sure that the hook-up leads offer sufficient current capability and low resistance between the power supply and the circuits being powered.


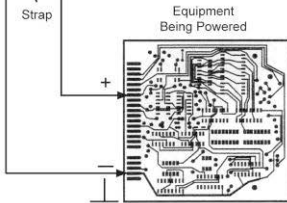


A. Grounded, common with negative polarity


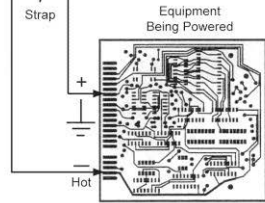


B. Grounded, common with positive polarity

Figure 3 (A and B) - Grounding Possibilities

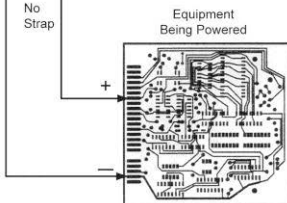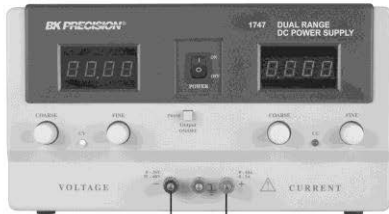

C. No ground reference

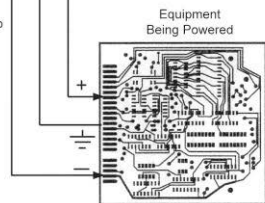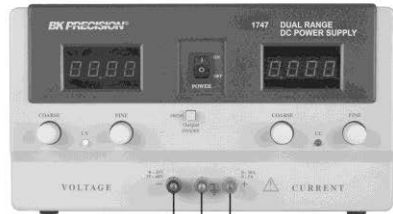

D. Grounded, not common with negative or positive polarity

Figure 3 (C and D) - Grounding Possibilities

4.2 Typical Constant Voltage Operation

1. Before connecting the device to be powered to the power supply, determine the maximum safe load current for the device to be powered and set the current limit value (see 4.3 Setting Current Limit procedure in this section).
2. The output voltage can be set using the voltage coarse knob (with a 1 V resolution) and voltage fine knob (with a 10 mV resolution). After the last adjustment you must wait 3 seconds until the state is saved.
3. Turn off power supply and connect it to the device to be powered (see 4.1 Instrument Hook-Up procedure in this section).
4. Turn on the power switch. The CV indicator should light.
5. Increase the voltage setting until the voltage LED display reads the desired value. The fine control permits easier setting to a specific value.
6. Note the load current on the current LED display.
7. If the load current exceeds the preset current limit, the CV indicator will go off and the CC indicator will light. In this case, the power supply automatically switches to the constant current mode, and further rotation of the voltage control will not increase the output voltage.

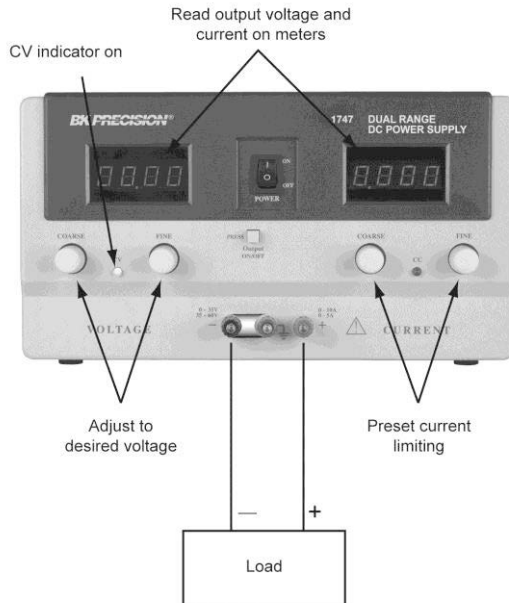


Figure 4 - Typical Constant Voltage Operation

4.3 Setting Current Limit

1. Determine the maximum safe current for the device to be powered.
2. Adjust the coarse and fine current control for the desired current limit. Read the current value on the current LED display. Wait 3 seconds.
3. The current limit (overload protection) has now been preset. Do not change the current controls settings after this step.

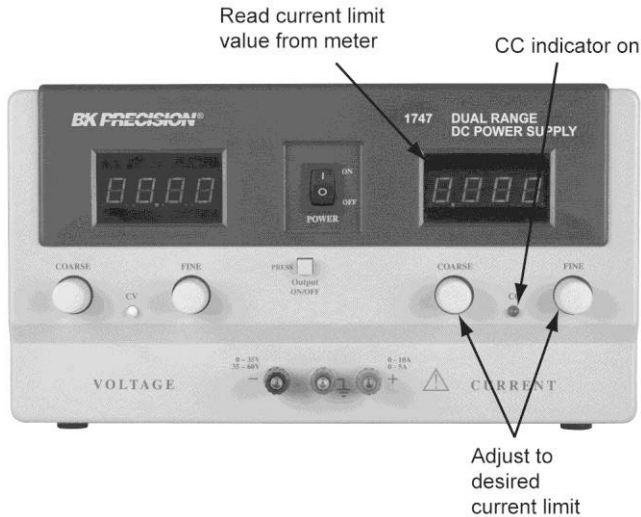


Figure 5 - Setting Current Limit

4.4 Typical Constant Current Operation

1. Before connecting the device to be powered to the power supply, determine the maximum safe voltage to be applied, and set the voltage controls to obtain that voltage reading on the voltage LED display.
2. Determine the desired constant current value.
3. Set the coarse and fine current control to minimum (1 mA). Wait 3 seconds.
4. Turn off the power supply and connect it to the device to be powered.
5. Turn on the power supply. The CC indicator should light.
6. Increase the coarse and fine current control setting until the desired constant current value is read on the display, or set the current limit in advance (before

connecting the load) as described earlier in the 4.3 procedure.

Setting Current Limit

7. If the load current drops below the constant current value, the CC indicator will go off and the CV indicator will light. In this case, the power supply automatically switches to the constant voltage mode, and further rotation of the current controls will not increase the output current.

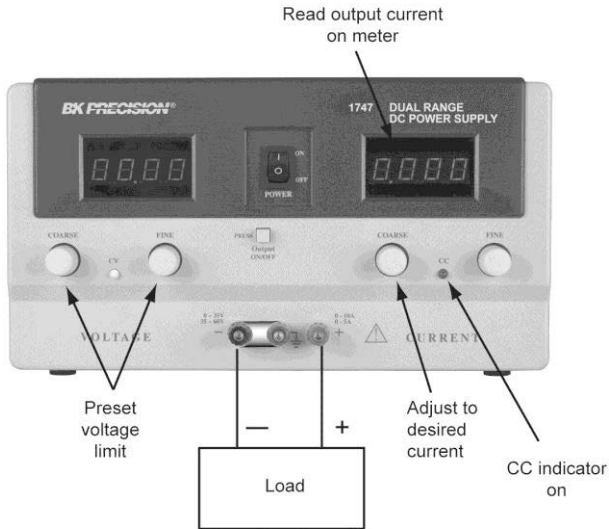


Figure 6 - Typical Constant Current Operation

4.5 Constant Voltage/Constant Current Characteristic

The working characteristic of this power supply is called a constant voltage/constant current automatic crossover type. This permits continuous transition from constant current to constant voltage modes in response to the load change. The intersection of constant voltage and constant current modes is called the crossover point. Figure 7 shows the relationship between this crossover point and the load.

For example, if the load is such that the power supply is operating in the constant voltage mode, a regulated output voltage is provided. The output voltage remains

constant as the load current increases, up until the point where the preset current limit is reached. At that point, the output current becomes constant and the output voltage drops in proportion to further increases in load current. The crossover point is indicated by the front panel LED indicators. The crossover point is reached when the CV indicator goes off and the CC indicator comes on.

Similarly, crossover from the constant current to the constant voltage mode automatically occurs from a decrease in load current. A good example of this would be seen when charging a 12-volt battery. Initially, the open circuit voltage of the power supply may be preset for 13.8 volts. A low battery will place a high load current on the supply and it will operate in the constant current mode, which may be adjusted for a 1 amp charging rate. As the battery becomes charged, and its voltage approaches 13.8 volts, its load current decreases to the point where it no longer demands the full 1 amp charging rate. This is the crossover point where the power supply goes into the constant voltage mode.

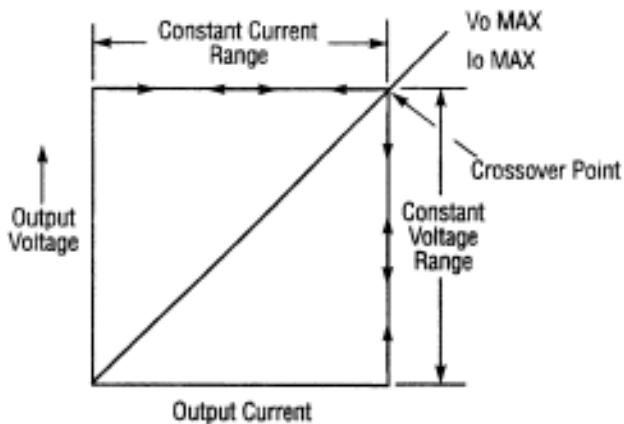


Figure 7 - Constant Voltage/Constant Current Characteristic

4.6 Saving the Power Supply's Current State

The current state of the power supply is saved after 2 seconds from the last adjustment or after the "SAVE" command is received through the RS232 interface.

4.7 Connecting Two Power Supplies in Series

Two power supplies may be connected in series to provide a variable 0-120 V output. In this configuration, the two power supplies can supply up to 60 V-10 A or 120 V-5 A. See Figure 8 for the connection scheme.

When connected in series, the voltage controls of each power supply exercise control over a 0-60 V range. Add the LED display readings together or connect an external voltmeter across the load to determine the total output voltage.

Load current may be monitored from either supply; the readings will be identical since they are connected in series. Also, since the supplies are connected in series, it is only necessary to set the current limit on one of the supplies; the other may be set for maximum.

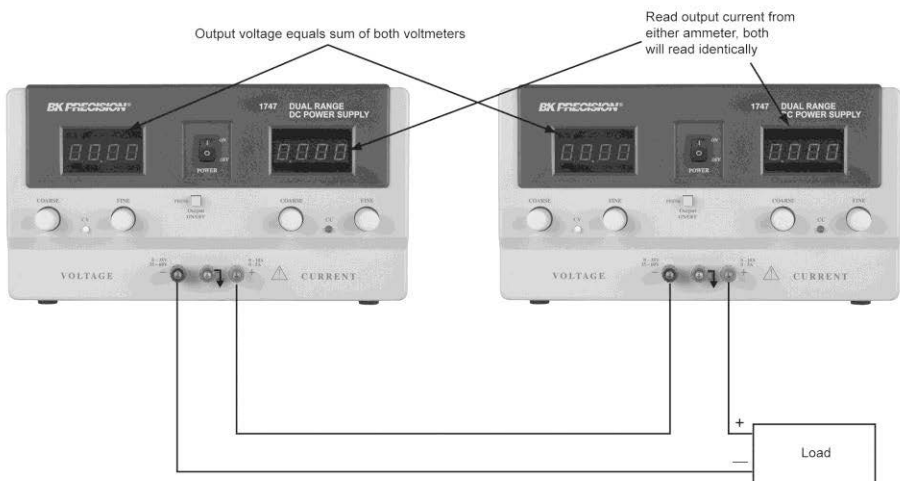


Figure 8 - Connecting Two Power Supplies in Series

4.8 Connecting Two Power Supplies in Parallel

Two power supplies may be connected in parallel to double the maximum load current. In this configuration, the two power supplies will provide 0-60 V output at up to 10 A or 0-35 V at 20 A (heavier gauge hook-up leads are advisable).

Current equalizing resistors must be used as shown in Figure 9. However, the protective current limiting feature will prevent damage if current is temporarily unbalanced during set-up.

When connected in parallel and operating in the constant voltage mode, determine the total load current limit and preset the current limiting for each power supply to half the total load current value. Then when the load is connected, set the voltage controls on the two power supplies for equal voltage readings. This should also provide approximately equal current from each supply. Add the two current meter readings together for total load current, or connect an external ammeter in series with the load.

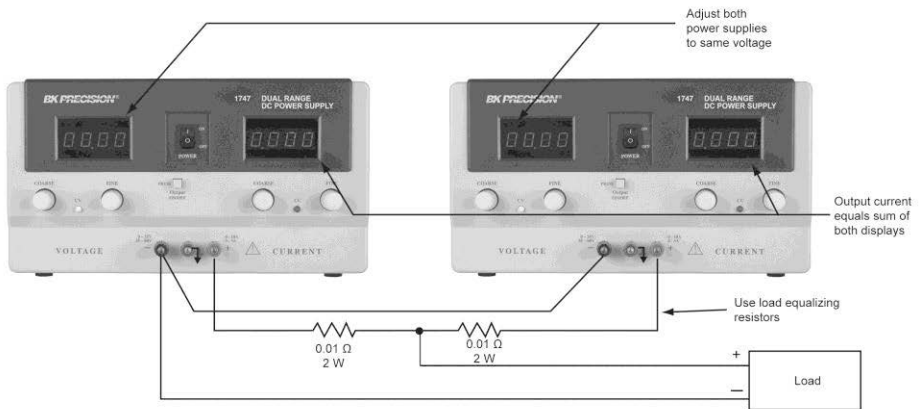


Figure 9 - Connecting Two Power Supplies in Parallel

If the current equalizing resistors are not well matched, it is preferable that the voltages be slightly unbalanced to achieve current balance. Be sure that the supplies are adequately balanced so that both remain in the CV mode.

When connected in parallel and operating in the constant current mode, the voltage controls of both supplies should be preset to the same value. Then when the load is connected, the current controls of the two supplies should be adjusted for approximately equal current from each unit. Be sure that both supplies remain in the CC mode.

5 Remote Operation

The power supply can be connected to the RS232 interface using the 9-pin (DB-9) serial connector on the rear panel. The 1747 uses a null modem RS232 cable. The cable pin diagram for the DB-9 connector is shown in the picture below:

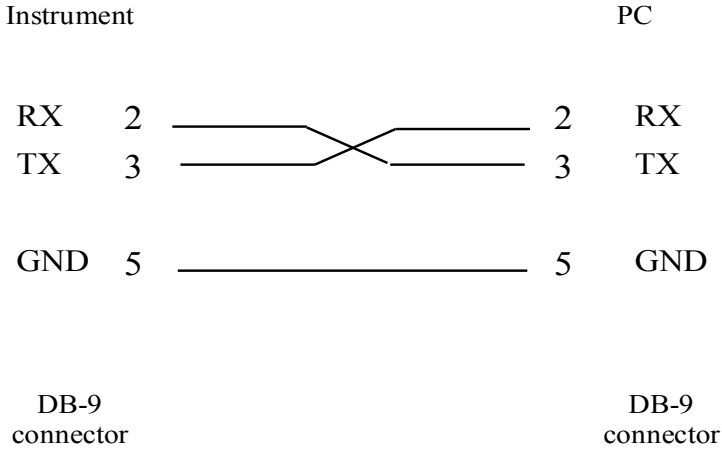


Figure 10 - RS232 Cable Pin Diagram

For all communications over the RS232 interface, the power supply uses Xon/Xoff protocol.

NOTE: If using HyperTerminal, make sure you properly configure the “ASCII Setup”. In “ASCII Setup”, **do not append line feeds to “ASCII Sending”**. “Echo typed characters locally” can be checked, but “Send line ends with line feeds” should be left unchecked. In “ASCII Receiving”, “Append line feeds to incoming line ends” can also be checked.

5.1 RS232 Configuration Overview

Baud Rate	9600 bps
Parity Bits	none
Data Bits	8
Start Bits	1
Stop Bits	1
Flow Control	Xon / Xoff
Termination Character	\r

Table 1 - RS232 Configuration

5.2 RS232 Commands

NOTE: All commands are case sensitive and must be capitalized.

1. VOLT xx.xx<CR>

This command sets the output voltage value. The output voltage takes the programmed value only if the power supply is in Constant Voltage mode.

Example: The output voltage is set at 5 V.

VOLT 05.00<CR>

2. CURR x.xxx<CR> or CURR xx.xx<CR>

This command sets the output current value. The output current takes the programmed value only if the power supply is in Constant Current mode.

Example: The output current is set at 300 mA.

CURR 0.300<CR>

3. SAVE<CR>

The programmed values of the output current and voltage are saved. If the power supply is restarted, the values of the output current and voltage will be those previously saved.

If the Output On-Off button is pressed at power on, then the power supply will start with Output Off state regardless of the previously saved state.

If the output current and voltage values are adjusted through the front panel knobs or the state is modified by Output On-Off button, the values are automatically saved after 2s from the last adjustment.

4. VOLT?<CR>

This command returns the voltage measured to the output terminals of the power supply: xx.xxV<CR>

The voltage value returned is the same as the one displayed on the voltage display.

If the power supply is in the Output Off state, then this command will return the OFF<CR> message.

5. CURR?<CR>

This command returns the current measured to the output terminals of the power supply: x.xxxA<CR> or xx.xxA<CR>

The current value returned is the same as the one displayed on the current display.

If the power supply is in the Output Off state, then this command will return the OFF<CR> message.

6. STAT?<CR>

The power supply responds to this command with one of the following messages:

CV<CR> if the power supply is in Constant Voltage mode

CC<CR> if the power supply is in Constant Current mode

7. OUT ON<CR>

Turn on the output.

8. OUT OFF<CR>

Turn off the output.

9. IDN?<CR>

The power supply responds to this command with the following message:

B+K PRECISION 1747 Revision x.x<CR>

5.3 Application Software

Remotely control your 1747 using B&K Precision's application software, available for download at www.bkprecision.com. This software provides a virtual front panel and a simple data logging function to store and log data to a text or CSV file. RS232 commands can also be sent through the software.

6 Maintenance

WARNING

The following instructions are for use by qualified personnel only. To avoid electrical shock, do not perform any servicing other than contained in the operating instructions unless you are qualified to do so.

6.1 Fuse Replacement

If the fuse blows, the CV or CC indicators will not light and the power supply will not operate. The fuse should not normally open unless a problem has developed in the unit. Try to determine and correct the cause of the blown fuse, then replace only with a fuse of the correct rating as listed below. The fuse is located on the rear panel (see Figure 2).

Line Voltage	Fuse	Type
115 Vac \pm 10%, 50/60 Hz	6A	Slow Blow
230 Vac \pm 10%, 50/60 Hz	3A	Slow Blow

Table 2 - Fuse Values

Line Voltage Conversion, International Units

The primary winding of the power transformer is tapped to permit operation from 120/220/230 or 240 VAC, 50/60 Hz line voltage. Conversion from one line voltage to another is done by a simple position change of the fuse receptacle underneath the line cord.

6.2 Adjustments

This unit was accurately adjusted at the factory before shipment. Readjustment is recommended only if repairs have been made in a circuit affecting adjustment accuracy, or if you have a reason to believe the unit is out of adjustment. However, adjustments should be attempted only if a multimeter with an accuracy of $\pm 0.02\%$ DCV or better is available (B&K Precision Model 5491B or equivalent).

6.3 Calibration

Calibration is a procedure that ensures that the power supply will work properly, with parameters specified within the

Specifications section.

Before initiating the calibration procedure, the following conditions must be assured:

- Disconnect any loads connected to the power supply and turn it on
- Let the power supply be turned on for 1 hour with no loads connected before you start the calibration procedure
- Calibration ambient temperature must be 25°C
- Ambient relative humidity must be less than 80%

To calibrate the power supply, complete the following steps:

1. Turn on the power supply in calibrating mode
2. Zero voltage calibration
3. Full voltage calibration
4. Low current calibration
5. Full current calibration
6. Leaving the Calibration menu

1. Turn on the power supply in *calibrating mode*

- a) Turn off the power supply. Disconnect the power cord and all loads connected to the power supply.
- b) Turn on the power supply with the Output On-Off button pressed and keep it pressed at least 10 s.
- c) The power supply will enter in calibration mode and will display:

Voltage display: C A L

Current display: U 0

You can browse the calibration menu by turning the current coarse knob. Using the voltage coarse knob you can select one of the following calibration procedures:

U 0 Zero voltage calibration

U F Full voltage calibration

I 0 Low current calibration

I F Full current calibration

The voltage fine and current fine knobs are not used.

Important note!

In order to perform a correct calibration procedure, you must select the full voltage calibration option just after the zero voltage calibration option, and the full current calibration option just after the low current calibration option.

2. Zero voltage calibration

- a) Turn the current coarse knob to select “U 0” for zero voltage calibration and press the Output On-Off button. The power supply will display:

Voltage display: U 0

Current display: hex number

On the current display, a hexadecimal number between 0 and FFFFh is displayed. During the zero voltage calibration, the CV LED is lit.

- b) Connect a digital voltmeter to the output terminals of the power supply (B&K Precision 5491B or similar instrument).
- c) Use the current coarse and fine knobs to adjust the value displayed by the power supply until the voltmeter indicates the closest value to 0V.
- d) Press the Output On-Off button to finish the calibration.

While performing the zero voltage calibration, the current display will show *Adc*. After the zero voltage calibration, the message *Done* is shown on the current display for 1 sec. Then the power supply returns to the Calibration menu.

Test Equipment Depot - 800.517.8431 - 99 Washington Street Melrose, MA 02176

TestEquipmentDepot.com

3. Full voltage calibration

To finish the voltage calibration procedure, the full voltage calibration must be done after the zero voltage calibration.

- a) Select “U F” for full voltage calibration and press the Output On-Off button. The power supply will display:

Voltage display: U F

Current display: hex number

A hexadecimal number between 0 and FFFFh will be shown on the current display. During the zero voltage calibration, the CV LED is lit.

- b) Connect a digital voltmeter to the output terminals of the power supply (B&K Precision 5491B or similar instrument).
- c) Use the current coarse and fine knobs to adjust the value displayed by the power supply until the voltmeter indicates the value to 60.948V.
- d) Press the Output On-Off button to finish the calibration.

While performing the full voltage calibration the current display will show *Adc*. After the full voltage calibration the message *Done* is shown on the current display for 1 sec. Then the power supply returns to the Calibration menu.

4. Low current calibration

- a) Select “I 0” for low current calibration and press the Output On-Off button. When you initiate the low current calibration, the CV LED lights up and the power supply will display:

Voltage display: I 0

Current display: ConA

- b) Connect a digital ammeter (B&K Precision 5491B or similar instrument) to the output terminals of the power supply to initiate the low current calibration procedure. If a digital ammeter is not connected within 30

seconds, the power supply will abandon the current calibration procedure and return to the Calibration menu.

The CV LED indicator will go off and the CC LED indicator will light on. The power supply will then display:

Voltage display: 1 0

Current display: hex number

A hexadecimal number between 0 and FFFFh is shown on the current display.

- c) Use the current coarse and fine knobs to adjust the value displayed by the power supply until the ammeter indicates the closest value to 1mA.
- d) Press the Output On-Off button to finish the calibration.

While performing the low current calibration, the current display will show *Adc*. After the low current calibration, the message *Done* is shown on the current display for 1 sec. Then the power supply returns to the Calibration menu.

5. Full current calibration

To finish the current calibration procedure, you must select the full current calibration option after the low current calibration.

- a) Select "1 F" for full current calibration and press the Output On-Off button. When you initiate the full current calibration, the CV LED lights up and the power supply will display:

Voltage display: 1 F

Current display: ConA

- b) Connect a digital ammeter (BK Precision 5491B or similar instrument) to the output terminals of the power supply to initiate the full current calibration procedure. If a digital ammeter is not connected within 30 seconds, the power supply will abandon the current calibration procedure and will return to the Calibration menu.

The CV LED indicator will turn off and the CC LED indicator will light on. The power supply will then display:

Voltage display: I F
Current display: hex number

A hexadecimal number between 0 and FFFFh is shown on the current display.

- c) Use the current coarse and fine knobs to adjust the value displayed by the power supply until the ammeter indicates the value to 10.158A.
- d) Press the Output On-Off button to finish the calibration.

While performing the full current calibration, the current display will show *Adc*. After the full current calibration, the message *Done* is shown on the current display for 1 sec. The power supply does not return to the Calibration menu because the calibration procedure is finished and the power supply must be turned off.

6. Leaving the calibration menu

- a) Turn off the power supply.
- b) When turned on, the power supply will have the same parameters programmed and saved before the calibration procedure.

6.4 Instrument Repair Service

Because of the specialized skills and test equipment required for instrument repair and calibration, many customers prefer to rely upon B&K Precision for this service.

7 Error Messages

The following types of errors may occur:

- Self-test errors
- Calibration errors
- Command errors

The first two types of errors are displayed on the voltage display as: *Er xx*, where *xx* is a number. The command errors are sent through the RS232 interface.

7.1 Self-Test Errors

Er 01: EEPROM does not respond

Er 02: CV not high

Er 03: CV not low

Er 04: CC not high

Er 05: CC not low

Er 06: ADC does not respond

Er 07: ADC not ready

Er 08: No reference voltage

Er 09: ADC conversion error

Er 10: ADC AVdd < 3.0V

Er 11: ADC AVdd > 3.6V

Er 12: Calibration constants checksum failed

7.2 Calibration Errors

Zero voltage calibration errors

Er 20: CC not high

Er 21: CV not low
Er 22: DAC out of range
Er 23: ADC out of range
Er 24: ADC system calibration failed
Er 25: DAC zero voltage constant checksum failed
Er 26: ADC zero voltage constant checksum failed

Full voltage calibration errors:

Er 30: CC not high
Er 31: CV not low
Er 32: DAC out of range
Er 33: ADC out of range
Er 34: ADC system calibration failed
Er 35: DAC full voltage constant checksum failed
Er 36: ADC full voltage constant checksum failed

Low current calibration errors:

Er 40: CC not low
Er 41: CV not high
Er 42: DAC out of range
Er 43: ADC out of range
Er 44: ADC system calibration failed
Er 45: DAC low current constant checksum failed
Er 46: ADC low current constant checksum failed

Full current calibration errors:

Er 50: CC not low
Er 51: CV not high
Er 52: DAC out of range
Er 53: ADC out of range
Er 54: ADC system calibration failed
Er 55: DAC full current constant checksum failed
Er 56: ADC full current constant checksum failed

7.3 Command Errors

"Communication Error<CR>" : RS232 framing, parity, or overrun error
"Syntax Error<CR>" : invalid syntax was found in the command string
"Out of range<CR>" : a numeric parameter value is outside the valid range
for the command

8 Specifications

	1747
Output Ratings (0 °C~40 °C)	
Voltage	0-60 V
Current	0-10 A (0-35 V), 0-5 A (35-60 V)
Load Regulation ±(% of output+offset)	
Voltage	0.01% + 5 mV
Current	0.2% + 3 mA
Line Regulation ±(% of output+offset)	
Voltage	0.01% + 3 mV
Current	0.2% + 3 mA
Ripple & Noise (20 Hz ~ 20 MHz)	
Voltage	1 mVrms
Current	≤ 3 mArms
Recovery Time	≤ 100 μs
Meter Resolution	
Voltage	10 mV
Current	1 mA (0-5 A) 10 mA (5-10 A)
Meter Accuracy	
Voltage	0.5% + 5 digits
Current	0.5% + 5 digits
General	
AC Input	115/230 VAC ±10%, 50/60 Hz
Power Consumption	≤ 560 W
Protection	Reverse polarity, current limiting
Operating Environment	
Temperature	32 °F to 104 °F (0 °C to 40 °C)
Humidity	75% R.H.
Temperature coefficient (0 °C~35 °C) ±(% of output+offset)	300 ppm/°C

Storage Temperature	5 °F to 158 °F (-15° to +70° C)
Storage Humidity	85% R.H.
Mechanical Specifications	
Weight	30.2 lbs (13.7 kg)
Dimensions (WxHxD)	10.75" x 6" x 14" (273 x 153 x 356 mm)
Supplied Accessories	Power cord, instruction manual, RS-232 cable, shorting bar

NOTE: All specifications apply to the unit after a temperature stabilization time of 30 minutes. Specifications and information are subject to change without notice.

Test Equipment Depot - 800.517.8431 - 99 Washington Street Melrose, MA 02176
TestEquipmentDepot.com

(Page intentionally left blank)



Test Equipment Depot - 800.517.8431 - 99 Washington Street Melrose, MA 02176
TestEquipmentDepot.com