


# R1234yf OIL INJECTOR

## OIL INJECTION INSTRUCTIONS:

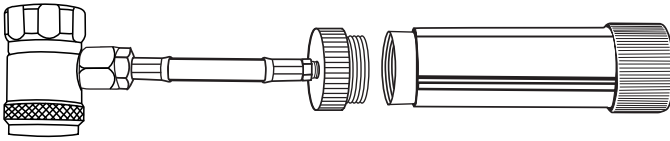

### **PLEASE USE CAUTION!!**

- When injecting oil into a pressurized system, **ALWAYS** wear safety glasses and gloves!
- Never breathe refrigerant vapor!

### **A. PURGING AIR FROM THE HOSE ASSEMBLY**

It is important to eliminate any air in the hose before injecting oil into the A/C system. (This process is necessary only once for the setup).

### **B. INJECTION**

1. Turn the A/C system and engine off!
2. Connect injector to the low side service port of A/C system.  
Hold body of injector.  
Use (I) starting line on handle end as a guide.  
Turn handle clockwise to inject 1 application of oil.  
(Approximately 3 1/4 turn(s) for 1/4 oz oil).
3. Disconnect injector from the system and clean any excess oil left around the service port.



99 Washington Street  
Melrose, MA 02176  
Phone 781-665-1400  
Toll Free 1-800-517-8431



Visit us at [www.TestEquipmentDepot.com](http://www.TestEquipmentDepot.com)

**⚠ WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).