

OPERATION

Pull the Long-Stem Thermometer from the plastic sleeve. Slide the F/C switch to F to display the temperature in Celsius. Insert the stainless steel stem into the material to be measured. Slide the ON/OFF switch to OFF to turn the unit off. To conserve battery life, always turn the unit off when not in use.

BATTERY REPLACEMENT

A faint display, no display, erratic readings, or operational difficulties indicate that the battery should be replaced. Remove the battery cap, located at the top of the unit and marked "OPEN", by turning it in the direction of the arrow (counter-clockwise).

Replace the battery with a new, 1.5V, G-13 battery. Equivalent battery replacements are: RAYOVAC RW42, DURACELL D357, and EVEREADY 357. Insert the battery with the positive side facing you. Replace the battery cap.



99 Washington Street
Melrose, MA 02176
Phone 781-665-1400
Toll Free 1-800-517-8431



Visit us at www.TestEquipmentDepot.com

©2014 92-8922-40 Rev. 0 051414

LONG-STEM THERMOMETER INSTRUCTIONS