

## SPECIFICATIONS

Range: -58 to 536°F and -50 to 280°C

Resolution: 0.1° from -20° to 200°  
1° otherwise

Accuracy: ±1° C from -20 to 100° C  
(Model 4370)  
±0.4° C at tested points,  
±1°C otherwise  
(Model 4369 Ultra™)

## ULTRA™ THERMOMETER ACCURACY

Ultra™ thermometers are tested at selected test points to be within tighter than normal tolerances to assist in providing improved accuracy. Other points will not necessarily fall within the same accuracy as those found at the selected test points, but will be within an accuracy of ±1°C.

## OPERATION

1. Press the ON/OFF button to turn the unit on. Press the °F/°C button to switch between Fahrenheit and Celsius.
2. Insert the probe into the material to be measured and read the display.
3. Press the ON/OFF button to turn the unit off. To conserve battery life, always turn the unit off when not in use.

## ALL OPERATIONAL DIFFICULTIES

If this thermometer does not function properly for any reason, replace the battery with a new high quality battery (see the “Battery Replacement” section). Low battery power can occasionally cause any number of “apparent” operational difficulties. Replacing the battery with a new fresh battery will solve most difficulties.

## BATTERY REPLACEMENT

Erratic readings, a faint display, or no display are all indicators that the battery must be replaced. To replace the battery, remove the three battery cover screws. Remove the battery cover. Replace the exhausted battery with a new 1.5-volt, silver oxide, #357 size battery. Make certain the positive (+) side is visible. Replace the battery cover and battery cover screws. Do not over-tighten the screws as this may damage the unit.

*NOTE: When replacing the battery cover, ensure the screws are tightened securely to maintain the unit's water-resistance.*

92-4370-40 Rev. 0 120117



5 Commonwealth Ave  
Woburn, MA 01801

[TestEquipmentDepot.com](http://TestEquipmentDepot.com)

**TRACEABLE®  
FOOD/  
WATERPROOF/  
PIERCING/  
DROP-PROOF  
THERMOMETER  
INSTRUCTIONS**