

PRODUCT OVERVIEW

SPECIFICATIONS



US/AU/UK/EU Plugs S LED Indicator
LED sold:
normal operation
LED does not light
1. Possible overload Ut
one device and chee
indicator again.
2. Fuse burn-out, pleas
the fuse.

USB-A Port



APPLICABLE OUTLETS



Adapter can accept Type A, B, C, D,E, F, G, I,O plugs.

Adapter can plug into Type A,B,C,D,E,F,G,H,I,J,K,L,M,N and O outlet



2-POLE UNEARTHED DEVICES

250V and 1000W at 100V.It can be used with a multitude of appliances such as:Laptops,Small travel hair dryers,Travel irons,Electric fan,Table lamp,

Please check the safety data sheet or data plate on the device to find this





USB DEVICES



HOW TO USE THE ADAPTER

Attentions:

- 1. Please make sure that the button is reset when the button is pushed out In the sure that the Dutun is reset when the Dutun is pushed out and retracted to the bottom, and if the button is not reset, it means that the pug has not been pushed in place and will affect the normal use.

 2. Only one pluy-type can be used at one time by sliding the knob selection, other plug-pins are locked automatically.
 - completely as shown.make sure the contact blades are turned Recover the plug: press and hold the "USA" button to release a

continue to pull up, until the plug completely pull the top and ther release the button, then the button will reset and lock the plug.



Slightly press the button and slide to the down for AUS plug completely as shown .make sure the contact blades are turne to the parallel position Recover the plug: press and hold the "AUST" button to rele



completely as shown .Pull out the insulated ground pin from

Recover the plug: press and hold the "UK" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

plug completely as shown .make sure the contact blades are turned to the parallel position.

Recover the plug: press and hold the "EUROPE" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset

REPLACEMENT OF THE FUSE



1. Take out 1 2. You also could change new fuse. standard: 240Vac 10A 6.3*25.4mm,BS1362

1. You should remove all the device before you change the

- the access equipment in the power rating.
- 3.Please confirm whether the product is wet and there is water flowed out.

CAUTION

- Always disconnect Adapter from the outlet when not in use Always disconnect Adapter from the outlet when not in use.
 Before use, please read this instruction carefully! This product does not convert voltage(AC-AC), in order to avoid possible damage to your device or other safety hazards, please make sure the power outlet you intend to use has the proper voltage to run your device before using this adapter.
- Indoor use only.

 Misuse can lead to electrical shock.
- Misuse can lead to electrical shock.
 The length of the USB cable should be less than 3M.
 The travel adaptor is for temporary use only and that it shall not be used permanently.
 Against inserting an adaptor into another adaptor shall be provided by the manufacturer.
- No grounding, This product is for use with unearthed or double insulated appliances only



Myarmar

N Nepal
Nepal
Nepal
Nepal
Netherlands
Niger
Oman
Paraguay
Peru
Philippines
Poland
Portugal
Romania
Russia
Rwanda
Senegal
Somalia
Spain
Sudan
Suriname
Sweden
Switzerland
Syria
Thailand

AUS PLUG: American Samos

UK PLUG:

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist.







660AC说明书 品号 2024-01-25 日期 版本 V1.0 制图 审核 核准