


AMPROBE®

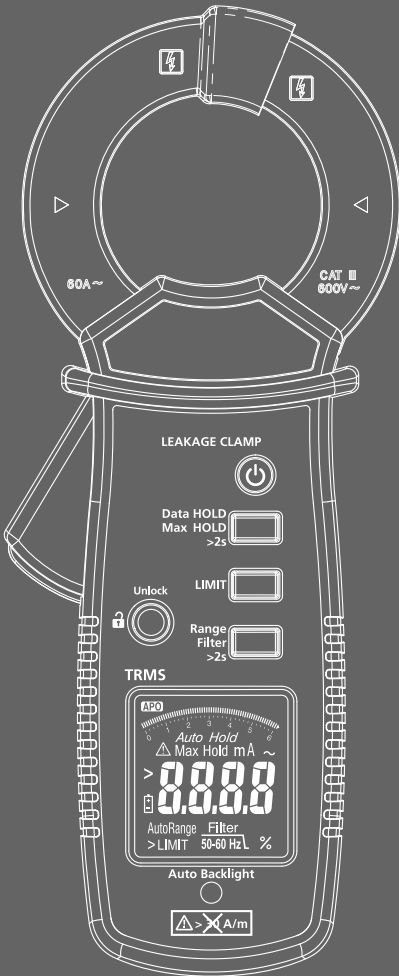

ALC-110 Leakage Current Clamp

User Manual

ENG

FRE

SPA

AMPROBE®

ALC-110

Leakage Current Clamp

User Manual

English

Limited Warranty and Limitation of Liability

Your Amprobe product will be free from defects in material and workmanship for one year from the date of purchase unless local laws require otherwise. This warranty does not cover fuses, disposable batteries or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on the behalf of Amprobe. To obtain service during the warranty period, return the product with proof of purchase to an authorized Amprobe Service Center or to an Amprobe dealer or distributor. See Repair Section for details. THIS WARRANTY IS YOUR ONLY REMEDY. ALL OTHER WARRANTIES - WHETHER EXPRESS, IMPLIED OR STATUTORY - INCLUDING IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, ARE HEREBY DISCLAIMED.

MANUFACTURER SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

Repair

All Amprobe returned for warranty or non-warranty repair or for calibration should be accompanied by the following: your name, company's name, address, telephone number, and proof of purchase. Additionally, please include a brief description of the problem or the service requested and include the test leads with the meter. Non-warranty repair or replacement charges should be remitted in the form of a check, a money order, credit card with expiration date, or a purchase order made payable to Amprobe.

In-warranty Repairs and Replacement – All Countries

Please read the warranty statement and check your battery before requesting repair. During the warranty period, any defective test tool can be returned to your Amprobe distributor for an exchange for the same or like product. Please check the "Where to Buy" section on amprobe.com for a list of distributors near you. Additionally, in the United States and Canada, in-warranty repair and replacement units can also be sent to an Amprobe Service Center (see address below).

Non-warranty Repairs and Replacement – United States and Canada

Non-warranty repairs in the United States and Canada should be sent to an Amprobe Service Center. Call Amprobe or inquire at your point of purchase for current repair and replacement rates.

Non-warranty Repairs and Replacement – Europe

European non-warranty units can be replaced by your Beha-Amprobe distributor for a nominal charge. Please check the "Where to Buy" section on beha-amprobe.com for a list of distributors near you.

Beha-Amprobe






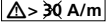






Division and reg. trademark of Fluke Corp. (USA)

Leakage Current Clamp

CONTENTS

SYMBOLS	2
SAFETY INFORMATION	2
UNPACKING AND INSPECTION	4
FEATURES AND APPLICATIONS.....	4
DESCRIPTION OF THE INSTRUMENT.....	5
DESCRIPTION OF THE LCD	5
POWER ON/OFF.....	6
AUTO BACKLIGHT	6
AC CURRENT MEASUREMENT	7
LEAKAGE CURRENT MEASUREMENT.....	8
DATA HOLD.....	10
MAX HOLD	10
LOW PASS FILTER (50-60 HZ) & APPLIANCE FILTER.....	11
SPECIFICATIONS.....	13
ELECTRICAL SPECIFICATIONS	15
MAINTENANCE.....	17
BATTERY REPLACEMENT.....	17

SYMBOLS

	Caution
	WARNING. HAZARDOUS VOLTAGE Risk of electric shock
	Consult user documentation
	Application around and removal from uninsulated hazardous live conductors is permitted
CAT III	Measurement Category III is applicable to test and measuring circuits connected to the distribution part of the building's low-voltage MAINS installation
	Alternating current
	Do not operate within external low frequency magnetic fields >30 A/m
	Equipment protected throughout by DOUBLE INSULATION or REINFORCED INSULATION
	Battery
	Conforms to European Union directives
	Certified by CSA Group to North American safety standards
	Conforms to relevant Australian EMC standards
	This product complies with the WEEE Directive marking requirements. The affixed label indicates that you must not discard this electrical/electronic product in domestic household waste. Product Category: With reference to the equipment types in the WEEE Directive Annex I, this product is classed as category 9 "Monitoring and Control Instrumentation" product. Do not dispose of this product as unsorted municipal waste.

SAFETY INFORMATION

The meter complies with:

- IEC/EN 61010-1 3rd Ed., UL61010-1 3rd Ed. and CAN/CSA C22.2 No. 61010-1-12 to CAT III 600 V, pollution degree 2.
- IEC/EN 61010-2-032
- IEC/EN 61557-13
- EMC IEC/EN 61326-1 and IEC/EN 61326-2-2

Measurement Category III (CAT III) is for measurements performed in a building installation. Examples include measurements on distribution boards, circuit breakers and wiring — including cables, bus-bars, junction boxes, switches, socket-outlets in a fixed installation — as well as equipment for industrial use and stationary motors with a permanent connection to the fixed installation.

CENELEC Directives

The instrument conforms to CENELEC Low-voltage directive 2014/35/EU and Electromagnetic compatibility directive 2014/30/EU

Warning

To prevent possible electrical shock, fire, or personal injury:

- Read all safety information before you use the Product.
- Carefully read all instructions.
- Use the Product only as specified, or the protection supplied by the Product can be compromised.
- Do not use the Product around explosive gas, vapor, or in damp or wet environments.
- Do not touch voltages >30 V AC rms, 42 V AC peak, or 60 V DC.
- Before each use, examine the Product. Look for cracks or missing pieces of the Product housing. Also look for loose or weakened components. Carefully examine the insulation around the jaws.
- Do not use the Product if it is damaged.
- Limit operation to the specified measurement category, voltage, or amperage ratings.
- Use extreme caution when working around bare conductors or busbars. Contact with the conductor could result in electric shock.
- Do not hold the Product anywhere beyond the tactile barrier.
- When measuring current, center the conductor in the clamp.
- Remove the batteries if the Product is not used for an extended period of time, or if stored in temperatures above 140 °F (60 °C). If the batteries are not removed, battery leakage can damage the Product.
- Replace the batteries when the low battery indicator shows to prevent incorrect measurements.
- Use only 1.5V AAA batteries, properly installed in the Product case, to power the Product.
- Use only 1.5V AAA alkaline batteries and follow all battery care from the manufacturer.
- Never remove the battery cover or open the case of the Product without first removing the jaws from a live conductor.
- The battery door must be closed and locked before you operate the Product.
- Do not leave the Product on or near objects of high temperature.
- For use by competent persons only.
- For safe operation of the Product, do not operate within external low frequency magnetic fields >30 A/m. Ensure the jaw is locked before making measurements.
- Have an approved technician repair the Product.

Caution

- For best accuracy please consider following impacts:
 - use whenever possible optimized position of the clamp when the conductor is positioned is in the center of jaw and the angle between conductor and jaw is 90°
 - reduce influences by external magnetic field (for impact see error E11 in specification table)
 - reduce influences by contamination of the jaw (recommendation for cleaning see in chapter maintenance)
- The measurement of differential current will be influenced by the load current (for influence of load current, see error E12 in Specification table).

- If the Product is used in the vicinity of equipment that generates electromagnetic interference, the display may become unstable or the measurements shown may be subject to large errors.
- Do not subject the jaw to unreasonably strong shock, vibration or force.
- If dust gets into the top of the jaw, remove it immediately. Do not close the jaw when dust is trapped in its joints as the sensor may be damaged.

UNPACKING AND INSPECTION

Your package should include:

- 1 ALC-110 Leakage Current Clamp
- 2 1.5 V AAA batteries
- 1 User manual
- 1 Soft carrying case

If any of the items are damaged or missing, return the complete package to the place of purchase for an exchange.

Note: Batteries do not come installed. Please refer to the Battery Replacement section for further instructions.

FEATURES AND APPLICATIONS


Features

- CAT III 600 V safety rated
- Leakage clamp acc. IEC/EN61557-13, VDE 0413-13
- Low influence of external low frequency magnetic fields @ I_n 3.5 mA ... 600 mA / 40 Hz to 1 kHz: operating class 2, $\leq 30A/m$
- True-rms measurements for best accuracy when measuring complex, non-sinusoidal waveforms
- Highest resolution of 0.001 mA, measure up to 60 A:
 - Range: 6 mA, resolution of 0.001 mA
 - Range: 60 mA, resolution of 0.01 m
 - Range: 600 mA, resolution of 0.1 mA
 - Range: 6 A, resolution of 0.001 A
 - Range: 60 A, resolution of 0.01 A
- Selectable limits: 3.5 mA, 10 mA, 12 mA, 0.25 mA, 0.5 mA
- Selectable filter function to remove unwanted noise:
 - appliance filter (acc. IEC/EN 61557-16),
 - 50/60 Hz filter
 - no filter
- Frequency range 15 Hz to 1 kHz to cover railway and industrial application
- Max and data hold
- Mechanical jaw lock
- 1.2 in (30 mm) jaw opening
- Auto backlight
- Auto power off

Applications


- Measurement of earth leakage current.
- Measurement of differential leakage currents.
- Measuring leakage current through the earth (PE) conductor.
- Tracing the source of earth leakage current.
- Measurement of current consumption of appliances in service or customer service sector without interruption to the circuit.

DESCRIPTION OF THE INSTRUMENT

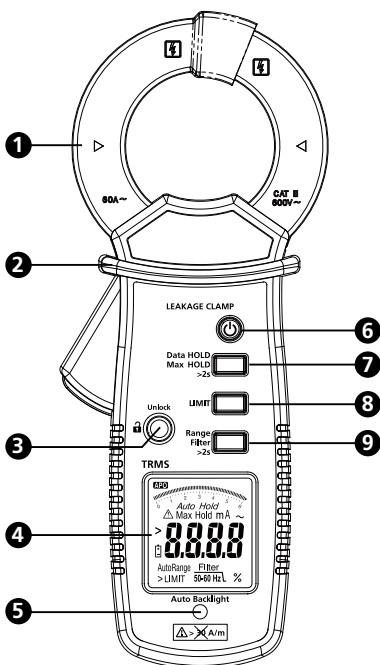


- | | |
|--------------------------------|---|
| 1 Jaw | 7 Data HOLD
(for Max HOLD press for >2 sec) |
| 2 Hand barrier | 8 Limit |
| 3 Jaw unlock | 9 Range
(for Filter press for >2 sec) |
| 4 LCD | |
| 5 Auto backlight sensor | |
| 6 Power | |

DESCRIPTION OF THE LCD

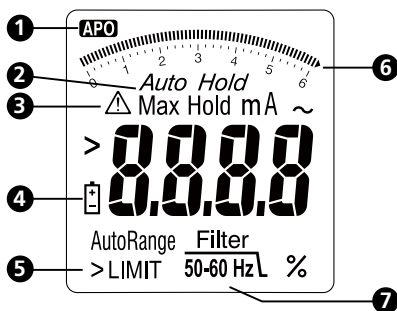


- | | |
|----------------------------|---|
| 1 Auto power off | 5 Limit function |
| 2 Data/Max hold | 6 Bar graph |
| 3 Warning & caution | 7 Appliance filter / 50-60 Hz filter |
| 4 Low battery | |

POWER ON/OFF

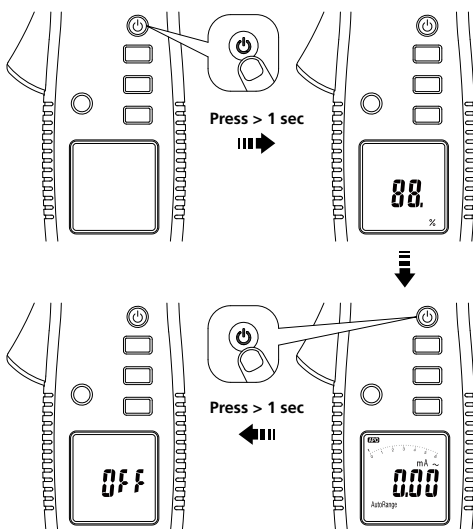


The meter will display battery capacity when powering up. Please replace the battery when less than 10% is shown.


AUTO BACKLIGHT

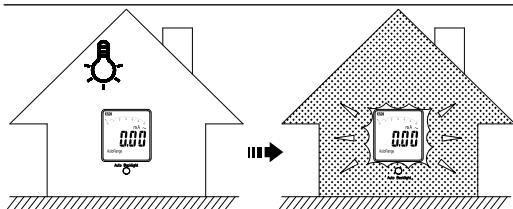


AC CURRENT MEASUREMENT

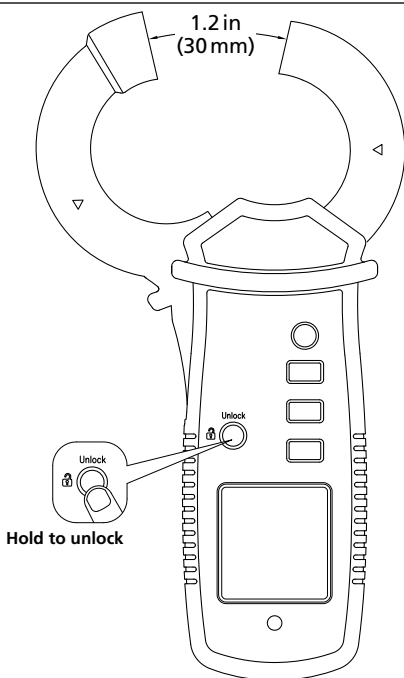


Position Error

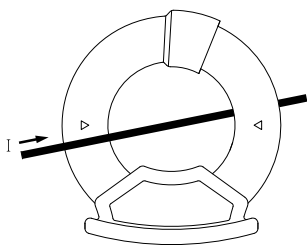

OK

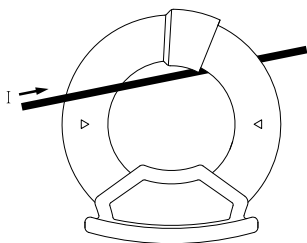

When measuring current, ensure the cable is located in the center of the clamp to avoid position errors.

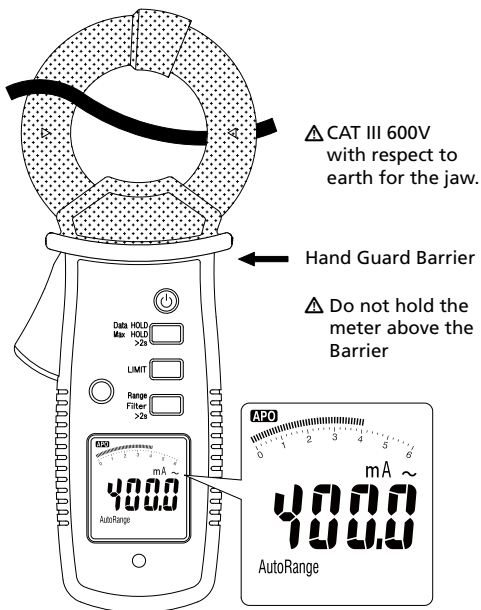

LEAKAGE CURRENT MEASUREMENT


The leakage current flows when an unintentional electrical connection occurs between an energized part of the electrical system and the earth/ground. The desired value of leakage current should be 0 A. Check applicable regulations and standards for allowable limits of leakage current.

For properly grounded systems, in case of the fault, leakage current should be conducted via earth conductor (PE) (Figure 1). We can measure such current directly in a earth conductor using a leakage clamp meter.


In some cases, specifically when equipment is not properly grounded, the leakage current may flow through other paths. Use differential current measurement methods to verify such current leaks (Figure 2, Figure 3, Figure 4). Clamp a leakage current meter around all active conductors (hot and neutrals), but without any earth conductor. An electromagnetic field around all conductors should cancel each other if there is no current leak and clamp meter should read 0A. If there is a leak, there will be imbalance between electromagnetic fields, and the clamp meter will read the actual value of that leakage current.

Leakage current measurement process

1. Turn the meter on.
2. Make sure the jaw is closed and the meter is away from conductors and other sources of electromagnetic fields.
3. Clamp the meter around a earth conductor. The meter will indicate leakage current in earth conductor.
4. Clamp the meter around all active conductors, hot and neutrals (but without earth conductors). The meter will indicate total system leakage current that consists of earth conductor current as well as any other stray current leakage.

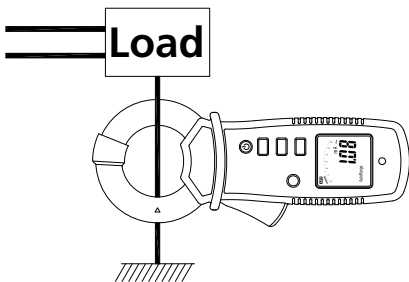


**Figure 1: Direct Method
Measurement of earth (PE) leakage current**

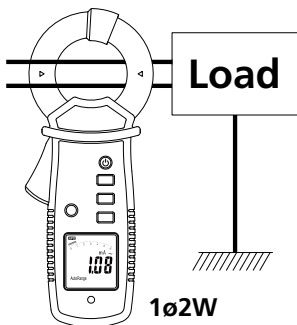


1ø2W

Figure 2

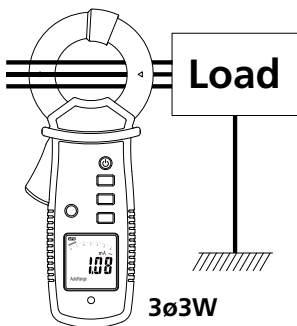

3ø3W

Figure 3

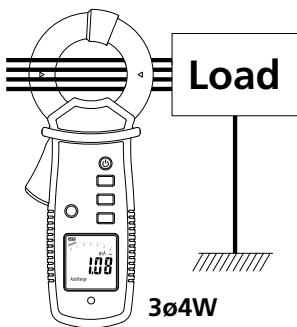


3ø4W


Figure 4

**Figure 2, 3 and 4: Differential Method
Measurement of differential leakage current**

DATA HOLD

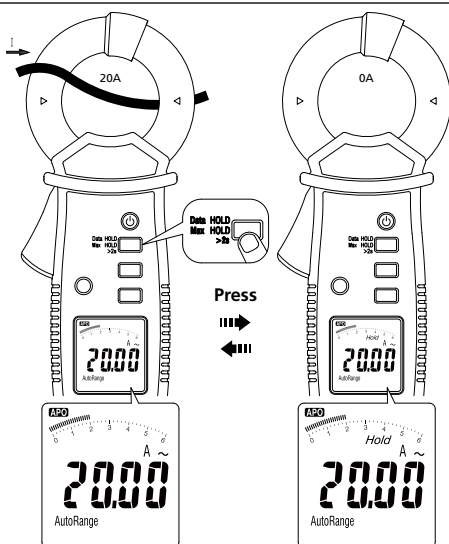



MAX HOLD

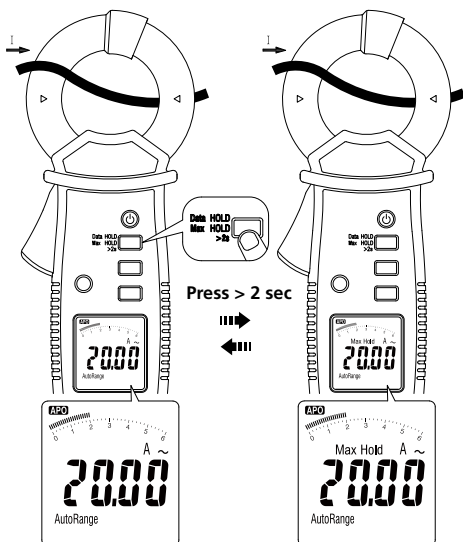


LOW PASS FILTER (50-60 HZ) & APPLIANCE FILTER

Low Pass and Appliance filters are used to filter out high frequency noise that affect precise measurement of the meter.

- Use Low Pass 50/60Hz filter to perform measurements on equipment driven by Variable Frequency Drives (VFDs) or affected by high frequency noise. Significant difference in reading between measurement with and without low pass filter may indicate presence of harmonics.
- Use Appliance Filter to conduct leakage current measurements of appliances in accordance with IEC/EN 61557-16 regulation requirements.

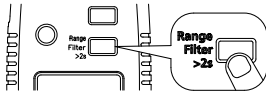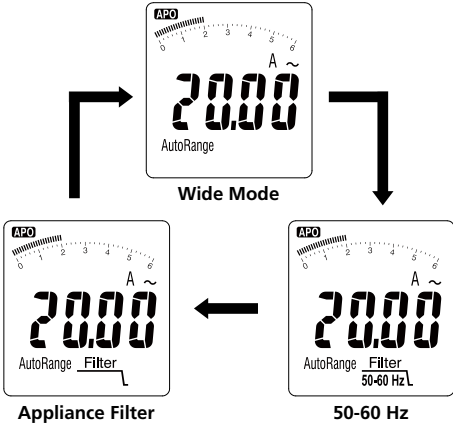


Auto/ Manual Range

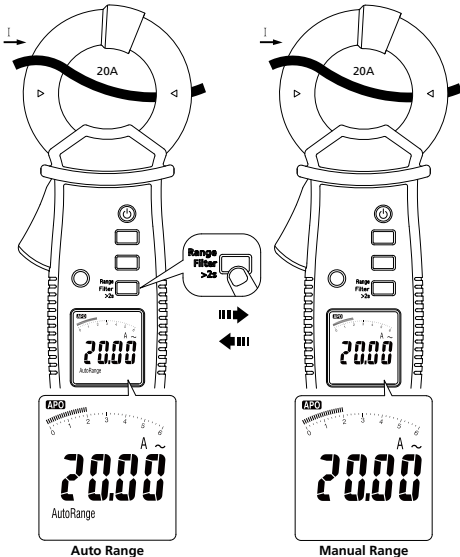

LIMIT


Limit selection:

The LIMIT function offers 5 limit values (3.5 mA / 10 mA / 12 mA / 0.25 mA / 0.5 mA) in accordance with safety standards.

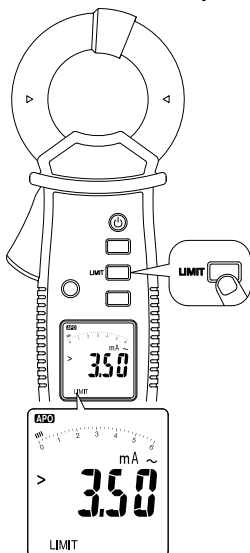


1. Continue pressing LIMIT button until desired limit value is selected. The unit will be looping between 3.5 mA / 10 mA / 12 mA / 0.25 mA / 0.5 mA values.
2. When desired value is selected wait 2 sec to automatically apply selection. The LIMIT symbol will be displayed on the LCD to indicate that the function is active.
3. Verify the selection by pressing the LIMIT button one time. The unit will display the selected value for 2 seconds.
4. To disable the LIMIT function, press the LIMIT button for >2 sec.

Display when limit is exceeded:

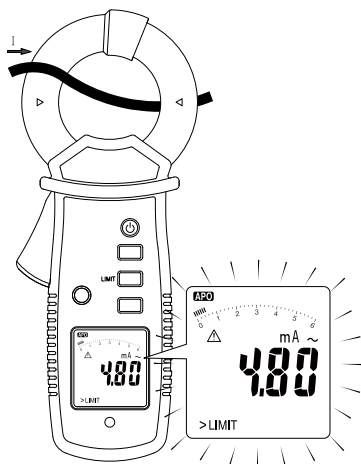


The internal buzzer will continue beeping and the display will flash and show a warning symbol when the measurements exceeds the selected limit value.

Auto Power Off

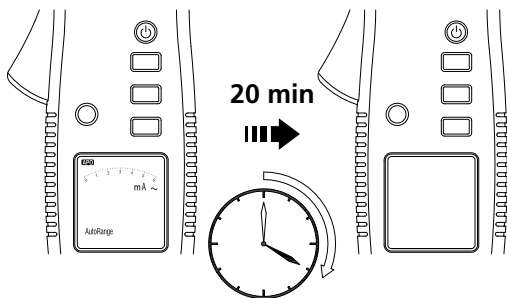



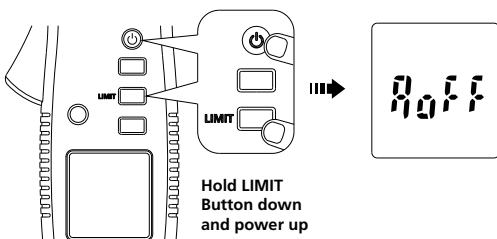


Disable Auto Power Off



SPECIFICATIONS

Display	6000 counts digit large scale
Sensing	True RMS
Update rate	5 per second nominal
Operating temperature and relative humidity	32 °F to 86 °F (0 °C to 30 °C) (≤ 80% R.H.) 86 °F to 104 °F (30 °C to 40 °C) (≤ 75% R.H.) 104 °F to 122 °F (40 °C to 50 °C) (≤ 45% R.H.)
Storage temperature	-4 °F to 140 °F (-20 °C to 60 °C) (with battery removed)
Jaw opening	1.2 in (30 mm) max.
Pollution degree	2
IP rating	IP20
Operating altitude	≤ 2000 m
Overload protection	600 V rms
Measurement category	CAT III 600 V
Safety compliance	IEC 61010-1, IEC 61010-2-032, IEC 61557-13
E.M.C.	Meets EN61326-1

Electromagnetic Compatibility	Korea (KCC): Class A equipment (Industrial Broadcast & Communications Equipment) Class A: Equipment meets requirements for industrial electromagnetic wave equipment and the seller or user should take notice of it. This equipment is intended for use in business environments and not to be used in homes.
Current sensor operating class	Class 2, ≤ 30 A/m acc. IEC/EN 61557-13 @ I _N : 3.500 mA – 600.0 mA / 40 Hz to 1 kHz
Selectable limits	0.250 mA / 0.500 mA / 3.500 mA / 10.00 mA / 12.00 mA
Selectable filter functions	Appliance filter (acc. IEC/EN 61557-16), 50/60 Hz filter or no filter
AC frequency response	15 Hz ... 1 kHz
Operating uncertainty (B)	@ 30 A/m: reading 3.5...10 mA <20% reading >10 mA <12.5% @ 10 A/m: reading 3.5...10 mA <15% reading >10 mA <10% (valid for proper range with best resolution)
Intrinsic uncertainty (A)	See ELECTRICAL SPECIFICATIONS
Position error (E1)	Add $\pm 1\%$ of reading
Supply voltage error (E2)	N/A
Influence of temperature (E3)	Add $0.1 \times (\text{Specified accuracy}) / ^\circ\text{C}$, < 21 $^\circ\text{C}$, > 25 $^\circ\text{C}$
Influence of interference voltages (E4)	N/A
Influence of earth electrode resistance (E5)	N/A
Influence for phase angle of impedance of circuit under test (E6)	N/A
Influence of system frequency (E7)	N/A
Influence of system voltage (E8)	N/A
Influence of distorted waveform (E9)	<(1%+20d)
Influence of system d.c. quantities (E10)	N/A

Influence of external low frequency magnetic fields (E11)	10 A/m: add ± 0.1 mA 30 A/m: add ± 0.3 mA @ I_N : 3.500 mA – 600.0 mA / 40 Hz to 1 kHz and a frequency of the magnetic field of 15 to 400 Hz acc. to IEC 61000-4-8
Influence of load current (E12)	Add ± 6 μ A per A load current
Influence of touch current caused common mode voltage (E13)	N/A
Influence of frequency (E14)	N/A
Influence of repeatability (E15)	N/A
Agency approval	   
Power supply	Two 1.5 V AAA (LR03) batteries
Battery life	60 hours typical
Low battery voltage	Approx. 2.5 V
Low battery indication	
Auto power off	Idle for 20 minutes
Dimensions (H x W x L)	8.7 x 3.5x 1.8 in (221 x 89 x 48 mm)
Weight	Approximately 0.90 lb (410 g) with battery installed

ELECTRICAL SPECIFICATIONS

Accuracy is given as \pm (% of reading + counts of least significant digit) at 23 °C ± 2 °C ($\leq 80\%$ R.H.)

AC Function

- AC A specifications are AC coupled, true RMS.
- For non-sinusoidal waveforms, Additional Accuracy by Crest Factor (C.F.):
Add 1.0% for C.F. 1.0 to 2.0
Add 2.5% for C.F. 2.0 to 2.5
Add 4.0% for C.F. 2.5 to 3.0
- Max. Crest Factor of Input Signal:
3.0 @ 3000 counts
2.0 @ 4500 counts
1.5 @ 6000 counts
- Frequency Response is specified for sine waveform.
- When operating under magnetic field add error E11.
- When measuring leakage current of multiple conductors, add error E12 for influence of load current.
- For Position Error see error E1.

AC Current

Range	Accuracy			
	15 to 40 Hz	40 to 50 Hz	50 to 60 Hz	60 to 1 kHz
6 mA ^[1]	$\pm(5.0\%+5D)$	$\pm(2.0\%+5D)$	$\pm(1.0\%+5D)$	$\pm(2.0\%+5D)^{[2]}$
60 mA	$\pm(5.0\%+5D)$	$\pm(2.0\%+5D)$	$\pm(1.0\%+5D)$	$\pm(2.0\%+5D)^{[2]}$
600 mA	$\pm(5.0\%+5D)$	$\pm(2.0\%+5D)$	$\pm(1.0\%+5D)$	$\pm(2.0\%+5D)^{[2]}$
6 A	-	$\pm(2.0\%+5D)$	$\pm(1.0\%+5D)$	$\pm(2.0\%+5D)$
60 A	-	$\pm(2.0\%+5D)$	$\pm(1.0\%+5D)$	$\pm(2.0\%+5D)$

^[1] Minimum Reading is 0.010 mA

^[2] Frequency response is 60 Hz to 10 kHz.

When frequency > 1 kHz, add 0.5% to accuracy.

Minimum Resolution: 0.001 mA

Low Pass Filter (50–60 Hz Filter)

Range	Accuracy
	50 to 60 Hz
6 mA ^[1]	$\pm(1.0\%+5D)$
60 mA	$\pm(1.0\%+5D)$
600 mA	$\pm(1.0\%+5D)$
6 A	$\pm(1.0\%+5D)$
60 A	$\pm(1.0\%+5D)$

^[1] Minimum Reading is 0.010 mA

Minimum Resolution: 0.001 mA

Cut-off frequency: 200 Hz

Appliance Filter (acc. IEC/EN 61557-16)

Range	Accuracy	
	50 to 60 Hz	60 to 200 Hz
6 mA ^[1]	$\pm(1.0\%+5D)$	$\pm(2.5\%+5D)$
60 mA	$\pm(1.0\%+5D)$	$\pm(2.5\%+5D)$
600 mA	$\pm(1.0\%+5D)$	$\pm(2.5\%+5D)$
6 A	$\pm(1.0\%+5D)$	$\pm(2.5\%+5D)$
60 A	$\pm(1.0\%+5D)$	$\pm(2.5\%+5D)$

^[1] Minimum Reading is 0.010 mA

Minimum Resolution: 0.001 mA

Cut-off frequency: 1 kHz

MAINTENANCE

Do not attempt to repair this meter. It contains no user-serviceable parts. Repair or servicing should only be performed by qualified personnel.

1. Inspect the jaw mating surface for cleanliness. If any foreign material is present, the jaw will not close properly and measurement errors will result.
2. Verify that the range on the meter is correct.

Calibration Interval

We suggest a calibration interval of one year. If the instrument is rarely used, the calibration interval can be extended to 3 years.

Cleaning

To avoid damaging the meter, do not use abrasives or solvents to clean it.

Always keep the metal parts of the jaw clean and dry. Avoid allowing dust or other particles to come in-between the jaws. Remove and clean these parts carefully by soft air pressure.

Also ensure that there is no rust or oxidation on the metal surfaces. In case of contamination (dust or oxidation) the commutator segments of the jaw could be damaged or bent. In this case, the current clamp will be damaged and outside specification. Please send the current clamp to service for repair.

BATTERY REPLACEMENT

1. Disconnect the jaw from measuring circuit.
2. Turn the meter OFF.
3. Remove the screws from the battery cover and open the battery cover.
4. Remove the batteries and replace with 2 1.5 V AAA size (IEC R03) batteries. Observe correct polarity when installing the batteries.
5. Replace the battery cover and re-fasten the screw.

