

BESANTEK 4 Wire Earth Resistance Tester Designed to Measure the Earth Resistance and Earth Voltage.

Features:

- Microprocessor-controlled.
- Earth testing at 2Ω, 20Ω, 200Ω, 2kΩ.
- Earth voltage measuring : 0-300V AC.
- Automatic C spike check.
- Automatic P spike check.
- 2-Wire test.
- 3-Wire test.
- 4-Wire test.
- LCD display.
- Auto ranging.
- Auto power OFF.
- Data hold.
- Robust, compact and easy-to carry.




BST-ET102

Technical Specification:

| BST-ET102 | |
|-----------------------------|---|
| Measuring Ranges | Earth Resistance 0-2Ω / 0-20Ω / 0-200Ω / 0-2kΩ Earth Voltage 0-300V AC |
| Accuracy | Earth Resistance : ±(2%rdg + 3dgt) Earth Voltage : ±(2%rdg + 3dgt) |
| Earth Resistance Resolution | 0-2Ω : 0.01Ω 0-20Ω : 0.1Ω 0-200Ω : 1Ω 0-2kΩ : 10Ω |
| Temperature & humidity | Operating: 0°C~40°C ≤80% R.H. Storage: -10°C~50°C ≤80% R.H. |
| Dimensions | 250(L) x 190(W) x 110(D)mm |
| Weight (battery included) | Approx. 1430g |
| Power source | 1.5V (AA) x 8 |
| Safety Standards | EN 61010-1 CAT IV 300V EN 61326-1 EN 61557-1 EN 61557-5 |
| Accessories | Test leads (red-15m, black-10m, yellow-10m, green-5m) Instruction manual Auxiliary earth spikes Carry case Shoulder belt Batteries |

Accessories

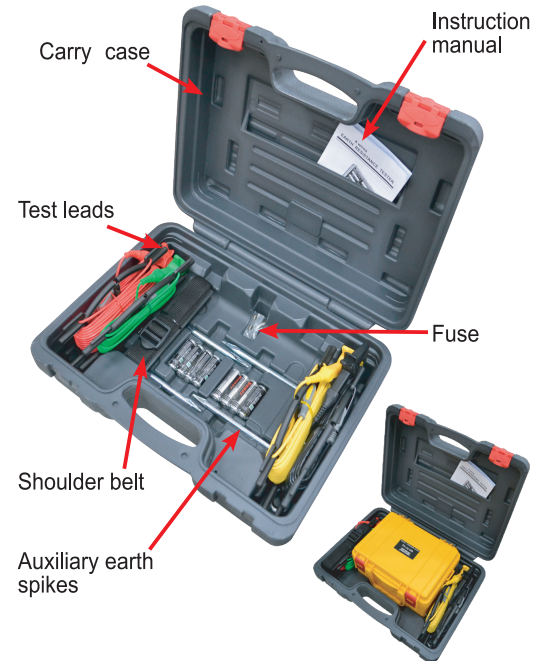

Ordering Information:

- BST-ET102 : 4 Wire Earth Resistance Tester.

Test Equipment Depot - 800.517.8431 - 99 Washington Street Melrose, MA 02176
TestEquipmentDepot.com