

Multi-Purpose Tester (ECB/RCD/Wiring/Appliances)

BESANTEK Multi-Purpose Tester Designed for Testing Main Wiring Polarity Check, Line Current Testing, Earth Leakage Testing, Fused Main Adapter and Appliances Socket Appliance Testing with the Aid of A clamp Meter, Universal Mains Adapter, No Batteries required, HRC Fuse Inside, Fused, Color-Coded universal Test Sockets.

Features:

- Mains wiring polarity check.
- ELCB/RCD testing.
- Measuring ear for line current.
- Measuring ear for leakage current.
- Helps calculate insulation resistance.
- Helps calculate power consumption.
- Helps fault finding of standing earth fault.
- Fused main adapter.
- Appliance testing (with the aid of a clamp meter).
- Fused appliance socket.
- No batteries required.
- HRC fuse inside.
- Fused, color-coded universal test sockets.
- Universal mains IEC Lead.



BST-ET14

Technical Specification:

BST-ET14		
VOLTAGE / POWER INPUT	Universal IEC LEAD 240V/10A	
WIRING POLARITY CHECK	Nominal Voltage	240Vac
	Frequency	50/60Hz
	Mains Voltage Tolerance	±10%
ELCB / RCD TESTER	Nominal Voltage	240Vac
	Frequency	50/60Hz
	Current Tolerance	Proportional
	(current proportional to Line to Earth Voltage)	±10%
UNIVERSAL TEST SOCKETS	Nominal Voltage	240Vac
	Frequency	50/60Hz
	Mains Voltage Tolerance	±10%
	Fuse	10A
APPLIANCE TESTER	Nominal Voltage	240Vac
	Frequency	50/60Hz
	Mains Voltage Tolerance	±10%
	Fuse	10A

APPLIANCE LINE CURRENT COIL	Measured by current clamp	Fuse Type
APPLIANCE EARTH CURRENT COIL	Measured by current clamp	Fuse Type
DIMENSIONS	223(L)x152(W)x67(D)mm	
WEIGHT	Approx. 318g	
SAFETY STANDARD	IEC / EN 61010-1 EN 61326-1	
ACCESSORIES	(for use with appliance test feature) Leakage clamp	

Ordering Information:

- BST-ET14 : Multi-Purpose Tester.

Test Equipment Depot - 800.517.8431 - 99 Washington Street Melrose, MA 02176 - TestEquipmentDepot.com