


# Operation manual for RGT-HYG13+ large screen Thermo-Hygrometer

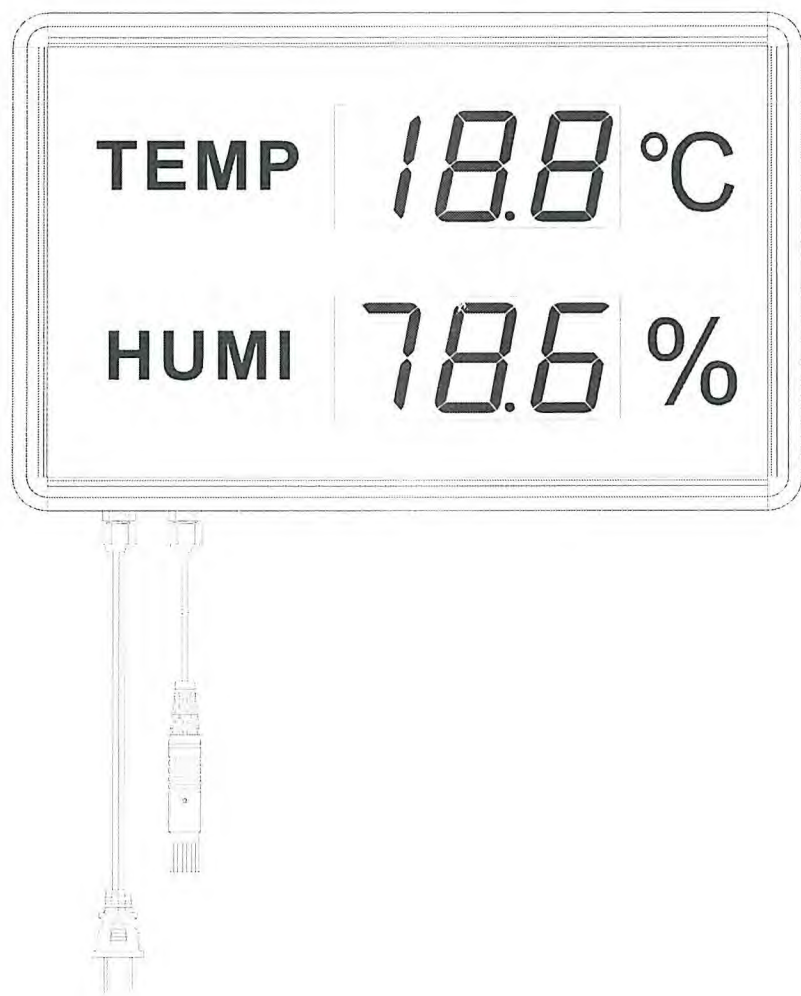

## Products Introduction

RGT-HYG13+ large screen Thermo-Hygrometer has high precision and recording functions. Adopt imported temperature humidity integrated sensor, fast response and good quality to assure the accuracy and stability.

### 1. Features:

- Fashionable and simple performance, firm structure, high accuracy.
- Adopt the bright LED digital tube display, clear display, visible distance is 5~50meters.
- Temperature humidity calibration function, when the temperature and humidity measurement errors, use this function to calibrate.
- Recording capacity: >=43000, RS232-USB interface.

### 2. Applications:


It has been widely applied in offices, hotel, canteens, school, factory, supermarket, warehousing, hospital, and indoor environment etc.

### 3. Performance parameters:

Model	RGT-HYG13+
Temperature accuracy	±0.5°C
Humidity accuracy	±3%RH
Sensor type	External cable length 3m
Measuring range	-40~85°C
Measuring range	0~99%RH
Height of display(inch)	1.8"
Distance (M)	5
N.W(kg)	2.3
Product dimension(CM)	39.5×25.5×5
Packing dimension(CM)	46×31.5×8.5

## 4. Starter:

(1) Keys and components (RGT-HYG13+)

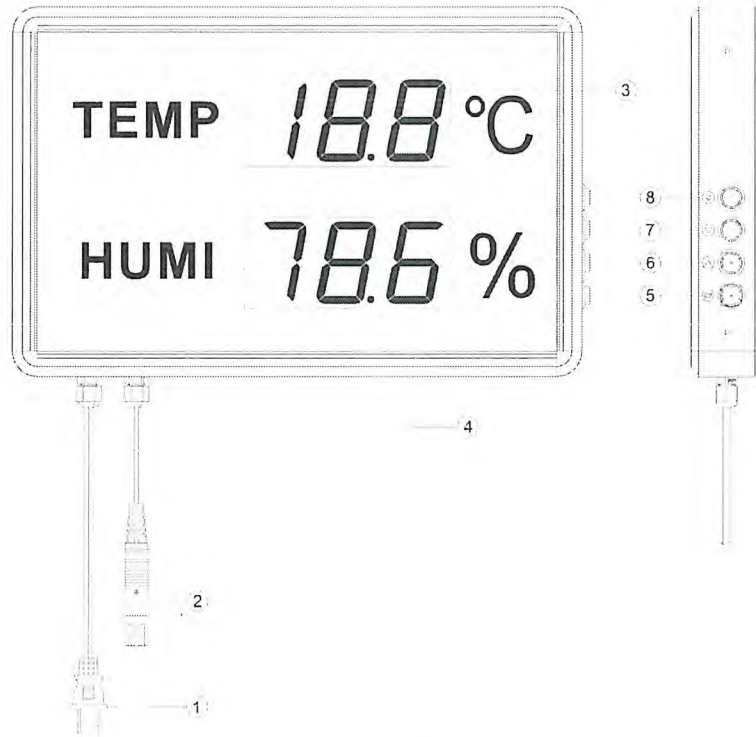

- |                            |                     |
|----------------------------|---------------------|
| ① power and plug           | ⑤ OK button         |
| ② External sensor          | ⑥ upward button     |
| ③ Temperature display area | ⑦ downward button   |
| ④ Humidity display area    | ⑧ S function button |

## 5. Key usage:



**Key function**

**Normal mode:** press enter setup mode ,press enter temperature setting, press or button respectively to adjust the value.



**Key function**

**Normal mode:** press this key is invalid.  
**Setting mode:** set a negative value.



**Key function**

**Normal mode:** press this key is invalid.  
**Setting mode:** set a positive value.



**Key function**

**Normal mode:** press this key is invalid.  
**Setting mode:** Confirm button and enter the next step.

**For example:** Standard temperature is 16 °C, humidity is 66%RH, and the measuring temperature is 15.3 °C, humidity is 66.8%RH. Then difference of temperature is -0.7 °C, difference of humidity is +0.8%RH.

**Setting Steps:** first, press enter setup mode, and then press enter temperature deviation setting state; press to adjust the temperature is -0.7 °C, press enter humidity settings, and press to adjust the humidity value is +0.8%RH, then press back to normal mode.