ClearTest®

TRANSFORMER TESTER CT-300

WITH AUTOMATIC SELF TEST

Operating & Instruction Manual



Test Equipment
Depot

1-800-517-8431

99 Washington Street Melrose, MA 02176 Phone 781-665-1400 Toll Free 1-800-517-8431





SAFETY

WARNING: The ClearTest Transformer Tester shall only be used on equipment known to be deenergized and/or discharged.

CAUTION: Using the ClearTest Transformer Tester on the secondary side of transformers may generate high voltages on the primary side. Stay clear of all primary connections while testing.

OPERATIONAL IMPAIRMENT: If the CT-300 is used in a manner not described in this instruction manual, the protection and effective operation of this equipment may be impaired.

INTRODUCTION

The CT-300 ClearTest Transformer Tester is a versatile tool for quick and easy checks of transformers and the connections made to them. The transformer connections can include bundled secondaries or a cable run from the transformer to the meter.

In the field, the CT-300 is used to test the primary and secondary sides of new or reworked, deenergized single or three phase transformer installations.

In the shop the tester is used for quick screening of incoming and outgoing transformers (including their internal fuses and breakers). It tests both 1Ø and 3Ø transformers including PT's and other instrument transformers.

HOW IT WORKS

The CT-300 is used in the field for testing connected transformers and their connected primary and secondary leads for both shorts or opens. Unlike a simple ohmmeter, the CT-300 measures transformer winding inductance and can differentiate true shorts from other low resistance windings or connected equipment such as meters.

NOTE: The CT-300 will detect most typical transformer defects including partially shorted windings such as turn-to-turn or layer-to-layer which result in an improper ratio.

BEFORE TESTING:

- 1. DO NOT CONNECT TO ENERGIZED EQUIPMENT
- 2. REMOVE SECONDARY LOAD
- 3. REMOVE ALL PRIMARY UNDERGROUND CABLES
- 4. PRESS AND HOLD TEST BUTTON FOR EACH CONNECTION DO NOT HOLD THE TEST BUTTON FOR MORE THAN ONE CONNECTION

TESTING THE CLEARTEST TRANSFORMER TESTER

The CT-300 will automatically perform a complete self-test of the batteries, lights, beeper and all electronics when you press and hold the TEST button and is indicated by all lights and the beeper turning on. This self-test takes about one second to complete, after which the tester will begin testing whatever the leads are connected to. This self-test checks everything except for the test leads and internal fuse. To test the leads and fuse, short the test leads together and press the TEST button. A SHORT light after completion of the normal self-test indicates that the leads and fuse are good.

If the unit fails to operate, check or replace both batteries. If this self-test sequence is not completed, the unit will not perform any further testing and must be returned to the factory for service.

USING THE CT-300

For single phase transformers, use these figures as guidelines to get started. For 3Ø transformers. refer to the following page.

When all connections are proper and the transformer itself is good, the CT-300 will beep and show OK. The OPEN indication light indicates a bad connection or an open transformer winding. A SHORT light indicates a short from phase to neutral or phase to phase in the transformer or the connections to it.

NOTE: Disconnect primaries or remove primary fuses before testing secondaries.

RESULTS:

OK: Transformer coil is OK

with no shorts or opens.

SHORT: Transformer has internal

short or load is connected. **OPEN:** Check connections, Transformer

coil is open or check for blown


fuse or breaker.

As a guick test in the shop, the CT-300 can be used to screen transformers by checking both primary and secondary windings and connections. Test for SHORTs on both primary and secondary windings and from primary to secondary. Test for OPENs on both primary and secondary windings to check for open windings or open breakers and fuses.

This instrument is intended for quick and simple testing of transformers and the connections made to them. Do not energize visibly damaged equipment such as a leaking transformer even if the CT-300 indicates OK.


Test Connections for CT-300



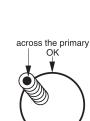




OK

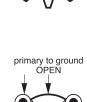

across the secondary

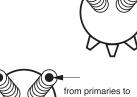




secondaries OPEN OK if both primary and secondary have one grounded bushing

Remove secondary ground strap to verify primary isolated from secondary with OPFN indication.


For 3Ø transformers, the CT-300 test leads are connected from each phase to neutral and across each pair of phases. When all connections are proper and the transformer itself is good, the CT-300 will beep and show OK. The OPEN indication indicates a bad connection or an open transformer winding. A SHORT indication indicates a short from phase to neutral or phase to phase in the transformer or the connections to it.

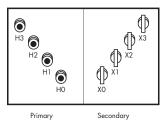

For Y (wye) connections, test the primary and secondary sides of the transformer as follows:

X1 - X2	OK
X2 - X3	OK
X1 - X3	OK
H1 - H2	OK
H2 - H3	OK
H1 - H3	OK
H1 - H0	OK
H2 - H0	OK X
H3 - H0	OK
H1 - X1 ነ	Transformer OK if both H0
H2 - X2 }	and X0 are grounded,
H3 - X3 🕽	otherwise OPEN
H0 - X0	SHORT, if both sides are
	grounded, otherwise OPEN

For Δ (delta) connections, test the primary and secondary sides the same as the Y (wye) except omit the connections to X0 and H0.

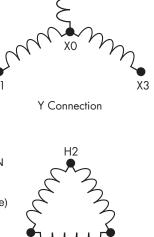

Delta Connection

TESTING DISTRIBUTION VOLTAGE REGULATORS

For typical distribution voltage regulators, test using these figures as guidelines. Both the line and load bushings tested to ground should indicate the reading shown in the figures. With the regulator in the neutral position, the line and load are internally connected with the resulting test indicating SHORT.

TESTING DISTRIBUTION TRANSFORMERS FROM METER SOCKETS

An overhead or underground distribution transformer can sometimes be more conveniently tested from a meter socket served by that transformer.

The CT-300 shall only be used on equipment known to be deenergized. Test both the load and source sides of the meter socket for the presence of voltage before using the CT-300.

Using the CT-300 on the secondary side of transformers may generate high voltages on the primary side. Stay clear of all primary connections while testing. The CT-300 will test the secondary side of a transformer connected to the meter socket. Connect the CT-300 across the two source side receptacles and from each receptacle to ground and test.

NOTE: This procedure will not work if other loads are connected to the same transformer.

The wiring on the load side of the meter socket going into the main breaker can also be tested for shorts or crossed phases. Connect the CT-300 across the two load side receptacles and from each receptacle to ground. The absence of shorts or crossed phases will be indicated by an OPEN reading. If the main breaker is not open, connected loads within the building may cause a SHORT or OK indication.

The meter socket connections shown are typical. Local standards may specify different connections.



line to ground

ΟK

line to load

regulator at neutral

SHORT

load to ground

BATTERY REPLACEMENT

The CT-300 is powered by two 9V lithium or alkaline batteries. They are easily and quickly replaced by removing the battery cover on the back of the unit. Always replace the two batteries together.

NOTE: For user safety there is a non-replaceable 600V internal fuse inside the instrument. If the instrument is connected to an energized transformer, the fuse will blow. The instrument must then be returned to the factory for repair.

DIMENSIONS

4.0 in. W x 7.8 in. L x 2.3 in. H (10.1 cm x 19.5 cm x 5.9 cm)

WEIGHT

1.6 lbs, (727 g)

BATTERY

9V alkaline 1604A, IEC 6LR61 or 9V lithium ANSI-1604LC

SHORT: Power factor < 0.3 to 0.5, current dependent

OPEN: Current < 10 µA

TRANSFORMER OK: Power factor ≥ 0.3 TO 0.5, current dependent

ENVIRONMENTAL CONDITIONS

CONDITIONS: Indoor and outdoor use ALTITUDE: Up to 6.566 ft. (2000M)

OPERATING TEMPERATURE: -20°F to +140°F (-29°C to +60°C)

HUMIDITY: 95% to +60°C (non-condensing)

POLLUTION DEGREE: PD2

ENCLOSURE MATERIAL: ABS UL 94-HB PRINTED CIRCUIT BOARDS: FR-4 UL 94-V0

ClearTest Transformer Tester CT-300

WARNING: Use Only on Equipment Known to be Deenergized and/or Discharged. To test leads and internal fuse, short leads together and check for blinking SHORT light. Connect the test leads to the device under test. Fush the test button and observe the device under test. Fush the test button and observe the opens. OPEN indicates an open connection or a high resistance leakage path. SHORT indicates a very low resistance. Using this tool on the secondary side of transformers may generate high voltages on the test of the secondary side of transformers may generate high voltages on the substrates if the unit falls to openiars. Replace with 8V alkaline or lithium types only. This unit contains a 600V true which is not replaceable. Return to factory for service.

DANGER: Failure to follow these directions or the instructions may expose the user to high voltage, severe injury or death,

HD Electric Company, Waukegan, IL U.S.A. www.HDElectricCompany.com





TERMS AND CONDITIONS OF SALE

HD Electic Company is been interned to either as THDE or "Seller and the customer operation or entity purchasing goods or services. Description in collectively referred to as Text(5) is referred to as the "Buyer". These Text and Conditions, any price lest or steches, questions, advantagement or invoice from the Text and Eventions to sell as deed for Goods and all documents incorporated by species or the extensive incorporated by species or the seller of the extensive incorporated by species or the extensive incorporate by species in the extensive incorporate by species or the extensive incorpor

1. PRICES AND TAXES: Unless a fixed price is quoted, the price at which this order is accepted is subject to adjustment to HDE's price in effect at the time of order. Any current or future tax or governmental change (or increase in same) affecting Seler's consist or production, asked or delivery or which Seler is ordered accepted to pay or collect in connection with the sale, purchase, delivery, storage, processing, use or consumption of Goods (but excluding any wint on Seler's net increase or positify what let be fively as decount and retails be added to the price.

2. TERMS OF PAYMENT. Term are stated on HDE's invoice in U.S. namere), HDE shall have the right, among other remodes, either is berminate this agreement or to suspend further performance under this action of many agreements below and other performance under this action of many agreements below and other theory served accounting, or HDE crimetoring, or HDE crimetor

3. SHIPMENT AND DELIVERY: Values otherwise expressly provided, shipments are made F.O.B. H.DE's shipping point. Risk of loss or disrupes and responsibility shall pass from H.DE to Buyer upon delivery to and receipt by common center. Any datem for shortages or damages and these in its man are the responsibility of Buyer and all be automated by the Buyer disretly in the center. Shortages or damages and the automated paid and great provided by the point of the short of the Buyer disretly in the center. Shortages or damages made the automated paid and the provided and the Buyer disretly in the paid and translations. If the shipping remains the Buyer disretly in the paid and translations are the shipping remains the Buyer disretly in the paid and the short of the Buyer disretly in the paid and translations. If the shipping error in the Buyer disretly into the paid and the short of the Buyer disretly into the paid and the short of the Buyer disretly into the paid and the short of the Buyer disretly into the paid and the short of the Buyer disretly into the Buyer disretly into

4. NPELIMITED WARRANTY: NEC overs its products with a manufacture's warranty against defects in mediated or workmarship for a period of ten year in fee. case of Capacitor, cortico and in all other circumstances for a period of the year in fee. a case of Capacitor, cortico and in all other circumstances for a period of the year in fee. a case of Capacitor, cortico and in all other circumstances are produced in the period of the year in fee. and year in the period of the year in fee. and year in the year in

8. EXCUSE OF PERFORMANCE (PROCE MALPURE) HIS data not be label for delay in sperformance due to acts of Coct, and dispers was fire foot wealther, subscinge, stillers, labor disputes, of displantations, or confident dispersions, or confident dispersions

7. CHANGES: HDE reserves the right to change designs and specifications for standard Goods without prior notice to Buyer, but not with respect to custom Goods being made for Buyer. HDE shall have no obligation to install or make a cub change in any Condent smallestured not in the face of such disappear.

8. ASSIGNMENT: Buyer shall not assign its rights or delegate its duties hereunder or any interest herein without the prior written consent of HDE, and any such assignment, without such consent, shall be void.

INSTALLATION: Buyer shall be responsible for receiving, inspecting, testing, storing, installing, starting up and maintaining all Goods.
 INSPECTION/TESTING: Buyer, at its expense, agrees that it will promptly inspect the Goods upon receipt thereof, and in no event later than thirty (30) days from the date of receipt of the Goods. Buyer shall deliver to

With the process of the control of t

11. SERVICEs: If this agreement requires HDE to perform or provide any services, HDE (including without limitation its successors, assigns, agents or any person or entity acting at HDE's direction) shall not be responsible for any damages, claims, liabilities or expenses of any nature arising out of such services.

12. U.S. EXPORT CONTROL LAWS: All Goods sold to Buyer by HDE hereunder are subject to U.S. Export Control Laws. Buyer hereby agrees not to re-sell or divert any goods contrary to such laws

13. COMPLIANCE: Select.Combastor shall comply with all applicable federal, state or local tases, rules, regulations, or orders. Select.Combastor shall comply with all applicable federal, states or local tases, rules, regulations, or orders. Select.Combastor shall comply used a policy complete programs (PCPP), 41 CFPP per fit of which are incorporated term by the reference share intercent comply with all applicable federal, states, rules, regulations or orders including but not limited to the Foreign-Compt Produces Act of 1977, as amended, HDE reserves the right to delay or return delivery if requests for reasonable assurances of Buyer's complete produces and order to the complete produces are returned.

14. MISCELLANEOUS: These terms and conditions superised as other communications, negotiations and prior or of or written statements regarding the subject matter better. No change, modification, resistance, discharge, and administration of the statements of the statement of the

19. DISPUTE RESOLUTION: In the event of any dispute NCLIDING, BUT NOT LIMITED TO. BERGAH OF CONTRACT, BREACH OF WARRANTY, CLAIMS SEED IN TORT, NEGLEGIBLE, PRODUCT LIMBILITY, REPORT AND THE WARRE OF CLASS ACTION TRIBLES between Buyer and Select, either may choose to resolve the dispute by binding substation, as described below, releaded in court. THIS LIMENS WARRANTY, AND THE WARRE OF CLASS ACTION TRIBLES between Buyer and Select, either may choose to resolve the dispute by binding substation, as described below, releaded in court. THIS LIMENS IF EITHER BUYER OR SELLER CHOOSE BROWN, ARBITRATION, METHER PARTY, METHER ADMITY, AND THE WARRE OF CLASS ACTION TRIBLES WARREN AND ARBITRATION, METHER PARTY VIEW, AND ARBITRATION ARBITRATION, METHER PARTY VIEW, AND ARBITRATION ARBITRATION, ARBITRATICAL ARBITRATION, ARBITRATI

16. CLASS ACTION WAVER: BIXINGS ARBITRATION MUST BE ON AN INDIVIDUAL BASIS. THIS MEANS INTIME BUYEN FOR SELER BMY, YOUN FOR CONSCILIDATE CLAMBS IN ARBITRATION BY ORAL AGAINST OTHERS, OR LITICATE IN COLOR OF ARBITRATION FOR LAMBS AS A REPRESENTATIVE OR MEMBERS OF A CLASS OR IN PAYING A TOTRON'S CREMENT ACAPITY, ANIMISTRATION OF AR-BITRATION. The binding subtration must be administened by the American Administor Association (TAAF) in accordance with its Commercial Administor Ray Service Services (Table 1) accordance with its Commercial Administor Ray Services (Table 1) accordance with its Commercial Administor Ray Services (Table 1) accordance with its Commercial Administor Ray Services (Table 2) and the services and the services of the Services (Table 2) and the services of the Services (Table 2) and the services (Table

HD Electric Company is committed to ongoing review and improvement of its product lines, and thus reserves the right to modify product design and specifications without notice.

HD Electric Company® products are available through HDE® sales representatives worldwide.

HD Electric products receive final assembly and shipment from HDE's production facility at

Suite 400 - 4320 Executive Drive, Southaven, MS 38672.

HD Electric Company is ISO 9001:2015 certified