

Electrical Safety Tester

GPT-9000 Series



99 Washington Street
Melrose, MA 02176
Phone 781-665-1400
Toll Free 1-800-517-8431



USER MANUAL

GW INSTEK PART NO. 82PT-99040EB1



ISO-9001 CERTIFIED MANUFACTURER

GW INSTEK

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

Table of Contents

SAFETY INSTRUCTIONS	5
GETTING STARTED.....	9
GPT-9000 Series Overview	10
Appearance.....	14
Set Up.....	20
OPERATION	27
Menu Tree.....	29
Test Lead Connection.....	33
Manual Testing	35
Common Utility Settings.....	72
Automatic Tests	79
EXTERNAL CONTROL	96
External Control Overview.....	97
REMOTE CONTROL	103
Interface Configuration	104
Command Syntax	108
Command List	111
Error Messages	143
FAQ.....	144
APPENDIX.....	146
Fuse Replacement	146
Error Messages.....	147
GPT-9000 Specifications	149
GPT-9000 Dimensions	153
Declaration of Conformity.....	154

INDEX..... 155

S SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow during operation and storage. Read the following before any operation to ensure your safety and to keep the instrument in the best possible condition.

Safety Symbols

These safety symbols may appear in this manual or on the instrument.



WARNING

Warning: Identifies conditions or practices that could result in injury or loss of life.



CAUTION

Caution: Identifies conditions or practices that could result in damage to the GPT-9000 or to other properties.



DANGER High Voltage



Attention Refer to the Manual



Protective Conductor Terminal



Frame or Chassis Terminal



Earth (ground) Terminal



Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

Safety Guidelines

General Guideline



CAUTION

- Do not place any heavy object on the GPT-9000.
- Avoid severe impact or rough handling that leads to damaging the GPT-9000.
- Do not discharge static electricity to the GPT-9000.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block the cooling fan opening.
- Do not disassemble the GPT-9000 unless you are qualified.

(Measurement categories) EN 61010-1:2010 specifies the measurement categories and their requirements as follows. the GPT falls under category I.

- Measurement category IV is for measurement performed at the source of low-voltage installation.
- Measurement category III is for measurement performed in the building installation.
- Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation.
- Measurement category I is for measurements performed on circuits not directly connected to Mains.

Power Supply



WARNING

- AC Input voltage range:
100/120/220/230VAC $\pm 10\%$
- Frequency: 50Hz/60Hz
- To avoid electrical shock connect the protective grounding conductor of the AC power cord to an earth ground.

**Cleaning the
GPT-9000**

- Disconnect the power cord before cleaning.
 - Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid.
 - Do not use chemicals containing harsh material such as benzene, toluene, xylene, and acetone.
-

**Operation
Environment**

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Relative Humidity: $\leq 70\%$ (no condensation)
- Altitude: $< 2000\text{m}$
- Temperature: $0^{\circ}\text{C}\sim 40^{\circ}\text{C}$

(Pollution Degree) EN 61010-1:2010 specifies the pollution degrees and their requirements as follows. The GPT-9000 falls under degree 2.

Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”.

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
 - Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
 - Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.
-

**Storage
environment**

- Location: Indoor
 - Temperature: -10°C to 70°C
 - Relative Humidity: $\leq 85\%$ (no condensation)
-

Disposal

Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.

Power cord for the United Kingdom

When using the safety tester in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons

 **WARNING: THIS APPLIANCE MUST BE EARTHED**

IMPORTANT: The wires in this lead are coloured in accordance with the following code:

Green/ Yellow:	Earth
Blue:	Neutral
Brown:	Live (Phase)



As the colours of the wires in main leads may not correspond with the coloured marking identified in your plug/appliance, proceed as follows:

The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with either the letter E, the earth symbol  or coloured Green/Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.


If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, a cable of 0.75mm² should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any exposed wiring from a cable, plug or connection that is engaged in a live socket is extremely hazardous. If a cable or plug is deemed hazardous, turn off the mains power and remove the cable, any fuses and fuse assemblies. All hazardous wiring must be immediately destroyed and replaced in accordance to the above standard.

G E T T I N G S T A R T E D

This chapter describes the safety tester in a nutshell, including its main features and front / rear panel introduction. After going through the overview, please read the safety considerations in the Set Up chapter.

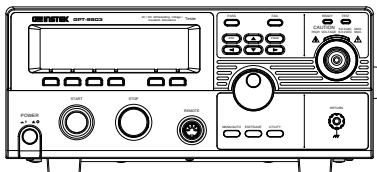

GPT-9000 Series Overview	10
Series lineup	10
Main Features	11
Accessories	12
Package Contents	13
 Appearance.....	 14
GPT-9801/9802/9803 Front Panel	14
GPT-9804 Front Panel	14
GPT-9000 Rear Panel.....	18
 Set Up	 20
Line Voltage Connection and Power Up	20
Installing the Optional GPIB Card	22
Workplace Precautions.....	23
Operating Precautions	24
Basic Safety Checks	26

GPT-9000 Series Overview

Series lineup

The GPT-9000 Series Safety Testers are AC/DC withstanding voltage, insulation resistance and ground bond safety testers. The GPT-9801 is an AC withstanding voltage tester, the GPT-9802 is an AC/DC withstanding voltage tester and the GPT-9803 is an AC/DC withstanding voltage and insulation resistance tester. The GPT-9804 includes all the functions of the other models as well as ground bond testing. All models can operate at up to 5kVAC for AC withstanding voltage testing. The GPT-9802, GPT-9803 and GPT-9804 can also operate at up to 6kVDC for DC withstanding voltage testing.

The GPT-9000 Series can store up to 100 manual tests, as well as run up to 16 manual tests sequentially as an automatic test, allowing the safety testers to accommodate any number of safety standards, including IEC, EN, UL, CSA, GB, JIS and others.

Model name	ACW	DCW	IR	GB
GPT-9801	✓			
GPT-9802	✓	✓		
GPT-9803	✓	✓	✓	
GPT-9804	✓	✓	✓	✓

Main Features

Performance

- ACW: 5kVAC
 - DCW: 6kVDC
 - IR: 50V~1000V (50V steps)
 - GB: 3A~30A
-

Features

- Ramp up time control
 - Safety discharge
 - 100 test conditions (MANU mode)
 - 100 automatic tests (AUTO mode)
 - Over temperature, voltage and current protection
 - Pass, Fail, Test, High Voltage and Ready indicators
 - PWM output (90% efficiency, increased reliability)
 - Interlock (configurable).
-

Interface

- Remote control start/stop interface terminal
- RS232/USB interface for programming
- Optional GPIB interface for programming
- Signal I/O port for pass/fail/test monitoring and start/stop control/interlock


Accessories

Standard Accessories	Part number	Description
	GHT-114 x1	Test lead
	Region dependent	Power cord
	GTL-115 x1	GB Test leads (GPT-9804)
	N/A	Remote terminal male plug
	N/A	Interlock key
Optional Accessories	Part number	Description
	GHT-205	High Voltage Test Probe
	GHT-113	High Voltage Test Pistol
	GTL-232	RS232C cable
	GTL-248	GPIO cable
	GTL-247	USB cable
	GRA-402	Rack Adapter Panel (19", 4U)
Options	Part number	Description
	Opt.01 GPIB Interface	GPIB module

Package Contents

Check the contents before using the GPT-9000.

Opening the box

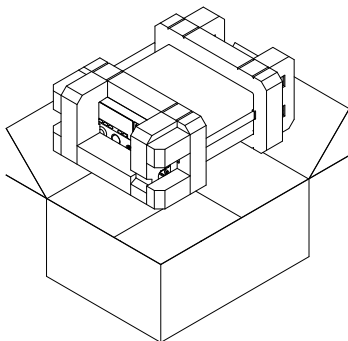

Contents (single unit)

- GPT-9000 unit
- Quick Start guide
- User manual CD
- CTC (Calibration Traceable Certificate)
- Power cord x1 (region dependent)
- GHT-114 test leads x1
- GTL-115 test leads x1 (GPT-9804)
- Remote terminal male plug
- Interlock key




Note


Keep the packaging, including the box, polystyrene foam and plastic envelopes should the need arise to return the unit to GW Instek.

Appearance

GPT-9801/9802/9803 Front Panel

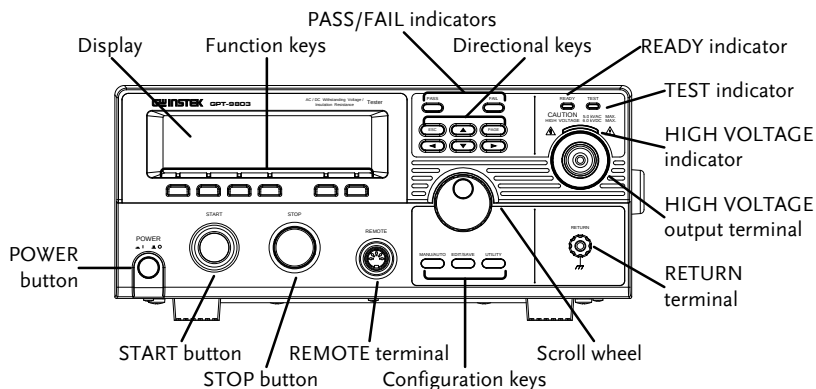

GPT-9804 Front Panel

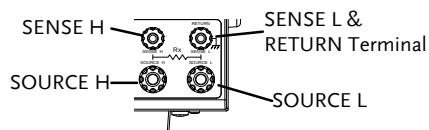

Display 240 X 64 dot matrix display (LCD)

Function keys The function keys correspond to the soft-keys directly above on the main display.

Pass/Fail indicators PASS FAIL The PASS and FAIL indicators light up upon a PASS or FAIL test result at the end of a manual test or automatic test.

 
ESC key  The ESC key is used to exit out of a menu or cancel a setting.


PAGE key  The PAGE key is used to view automatic test information and test results.

Directional arrow keys  The directional arrow keys are used to navigate menus and parameter settings.

READY indicator  The READY indicator is lit when the tester is ready to begin testing. The STOP button is used to put the tester into READY status.

TEST indicator  The TEST indicator is lit when a test is on. The START button is used to put the tester into TEST status.

HIGH VOLTAGE indicator  The HIGH VOLTAGE indicator will light up when an output terminal is active. Only after the test has finished or stopped will the indicator turn off.

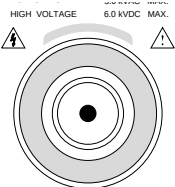HIGH VOLTAGE output terminal  The HIGH VOLTAGE terminal output is used for outputting the testing voltage. The terminal is recessed for safety. This terminal is used in conjunction with the RETURN terminal.

 


WARNING

USE EXTREME CAUTION.

Do not touch the HIGH VOLTAGE terminal during testing.


RETURN terminal
GPT-9801/9802
/9803



The RETURN terminal is the return terminal for all tests.

For GB testing, the RETURN terminal is also the SENSE L terminal.

RETURN/
SENSE L,
SENSE H,
SOURCE L,
SOURCE H
terminal
(GPT-9804)

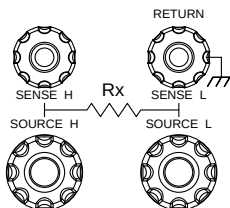


The RETURN terminal is used for IR, DCW and ACW tests. For GB tests, it is used as the SENSE L terminal.

SENSE H terminal for GB tests. GPT-9804 only.

SOURCE L terminal for GB tests. GPT-9804 only.

SOURCE H terminal for GB test. GPT-9804 only.

Scroll wheel

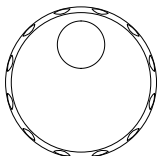

The scroll wheel is used to edit parameter values.

UTILITY key



 
Used to enter the MANU Utility or Common Utility menu.

EDIT/SAVE key



Used to start editing MANU/AUTO tests as well as save settings and parameters.

MANU/AUTO
key



The MANU/AUTO key is used to select manual tests (MANU) or automatic tests (AUTO).

REMOTE
terminal

REMOTE


The REMOTE terminal is used to connect to a remote controller.



STOP button

STOP


The STOP button is used to stop/cancel tests. The STOP button will also put the safety tester in the READY status to begin testing.

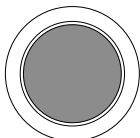

START button

START

The START button is used to start tests.

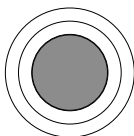


The START button can be used to start tests when the tester is in the READY status. Pressing the START button will put the tester in the TEST status.

POWER switch


POWER

■ | ■ ○

 
Turns the power on. The safety tester will always start up with the last test setting from when the instrument was last powered down.



GPT-9000 Rear Panel

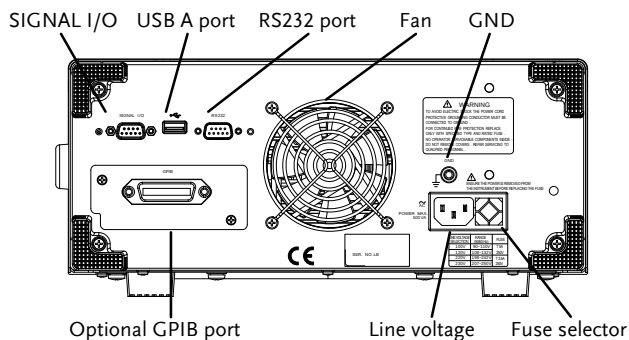

SIGNAL I/O port

 


The SIGNAL I/O port is used to monitor the tester status (PASS, FAIL, TEST) and input (START/STOP signals). It is also used with the Interlock key.

USB A port



Used for remote control.

 RS232 interface port




Used for remote control and firmware updates.

Fan


Exhaust fan.

 GND




Connect the GND (ground) terminal to the earth ground.

 Line voltage input



Line voltage input:
100/120/220/230VAC $\pm 10\%$

 Line voltage fuse



Line voltage selector and fuse:

100V/120V

T5A 250V

220V/230V

T2.5A 250V

Optional GPIB
port



Optional GPIB interface for remote control.


Set Up

Line Voltage Connection and Power Up


Background Before powering up the GPT-9000 ensure the correct voltage has been selected on the rear panel. The GPT-9000 supports line voltages of 100V/120V/220V and 230V.

- Steps**
1. Check the line voltage and the fuse Page 146 in the fuse holder.


The desired line voltage should line up with the arrow on the fuse holder.

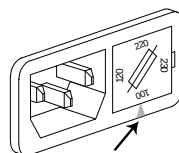

2. Connect the power cord to the AC voltage input.

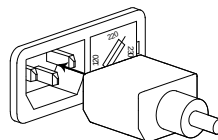


 3. If the power cord does not have an earth ground, ensure the ground terminal is connected to an earth ground.




Ensure the power cord is connected to an earth ground. Failure could be harmful to the operator and instrument.

 
4. Press the Power button.



 5. When the unit is powering up, all the LED indicators will light. Check to make sure all 5 LED indicators are working.
6. Check to make sure the System Self Test passes without errors.



After the System Self Test completes, the tester will go into VIEW status and be ready to operate.

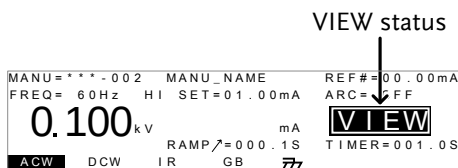

WARNING

See the Appendix on page 147 for details if a self-test error is detected.

Installing the Optional GPIB Card

Background

The optional GPIB is a user-installable option. Follow the instructions below to install the GPIB card.




WARNING


Before installing the optional GPIB card ensure the GPT-9000 turned is off and disconnected from power.

Steps

1. Remove the screws from the rear panel cover plate.

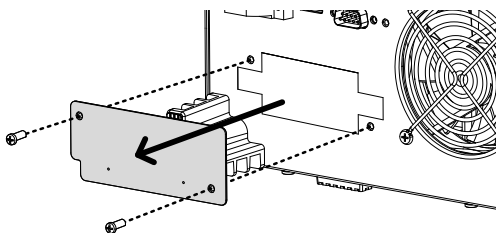

2. Insert the GPIB card into the two slots on either side of the opening. Push the card gently until it is fully inserted.

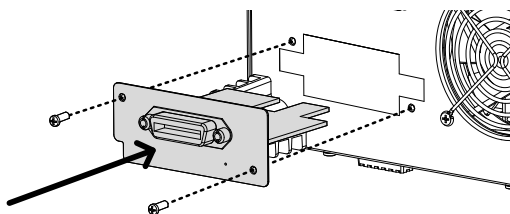

Workplace Precautions

Background	The GPT-9000 is a high voltage instrument that outputs dangerous voltages. The following section describes precautions and procedures that must be followed to ensure a safe work environment.
------------	--



WARNING

The GPT-9000 generates voltages in excess of 5kVAC or 6kVDC. Follow all safety precautions, warnings and directions given in the following section when using the GPT-9000.

1. Only technically qualified personnel should be allowed to operate the safety tester.
2. The operating workplace must be fully isolated, especially when the instrument is in operation. The instrument should be clearly labeled with appropriate warning signage.
3. The operator should not wear any conductive materials, jewelry, badges, or other items, such as wrist watches.
4. The operator should wear insulation gloves for high voltage protection.
5. Ensure the earth ground of the line voltage is properly grounded.
6. Ensure any devices that are adversely affected by magnetic fields are not placed near the tester.

Operating Precautions

Background	The GPT-9000 is a high voltage instrument that outputs dangerous voltages. The following section describes precautions and procedures that must be followed to ensure that the tester is operated in a safe manner.
------------	---



WARNING

The GPT-9000 generates voltages of up to 5kVAC or 6kVDC. Follow all safety precautions, warnings and directions given in the following section when using the GPT-9000.

1. Never touch the safety tester, lead wires, terminals, probes and other connected equipment when the tester is testing.
2. Do not turn the safety tester on and off quickly or repeatedly. When turning the power off, please allow a few moments before turning the power back on. This will allow the protection circuits to properly initialize.

Do not turn the power off when a test is running, unless in an emergency.

3. Only use those test leads supplied with the instrument. Leads with inappropriate gauges can be dangerous to both the operator and the instrument.
For GB testing, never use the Sense leads on the SOURCE terminals.
4. Do not short the HIGH VOLTAGE terminal with ground. Doing so could charge the chassis to dangerously high voltages.

5. Ensure the earth ground of the line voltage is properly grounded.
6. Only connect the test leads to the HIGH VOLTAGE/SOURCE H/SENSE H terminals before the start of a test. Keep the test leads disconnected at all other times.
7. Always press the STOP button when pausing testing.
8. Do not leave the safety tester unattended. Always turn the power off when leaving the testing area.
9. When remotely controlling the safety tester, ensure adequate safety measures are in place to prevent:
 - Inadvertent output of the test voltage.
 - Accidental contact with the instrument during testing. Ensure that the instrument and DUT are fully isolated when the instrument is remotely controlled.
10. Ensure an adequate discharge time for the DUT.

When DCW or IR tests are performed, the DUT, test leads and probes become highly charged. The GPT-9000 has discharge circuitry to discharge the DUT after each test. The time required for a DUT to discharge depends on the DUT and test voltage.

Never disconnect the safety tester before a discharge is completed.

Basic Safety Checks

Background	The GPT-9000 is a high voltage device and as such, daily safety checks should be made to ensure safe operation.
------------	---

1. Ensure all test leads are not broken and are free from defects such as cracks or splitting.
 2. Ensure the safety tester is always connected to an earth ground.
 3. Test the safety tester operation with a low voltage/current output:
Ensure the safety tester generates a FAIL judgment when the HIGH VOLTAGE and RETURN terminals are shorted (using the lowest voltage/current as the testing parameters).
-



Do not use high voltages/currents when the HIGH VOLTAGE and RETURN terminals are shorted. It may result in damage to the instrument.

OPERATION


Menu Tree.....	29
Menu Tree Overview	30
Test Lead Connection	33
ACW, DCW, IR Connection.....	33
GB Connection.....	34
Manual Testing	35
Choose/Recall a Manual Test Number	36
Edit Manual Test Settings	37
Setting the Test Function.....	38
Setting the Test Voltage or Test Current	38
Setting the Test Frequency	39
Setting the Upper and Lower Limits	40
Setting a Reference Value	42
Setting the Test Time (Timer)	43
Setting the Ramp Up Time.....	45
Creating a MANU Test File Name.....	46
Setting the ARC Mode	47
Setting PASS HOLD	48
Setting FAIL HOLD	50
Setting MAX HOLD	51
Setting the Grounding Mode	52
Saving and Exiting EDIT Status	57
Running a MANU Test.....	58
PASS / FAIL MANU Test.....	62
Zeroing of the Test Leads (GB only)	67
Special MANU Test Mode (000).....	70
Common Utility Settings	72
LCD Settings	72

Buzzer Settings	73
Interface Settings	74
Control Settings	76

Automatic Tests	79
Choose/Recall an Automatic Test	79
Edit Automatic Test Settings	81
Adding a Step to the Automatic Test	82
Creating an AUTO Test File Name.....	83
Saving and Exiting EDIT Status	84
Automatic Test Page View.....	85
Running an Automatic Test.....	88
Automatic Test Results.....	92

Menu Tree

This section describes the overall structure of the operation statuses and modes for the GPT-9000 safety testers. The testers have two main testing modes (MANU, AUTO) and 5 main operation statuses (VIEW, EDIT, READY, TEST and STOP).

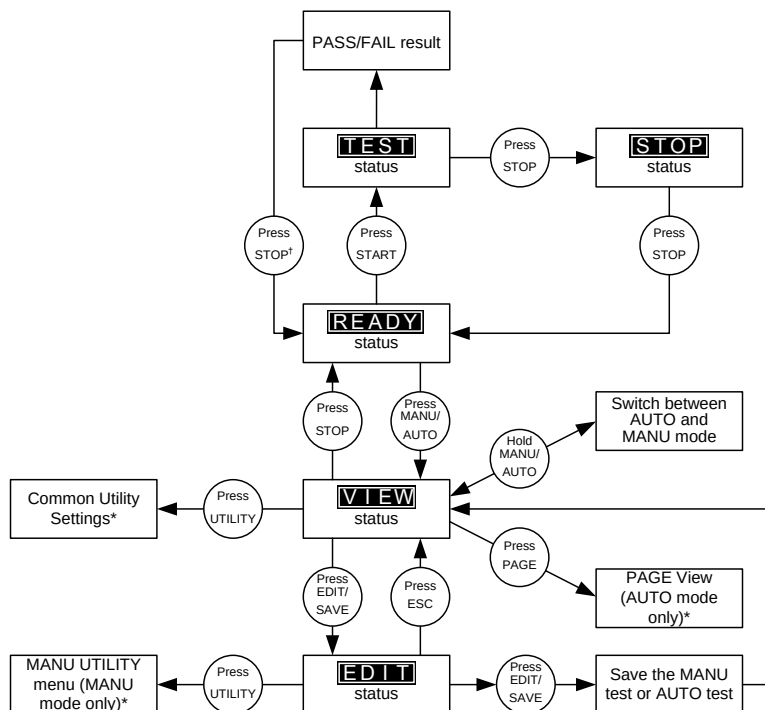


* Press EDIT/SAVE to save settings, or ESC to cancel and return to the previous screen.

† Press the STOP key twice for a FAIL result.

Menu Tree Overview


VIEW status

VIEW status is used to view the parameters of the selected manual test/automatic test. The VIEW status is also used to put the tester into MANU or AUTO mode.

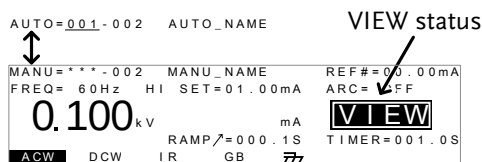


EDIT status

EDIT status is used to edit the manual test or automatic test parameters. Pressing the EDIT/SAVE key will save any changes. Pressing the ESC key will cancel any changes.

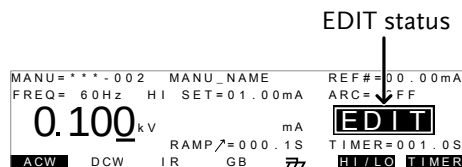

READY status

When the tester is in READY status, it is ready to begin testing. Pressing the START button will begin testing and put the tester into TEST status. Pressing the MANU/AUTO key will return the tester to VIEW status.

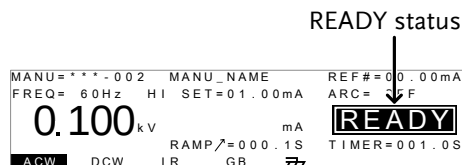

TEST status

TEST status is active when a MANU test or AUTO test is running. Pressing STOP will cancel the MANU test or the remaining steps in an AUTO test.

TEST status

 


MANU=***-002 MANU_NAME REF#=00.00mA
FREQ=60Hz HI SET=01.00mA ARC=OFF
0.100 kV 00.33 mA **TEST**
RAMP=000.1S TIMER=001.0S
ACW DCW IR GB

STOP status

STOP status is shown when a manual test or automatic test did not finish running and has been stopped by the operator. Pressing STOP will return the tester to READY status.


STOP status



MANU=***-002 MANU_NAME REF#=00.00mA
FREQ=60Hz HI SET=01.00mA ARC=OFF
0.100 kV 00.33 mA **STOP**
RAMP=000.1S TIMER=001.0S
ACW DCW IR GB

Page View

 Up to 16 tests can be used to create an automatic test. Page View is used to see which manual tests (steps) an automatic test is composed of. The steps can be re-arranged and deleted in Page View.




AUTO=001-010 AUTO_NAME
MANU_NAME ACW=0.100kV HI SET=01.00mA
#01:010 #02:001 #03:003 #04:004
#05:007 #06:003 #07:038 #08:005
#09: #10: #11: #12:
#13: #14: #15: #16:
MOVE SWAP SKIP DEL

AUTO mode

AUTO indicates that the tester is in AUTO mode. AUTO mode is for creating/running a sequence of up to 16 MANU tests.

 AUTO mode




```

AUTO=003-002  AUTO_NAME  REF#=00.00mA
FREQ= 60Hz  HI SET=01.00mA  ARC= OFF
0.100kV  mA  EDIT
RAMP=000.1S  TIMER=001.0S
ACW  DCW  IR  GB  77  ADD
  
```

MANU mode

MANU mode is used to create and/or execute a single test. MANU indicates that the manual test mode is active.

 MANU mode




```

MANU=***-002  MANU_NAME  REF#=00.00mA
FREQ= 60Hz  HI SET=01.00mA  ARC= OFF
0.100kV  mA  EDIT
RAMP=000.1S  TIMER=001.0S
ACW  DCW  IR  GB  77  HI/LO  TIMER
  
```

Common Utility Settings

 This utility controls the LCD, buzzer, interface and control settings. These settings are system wide.



```

COMMON UTILITY
Start Ctrl: FRONT PANEL
Double Action: OFF
Key Lock: OFF  INTERLOCK: OFF
LCD  BUZZ  INTER  CTRL
  
```

MANU Utility Settings

The Manu Utility settings are configured for each MANU test separately. The settings include: ARC MODE, PASS HOLD, FAIL HOLD, MAX HOLD and GROUND MODE.



```

MANU=***-002  MANU UTILITY
ARC MODE: OFF
PASS HOLD: OFF
FAIL HOLD: OFF
MAX HOLD: OFF
GROUND MODE: ON
  
```


Test Lead Connection


This section describes how to connect the GPT-9000 to a DUT for withstanding, insulation resistance or ground bond testing.

ACW, DCW, IR Connection

Background


ACW, DCW and IR tests use the HIGH VOLTAGE terminal and RETURN terminal with the GHT-114 test leads.

ACW, DCW, IR Connection

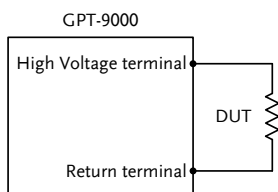

Steps

1. Turn the power off on the safety tester.
2. Connect the high voltage test lead(red) to the HIGH VOLTAGE terminal and screw firmly into place.
3. Connect the return test lead(white) into the RETURN terminal and screw the protector bar into place, as shown below.

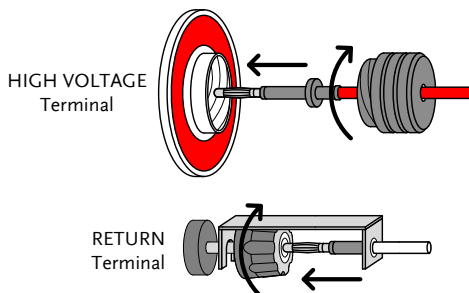


GB Connection

Background


GB tests use the SENSE H/L and SOURCE H/L terminals with the GTL-115 test leads.

GB Connection

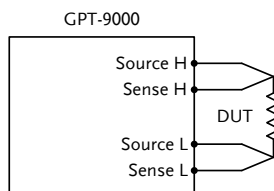

Steps

1. Turn the power off on the safety tester.
2. Connect the Sense H lead to the SENSE H terminal.
3. Connect the Sense L lead to the SENSE L terminal.
4. Connect the Source H lead to the SOURCE H terminal.
5. Connect the Source L lead to the SOURCE L terminal.

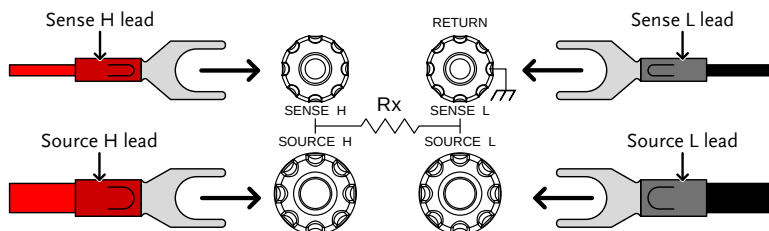

Manual Testing

This section describes how to create, edit and run a *single* ACW, DCW, IR or GB safety test. Each Manual setting described in this chapter *only applies to the selected manual test – no other manual tests are affected.*

Each manual test can be stored/recalled to/from one of 100 memory locations. Each stored manual test can be used as a test step when creating an AUTO test (page 79).

- Choose/Recall a Manual Test number → from page 36.
- Edit Manual Test Settings → from page 37.
- Setting the Test Function → from page 38.
- Setting the Test Voltage or Test Current → from page 38.
- Setting the Test Frequency → from page 39.
- Setting the Upper and Lower Limits → from page 40.
- Setting a Reference Value → from page 42.
- Setting the Test Time (Timer) → from page 43.
- Setting the Ramp Up Time → from page 45.
- Creating a MANU Test File Name → from page 46.
- Setting the ARC Mode → from page 47.
- Setting PASS HOLD → from page 49.
- Setting FAIL HOLD → from page 50.
- Setting MAX HOLD → from page 51.
- Setting the Grounding Mode → from page 52.
- Saving and Exiting EDIT Status → from page 57.
- Running a MANU Test → from page 58.
- PASS / FAIL MANU Test → from page 62.
- Zeroing of the Test Leads (GB only) → from page 67
- Special MANU Test Mode (000) → from page 70

Before operating the GPT-9000 please read the safety precautions as outlined in the Set Up chapter on page 20.

Choose/Recall a Manual Test Number

Background

ACW, DCW, IR and GB tests can only be created in the MANU (manual) mode. MANU number 001 to 100 can be saved and thus be loaded when editing/creating a MANU test or AUTO test. MANU number 000 is a special mode. See page 67 for details on the special mode.


Steps

1. If the tester is in AUTO mode, press and hold the MANU/AUTO key for three seconds to switch to MANU mode.


MANU/AUTO



The tester can only switch between AUTO and MANU mode when in the VIEW status.

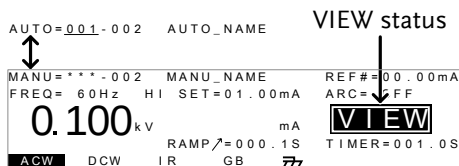


 2. Use the scroll wheel to choose the MANU number.



MANU # 001~100
(MANU# 000 is a special mode)

 MANU number





Note

The MANU number can only be chosen in VIEW status. If in the EDIT status, switch to the VIEW status by pressing the EDIT/SAVE or ESC key.

Edit Manual Test Settings

Background


To edit any of the manual test settings, the tester must be in EDIT status.

Any settings or parameters that are edited only apply to the currently selected MANU number.

Steps

1. Press the EDIT/SAVE key when in VIEW status to enter the EDIT status. This will enter the EDIT status for the chosen test number.

EDIT/SAVE

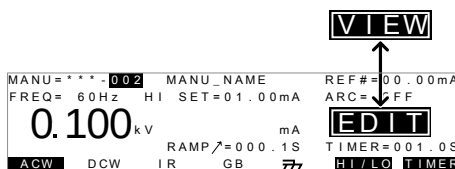

2. The Status changes from VIEW to EDIT.



Note

Pressing the EDIT/SAVE key again will save the settings for the current test and return back to VIEW status.

Setting the Test Function

 
Background After a MANU number has been chosen and the tester is in EDIT status, a test function can be set.

There are four test functions, AC Withstand, DC Withstand, Insulation Resistance and Ground Bond.

- Steps**
1. To choose the test function, press the ACW, DCW, IR or GB soft-keys.



2. The test function soft-key is highlighted.



↑
test function



Note


The chosen test function only applies to the current test.

Setting the Test Voltage or Test Current


Background The test voltage can be set from 0.100kV to 5kV for ACW, 0.100kV to 6kV for DCW and 0.050 to 1kV for IR (50V steps). For GB tests the test current can be set from 3A to 30A.

Steps

1. Press the UP / DOWN arrow keys to bring the cursor to the voltage setting.

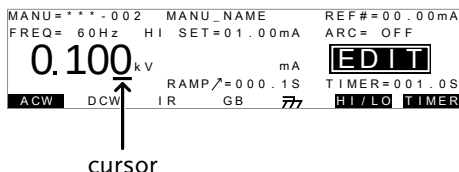

 2. Use the scroll wheel to set the voltage level.



ACW	0.100kV ~ 5kV
DCW	0.100kV ~ 6kV
IR	0.05kV ~ 1kV (50V steps)
GB	3.00A ~ 30.00A



Note

When setting the voltage, be aware that a maximum of 200VA can be set for ACW and 50W for DCW.

The ground bond voltage (GBV) is calculated as the HI SET limit x Test Current.

Setting the Test Frequency

 
Background

A test frequency of 60Hz or 50Hz can be set, regardless of the input line voltage. The test frequency setting only applies to ACW and GB tests.

Steps


1. Press the UP / DOWN arrow keys to bring the cursor to the FREQ setting.





cursor

 2. Use the scroll wheel to set the test frequency.



ACW, GB 50Hz, 60Hz



Note

The test frequency can only be set for ACW or GB tests.

Setting the Upper and Lower Limits

Background

There is both a LO and HI judgment setting. When the measured value is below the LO SET setting, the test will be judged as FAIL. When the value exceeds the HI SET setting the test will be judged as FAIL. Any measurement between the LO SET and HI SET setting is judged as PASS. The LO SET limit cannot be made greater than the HI SET limit.

Steps


1. Press the HI/LO soft-key or use the UP / DOWN arrow keys to bring the cursor to the HI SET (ACW/DCW/GB) setting or the LO SET(IR) setting.

HI/LO




OR




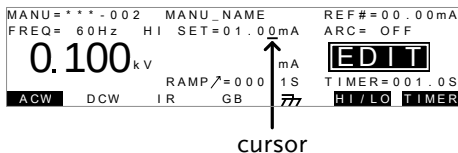


 2. Use the scroll wheel to set the HI SET/LO SET limit.




ACW (HI) 0.001mA~042.0mA
DCW (HI) 0.001mA~011.0mA
IR (LO) 0001MΩ ~ 9999MΩ
GB (HI) 000.1mΩ ~ 650.0mΩ

 3. Press the HI/LO soft-key again or press the DOWN arrow key to switch between HI SET and LO SET.

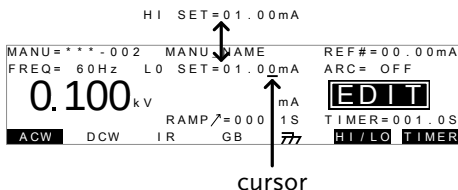

 4. Use the scroll wheel to set the HI SET/LO SET limit.



ACW (LO) 0.000mA~041.9mA
DCW (LO) 0.000mA~010.9mA
IR (HI) 0001MΩ~9500MΩ, ∞
GB (LO) 000.0mΩ ~ 649.9mΩ




The LO SET setting is limited by the HI SET setting. The LO SET limit cannot be greater than the HI SET limit.


Setting a Reference Value

Background The REF# acts as an offset. The REF# value is subtracted from the measured current (ACW, DCW) or measured resistance (IR, GB).

- Steps 1. Press the UP / DOWN arrow keys  to bring the cursor to the REF# setting. 

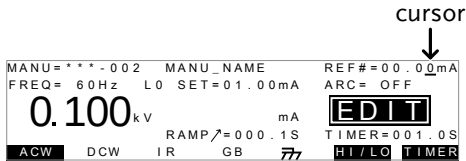

 2. Use the scroll wheel to set the REF# value.



ACW	0.000mA~HI SET current-0.1mA
DCW	0.000mA~HI SET current-0.1mA
IR	0000MΩ~HI SETΩ-1MΩ
GB	000.0mΩ~HI SETΩ-0.1mΩ



Note


For GB tests, a reference offset can be automatically created using the zeroing function. See page 67 for details.

Setting the Test Time (Timer)

Background

The TIMER setting is used to set the test time for the current test. The test time determines how long the test voltage or current is applied to the DUT. This test time does not include Ramp $\nearrow$, initial start time or discharge time (note: GB does not have Ramp $\nearrow$ or discharge times). The test time can be set from 0.5 seconds to 999.9 seconds for ACW, DCW and GB and 1.0 second to 999.9 seconds for IR, with a resolution of 0.1 seconds for all modes. The timer can be turned off when in the special MANU test mode when using the ACW or DCW test functions.

Each test has an initial test time of 100ms and a discharge time (except GB). The total discharge time depends on the DUT and test voltage.

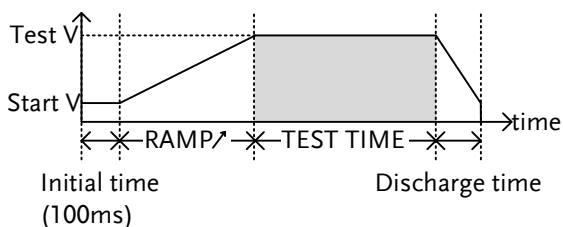

Steps

 
1. Press the TIMER soft-key or use the UP/DOWN arrow keys to bring the cursor to the TIMER setting.

TIMER




OR





cursor

 2. Use the scroll wheel to set the TIMER value.



ACW	000.5s~999.9s
DCW	000.5s~999.9s
IR	001.0s~999.9s
GB	000.5s~999.9s



Note

With the ACW test function, when the test current is between 30mA and 40mA, the ramp time + test time cannot exceed 240 seconds. At this current level, the tester also needs to pause after a test for a time equal to or greater than the output time. See the specifications on page 149 for details.

Special Manual Mode

When in special MANU test mode (page 67) the Timer can be turned off when using the DCW or ACW test function.

Hold the TIMER soft-key for 3 seconds to turn the timer off.



Note


The timer can only be turned off under special MANU test mode, however there is a limitation: The timer cannot be turned off (limited to 240s) if the test current is between 30mA and 40mA in ACW mode.

The discharge time and initial test time cannot be edited.

Setting the Ramp Up Time



Background

The Ramp Up time is the total time taken for the tester to reach the test voltage level. The Ramp Up time starts after the initial time (100ms) with a start voltage of 50 volts. The Ramp Up time can be set from 000.1 to 999.9 seconds. The Ramp Up time is only applicable for ACW, DCW and IR tests.

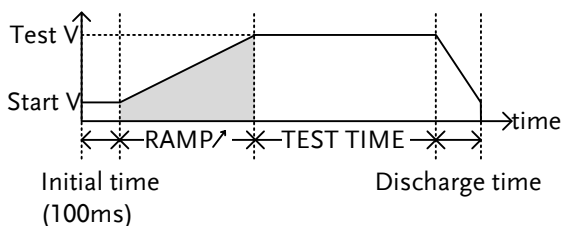


Steps

  1. Use the UP/DOWN arrow keys to bring the cursor to the RAMP ↗ setting.



cursor

 2. Use the scroll wheel to set the RAMP ↗ value.



ACW	000.1s~999.9s
DCW	000.1s~999.9s
IR	000.1s~999.9s



Note

The discharge time and initial test time cannot be edited.

Creating a MANU Test File Name

Background


Each manual test can have a user-defined test file name (default: MANU_NAME) up to 10 characters long. See the character list below for the allowed characters.

Character List


[illegible]

Steps

1. Use the UP/DOWN arrow keys to bring the cursor to the MANU test file name at the top of the screen. The test file name is initially set as MANU NAME.

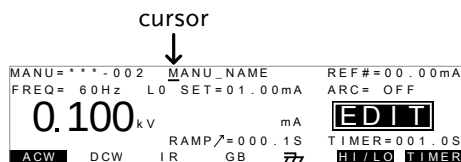

 2. Use the scroll wheel to scroll through the available characters.



3. Press the Left/Right arrow keys to  
go the next character.
4. The MANU test file name is set when the current test setting is saved or when the cursor is moved to another setting.



Setting the ARC Mode

Background

ARC detection, otherwise known as flashover detection, detects fast voltage or current transients that are not normally detected. Arcing is usually an indicator of poor withstanding insulation, electrode gaps or other insulating problems that cause temporary spikes in current or voltage during ACW and DCW testing.

There are three ARC detection settings: OFF, ON AND CONTINUE, ON AND STOP. The ON AND CONTINUE setting will detect arcs over the ARC current level and continue the test, the ON AND STOP setting will stop the test when an arc is detected.

ARC mode settings only apply to ACW and DCW tests.

Steps

1. Press the UTILITY key on the front panel when the tester is in EDIT status. The tester will go to the MANU Utility for the *current test*.

UTILITY



```
MANU=***-002  MANU UTILITY
ARC  MODE:OFF
PASS HOLD:OFF
FAIL HOLD:OFF
MAX  HOLD:OFF
GROUND MODE:ON
```



 
Note

The MANU UTILITY settings only apply to the selected MANU test.

2. Use the UP/DOWN arrow keys to move to the ARC MODE setting.



3. Use the scroll wheel to set the ARC mode.



ARC MODES: OFF, ON AND CONTINUE,
ON AND STOP

4. Press the EDIT/SAVE key to save and exit the MANU Utility and go back to EDIT status.

EDIT/SAVE



Note

 
The ESC key can be pressed at any time in the Utility menu to cancel and exit.

5. If the ARC MODE was set to either ON AND CONTINUE, or ON AND STOP, the ARC current level can be edited.

6. Use the UP/DOWN arrow keys to move the cursor to the ARC setting.



7. Use the scroll wheel to edit the ARC level.



ACW 1.000mA~080.0mA
DCW 1.000mA~020.0mA



Note

The ARC setting range is directly related to the HI SET current limit.

ACW

HI SET Limit	ARC range
0.001mA~0.999mA	1.000mA ~2.000mA
01.00mA~09.99mA	01.00mA ~20.00mA
010.0mA~042.0mA	001.0mA ~080.0mA

DCW

HI SET Limit	ARC range
0.001mA~0.999mA	1.000mA ~2.000mA
01.00mA~09.99mA	01.00mA ~20.00mA
010.0mA~011.0mA	001.0mA ~020.0mA

Setting PASS HOLD

Background

The PASS HOLD settings only apply to the selected test in an AUTO test. When the PASS HOLD setting is set to ON, a PASS judgment is held until the START button is pressed.



Note

The PASS HOLD setting only applies to AUTO tests. This setting is ignored when running a *single* MANU test.

Steps

1. Press the UTILITY key on the front panel when the tester is in EDIT status. The display will go from the normal EDIT status to the MANU Utility menu for *the current test*.

UTILITY



```
MANU=***-002  MANU UTILITY
ARC  MODE:OFF
PASS HOLD:OFF
FAIL HOLD:OFF
MAX  HOLD:OFF
GROUND MODE:ON
```



 
Note

The MANU UTILITY settings only apply to the selected MANU test.

2. Use the UP/DOWN arrow keys to move to the PASS HOLD setting.



- Use the scroll wheel to set PASS HOLD.



PASS HOLD OFF, ON

- Press the EDIT/SAVE key to save and exit the MANU Utility menu.

EDIT/SAVE



Note

The ESC key can be pressed at any time in the MANU Utility menu to cancel and exit.

Setting FAIL HOLD

Background

The FAIL HOLD settings only apply to the selected test in AUTO tests. When the FAIL HOLD setting is set to ON, a FAIL judgment is held until the START button is pressed.



Note

The FAIL HOLD setting only applies to AUTO tests. This setting is ignored when running a *single* MANU test.

Steps

- Press the UTILITY key on the front panel when the tester is in EDIT status. The display will go from the normal EDIT status to the MANU Utility menu for *the current test*.

UTILITY



```
MANU=***-002  MANU UTILITY
ARC  MODE: OFF
PASS HOLD: OFF
FAIL HOLD: OFF
MAX  HOLD: OFF
GROUND MODE: ON
```



 
Note

The MANU UTILITY settings only apply to the selected MANU test.

2. Use the UP/DOWN arrow keys to move to the FAIL HOLD setting.



3. Use the scroll wheel to set FAIL HOLD.



FAIL HOLD OFF, ON

4. Press the EDIT/SAVE key to save and exit the MANU Utility menu.

EDIT/SAVE



Note

The ESC key can be pressed at any time in the MANU Utility menu to cancel and exit.

Setting MAX HOLD

Background

The MAX HOLD setting will hold the maximum current measured in the ACW and DCW tests or the maximum resistance measured in IR and GB tests.

Steps

1. Press the UTILITY key on the front panel when the tester is in EDIT status. The display will go from the normal EDIT status to the MANU Utility menu for *the current test*.

UTILITY



```
MANU=***-002 MANU UTILITY
ARC  MODE:OFF
PASS HOLD:OFF
FAIL HOLD:OFF
MAX  HOLD:OFF
GROUND MODE:ON
```



 
Note

The MANU UTILITY settings only apply to the selected MANU test.

2. Use the UP/DOWN arrow keys to move to the MAX HOLD setting.



3. Use the scroll wheel to set MAX HOLD.



MAX HOLD OFF, ON

4. Press the EDIT/SAVE key to save and exit the MANU Utility menu.

EDIT/SAVE



Note

The ESC key can be pressed at any time in the MANU Utility menu to cancel and exit.

Setting the Grounding Mode

Background


When GROUND MODE is set to ON, the GPT-9000 grounds the return terminal to the ground. This mode is best for DUTs that are grounded to an earth ground by their chassis, fixtures or operation environment. This mode measures the potential of the HIGH VOLTAGE terminal with respect to earth ground. This means that any stray capacitance/resistance that leaks to earth ground will also be measured. This is the safest testing mode, though potentially not as accurate.

When GROUND MODE is set to OFF, the return terminal is floating with respect to the earth ground. This mode is for DUTs that are floating and not directly connected to an earth ground. This is more accurate than when GROUND MODE is set to ON as any stray capacitance/resistance that leaks to the earth


ground from the DUT side of the testing circuit will not be measured. For this reason, this testing mode is able to measure to a higher resolution.

The GROUND MODE is always set to OFF for IR and GB tests.


GROUND MODE = ON, DUT grounded

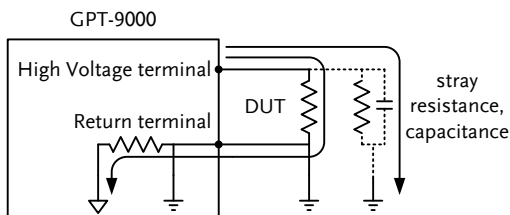


GROUND MODE = ON, DUT floating

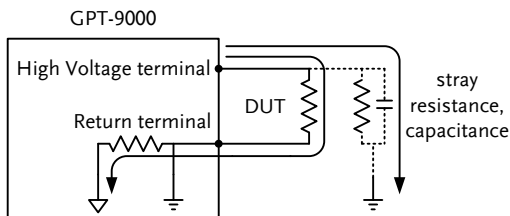

GROUND MODE = OFF, DUT floating

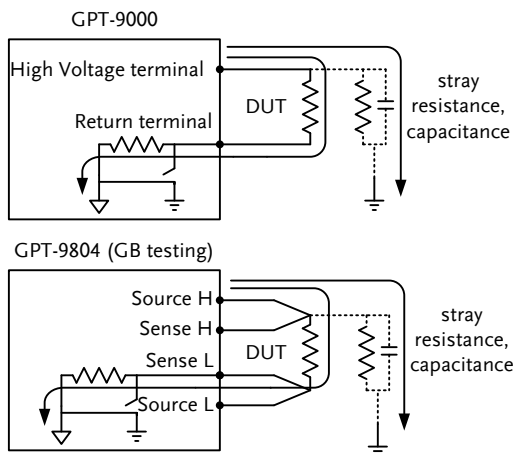

GROUND MODE = OFF, DUT grounded

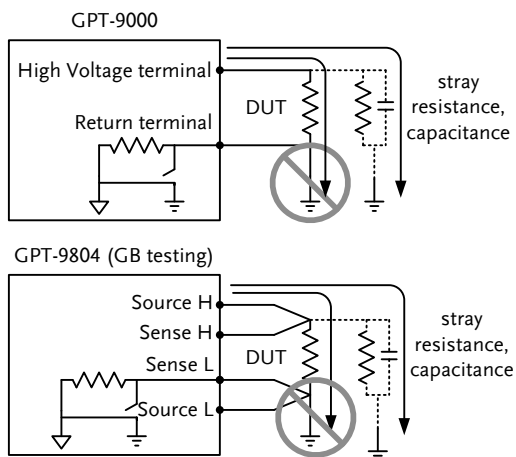



Warning

When GROUND MODE is set to OFF, the DUT, fixtures or connected instrumentation cannot be grounded. This will short circuit the internal circuitry during a test.

For ACW and DCW tests, if it is not known whether the DUT test setup is grounded or not, always set GROUND MODE to ON.

Only set GROUND MODE to OFF when the DUT is floating electrically.

Steps

1. Press the UTILITY key on the front panel when the tester is in EDIT status. The display will go from the normal EDIT status to the MANU Utility menu for *the current test*.

UTILITY



```
MANU=***-002  MANU UTILITY
ARC  MODE:OFF
PASS HOLD:OFF
FAIL HOLD:OFF
MAX  HOLD:OFF
GROUND MODE: ON
```



 
Note

The MANU UTILITY settings only apply to the selected MANU test.

2. Use the UP/DOWN arrow keys to move the cursor to the GROUND MODE setting.



3. Use the scroll wheel to set the GROUND MODE.





GROUND MODE OFF, ON

4. Press the EDIT/SAVE key to save and exit the MANU Utility menu.

EDIT/SAVE



5. The GROUND MODE icon on the display changes accordingly.

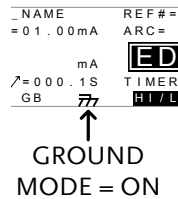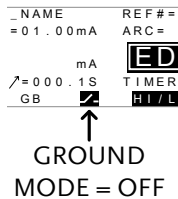

Note

The ESC key can be pressed at any time in the MANU Utility menu to cancel and exit.

IR and GB tests can only have GROUND MODE set to OFF.

Saving and Exiting EDIT Status

Background After all test parameters have been set, the test can be saved. After a test is saved it can be used when creating an AUTO test.




Warning

The special MANU number, 000, can be saved, however it cannot be used for AUTO tests. See page 67 for details.

Steps

1. When in EDIT status, press the EDIT/SAVE key to save the current test. This will enter the VIEW status for the chosen test number.

EDIT/SAVE

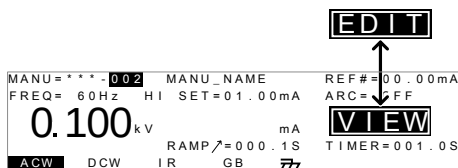

2. The Status changes from EDIT to VIEW.



Note

Pressing the EDIT/SAVE key again will return the tester back to EDIT status for the current test.

Running a MANU Test

Background A test can be run when the tester is in READY status.



Note

The tester cannot start to run a test under the following conditions:

- A protection setting has been tripped; when a protection setting has been tripped the corresponding error message is displayed on the screen. See page 148 for a comprehensive list of the all the setting errors.
- The INTERLOCK function is ON and the Interlock key is not inserted in the signal I/O port (page 76).
- The STOP signal has been received remotely.

If Double Action is ON, ensure the START button is pressed immediately after the STOP button ($<0.5s$).



 
Note

When a test is running the voltage output cannot be changed, unless the test is under the special manual mode. See page 67 for details.


Steps

1. Ensure the tester is in VIEW status Page 57 for the current test. Save the current test if necessary.


VIEW status



2. Press the STOP button to put the tester into the READY status.

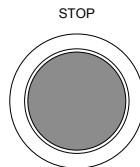


READY status

 

3. The READY indicator will be lit blue when in the READY status.




4. Press the START button when the tester is in the READY status. The manual test starts automatically and the tester goes into the TEST status.

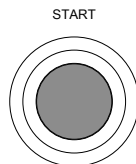


5. The TEST indicator will be lit orange when in the TEST status.



 
TEST status



 
6. The test will start by showing the remaining ramp up time, followed by the remaining test time. The test will continue until the test is finished or the test is stopped.




ACW Example

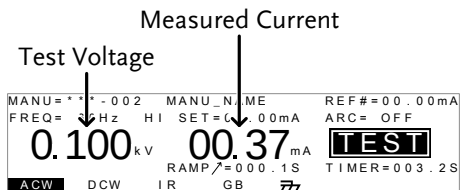


DCW Example

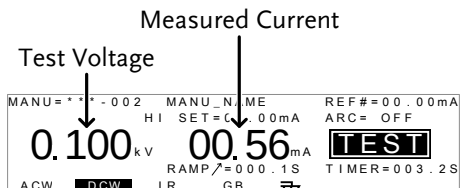

IR Example

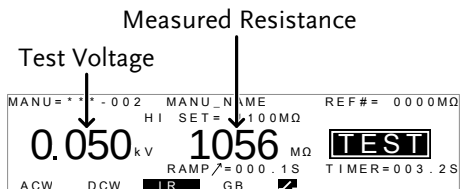


GB Example

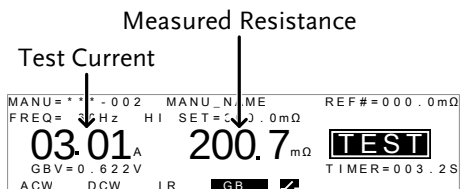


Stop the Test

1. To stop the test at any time when it is running, press the STOP button. The test will stop immediately. When the STOP button is pressed, a judgment is not made on the test.

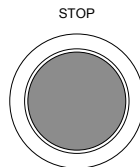


All panel keys except the STOP button are locked when the tester is in STOP status.

 STOP status




2. To put the tester back into READY status, press the STOP button again.

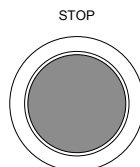

Exit TEST Status

 To exit testing, press the MANU/AUTO key when the tester is in the READY status. The tester will revert to the VIEW status for the current test.



Note

Do not touch any terminals, test leads or any other connections when the test is on.

PASS / FAIL MANU Test

Background

If the test is allowed to run to completion (the test is not stopped or a protection setting is not tripped) then the tester will judge the test as either PASS or FAIL.



Note

The test will be judged PASS when:

- The HI SET and LO SET limits have not been tripped during the test time.

 
The test will be judged FAIL when:

- Either the HI SET or LO SET limit has been tripped during the test time.
- A protection setting has been tripped during the test time. See page 148 for a list of error messages.

PASS Judgment

1. When the test is judged as PASS, PASS will be displayed, the buzzer will sound and the PASS indicator will be lit green.


PASS




2. The PASS judgment will be held on the display until the STOP or START button is pressed.

Pressing the STOP button will return the tester to the READY status.

STOP

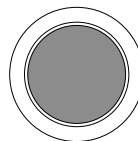

Pressing the START button will restart the test.

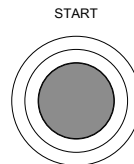

Note


The buzzer will only sound if the Pass Sound is set to ON. See page 73 for details.

The START button is disabled when the buzzer is beeping.


PASS Timing Diagrams

The timing diagrams below show the ACW, DCW, IR and GB timing for the START status, TEST status and PASS judgment.


ACW PASS Timing

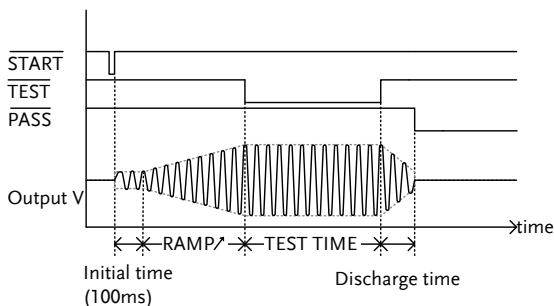


DCW PASS Timing

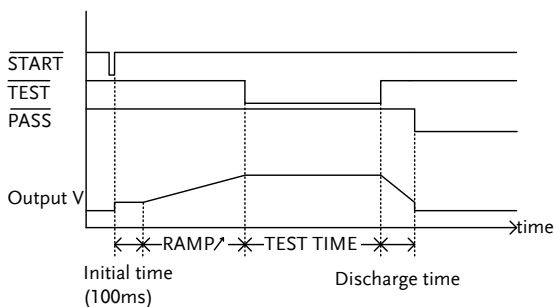

IR PASS Timing

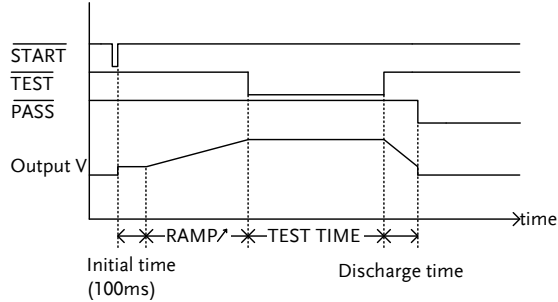

GB PASS Timing

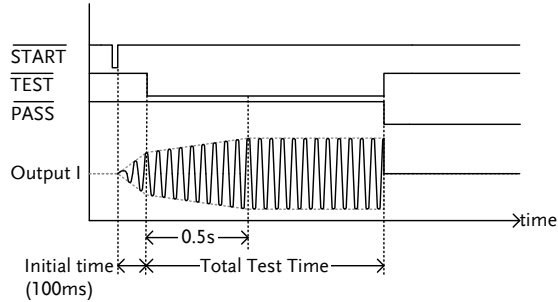

FAIL Judgment

1. When the test is judged as FAIL, FAIL will be displayed, the buzzer will sound and the FAIL indicator will be lit red.


FAIL

As soon as a test is judged FAIL, power is cut from the terminals.



2. The FAIL judgment will be held on the display until the STOP button is pressed. Pressing the STOP button twice will return the tester to the READY status.


STOP

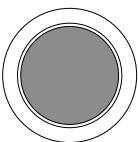

- The READY indicator will be lit blue in the READY status.



 READY status




Note

The buzzer will only sound if Fail Sound is set to ON. See page 73 for details.


FAIL Timing Diagrams

The timing diagrams below show the ACW, DCW, IR and GB timing for the START status, TEST status and FAIL judgment.


ACW FAIL Timing

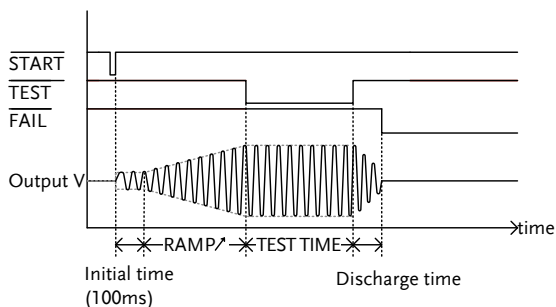


DCW FAIL Timing

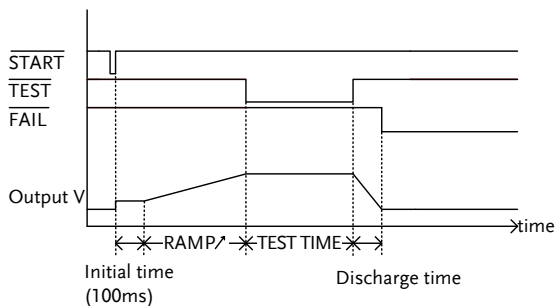

IR FAIL Timing

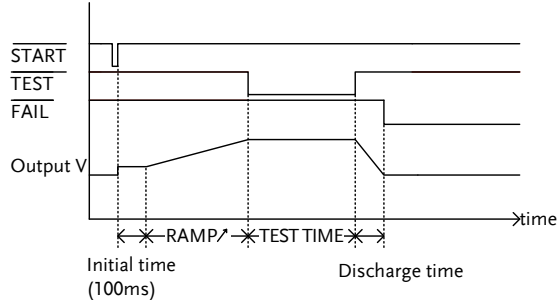

GB FAIL Timing

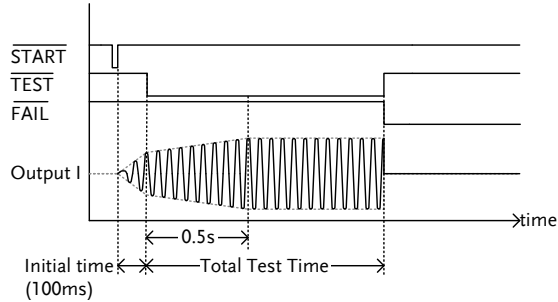

Zeroing of the Test Leads (GB only)

Background

The Zeroing function is used to determine the resistance of the test leads for GB tests. When a zero check is performed, the reference is automatically set to the measured resistance of the test leads.


This function is only available for GB testing.

Steps


1. Ensure the tester is in VIEW status Page 57 for the current GB test. Save the current test if necessary.



2. Short the positive and negative alligator clips as shown below.

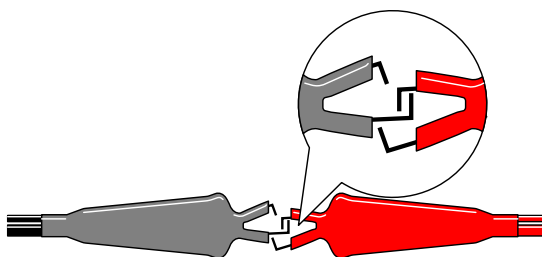

3. Press the STOP button to put the tester into the READY status.

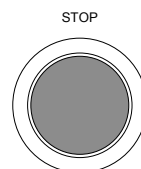



- The ZERO function can be activated by pressing the corresponding soft-key in the READY status. The ZERO soft-key will be highlighted.

ZERO




- Press the START button to perform the zero check. The tester will go into the ZERO status.

START

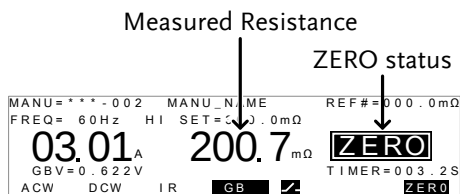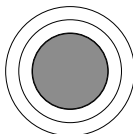

- When the zero check has finished, the tester will return back to the VIEW status. The resistance of the test leads will be automatically set as the Reference value.

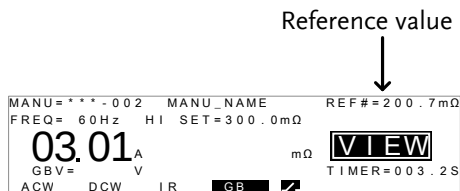

Note

Remember to replace the test leads to the proper position on the DUT before testing.

I<SET

If SOURCE H/L terminals are open or poorly connected, then an I<SET error will appear on the screen. Stop the test and re-check the connection again and try again.

I<SET error message

FAIL status

 


R = 0

Stop the test and perform the zero check again.

R = 0 error message

FAIL status



Special MANU Test Mode (000)

 
Background

When MANU number 000 is selected, the special test mode is activated. Under the special test mode, the voltage can be changed during a test, in real time (ACW, DCW only). The test function can also be changed when in READY or VIEW status, unlike under normal operation.

Separate settings can be saved under the special test mode for each of the testing functions: ACW, DCW, IR and GB. This means a different ACW, DCW, IR and GB test setup can be saved for MANU number 000.

Steps

1. Choose MANU number 000 to enter the special test mode. Page 36
2. Set all the necessary parameters for a test and save. A different test setup can be saved for each test function (ACW, DCW, IR and GB). Pages 37~57



Note

The TIMER settings can be set OFF when in the special test mode for ACW and DCW tests.

3. The settings of a different test function can be loaded by pressing the corresponding soft-key in the VIEW or READY status.

 
ACW



Example:
ACW

4. Run a manual test for the special test mode (000). The test is started and stopped in the same way as for the normal manual test mode. Page 58

5. Use the scroll wheel to set the voltage level in real-time as the test is running (this does not apply to IR or GB tests).



ACW	0.100kV ~ 5kV
DCW	0.100kV ~ 6kV

Common Utility Settings

The Common Utility settings are system-wide settings that apply to both MANU tests and AUTO tests.


The Common Utility menu includes the following settings:

- LCD settings → from page 72.
- Buzzer Settings → from page 73.
- Interface Settings → from page 74.
- Control settings → from page 76.

LCD Settings

Description	The LCD settings include contrast and brightness controls.
-------------	--

- Steps
1. Ensure the tester is in VIEW status. Page 57
Save the current test if necessary.

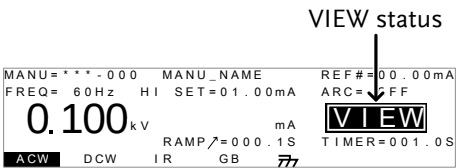


2. Press the UTILITY key.
3. Press the LCD soft-key to bring up the LCD Common Utility menu.



4. Use the UP/DOWN arrow keys to choose a menu item: LCD Contrast, LCD Brightness.



 5. Use the scroll wheel to select a parameter for the chosen menu item.



LCD Contrast 1(low) ~ 8(high)

LCD Brightness BRIGHT, DARK
6. Press EDIT/SAVE to save the settings and exit to VIEW status.






Note

The ESC key can be pressed at any time to cancel and exit back to VIEW status.

Buzzer Settings

Description	The Buzzer settings allow you to set whether the buzzer will sound for PASS/FAIL judgments. The buzzer time can also be set for the PASS/FAIL judgments. The buzzer settings are system-wide.
-------------	---

- | | |
|-------|--|
| Steps | 1. Ensure the tester is in VIEW status. Page 57
Save the current test if necessary. |
|-------|--|

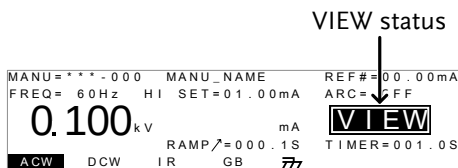

2. Press the UTILITY key.



 
3. Press the BUZZ soft-key to bring up the Buzzer Common Utility menu.



4. Use the UP/DOWN arrow keys to choose a menu item: Pass Sound or Fail Sound.



5. Use the scroll wheel to select a parameter for the chosen menu item.



Pass Sound	ON (000.2s~999.9s), OFF
Fail Sound	ON (000.2s~999.9s), OFF

6. Press EDIT/SAVE to save the settings and exit to the VIEW status.



Note

When in automatic tests, the Pass Sound and Fail Sound settings only apply to the overall PASS/FAIL of the *overall automatic test*, not each test step that make up the automatic tests.



Note

The ESC key can be pressed at any time to cancel and exit back to VIEW status.


Interface Settings

Description

The interface settings choose the remote interface configuration. USB, RS232 and GPIB (optional) can be selected.

Steps

1. Ensure the tester is in VIEW status. Page 57
Save the current test if necessary.

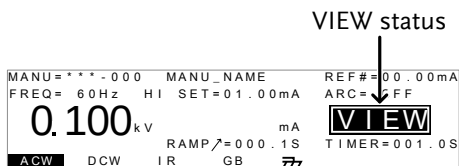


2. Press the UTILITY key.



3. Press the INTER soft-key to bring up the Interface Common Utility menu.



 
4. Use the scroll wheel to select USB, RS232 or GPIB.



5. For RS232 or GPIB, use the UP/DOWN arrow keys to choose Baud or Address.



 6. Use the scroll wheel to select the baud rate or GPIB address.



Baud	9600, 19200, 38400, 57600, 115200
GPIB address	0~30

7. Press EDIT/SAVE to save the settings and exit to VIEW status.

EDIT/SAVE



Note

Ensure the baud rate settings or GPIB address matches the host machine.



Note

The ESC key can be pressed at any time to cancel and exit back to VIEW status.

Control Settings

Description

The Control settings are accessed in the COMMON UTILITY menu. The Control settings include: Start Control, Double Action, Key Lock and Interlock.

Start Control is used to determine how a test is started. Tests can be started via the front panel (START/STOP buttons), from a remote controller or via the SIGNAL I/O port.


The Double Action function is a safety feature used to prevent accidentally starting a test. Normally to start a test, the START button is pressed when the tester is in the READY status. To start a test when Double Action is ON, the STOP button must first be pressed, followed by the START button within 500ms.

Key Lock disables the front panel keys from changing the test number, mode or testing parameters. Only the Utility menu and any keys required for testing are not disabled.

The Interlock function is a safety feature. The interlock function prevents a test from running, unless the interlock pins on the signal I/O port connector are shorted. The included interlock key can be used for this purpose. See page 102 for details.

Steps

1. Ensure the tester is in VIEW status. Page 57
Save the current test if necessary.

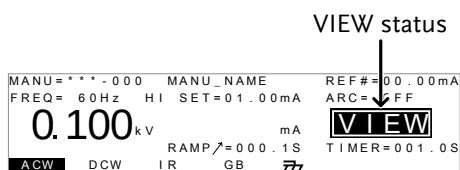


2. Press the UTILITY key.
3. Press the CTRL soft-key to bring up the Control Common Utility menu.



4. Use the UP/DOWN arrow keys to choose a menu item: Start Ctrl, Double Action, Key Lock or INTERLOCK.



 5. Use the scroll wheel to select setting for the chosen menu item.



Start Ctrl	FRONT PANEL, REMOTE CONNECT, SIGNAL IO
Double Action	ON, OFF
Key Lock	ON, OFF
INTERLOCK	ON, OFF

6. Press EDIT/SAVE to save the settings and exit to VIEW status.
- EDIT/SAVE



Note

 
The Double Action setting is ignored when the GPT-9000 is being controlled remotely using the USB, RS232 or GPIB interfaces.



Note

If a test is started with INTERLOCK ON, but the interlock signal I/O pins are not shorted (either with the included interlock key or manually), the INTERLOCK OPEN message will be displayed, preventing the test from starting.

Interlock open message



Automatic Tests

This section describes how to create, edit and run automatic tests. Automatic tests allow you to link together up to 16 different MANU tests and run them sequentially. Each stored MANU test is used as a test step when creating an AUTO test.

- Choose/Recall an Automatic Test → from page 79
- Edit Automatic Test Settings → from page 81
- Adding a Step to the Automatic Test → from page 82
- Creating an AUTO Test File Name → from page 83
- Saving and Exiting EDIT Status → from page 84
- Automatic Test Page View → from page 85
- Running an Automatic Test → from page 88
- Automatic Test Results → from page 92

Before operating the GPT-9000 please read the safety precautions as outlined in the Set Up chapter on page 20.

Choose/Recall an Automatic Test


Background	The tester must first be put into AUTO mode to create or run automatic tests.
------------	---

Up to 100 automatic tests can saved/recalled.

- | | |
|-------|--|
| Steps | 1. If the tester is in MANU mode, press and hold the MANU/AUTO key for three seconds. This will put the tester into Auto mode. |
|-------|--|




The tester can only switch between AUTO and MANU mode when in the VIEW status.

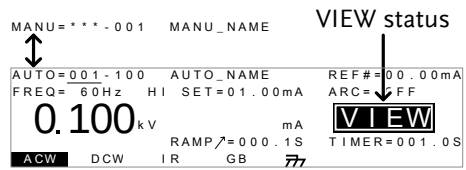


Note

If the chosen automatic test has not yet been setup, then the screen will be blank except for the status and mode.

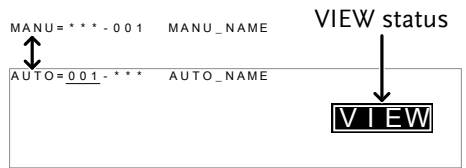


 2. Use the scroll wheel to choose the AUTO number.



AUTO # 001~100

 AUTO number



Note

The AUTO number can only be chosen in VIEW status. If in the EDIT status, switch to the VIEW status by pressing the EDIT/SAVE or ESC key.

Edit Automatic Test Settings

Background

To edit an automatic test, the tester must be in EDIT status.

Any settings or parameters that are edited only apply to the currently selected AUTO number.


Steps

1. Press the EDIT/SAVE key when in

EDIT/SAVE



VIEW status to enter the EDIT status. This will enter the EDIT status for the chosen AUTO number.

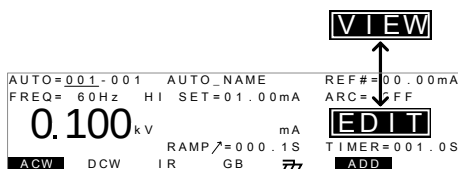

2. The Status changes from VIEW to EDIT. The tester is now ready to edit the current AUTO test.



Note

Pressing the EDIT/SAVE key again will save the settings or pressing the ESC will cancel the settings for the current AUTO test and return back to VIEW status.


Adding a Step to the Automatic Test

Background


Up to 16 MANU tests (steps) can be added to an automatic (AUTO) test. Each step is added in a sequential order.

Steps

1. Press the DOWN arrow keys to bring the cursor to the MANU number.

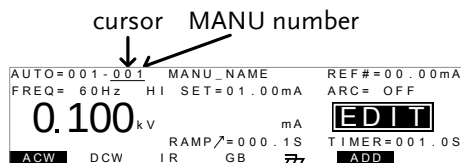

 2. Use the scroll wheel to choose a MANU number to add to the automatic test.



MANU number 001~100

3. Press the ADD soft-key to add the selected manual test to the automatic test as another step.

ADD

 


4. Repeat steps 2 and 3 for any other tests that you wish to add to the automatic test.



Note

After 16 steps have been added to an AUTO test, FULL will be shown on the display when you attempt to add another step to the AUTO test.





Note

The test order can be edited in the Page View menu after the AUTO test is saved. See page 85 for details.

Creating an AUTO Test File Name

Background


 
Each automatic test can have a user-defined test file name (Default: AUTO_NAME) up to 10 characters long. See the character list below for the allowed characters.

Character List


[illegible]

Steps

1. Use the UP/DOWN arrow keys to bring the cursor to the AUTO number. A small cursor will also appear under the first character of the AUTO test file name. This is initially set as AUTO_NAME

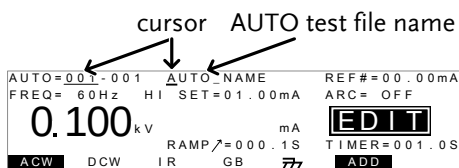

 2. Use the scroll wheel to scroll through the available characters.



3. Press the LEFT/RIGHT arrow keys to go to the next character.



- The AUTO test file name is set when the current AUTO test is saved or when the cursor is moved to another setting.



Note

To cancel the name changes, press the ESC key before the cursor is moved to another setting or the name is saved.

Saving and Exiting EDIT Status


Background

After all test steps have been added to an automatic test, the automatic test can be saved.

Steps

- When in EDIT status, press the EDIT/SAVE key to save the automatic test. After the test is saved the tester will revert back to VIEW status.

EDIT/SAVE

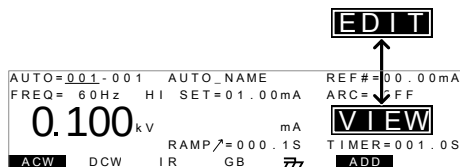

- The status changes from EDIT to VIEW.




Note

Pressing the EDIT/SAVE key again will return the tester back to EDIT status for the selected AUTO test.

Automatic Test Page View


Background Pressing the PAGE key will show an overview of the tests for the currently selected automatic test when in the VIEW status. The Page View will show the order of the AUTO test steps as well as the manual file name, function, test voltage and HI/LO SET limits.

- Steps**
1. Ensure the tester has had an automatic test saved and the tester is in AUTO mode/VIEW status. Page 79

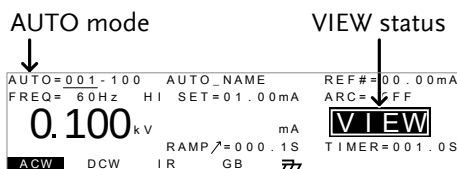

2. Press the PAGE key to bring up the Page view of the AUTO test. PAGE

All the test steps are shown on the bottom of the screen along with the corresponding MANU numbers. The top of the screen shows the selected MANU test file name and the settings (test function, test voltage, HI/LO SET).

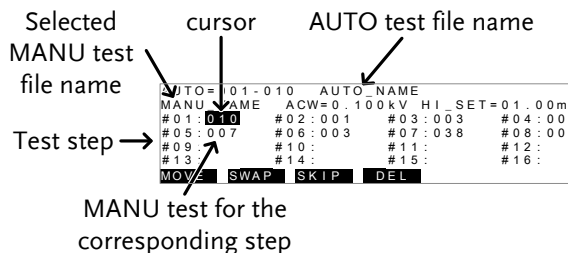

Editing

When in the Page View, the automatic test steps can be edited. Steps can be deleted, skipped, moved or swapped.

Moving a Step

1. Use the UP/DOWN and LEFT/RIGHT arrow keys to move the cursor to the test step you wish to move.



 
2. Press the MOVE soft-key.



3. Use the UP/DOWN and LEFT/RIGHT arrow keys to move the cursor to the destination step.



4. Press the MOVE soft-key again. The manual test will be moved to the destination step. The remaining steps will move up/down to fill the empty step.



Swapping Two Steps

1. Use the UP/DOWN and LEFT/RIGHT arrow keys to move the cursor to the test step you wish to swap.



2. Press the SWAP soft-key.



3. Use the UP/DOWN and LEFT/RIGHT arrow keys to move the cursor to the second step.



4. Press the SWAP soft-key again. The tests will be swapped with each other.



```

AUTO=001-010  AUTO_NAME
MANU_NAME  ACW=0.100kV HI SET=01.00mA
#01:010    #02:001    #03:003    #04:004
#05:007    #06:003    #07:038    #08:005
#09:       #10:       #11:       #12:
#13:       #14:       #15:       #16:
MOVE  SWAP  SKIP  DEL
    
```

Skip a Test Step

1. Use the UP/DOWN and LEFT/RIGHT arrow keys to move the cursor to the test step you wish to skip.



2. Press the SKIP soft-key.



3. The step will have an asterisk beside the MANU number.



```

AUTO=001-010  AUTO_NAME
MANU_NAME  ACW=0.100kV HI SET=01.00mA
#01:*010    #02:001    #03:003    #04:004
#05:007    #06:003    #07:038    #08:005
#09:       #10:       #11:       #12:
#13:       #14:       #15:       #16:
MOVE  SWAP  SKIP  DEL
    
```



Note

The next time the automatic test is run, the steps with asterisks will be skipped.

Delete a Test Step 1. Use the UP/DOWN and LEFT/RIGHT arrow keys to move the cursor to the test step you wish to delete.



2. Press the DEL soft-key.



3. The step will be deleted.

Save Changes and Exit

To save the changes made in Page View, press the EDIT/SAVE key. You will be returned back to AUTO mode/VIEW status.

EDIT/SAVE



Cancel and Exit Page View

To cancel any changes and to exit the Page View, press the ESC key. You will be returned back to AUTO mode/VIEW status.



Running an Automatic Test

Background

An automatic test can be run when the tester is in VIEW status.



Note

The tester cannot start to run an AUTO test under the following conditions:

- Any protection modes have been tripped.
- The INTERLOCK function is ON and the Interlock key is not inserted in the signal I/O port (page 102).
- The STOP signal has been received remotely.

If Double Action is ON, ensure the START

button is pressed immediately after the STOP button (<0.5s).




Warning



Do not touch any terminals, test leads or the DUT when a test is running.

Steps

1. Ensure the tester is in VIEW status. Page 79
Save the automatic test if necessary.

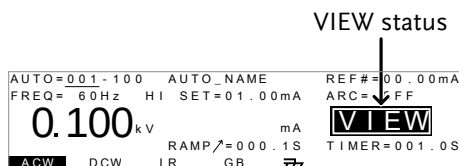


2. Press the STOP button to put the tester into the READY status.

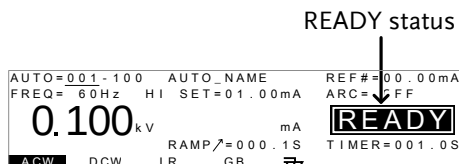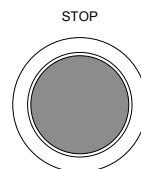


3. The READY indicator will be lit blue when in the READY status.



4. Press the START button when the tester is in the READY status. The AUTO test starts automatically and the display changes to TEST status.

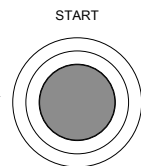

 5. The TEST indicator will be lit orange when in the TEST status.
6. Each test will start by showing the remaining ramp up time, followed by the remaining test time. Each test will be tested in sequence until the last test has finished or the test is stopped.




remaining RAMP time

remaining TIMER time

- PASS/FAIL HOLD 1. If Pass Hold or Fail Hold is set to ON for a manual test, then the tester will “hold” the testing after a Pass/Fail result for that particular test. See page 48, 50 for details.

 HOLD status




2. The PASS or FAIL indicator will also be lit. The buzzer will NOT sound.

PASS


FAIL

3. To continue to the next test after HOLD is displayed on-screen, press the START button.

START

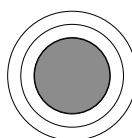

4. To stop the test when HOLD is displayed on-screen, press the STOP button.

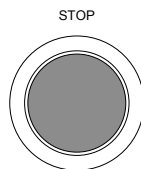


Note

When in HOLD status, only the START and STOP buttons can be pressed, all other keys are disabled.

Stop a Running Test

1. To stop the AUTO test at any time when it is running, press the STOP button. The AUTO test will stop immediately. When the STOP button is pressed, a judgment is not made on the current test and any remaining tests are aborted.

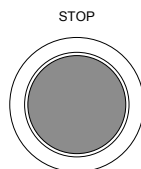


All panel keys except the STOP and START buttons are locked when the tester has been stopped. All the results up until when the AUTO test was stopped are shown on-screen. See page 92 for more details on automatic test results.

```
AUTO=001-***  AUTO_NAME
#01: FAIL    #02: PASS   #03: STOP   #04: ----
#05: ----    #06: ----   #07: ----   #08: ----
#09:         #10:         #11:         #12:
#13:         #14:         #15:         #16:
```

Example of an automatic test that has been stopped. Dashes (-) indicate aborted test steps.


2. To put the tester back into READY status, press the STOP button again.

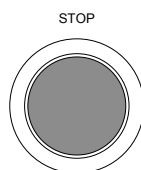

Exit Testing

To exit testing, press the
MANU/AUTO key when the
tester is in the READY status. The
tester will revert to the VIEW
status for the current automatic
test.

 MANU/AUTO




Automatic Test Results

Background

If all the test steps are allowed to run to completion (the AUTO test is not stopped or a protection setting is not tripped) then the tester will judge each step as either PASS or FAIL. This is shown as a table after the automatic test has finished running.

Overview

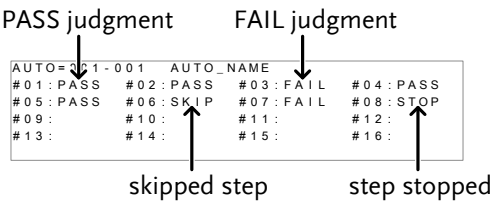

Note

The PASS/FAIL judgment for an automatic test depends on the results of all the steps (manual tests) that compose the automatic test:

- Each step must be passed for a PASS judgment (excluding skipped tests).
- A FAIL result for a single step will result in FAIL for the whole automatic test.

PASS Judgment

When all the tests have been judged as PASS, the PASS indicator will be lit green and the buzzer will sound.

PASS



```
AUTO=001-***  AUTO_NAME
#01: PASS  #02: PASS  #03: PASS  #04: PASS
#05: PASS  #06: PASS  #07: PASS  #08: PASS
#09:      #10:      #11:      #12:
#13:      #14:      #15:      #16:
```



Note

The Pass Sound setting must be set to ON for the buzzer to sound (page 73).

FAIL Judgment

When any of the tests have been judged as FAIL, the FAIL indicator will be lit red and the buzzer will sound.

FAIL



```
AUTO=001-***  AUTO_NAME
#01: PASS  #02: PASS  #03: PASS  #04: PASS
#05: PASS  #06: FAIL  #07: FAIL  #08: PASS
#09:      #10:      #11:      #12:
#13:      #14:      #15:      #16:
```

 


Note

The Fail Sound setting must be set to ON for the buzzer to sound (page 73).

View Results

1. When the PASS or FAIL overview table is shown on the screen, turn the scroll wheel right to scroll through each test step.



step number

MANU number for current step

0.100 kV 00.37 mA

 
RAMP=0.00.0S TIME=003.2S

ACW DCW IR GB

PASS/FAIL result


Detailed description: The screenshot shows a test results screen. At the top, 'STEP: 02-003' is highlighted with an arrow pointing to it from the label 'step number'. To its right, 'MANU_NAME' is highlighted with an arrow pointing to it from the label 'MANU number for current step'. The main display area shows '0.100 kV' and '00.37 mA'. Below these, 'RAMP=0.00.0S' and 'TIME=003.2S' are shown. At the bottom, there are several status indicators: 'ACW', 'DCW', 'IR', 'GB', and a green 'PASS' result which is highlighted with an arrow pointing to it from the label 'PASS/FAIL result'. The 'ARC= OFF' status is also visible at the top right.

- Turn the scroll wheel left to return back to the overview table.



Return to Ready Status


- The PASS/FAIL results will be held on the screen until the STOP button is pressed.
- To put the tester back into READY status, press the STOP button (twice for a fail result).

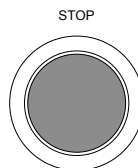

- The READY indicator will be lit blue in the READY status.




 READY status




Exit Testing

 
To exit testing, press the MANU/AUTO key when the tester is in the READY status. The tester will revert to The VIEW status.



PASS Timing
Diagram

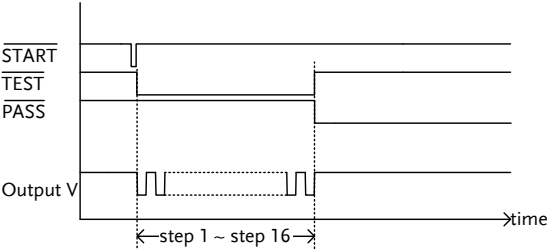

FAIL Timing
Diagram

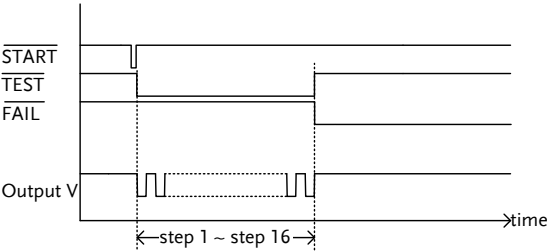

EXTERNAL CONTROL

The External Control chapter covers the
REMOTE terminal and the SIGNAL I/O port.

External Control Overview97
Remote Terminal Overview.....97
Remote Controller Operation.....98
SIGNAL I/O Overview99
Using the SIGNAL I/O to Start/Stop Tests101
Using the Interlock Key102

External Control Overview


The External Control section describes the front panel REMOTE terminal connection and the rear panel SIGNAL I/O port.

Remote Terminal Overview

Overview	The REMOTE terminal connector is a standard 5-pin DIN terminal suitable for a remote controller.
----------	--

 WARNING	Keep any cables that are connected to the REMOTE terminal away from the HIGH VOLTAGE and RETURN terminals.
--	--

Pin Assignment and Connection

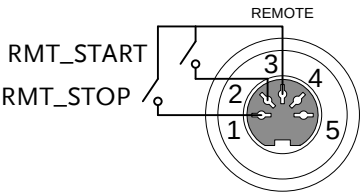


Pin	Pin name	Description
1	RMT_STOP	Remote Stop signal
2	RMT_START	Remote Start signal
3	COM	Common line
4	Not used	
5	Not used	
Signal Properties		
High level input voltage		2.4V~3.3V
Low level input voltage		0~0.8V
Input period		minimum of 1ms

Remote Controller Operation

Description The GPT-9000 accepts external remote controllers with a START and STOP button. To use the REMOTE terminal, the GPT-9000 must first be configured to accept a remote controller.

Operating a remote controller is the same as operating the START and STOP buttons on the front panel.

- Steps**
1. Turn off the power.
 2. Insert the lead of remote controller into the REMOTE terminal.

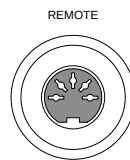

3. Turn on the power to the tester.
4. Configure the Start Ctrl option to REMOTE CONNECT in the Common Utility menu. Page 76
5. The tester will now only be able to start a test using a remote controller.
6. To return the operation control to the front panel, configure the Start Ctrl option to FRONT PANEL. Page 76


SIGNAL I/O Overview

Overview

The SIGNAL I/O port can be used to remotely start/stop tests and monitor the test status of the instrument. The SIGNAL I/O port is also used for the interlock function (page 76).


The SIGNAL I/O port uses a DB-9 pin female connector.

Pin Assignment

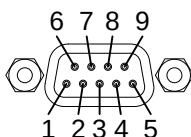


Pin name	Pin	Description
INTERLOCK1	1	When INTERLOCK is ON, a test is only allowed to start when both INTERLOCK pins are shorted.
INTERLOCK2	2	
INPUT_COM	3	Common input line
INPUT_START	4	Start signal input
INPUT_STOP	5	Stop signal input
OUTPUT_TEST	6	Indicates that a test is in progress
OUTPUT_FAIL	7	Indicates that a test has failed
OUTPUT_PASS	8	Indicates that a test has passed
OUTPUT_COM	9	Common output line

 
Interlock connection



Input Connection

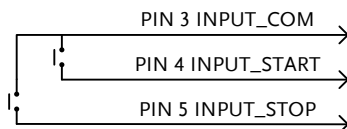

Output
Connection

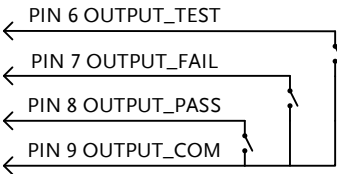

Signal Properties

Input Signals

High level input voltage	5V ~ 32V
Low level input voltage	0V ~ 1V
Low level input current	Maximum of -5mA
Input period	Minimum of 1ms

Output Signals

Output Type	Relay form A
Output Rated Voltage	30VDC
Maximum output current	0.5A

Using the SIGNAL I/O to Start/Stop Tests

Background	To use the SIGNAL I/O port the Start Ctrl settings have to be set to SIGNAL I/O in the Common Utility menu.
------------	---

- | | |
|-----------------|---|
| Panel operation | <ol style="list-style-type: none">1. Set the Start Ctrl option to SIGNAL Page 76 I/O.2. Turn off the power.3. Connect the Input/Output signals to the SIGNAL I/O port.4. Turn the tester back on.5. To start the testing, short the INPUT_STOP and INPUT_COM line for a minimum of 1ms to put the tester into READY status.6. To start the testing, short the INPUT_START and INPUT_COM lines for a minimum of 1ms.7. To stop the testing, temporarily short the INPUT_STOP and INPUT_COM line again. |
|-----------------|---|


Using the Interlock Key

Background

When the INTERLOCK function is set to ON, tests are only allowed to start when both Interlock pins on the signal I/O port are shorted. Using the Interlock key will short the INTERLOCK1 and INTERLOCK2 pins on the signal I/O port. See page 99 for the Signal I/O pin assignment.

Panel operation

1. Insert the Interlock key into the SIGNAL I/O port on the rear panel.

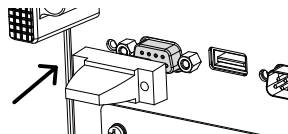

2. Set the INTERLOCK option to ON Page 76 in the Common Utility.
-



Note

With INTERLOCK set to ON, the tester can now only start a test when the Interlock key is connected.

Set INTERLOCK to OFF to disable this feature.

REMOTE CONTROL

This chapter describes basic configuration of IEEE488.2 based remote control. The remote interface supports USB, RS232 and GPIB.

Interface Configuration104

Command Syntax108

Command List111

Error Messages143

Interface Configuration

USB Remote Interface

USB Configuration	PC side connector	Type A, host
	GPT-9000 side connector	Rear panel Type A
	USB Class	CDC (communications device class)

- Panel operation
1. Connect the USB cable to the rear panel USB A port.



2. Set the interface to USB from the Common Utility menu.

Page 74




Note

When USB is used for remote control, an RS232 port is simulated. Check the Windows Device Manager for the baud rate and other RS232 settings. Check the RS232 configuration below for more details.

RS232 Remote Interface

RS232 Configuration	Connection	Null modem cable
	Baud rate	9600, 19200, 38400, 57600, 115200
	Parity	None
	Data bits	8
	Stop bit	1
	Flow control	None

 Pin Assignment




- 1: No connection
- 2: RxD (Receive Data)
- 3: TxD (Transmit Data)
- 4: No connection
- 5: GND
- 6-9: No connection

Connection	PC		GPT-9000	
	DB9 Pin	Signal	Signal	DB9Pin
	2	RxD	TxD	3
	3	TxD	RxD	2
	5	GND	GND	5

Panel operation

 1. Connect the Null modem cable to the rear panel RS232 port.
2. Set the interface to RS232 from the Common Utility menu.



Page 74


GPIB Remote Interface

GPIB Configuration

Address 0-30

Panel operation

 1. Connect the GPIB cable to the rear panel GPIB port.
2. Set the interface to GPIB and set the GPIB address from the Common Utility menu.



Page 74

USB/RS232 Remote Control Function Check

Functionality
check

Invoke a terminal application such as Hyper Terminal.

To check the COM port number and other settings, see the Device Manager in the PC. For WinXP; Control panel → System → Hardware tab.

Run this query command via the terminal after the instrument has been configured for USB or RS232 remote control (page 104, 104).

*idn?

This should return the Model number, Serial number, and Firmware version in the following format:

GPT-9803, XXXXXXXXXXXXX, V1.00

Model number : GPT-9803

 
Serial number :12 character serial number

Firmware version : V1.00

- ^j can be used as the terminal character when entering the queries/commands from a terminal application.
-

Display

When the panel is being remotely controlled via the USB, RS232 or GPIB interfaces, RMT will be displayed on the screen.




Return to Panel Control

Background

When the instrument is remotely controlled all panel keys except the STOP button are disabled.

Steps

1. When RMT is on the display, press the STOP button. The panel goes to the READY status.

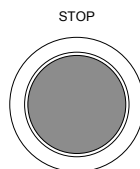


2. From the READY status the tester can go into one of two states: TEST or VIEW.

- To put the tester into VIEW status, press the MANU/AUTO key.



- To put the tester in TEST status, press the START button. This will start the manual test/automatic test. For more details on running a manual test or automatic test, see pages 58 and 88, respectively.

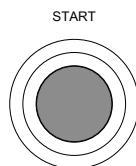

Note

To put the tester back to RMT, simply issue another remote control command.


Command Syntax

Compatible	IEEE488.2	Partial compatibility
Standard	SCPI, 1999	Partial compatibility

Command Structure

SCPI commands follow a tree-like structure, organized into nodes. Each level of the command tree is a node. Each keyword in an SCPI command represents each node in the command tree. Each keyword (node) of an SCPI command is separated by a colon (:).

For example, the diagram below shows an SCPI sub-structure and a command example.

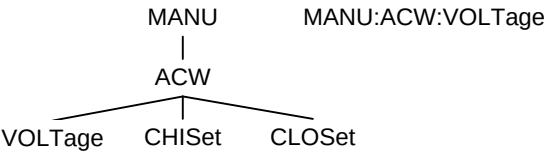


Command types

There are a number of different instrument commands and queries. A command sends instructions or data to the unit and a query receives data or status information from the unit.

Command types

Simple	A single command with/without a parameter
Example	*IDN?

 	Query	A query is a simple or compound command followed by a question mark (?). A parameter (data) is returned.		
	Example	MANU:ACW:VOLTage?		
Command Forms	Commands and queries have two different forms, long and short. The command syntax is written with the short form of the command in capitals and the remainder (long form) in lower case. The commands can be written in capitals or lower-case, just so long as the short or long forms are complete. An incomplete command will not be recognized. Below are examples of correctly written commands.			
	Long form	SYSTem:BUZZer:KEYSound SYSTEM:BUZZER:KEYSOUND system:buzzer:keysound		
	Short form	SYST:BUZZ:KEYS syst:buzz:keys		
Command Format			1. Command header 2. Space 3. Parameter	
Parameters	Type	Description	Example	
	<Boolean>	Boolean logic	0, 1	
	<NR1>	integers	0, 1, 2, 3	
	<NR2>	decimal numbers	0.1, 3.14, 8.5	

	<NR3>	floating point	4.5e-1, 8.25e+1
	<NRf>	any of NR1, 2, 3	1, 1.5, 4.5e-1
	<string>	ASCII text string	TEST_NAME
Message Terminator	CR, LF	Carriage Return + Line feed code	

Command List

System	SYSTem:LCD:CONTRast	113
Commands	SYSTem:LCD:BRIGHtness	113
	SYSTem:BUZZer:PSOUND	114
	SYSTem:BUZZer:FSOUND	114
	SYSTem:BUZZer:PTIME	114
	SYSTem:BUZZer:FTIME	115
	SYSTem:ERRor	115
Function	FUNCTion:TEST	116
Commands	MEASure<x>	117
	MAIN:FUNCTion	118
Manual	MANU:STEP	120
Commands	MANU:NAME	120
	MANU:RTIME	120
	MANU:EDIT:MODE	121
	MANU:ACW:VOLTag	121
	MANU:ACW:CHISet	122
	MANU:ACW:CLOSet	122
	MANU:ACW:TTime	123
	MANU:ACW:FREQuency	124
	MANU:ACW:REF	124
	MANU:ACW:ARCCurrent	125
	MANU:DCW:VOLTag	125
	MANU:DCW:CHISet	126
	MANU:DCW:CLOSet	126
	MANU:DCW:TTime	127
	MANU:DCW:REF	127
	MANU:DCW:ARCCurrent	128
	MANU:IR:VOLTag	128
	MANU:IR:RHISet	129
	MANU:IR:RLOSet	129
	MANU:IR:TTime	130

	MANU:IR:REF	130
	MANU:GB:CURRent	130
	MANU:GB:RHISet	131
	MANU:GB:RLOSet	131
	MANU:GB:TTime	132
	MANU:GB:FREQuency	132
	MANU:GB:REF	133
	MANU:GB:ZEROCHECK	133
	MANU:UTILity:ARCMODE	134
	MANU:UTILity:PASShold	134
	MANU:UTILity:FAILhold	134
	MANU:UTILity:MAXHold	135
	MANU:UTILity:GROUNDMODE	135
	MANU<x>:EDIT:SHOW	136
Auto Commands	AUTO<x>:PAGE:SHOW	138
	AUTO:PAGE:MOVE	138
	AUTO:PAGE:SWAP	139
	AUTO:PAGE:SKIP	139
	AUTO:PAGE:DEL	140
	AUTO:NAME	140
	AUTO:EDIT:ADD	141
	TESTok:RETurn	141
Common	*CLS	142
Commands	*IDN	142

System Commands

SYSTem:LCD:CONTRast113

SYSTem:LCD:BRIGhtness113

SYSTem:BUZZer:PSOUND.....114

SYSTem:BUZZer:FSOUND114

SYSTem:BUZZer:PTIME.....114

SYSTem:BUZZer:FTIME115

SYSTem:ERRor115

SYSTem:LCD:CONTRast

Set →

→ Query


Description	Sets the contrast of the LCD display from 1 (low) to 8 (bright).
Syntax	SYSTem:LCD:CONTRast <NR1>
Query Syntax	SYSTem:LCD:CONTRast?
Parameter/ Return parameter	<NR1> 1~8
Example	SYST:LCD:CONT 5 Sets the display contrast to 5.

SYSTem:LCD:BRIGhtness


Set →

→ Query


Description	Sets the brightness of the LCD display from 1(dark) to 2(bright).
Syntax	SYSTem:LCD:BRIGhtness <NR1>
Query Syntax	SYSTem:LCD:BRIGhtness?
Parameter/ Return parameter	<NR1> 1 (dark), 2 (bright)
Example	SYST:LCD:BRIG 2 Sets the display brightness to bright.

 SYSTem:BUZZer:PSOUND

Description	Turns the buzzer sound on or off for a PASS judgment.	
Syntax	SYSTem:BUZZer:PSOUND{ON OFF}	
Query Syntax	SYSTem:BUZZer:PSOUND ?	
Parameter/	ON	PASS Sound on.
Return parameter	OFF	PASS Sound off.
Example	SYST:BUZZ:PSOUND ON Turns the buzzer sound on for PASS judgments.	

 
SYSTem:BUZZer:FSOUND

Description	Turns the buzzer sound on or off for a FAIL judgment.	
Syntax	SYSTem:BUZZer:FSOUND{ON OFF}	
Query Syntax	SYSTem:BUZZer:FSOUND ?	
Parameter/	ON	FAIL Sound on.
Return parameter	OFF	FAIL Sound off.
Example	SYST:BUZZ:FSOUND ON Turns the buzzer sound on for FAIL judgments.	

 SYSTem:BUZZer:PTIME

Description	Sets the PASS sound duration in seconds.	
Syntax	SYSTem:BUZZer:PTIME <NR2>	
Query Syntax	SYSTem:BUZZer:PTIME?	
Parameter/	<NR2>	0.2~999.9
Return parameter		
Example	SYST:BUZZ:PTIM 1 Sets the buzzer to 1 second for a PASS judgment.	

 SYSTem:BUZZer:FTIME



Description	Sets the FAIL Sound duration in seconds.
Syntax	SYSTem:BUZZer:FTIME <NR2>
Query Syntax	SYSTem:BUZZer:FTIME?
Parameter/ Return parameter	<NR2> 0.2~999.9
Example	SYST:BUZZ:FTIM 1 Sets the buzzer to 1 second for a FAIL judgment.

SYSTem:ERRor



Description	Returns any errors in the output buffer. See page 143 for a list of all the possible errors.
Query Syntax	SYSTem:ERRor ?
Return parameter	<string> Returns an error string.
Example	SYST:ERR ? >Value Error! Returns "Value Error!" as the error message.

SYSTem:GPIB:VERSion



Description	Queries the GPIB version.
Query Syntax	SYSTem:GPIB:VERSion?
Return parameter	<string> Returns: The GPIB version as a string "GPIB,V1.00" or "No GPIB connected" if there is not a GPIB device configured/connected.
Query Example	SYST:GPIB:VERS? >GPIB,V1.00 Returns the GPIB version.

 
Function Commands

FUNCTION:TEST116

MEASure<x>117

MAIN:FUNCTION.....118

FUNCTION:TEST



Description Turns the currently selected test (output) on or off.

When HOLD is displayed on the screen during AUTO tests, use the FUNCTION:TEST command to move on to the next step.

Setting the FUNCTION:TEST command to OFF at the end of a test will also temporarily turn the PASS/FAIL buzzer sound off.

Syntax	FUNCTION:TEST {ON OFF}	
Query Syntax	FUNCTION:TEST?	
Parameter	ON	Turns the test on.
	OFF	Turns the test off.
Return parameter	TEST ON	Test is on.
	TEST OFF	Test is off.
Example	FUNC:TEST ON	
	Turns the output on.	

MEASure<x>



Description Returns the test parameters & results of the tester in either MANU or AUTO mode.

MANU mode: Returns the test parameters & results of a MANU test.

AUTO mode: Returns the test parameters & results of the selected step (1-16) of the AUTO test.

Return parameters: function, judgment/status, test voltage, test current/resistance, test time (time of completed test) or ramp time (elapsed time of test that has not been completed).


Query Syntax	MEASure<x>?	
Parameter (MANU mode)		No parameter needed for MANU mode.
Parameter (AUTO mode)	<x>	<NR1>1~16. Step number.
Return parameter	<string>	Returns the test status of the test in the following format: function, judgment or status, test voltage, test current or resistance, test time or ramp time

Function	ACW, DCW, IR, GB
Judgment /Status	PASS, FAIL VIEW
Test voltage	voltage+unit
Test current /Test resistance	current+unit resistance+unit
Test time /Ramp time	T=time+S R=time+S

Example MEAS?
(in MANU mode) >ACW, FAIL , 0.024kV ,0.013 mA ,R=000.1S

Returns the test result of the current manual test.

 Example MEAS10?
(in AUTO mode) >IR, FAIL ,0.225kV ,999M ohm,T=010.3S
Returns step 10 of the current automatic result.




MAIN:FUNCtion

Description	Changes the mode between AUTO and MANU.	
Syntax	MAIN:FUNCtion {MANU AUTO}	
Query Syntax	MAIN:FUNCtion ?	
Parameter/	MANU	Puts the tester mode to MANU.
Return parameter	AUTO	Puts the tester mode to AUTO.
Example	MAIN:FUNC MANU Sets the tester to MANU mode.	

Manual Commands


MANU:STEP	120
MANU:NAME	120
MANU:RTIME	120
MANU:EDIT:MODE	121
MANU:ACW:VOLTage	121
MANU:ACW:CHISet	122
MANU:ACW:CLOSet	122
MANU:ACW:TTime	123
MANU:ACW:FREQuency	124
MANU:ACW:REF	124
MANU:ACW:ARCCurrent	125
MANU:DCW:VOLTage	125
MANU:DCW:CHISet	126
MANU:DCW:CLOSet	126
MANU:DCW:TTime	127
MANU:DCW:REF	127
MANU:DCW:ARCCurrent	128
MANU:IR:VOLTage	128
MANU:IR:RHISet	129
MANU:IR:RLOSet	129
MANU:IR:TTime	130
MANU:IR:REF	130
MANU:GB:CURRent	130
MANU:GB:RHISet	131
MANU:GB:RLOSet	131
MANU:GB:TTime	132
MANU:GB:FREQuency	132
MANU:GB:REF	133
MANU:GB:ZEROCHECK	133
MANU:UTILity:ARCMode	134
MANU:UTILity:PASShold	134
MANU:UTILity:FAILhold	134
MANU:UTILity:MAXHold	135
MANU:UTILity:GROUNDMODE	135
MANU<x>:EDIT:SHOW	136

 MANU:STEP




Description	Sets the MANU test number.
Syntax	MANU:STEP <NR1>
Query Syntax	MANU:STEP?
Parameter/ Return parameter	<NR1> 0~100.
Example	MANU:STEP 100 Sets the manual test number to 100.

 MANU:NAME



Description	Sets or returns the test name for the selected manual test. The test must be in MANU mode before this command can be used. Note only alphanumeric characters (A-Z, a-z, 0-9) and the “_” underscore character can be used to set the MANU test name.
Syntax	MANU:NAME <string>
Query Syntax	MANU:NAME?
Parameter/ Return parameter	<string> 10 character string. (first character must be a letter)
Example	MANU:NAME test1 Sets the manual test name to “test1”.

 MANU:RTIME



Description	Sets or returns the Ramp Time for the test in seconds. Note: A “TIME ERR” will result if the Ramp Time + Test Time is ≥ 240 seconds when the HI SET limit is over 30mA (ACW function only).
-------------	--

Syntax	MANU:RTIMe <NR2>
Query Syntax	MANU:RTIMe?
Parameter/ Return parameter	<NR2> 0.1~999.9 seconds
Example	MANU:RTIM 0.5 Sets the ramp time to half a second.

Set →

→ Query

MANU:EDIT:MODE

Description	Sets or returns the mode (ACW, DCW, IR) of the selected manual test.
Syntax	MANU:EDIT:MODE {ACW DCW IR GB}
Query Syntax	MANU:EDIT:MODE?
Parameter/ Return parameter	<ACW> AC Withstand mode
	<DCW> DC Withstand mode
	<IR> Insulation Resistance mode
Example	MANU:EDIT:MODE ACW Sets the mode to ACW.

Set →

→ Query

MANU:ACW:VOLTage

Description	Sets or returns the ACW voltage in kV. The test must first be in ACW mode before this command can be used.
Syntax	MANU:ACW:VOLTage <NR2>
Query Syntax	MANU:ACW:VOLTage?
Parameter/ Return parameter	<NR2> 0.100 ~ 5.000 (kV)
Example	MANU:ACW:VOLT 1 Sets the ACW voltage to 1 kV.

MANU:ACW:CHISet

Set →

→ Query

Description	Sets or returns the ACW HI SET current value in milliamps. The test must first be in ACW mode before this command can be used.
-------------	--

Syntax	MANU:ACW:CHISet <NR2>
--------	-----------------------

Query Syntax	MANU:ACW:CHISet?
--------------	------------------

Parameter/ Return parameter	<NR2> 0.001 ~ 042.0
--------------------------------	---------------------

Example	MANU:ACW:CHIS 10.0
---------	--------------------

Sets the ACW HI SET current to 10 mA.

Set →

→ Query

MANU:ACW:CLOSet

Description	Sets or returns the ACW LO SET current value in milliamps. The LO SET value must be less than the HI SET value. The test must first be in ACW mode before this command can be used.
-------------	---

The LO SET range must use the HI SET range. If all the digits in the LO SET range are outside the HI SET range, an error will be produced. All digits outside the HI SET range are ignored and will not be used.

For example:

HI SET value: 12.34

LO SET value1: 0.005 → error

LO SET value2: 0.053 → no error

In the example above LO SET value1 will produce an error as all digits are outside the range of HI SET. LO SET value2 will not produce an error, but will return 0.05, not 0.053.

Syntax	MANU:ACW:CLOSet<NR2>
Query Syntax	MANU:ACW:CLOSet?
Parameter/ Return parameter	<NR2> 0.000 ~ 041.9
Example	MANU:ACW:CLOS 20.0 Sets the ACW LO SET current to 20 mA.

Set →

→ Query

MANU:ACW:TTIME

Description	Sets or returns the ACW test time in seconds. The test must first be in ACW mode before this command can be used. Note: A “TIME ERR” will result if the Ramp Time + Test Time is > 240 seconds when the HI SET limit is over 30mA (ACW function only). In special MANU mode, the TIMER can be turned off.	
Syntax	MANU:ACW:TTIME {<NR2> OFF}	
Query Syntax	MANU:ACW:TTIME?	
Parameter	<NR2>	0.5 ~ 999.9 seconds
	OFF	TIMER OFF (special MANU mode).
Return parameter	<NR2>	0.5 ~ 999.9 seconds
	TIME OFF	TIMER is OFF (special MANU mode).
Example	MANU:ACW:TTIM 1 Sets the ACW test time to 1 second.	

MANU:ACW:FREQuency

Set →

→ Query

Description	Sets or returns the ACW test frequency in Hz. The test must first be in ACW mode before this command can be used.
-------------	---

Syntax	MANU:ACW:FREQuency {50 60}
--------	----------------------------

Query Syntax	MANU:ACW:FREQuency?
--------------	---------------------

Parameter/	<50>	50 Hz
------------	------	-------

Return parameter	<60>	60 Hz
------------------	------	-------

Example	MANU:ACW:FREQ 50
---------	------------------

Sets the ACW test frequency to 50Hz.

Set →

→ Query

MANU:ACW:REF

Description	Sets or returns the ACW reference value in mA. The test must first be in ACW mode before this command can be used.
-------------	--

The ACW reference value must be less than the HI SET value.

The ACW reference value must use the same range as the HI SET value.

Syntax	MANU:ACW:REF <NR2>
--------	--------------------

Query Syntax	MANU:ACW:REF?
--------------	---------------


Parameter/	<NR2>	0.000 ~ 041.9
------------	-------	---------------

Return parameter	
------------------	--

Example	MANU:ACW:REF 0.01
---------	-------------------

Sets the ACW reference to 0.01 mA.

 MANU:ACW:ARCCurrent



Description Sets or returns the ACW ARC current value in mA. ARC must be enabled before the ARC current can be set. The test must first be in ACW mode before this command can be used.

ARC current uses the same range as the HI SET value. The ARC current is limited to 2X the HI SET value.

 
Syntax MANU:ACW:ARCCurrent <NR2>

Query Syntax MANU:ACW:ARCCurrent?

Parameter/Return parameter <NR2> 0.000 ~ 080.0

Example MANU:ACW:ARCC 0.04

Sets the ACW ARC value to 0.04 mA.



MANU:DCW:VOLTage

Description Sets or returns the DCW voltage in kV. The test must first be in DCW mode before this command can be used.

Note: A "DC Over 50W" error will result if the DCW Voltage X HI SET value is > 50 watts.

Syntax MANU:DCW:VOLTage <NR2>

 
Query Syntax MANU:DCW:VOLTage?

Parameter/Return parameter <NR2> 0.100 ~ 6.100 (kV)

Example MANU:DCW:VOLT 6


Sets the DCW voltage to 6 kV.

MANU:DCW:CHISet



Description	Sets or returns the DCW HI SET current value in milliamps. The test must first be in DCW mode before this command can be used. Note: A “DC Over 50W” error will result if the DCW Voltage X HI SET value is > 50 watts.	
Syntax	MANU:DCW:CHISet <NR2>	
Query Syntax	MANU:DCW:CHISet?	
Parameter/ Return parameter	<NR2>	0.001 ~ 11.00
Example	MANU:DCW:CHIS 5 Sets the DCW HI SET current to 5mA.	

 MANU:DCW:CLOSet



Description	Sets or returns the DCW LO SET current value in milliamps. The LO SET value must be less than the HI SET value. The test must first be in DCW mode before this command can be used. The LO SET range must use the HI SET range. If all the digits in the LO SET range are outside the HI SET range, an error will be produced. All digits outside the HI SET range are ignored and will not be used. For example: HI SET value: 12.34 LO SET value1: 0.005 → error LO SET value2: 0.053 → no error In the example above LO SET value1 will produce an error as all digits are outside the range of HI SET. LO SET value2 will not produce an error, but will return 0.05, not 0.053.	
-------------	--	--

Syntax	MANU:DCW:CLOSet<NR2>
Query Syntax	MANU:DCW:CLOSet?
Parameter/ Return parameter	<NR2> 0.000 ~ 010.9
Example	MANU:DCW:CLOS 2.00 Sets the DCW LO SET current to 2mA.

Set →

→ Query

MANU:DCW:TTIME

Description	Sets or returns the DCW test time in seconds. The test must first be in DCW mode before this command can be used. In special MANU mode, the TIMER can be turned off.
Syntax	MANU:DCW:TTIME {<NR2> OFF}
Query Syntax	MANU:DCW:TTIME?
Parameter	<NR2> 0.5 ~ 999.9 seconds OFF TIMER OFF (special MANU mode).
Return parameter	<NR2> 0.5 ~ 999.9 seconds TIME OFF TIMER is OFF (special MANU mode).
Example	MANU:DCW:TTIM 1 Sets the DCW test time to 1 second.

Set →

→ Query

MANU:DCW:REF

Description	Sets or returns the DCW reference value in mA. The test must first be in DCW mode before this command can be used. The reference value must be less than the HI SET value. The reference value uses the same range as the HI SET value.
-------------	---

Syntax MANU:DCW:REF <NR2>

Query Syntax MANU:DCW:REF?

Parameter/ <NR2> 000.0 ~ 010.9

Return parameter

Example MANU:DCW:REF 0.01

Sets the DCW reference to 0.01 mA.

Set →

MANU:DCW:ARCCurrent

→ Query

Description Sets or returns the DCW ARC current value in mA. ARC must be enabled to set the ARC current. The test must first be in DCW mode before this command can be used.

ARC current uses the same range as the HI SET value. The ARC current is limited to 2X the HI SET value.

Syntax MANU:DCW:ARCCurrent <NR2>

Query Syntax MANU:DCW:ARCCurrent?

Parameter/ <NR2> 000.0 ~ 22.00

Return parameter

Example MANU:DCW:ARCC 10

Sets the DCW ARC value to 10mA.

Set →

MANU:IR:VOLTage

→ Query

Description Sets or returns the IR voltage in kV. The test must first be in IR mode before this command can be used.

Syntax MANU:IR:VOLTage <NR2>

Query Syntax MANU:IR:VOLTage?

Parameter/ <NR2> 0.05 ~ 1 (0.05kV to 1kV: steps of .05)

Return parameter

Example MANU:IR:VOLT 1
Sets the IR voltage to 1 kV.

Set →

MANU:IR:RHISet

→ Query

Description Sets or returns the IR HI SET resistance value in MΩ. The test must first be in IR mode before this command can be used.

Syntax MANU:IR:RHISet <NR1>|NULL

Query Syntax MANU:IR:RHISet?

Parameter/ <NR1> 2 ~ 9999

Return parameter NULL Sets the HI SET value to high impedance

Example MANU:IR:RHIS 10.
Sets the IR HI SET resistance to 10 MΩ.

Set →

MANU:IR:RLOSet

→ Query

Description Sets or returns the IR LO SET resistance value in MΩ. The LO SET value must be less than the HI SET value. The test must first be in IR mode before this command can be used.

Syntax MANU:IR:RLOSet<NR1>

Query Syntax MANU:IR:RLOSet?

Parameter/ <NR1> 1 ~ 9999

Return parameter

Example MANU:IR:RLOS 10
Sets the IR LO SET resistance to 10MΩ.



MANU:IR:TTIMe



Description	Sets or returns the IR test time in seconds. The test must first be in IR mode before this command can be used.
Syntax	MANU:IR:TTIMe <NR2>
Query Syntax	MANU:IR:TTIMe?
Parameter/ Return parameter	<NR2> 1.0 ~ 999.9 seconds
Example	MANU:IR:TTIM 1 Sets the IR test time to 1 second.



MANU:IR:REF



Description	Sets or returns the IR reference value in MΩ. The test must first be in IR mode before this command can be used. The reference value must be lower than the HI SET value.
Syntax	MANU:IR:REF <NR1>
Query Syntax	MANU:IR:REF?
Parameter/ Return parameter	<NR1> 0000 ~ 9999
Example	MANU:IR:REF 900 Sets the IR reference to 900 MΩ.



MANU:GB:CURRent



Description	Sets or returns the GB current in A. The test must first be in GB mode before this command can be used.
-------------	---

Syntax MANU:GB:CURRent <NR2>

Query Syntax MANU:GB:CURRent?

Parameter/ Return parameter	<NR2>	3.00~32.00
--------------------------------	-------	------------

Example MANU:GB:CURR 3.00
Sets the GB current to 3.00A.

Set →

→ Query

MANU:GB:RHISet

Description Sets or returns the GB HI SET resistance value in mΩ. The test must first be in GB mode before this command can be used.

Syntax MANU:GB:RHISet <NR2>

Query Syntax MANU:GB:RHISet?

Parameter/ Return parameter	<NR2>	000.1 ~ 650.0
--------------------------------	-------	---------------

Example MANU:GB:RHIS 100.0
Sets the HI SET value to 100mΩ.



Note

If the (GB current x HI SET resistance) > 5.4V, then an error will be generated ("GBV > 5.4V").

Set →

→ Query

MANU:GB:RLOSet

Description Sets or returns the GB LO SET resistance value in mΩ. The LO SET value must be less than the HI SET value. The test must first be in GB mode before this command can be used.

Syntax MANU:GB:RLOSet<NR2>

Query Syntax MANU:IR:RLOSet?

Parameter/ Return parameter	<NR2>	0.000 ~ 649.9
--------------------------------	-------	---------------

Example MANU:GB:RLOS 50
Sets the GB LO SET resistance to 50mΩ.

Set →
→ Query

MANU:GB:TTIMe


Description	Sets or returns the GB test time in seconds. The test must first be in GB mode before this command can be used.		
Syntax	MANU:GB:TTIMe <NR2>		
Query Syntax	MANU:GB:TTIMe?		
Parameter/ Return parameter	<NR2>	0.5 ~ 999.9	seconds
Example	MANU:GB:TTIM 1 Sets the GB test time to 1 second.		

Set →
→ Query

MANU:GB:FREQuency

Description	Sets or returns the GB test frequency in Hz. The test must first be in GB mode before this command can be used.		
Syntax	MANU:GB:FREQuency {50 60}		
Query Syntax	MANU:GB:FREQuency?		
Parameter/ Return parameter	<50>	50 Hz	
	<60>	60 Hz	
Example	MANU:GB:FREQ 50 Sets the GB test frequency to 50Hz.		

 MANU:GB:REF



Description Sets or returns the GB reference value in mΩ. The test must first be in GB mode before this command can be used.

The GB reference value must be less than the HI SET value.

Syntax MANU:GB:REF <NR2>

 
Query Syntax MANU:GB:REF?

Parameter/Return parameter <NR2> 0.000 ~ 649.9

Example MANU:GB:REF 100

Sets the GB reference to 100 mΩ.

MANU:GB:ZEROCHECK



Description Performs the zero check function. The test must first be in GB mode and in the Ready Status before this command can be used.

See page 67 for details on the ZERO function.

Syntax MANU:GB:ZEROCHECK {ON|OFF}

 
Query Syntax MANU:GB:ZEROCHECK?

Parameter/Return parameter <ON> Zero function is active.
<OFF> Zero function is not active.

Example MANU:GB:ZEROCHECK OFF


Activates the ZERO function.

MANU:UTILity:ARCMoDe




Description	Sets or returns the ARC mode status for the current test. The ARC mode cannot be set for the IR and GB function.	
Syntax	MANU:UTILity:ARCMoDe {OFF ON_CONT ON_STOP}	
Query Syntax	MANU:UTILity:ARCMoDe?	
Parameter/	OFF	Turns ARC mode off.
Return parameter	ON_CONT	Sets ARC mode to ON and CONTINUE.
	ON_STOP	Sets ARC mode to ON and STOP.
Example	MANU:UTIL:ARCM OFF Turns ARC mode OFF.	

 MANU:UTILity:PASShold



Description	Sets or returns the PASS HOLD setting for the current test.	
Syntax	MANU:UTILity:PASShold {ON OFF}	
Query Syntax	MANU:UTILity:PASShold?	
Parameter/	OFF	Turns PASS HOLD off.
Return parameter	ON	Turns PASS HOLD on.
Example	MANU:UTIL:PASS OFF Turns PASS HOLD OFF.	

 MANU:UTILity:FAILhold



Description	Sets or returns the FAIL HOLD setting for the current test.	
Syntax	MANU:UTILity:FAILhold {ON OFF}	
Query Syntax	MANU:UTILity:FAILhold?	

Parameter/	OFF	Turns FAIL HOLD off.
Return parameter	ON	Turns FAIL HOLD on.

Example MANU:UTIL:FAIL OFF
 Turns FAIL HOLD OFF.

Set →

MANU:UTILity:MAXHold

→ Query

Description	Sets or returns the MAX HOLD setting for the current test.	
Syntax	MANU:UTILity:MAXHold {ON OFF}	
Query Syntax	MANU:UTILity:MAXHold?	
Parameter/	OFF	Turns MAX HOLD off.
Return parameter	ON	Turns MAX HOLD on.

Example MANU:UTIL:MAXH ON
 Turns MAX HOLD on.

Set →

MANU:UTILity:GROUNDMODE

→ Query

Description	Sets or returns the Grounding mode of the current test. The Ground Mode setting cannot be turned on with the IR and GB function.	
Syntax	MANU:UTILity:GROUNDMODE {ON OFF}	
Query Syntax	MANU:UTILity:GROUNDMODE?	
Parameter/	OFF	Turns ground mode off.
Return parameter	ON	Turns ground mode on.
Example	MANU:UTIL:GROUNDMODE ON Turns GROUND MODE on.	

MANU<x>:EDIT:SHOW

→ Query

Description	Returns the test parameters of a manual test.	
Query Syntax	MANU<x>:EDIT:SHOW?	
Parameter/ Return parameter	<x> <string>	<NR1> 000~100. Manual test number Returns a string in the following format: Test function, test voltage, HI SET value, LO SET value, Ramp time, test time.
Example	MANU1:EDIT:SHOW ? > ACW,0.100kV,H=01.00mA,L=00.00mA,R=000.1S, >T=001.0S. Returns the test parameters of manual test number 1.	

Auto Commands

AUTO<x>:PAGE:SHOW.....138

AUTO:PAGE:MOVE.....138

AUTO:PAGE:SWAP139

AUTO:PAGE:SKIP139

AUTO:PAGE:DEL140

AUTO:NAME140

AUTO:EDIT:ADD141

TESTok:RETurn141

AUTO:STEP

Set

→

→

Query


Description	Sets or queries the AUTO number (automatic test number).	
Syntax	AUTO:STEP <NR1>	
Query Syntax	AUTO:STEP?	
Parameter/ Return parameter	<NR1>	1~100.
Example	AUTO:STEP 100 Sets the current AUTO number to 100.	

AUTO<x>:PAGE:SHOW → Query

Description	Returns the Page View of the selected automatic test in the following format: step1:MANU number, step2: MANU number, step3....etc.
Query Syntax	AUTO<x>:PAGE:SHOW?
Parameter/	<x> <NR1> 1~100
Example	AUTO1:PAGE:SHOW? >01:011 ,02:004 ,03:003 ,04:014 , >05:015 ,06:020* ,07:012 ,08:018 , >09: ,10: ,11: ,12: , >13: ,14: ,15: ,16: , Shows the Page View for AUTO number 1.

AUTO:PAGE:MOVE Set →

Description	Moves the source step to the desired destination.
Query Syntax	AUTO:PAGE:MOVE <Value1>,<Value2>
Parameter/	<Value1> <NR1> 1~16 (source step) <Value2> <NR1> 1~16 (destination step)
Example	AUTO:PAGE:MOVE 1, 4 Moves the contents of step 1 to the step 4.

 

AUTO:PAGE:SWAP

Set →

Description	Swaps the source step with destination step.
Query Syntax	AUTO:PAGE:SWAP <Value1>,<Value2>
Parameter/	<Value1> <NR1> 1~16 (source step) <Value2> <NR1> 1~16 (destination step)
Example	AUTO:PAGE:SWAP 1, 4 Swaps the contents of step 1 with step 4.

```

AUTO=001-010 AUTO_NAME
MANU_NAME ACW=0.100kV HI_SET=01.00mA
#01:010 #02:001 #03:003 #04:004
#05:007 #06:003 #07:038 #08:005
#09: #10: #11: #12:
#13: #14: #15: #16:
MOVE SWAP SKIP DEL
  
```

AUTO:PAGE:SKIP

Set →

Description	Skips the selected step when an AUTO test is run. This is shown as an asterisk (*) when in the PAGE view.
-------------	---

Query Syntax	AUTO:PAGE:SKIP <NR1>,{ON OFF}
Parameter/	<NR1> 1~16 (step no.) ON Skip the selected step. OFF Un-skip the selected step.

Example	AUTO:PAGE:SKIP 1,ON Skips step number #1.
---------	--


```

AUTO=001-010 AUTO_NAME
MANU_NAME ACW=0.100kV HI_SET=01.00mA
#01:010* #02:001 #03:003 #04:004
#05:007 #06:003 #07:038 #08:005
#09: #10: #11: #12:
#13: #14: #15: #16:
MOVE SWAP SKIP DEL
  
```

AUTO:PAGE:DEL

Set →

Description	Deletes the selected step from the AUTO test. The remaining steps move up to replace the deleted step.
Query Syntax	AUTO:PAGE:DEL <NR1>
Parameter/	<NR1> 1~16 (step no.#)
Example	AUTO:PAGE:DEL 3 Deletes the contents of step number #3.

 

AUTO:NAME

Set →

→ Query


Description	Sets or returns the AUTO name for the selected automatic test. The test must be in AUTO mode before this command can be used. Note only alphanumeric characters (A-Z, a-z, 0-9) and the “_” underscore character can be used to set the AUTO test name.
Syntax	AUTO:NAME <string>
Query Syntax	AUTO:NAME?
Parameter/ Return parameter	<string> 10 character string. (first character must be a letter)
Example	AUTO:NAME program1 Sets the AUTO name to “program1”.

AUTO:EDIT:ADD

Set →

Description	Add the selected MANU test to the current AUTO number.
Query Syntax	AUTO:EDIT:ADD <NR1>
Parameter/	<NR1> 1~100
Example	AUTO:EDIT:ADD 7

 Adds MANU-007 to the current AUTO number. I.e.,



MANU test added to last step

TESTok:RETurn

Set →

→ Query

Description	Allows “OK” to be displayed on the remote terminal when a test has stopped (PASS/FAIL or STOP). This applies for MANU and AUTO mode.
	By default, TESTok:RETurn is set to OFF.
Syntax	TESTok:RETurn {ON OFF}
Query Syntax	TESTok:RETurn?
Parameter/Return parameter	ON Enables the “OK” message to be displayed.
	OFF Disables the message
Example	TEST:RET OFF
	Disables the message.

Common Commands

*CLS.....	142
*IDN	142

*CLS Set →

Description	The *CLS command clears the internal registers.
Syntax	*CLS

*IDN → Query

Description	Queries the model number, serial number, and firmware version of the tester.
Query Syntax	*IDN?
Return parameter	<string> Returns the instrument identification as a string in the following format: GPT-9803, XXXXXXXXXXXXX, V1.00 Model number : GPT-9803 Serial number :12 character serial number Firmware version : V1.00

Error Messages

Background	The possible error messages returned from SYST:ERR? query are listed below.	
	Error	Error Code
	Command Error	0x14
	Value Setting Error	0x15
	String Setting Error	0x16
	Query Error	0x17
	MODE Setting Error	0x18
	Time Error	0x19
	DC Over 50W	0x1A
	GBV > 5.4V	0x1B

FAQ

- The tester will not turn on.
- The panel keys are not working.
- When I press the START button the tester will not start testing?
- The accuracy does not match the specification.

The tester will not turn on.

Ensure the power cord is connected. Ensure the line input is set to the correct line voltage. Check to make sure the fuse is not blown. See page 146.

The panel keys are not working.

Ensure the tester is not in remote mode, page 107.

Ensure the tester is not in SIGNAL I/O or Remote Connect mode, page 76.

When I press the START button the tester will not start testing?

The tester must first be in the READY status before a test can be started. Ensure the tester displays READY before pressing the START button, page 58 (manual test), 88(automatic test).

If “Double Action” is enabled, the START button must be pressed 0.5 seconds after the STOP button is pressed, otherwise the tester will not start testing.

If “Interlock” is enabled, the interlock key must be inserted into the signal I/O port on the rear before a test can be started. See page 102 for details.

The accuracy does not match the specification.

Make sure the tester is powered On for at least 30 minutes, within +15°C~+35°C. This is necessary to stabilize the unit to match the specification.

 
For more information, contact your local dealer or GWInstek at www.gwinstek.com / marketing@goodwill.com.tw.

APPENDIX


Fuse Replacement

Steps


1. Turn the instrument off.




2. Remove the power cord.

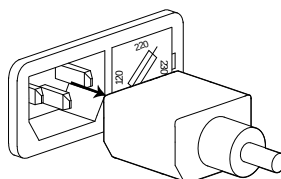


3. Remove the fuse socket using a flat screwdriver.

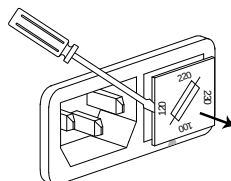

 4. Replace the fuse in the fuse holder.



5. Ensure the correct line voltage is lined up with the arrow on the fuse holder. Insert the fuse socket.

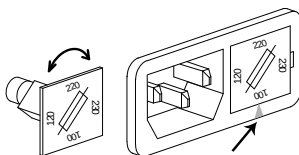

Rating

100V/120V
220V/230VT5A 250V
T2.5A 250V

Error Messages

System Self Test

The following error messages or messages may appear on the GPT screen during the Start-Up initialization. If any of these error messages appear on the GPT-9000, please see an authorized GW Instek distributor.

Error Messages	Description
0x11	EEPROM1 Error
0x12	EEPROM1 Error
0x21	W-V Offset Error (W-V: ACW/DCW voltage)
0x22	W-I Offset Error (W-I: ACW/DCW current)
0x23	IR-I Offset Error
0x24	GB-I Offset Error

MANU Setting Errors

The following error messages or messages may appear on the GPT screen when configuring the MANU test settings.

Error Messages	Description
TIME ERR	For ACW tests. TIME ERR is displayed when HI SET $\geq 30.00\text{mA}$ ~ 40.00mA and if the RAMP $\nearrow$ time and the TEST TIME setting is > 240 seconds.
OVER 50W	For DCW tests. OVER 50W is displayed if the HI SET setting multiplied by the Voltage setting is greater than 50W.
I ERR	For ACW, DCW tests. Shown when the current is set too high.
SHORT	Voltage is too low. Indicates that the DUT could be shorted.
V ERR	For ACW, DCW tests. Voltage is too high.
V = 0	For GB tests. Voltage is equal to 0. Check to see that the SENSE H or SOURCE H is not open.
R ERR	For IR tests. The voltage is too high or resistance=0 Ω . Check to see whether the DUT or test lead is shorting.
	For GB tests. The resistance is too high or too low. Check the test lead connections to correct the error.
I<SET	For GB tests. Current too low. Indicates that the SOURCE L or SOURCE H test lead is open or poorly connected. Test the test lead connection with the DUT to confirm.
I>SET	For GB tests. Current is too high.
R=0	For GB tests. Resistance = 0. This error indicates that there is an error with the measured resistance (0 Ω). Perform the zeroing function again.

GPT-9000 Specifications

The specifications apply when the GPT-9000 is powered on for at least 30 minutes at 15°C~35°C.

Specifications

Environment

Range	Temperature	Humidity
Warranty	15°C ~ 35°C	≤70% (No condensation)
Operation	0°C ~ 40°C	≤70% (No condensation)
Storage	-10°C ~ 70°C	≤85% (No condensation)
Installation Location	Indoors at an amplitude of up to 2000m.	

AC Withstanding Voltage

Output Voltage Range	0.100kV~ 5.000kV
Output Voltage Resolution	2V
Output Voltage Accuracy	± (1% of setting +5V) with no load
Maximum Rated Load(Table1)	200 VA (5kV/40mA)
Maximum Rated Current	40mA 0.001mA ~ 10mA(0.1kV≤V≤0.5kV) 0.001mA ~ 40mA(0.5kV<V≤5kV)
Output Voltage Waveform	Sine wave
Frequency	50 Hz / 60 Hz
Voltage Regulation	± 1% +5V [Maximum rated load → no load]
Voltmeter Accuracy	± (1% of reading+ 5V)
Current Measurement Range	0.001mA~040.0mA
Current Best Resolution	1uA 0.001mA(0.001mA~0.999mA) 0.01mA(01.00mA~09.99mA) 0.1mA(010.0~040.0mA)
Current Measurement Accuracy	± (1.5% of rdg + 30 counts) when HI SET<1.00mA ± (1.5% of rdg + 3 counts) when HI SET≥1.00mA
Window Comparator Method	Yes
ARC DETECT	Yes
Rise-time Control Function	Yes
RAMP (Ramp Time)	0.1~999.9S

Continued...

TIMER (Test Time)	OFF*, 0.5S~999.9S
GND	ON/OFF
* The timer can only be turned off under special MANU mode (MANU=***-000)	

DC Withstanding Voltage

Output Voltage Range	0.100kV~ 6.000kV
Output Voltage Resolution	2V
Output Voltage Accuracy	± (1% of setting +5V) with no load
Maximum Rated Load(Table1)	50W (5kV/10mA)
Maximum Rated Current	10mA
	0.001mA ~ 2mA (0.1kV≤V≤0.5kV)
	0.001mA ~ 10mA (0.5kV<V≤6kV)
Voltmeter Accuracy	± (1% of reading+ 5V)
Voltage Regulation	± 1% +5V
	[Maximum rated load → no load]
Current Measurement Range	0.001mA~010.0mA
Current Best Resolution	1uA
	0.001mA(0.001mA~0.999mA)
	0.01mA(01.00mA~09.99mA)
	0.1mA(010.0mA)
Current Measurement Accuracy	± (1.5% of reading +30uA)
Window Comparator Method	Yes
ARC DETECT	Yes
Rise-time Control Function	Yes
RAMP (Ramp Time)	0.1~999.9S
TIMER (Test Time)	OFF*, 0.5S~999.9S
GND	ON/OFF
* The timer can only be turned off under special MANU mode (MANU=***-000)	

Insulation Resistance Test


Output Voltage	50V~1000V
Output Voltage Resolution	50V
Output Voltage Accuracy	(1% of setting+5V) with no load
Resistance Measurement Range	1MΩ~ 9500MΩ
Test Voltage	Measurement Range Accuracy
50V≤V<500V	1~50MΩ ±(5% of reading +1MΩ)
	51~2000MΩ ±(10% of reading +1MΩ)
500V≤V≤1000V	1~500MΩ ±(5% of reading +1MΩ)
	501~9500MΩ ±(10% of reading +1MΩ)
Voltage Regulation	±1% +5V [Maximum rated load → no load]
Window Comparator Method	Yes
Rise-time Control Function	Yes

Continued...

RAMP (Ramp Time)	0.1~999.9S
TIMER (Test Time)	1S~999.9S
GND	OFF

Ground Bond Test

Output Current Range	03.00A~30.00A
Output Current Accuracy	$\pm (1\% \text{ of reading} + 0.2\text{A})$ when $3\text{A} \leq I \leq 8\text{A}$ $\pm (1\% \text{ of reading} + 0.05\text{A})$ when $8\text{A} < I \leq 30\text{A}$
Output Current Resolution	0.01A
Frequency	50Hz/60Hz
Ohmmeter Measurement Accuracy	$\pm (1\% \text{ of reading} + 2\text{m}\Omega)$
Ohmmeter Measurement Range	10m Ω ~650.0m Ω

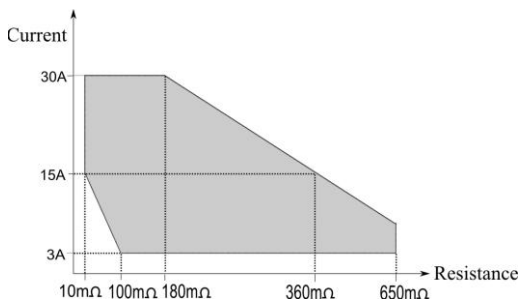

Test Voltage	Max. 6V(AC)
Ohmmeter Measurement Resolution	0.1m Ω
Windows Comparator Method	Yes
TIMER (Test Time)	0.5S~999.9S
GND	OFF

Interface

REMOTE (Remote terminal)	Yes
SIGNAL IO	Yes
RS232	Yes
USB (Device)	Yes
GPIB	Yes (OPTION)

General

DISPLAY	240 x 64 dot matrix LED back light LCD
MEMORY	AUTO/MANU mode 100 memory blocks total

Continued...


POWER SOURCE	AC100V/120V/220V/230V $\pm 10\%$ 50Hz/60Hz
ACCESSORIES	Power cord x1, Quick Start Guide x1 User Manual x1 (CD) GHT-114x1 for GPT-9801, GPT-9802, GPT-9803 GHT-114x1, GTL-115x1 for GTP-9804
DIMENSIONS & WEIGHT	Approx. 330(W) x 150(H) x 460(D) mm (Max.), 19kg(Max)

Table 1: Output Limitation in Withstanding Voltage Testing

	Upper Current	Pause	Output Time
AC	$30\text{mA} \leq I \leq 40\text{mA}$	At least as long as the output time	Maximum 240 seconds
	$0.001\text{mA} \leq I < 30\text{mA}$	Not necessary	Continuous output possible
DC	$0.001\text{mA} \leq I \leq 10\text{mA}$	Not necessary	Continuous output possible
GB	$15\text{A} < I \leq 30\text{A}$	At least as long as the output time	999.9
	$3\text{A} \leq I \leq 15\text{A}$	Not necessary	999.9

NOTE: Output Time = Ramp Time + Test Time.

GPT-9000 Dimensions

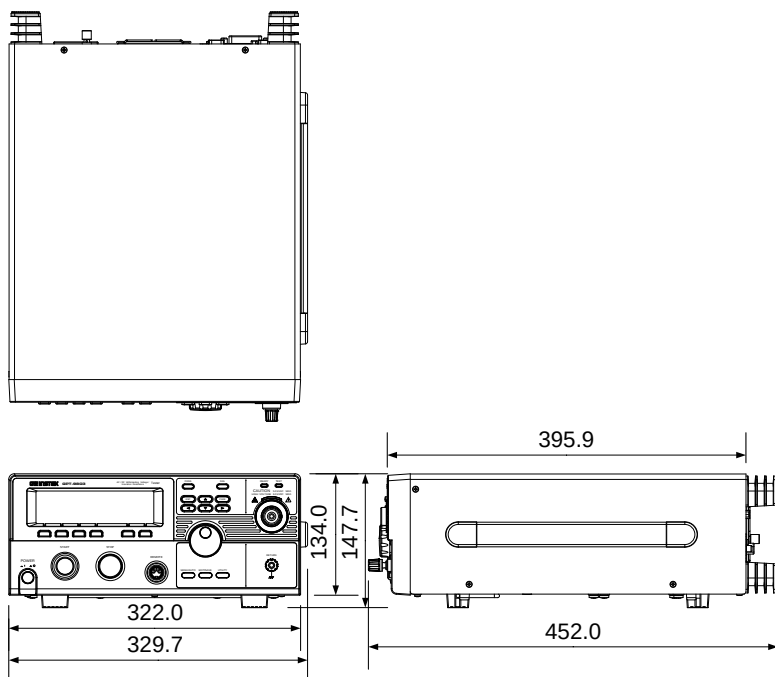

Declaration of Conformity

We

GOOD WILL INSTRUMENT CO., LTD.

No. 7-1, Jhongsing Rd, Tucheng Dist., New Taipei City 236, Taiwan

GOOD WILL INSTRUMENT (SUZHOU) CO., LTD.

No. 69 Lushan Road, Suzhou New District Jiangsu, China.

declare that the below mentioned product

Type of Product: Electrical Safety Tester

Model Number: GPT-9801, GPT-9802, GPT-9803, GPT-9804

are herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Law of Member States relating to Electromagnetic Compatibility (2004/108/EC) and Low Voltage Directive (2006/95/EC).

For the evaluation regarding the Electromagnetic Compatibility and Low Voltage Directive, the following standards were applied:

◎ EMC	
EN 61326-1 EN 61326-2-1	Electrical equipment for measurement, control and laboratory use -- EMC requirements (2006)
Conducted Emission Radiated Emission EN55011: 2009+A1: 2010	Electrostatic Discharge EN 61000-4-2: 2009
Current Harmonics EN 61000-3-2: 2006+A2:2009	Radiated Immunity EN 61000-4-3: 2006 +A2:2010
Voltage Fluctuations EN 61000-3-3: 2008	Electrical Fast Transients EN 61000-4-4: 2004 +A2:2010
-----	Surge Immunity EN 61000-4-5: 2006
-----	Conducted Susceptibility EN 61000-4-6: 2009
-----	Power Frequency Magnetic Field EN 61000-4-8: 2010
-----	Voltage Dip/ Interruption EN 61000-4-11: 2004

Low Voltage Equipment Directive 2006/95/EC	
Safety Requirements	EN 61010-1: 2010 EN 61010-2-030: 2010

INDEX

Accessories	12	overview	35
Automatic test		pass hold	49
add test	82	ramp up time	45
edit settings	81	results	62
load	79	running a test	58
page view	85	saving	57
results	92	special mode	70
running a test	88	test filename	46
saving	84	test frequency	39
test file name	83	test function	38
Caution symbol	5	test limits	40
Cleaning the instrument	7	test reference	42
Declaration of conformity	154	test selection	33, 34, 36
Dimensions	153	test settings	37
Disposal instructions	7	test time	43
EN61010		test voltage	38
measurement category	6	timing diagrams	63
pollution degree	7	Marketing	
Environment		contact	145
safety instruction	7	Menu tree	29
Error messages	147, 148	Operating precautions	24
External control	96	Package contents	13
Interlock key	102	Power on/off	
overview	97	safety instruction	6
remote operation	98	Rear panel diagram	18
remote terminal	97	Remote control	103
signal I/O operation	101	Command list	111
signal I/O overview	99	Command syntax	108
FAQ	144	function check	106
Front panel diagram	14	interface configuration	104
GPIO installation	22	Service operation	
Ground		about disassembly	6
symbol	5	contact	145
Interlock key	102	Specifications	149
Line voltage selection	20	UK power cord	8
List of features	11	Utility settings	
Manual tests		buzzer	73
ARC mode	47	Control settings	76
fail hold	50	double action	76
ground mode	52	GPIO	74
max hold	51	interface	74
		key lock	76

LCD.....	72	Warning symbol	5
RS232	74	Workplace precautions	23
start control	76	Zeroing.....	67
USB	74		