

Handle-less Spanner Wrench

Removing the SeeSnake Camera Head with the Handle-less Spanner Wrench

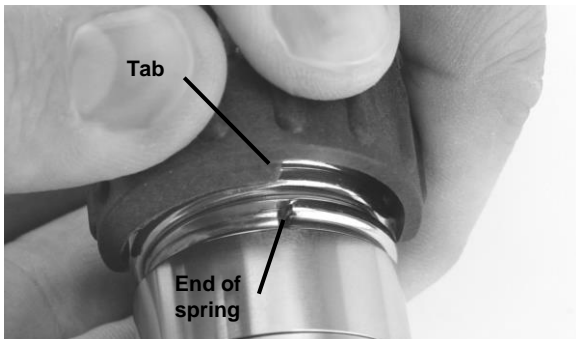


Figure 1 – Align the tab on the spanner wrench with the end of spring and press down to snap the wrench into place.

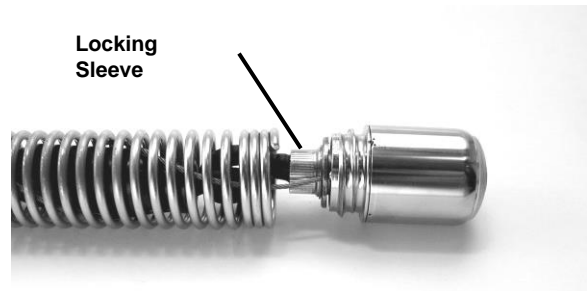


Figure 3 – Camera Head separated from Spring Assembly

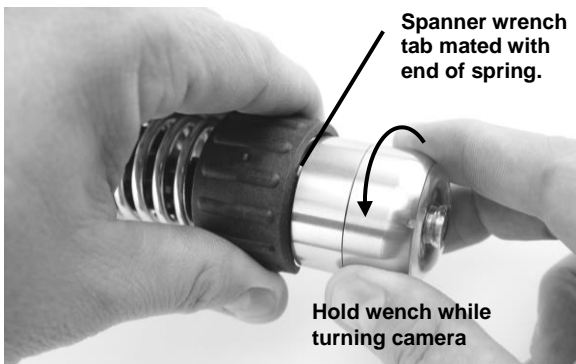


Figure 2 – Use the spanner wrench to hold the spring in place and loosen the camera head.



Figure 4 – Remove the Camera Head from the Locking Sleeve. DO NOT TWIST THE CAMERA! TWIST ONLY THE LOCKING SLEEVE!

Wrench Reorder Information	
System	Cat #
KD-100 Mini B&W KD-200 Mini B&W Compact B&W Flatpack B&W	17553
KD-100 Mini Color KD-200 Mini Color Compact Color Flatpack Color	17558
KD-200 SeeSnake B&W KD-200 SeeSnake Color KD-200 Self Leveling KD-325 B&W KD-325 Color KD-325 Self Leveling	17563

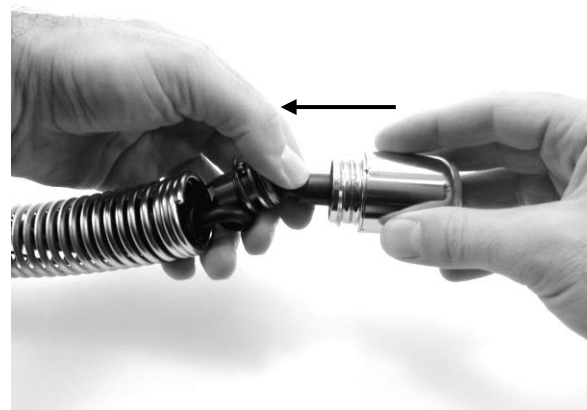


Figure 5 – Unplug the camera's connector. Pull the connector straight out. NEVER TWIST THE CONNECTOR!