




Mastercool®
"World Class Quality"

English

OPERATING INSTRUCTIONS

TWINTURBO
REFRIGERANT RECOVERY MACHINE

MODEL#-69350, 69350-220

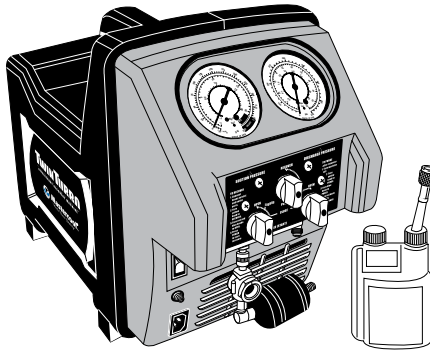

Note: Due to elevation and barometric pressure a small amount of pressure at inlet may be required to start the recovery machine.

SAFETY INFORMATION! READ CAREFULLY BEFORE USING MASTERCool RECOVERY SYSTEM!

1. This equipment is designed to be used by qualified service personnel. The operator of this equipment must be familiar with air conditioning and refrigeration systems. Do not attempt to operate this equipment until all safety instructions and operating instructions are read and understood.
2. Always use eye protection (safety goggles) and hand protection (gloves) when working with refrigerants. Other types of personal protective equipment should also be used.
3. All hoses used for interconnecting system should have shut off valves (manual or automatic) on both ends. Treat all hoses and connections with caution. Hoses or connections will contain liquid refrigerant or gas under pressure. Connect and disconnect fittings with caution.
4. Do not pressure test system with air. Some mixtures of air and refrigerant can be combustible or explosive.
5. Recovery tank contains liquid refrigerant under high pressure. Never over fill recovery tank. Tanks should be filled to a maximum of 80% of capacity only. Use only approved tanks for refrigerant recovery. An over filled tank can explode causing serious injury or death.
6. Do not breath refrigerant vapors and/or lubricant vapor or mist. Breathing high concentrations of these substances will cause severe health problems. Always use Recovery system in a well-ventilated area.
7. Do not use this Recovery System in the vicinity of spilled or open containers of flammable substances (gasoline, solvents, etc.).
8. If electrical extension cord is used, it must be 14 AWG or larger and 15240 mm (50 ft) maximum length. If lower amperage capacity extensions are used an over heat condition and fire hazard could occur.
9. Make sure system is electrically connected to a properly grounded power source. Always disconnect system from power source when servicing system.
10. Some governmental agencies require licenses or certification to work with refrigerants and this recovery equipment. Use this system only if operator has proper license or certification.
11. This recovery system is not to be used with any type of flammable refrigerant or flammable gas.
12. The Recovery System includes a fine screen filter at the inlet port. Since many recovery operations involve transferring contaminated refrigerants, the recovery system has an inlet in-line filter-dryer installed at the inlet port. Filter should be changed often or whenever contamination prevents proper operation of recovery system.

DANGER! - EXPLOSION RISK!!!



DO NOT RECOVER FLAMMABLE REFRIGERANTS




OPERATING GUIDE FOR DIRECT VAPOR OR LIQUID RECOVERY (Refer to fig.1)

Note: A) Connect hose (with coupler) to inlet filter. When Recovery Machine is in use, always keep hose and coupler assembled to inlet filter. When hose is removed from filter, use protective cap to seal inlet filter.

B) Connect another hose to recovery machine outlet. Valve end of hose is connected to recovery tank.

1. Make sure on-off switch is off, "0" pushed in. Connect system to grounded power connection.
2. Turn **INLET** (blue color) valve to **CLOSE** position. Turn center valve (yellow color) to **RECOVER** position.
3. Turn **OUTLET** (red color) valve to **OPEN** position.
4. Connect the hose from low side connection system to inlet port filter connection. Connect the hose from outlet port of recovery machine to vapor (gas) connection on recovery tank.
5. Purge air and moisture from system by bleeding lines, using vacuum pump or purge function of recovery system.
6. Open the vapor valve on the recovery tank.
7. Turn **INLET** valve on Recovery System to **OPEN**.
8. Turn on Recovery System (push power switch "I").

- Observe operation of system. In rare instances “slugging” may be apparent (loud compressor noise or high vibration). If this condition is apparent turn inlet valve to **LIQUID** position. System can be run with this setting continuously. It is suggested that operator periodically turn inlet valve to **OPEN** position and check for proper operation of system. Best operation of the system is with inlet valve fully **OPEN**.
- Recovery is complete when inlet reading is about 680 – 846mbar (20-25”) of mercury vacuum. Turn inlet valve to close position and turn power switch off. Recovery is complete.

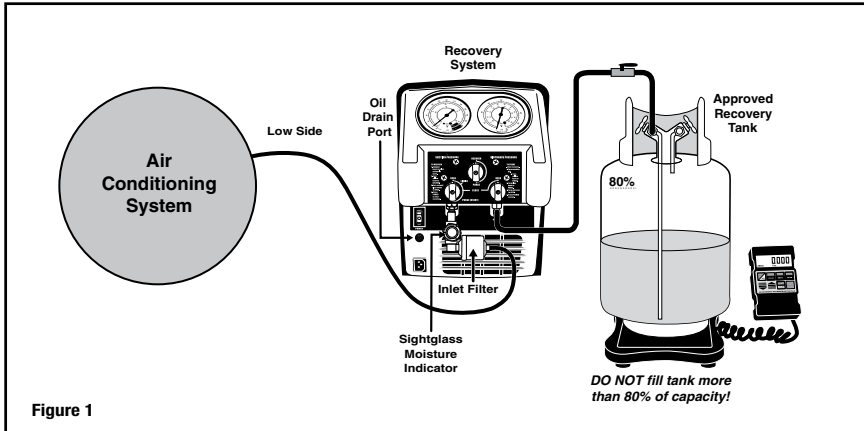

RECOVERY SYSTEM PURGE

- Turn off power switch. Turn inlet valve to **PURGE** position. Turn center valve to **PURGE** position. Make sure outlet valve is in **OPEN** position. Start System.
 - Purge may take a few minutes as some liquid refrigerant may be in the Recovery System. The liquid must become vapor, which may require some time.
 - Shut **OFF** Recovery System. If System is to be used with the same refrigerant next operation, shut outlet valve and disconnect outlet hose. If venting of system is required, disconnect outlet hose to relieve residual pressure.
 - The inlet port has a fine screen filter. Remove inlet nut and clean screen filter after every use. A clean filter is very important for the proper operation of the System. Replace filter dryer whenever plugged or contaminated.
- * For optimal oil separation, throttle inlet valve to maintain about 40 PSI (2.7 Bar).**

TO DRAIN RECOVERED OIL

CAUTION! Do not cap the open bottle neck! The neck must remain open to vent pressure.

NOTE! The oil separator capacity is approx. 0.5 oz (14 g) which can recover normal car type A/C systems (up to 2 lb (1 kg) of refrigerant each). However, some systems deposit more oil in the separator due to high pressure or excessive oil in the system. Therefore it is recommended to drain oil after each use of the recovery machine and to turn off the unit and drain the oil separator for larger systems after every 11 lb (5 kg) of recovered refrigerant.

*** Please only attach oil bottle and hose to machine when draining oil. Hose and bottle should not be attached when machine is recovering refrigerant.**

- Check pressure on recovery machine inlet pressure gauge. Pressure must be below 0.7 Bar (10 PSI), but above 0.1 Bar (2 PSI).
- Insert short yellow hose into the “plastic bottle with two openings” which is supplied. Carefully attach the short yellow hose to the oil drain fitting on the recovery machine. As hose is tightened on fitting, oil will flow into container. (Hose is equipped with a depressor which will open core valve in oil drain fitting).
- When oil has drained completely, disconnect the hose from the system. Unscrew the cap/hose from the bottle and dispose of the oil into an environmentally approved manner.

MAINTENANCE REQUIREMENTS

- Replace filter if sight glass indicator is red/orange in color (as a reference, contaminated refrigerant may produce a color change in as little as 15 lb (7 kg) of refrigerant recovered.)
The color change may be green/blue for dry condition when refrigerant is passing thru and red/orange in color for wet

condition.

2. Replace filter after recovering refrigerant from a known contaminated system.
3. Replace filter if excessive pressure drop is indicated. Difference of pressure gauge reading before and after filter.

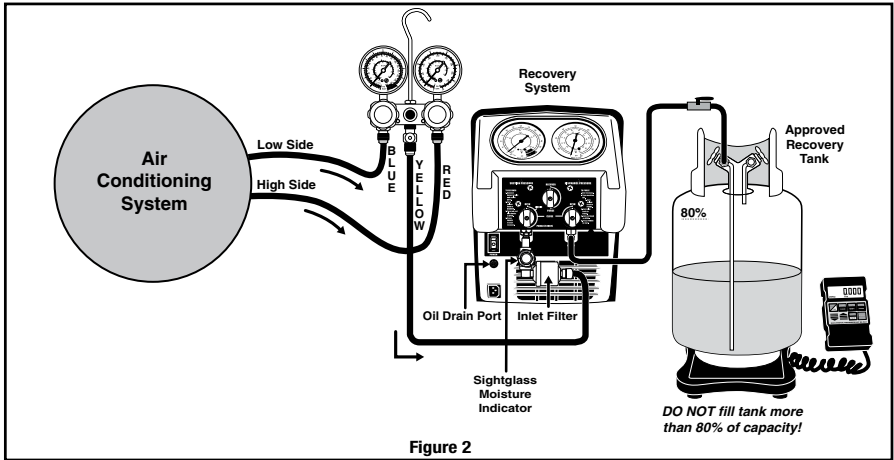


Figure 2
Connections for liquid/vapor recovery using manifold gauge set.

⚠ WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm.



Test Equipment Depot - 800.517.8431 - TestEquipmentDepot.com