



5 Commonwealth Ave  
Woburn, MA 01801  
Phone 781-665-1400  
Toll Free 1-800-517-8431



Visit us at [www.TestEquipmentDepot.com](http://www.TestEquipmentDepot.com)




**NMV1**  
Micron Vacuum Gauge  
User Guide


### Warning:

Measurement below atmospheric pressure, it will not function properly when exposed to refrigerant gases.

### Operation

1. Slide battery cover on a back of the vacuum gauge and install three AA batteries.

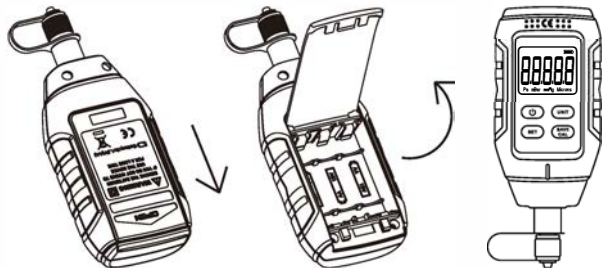


2. Press  for three seconds to turn on the gauge. The screen shows " - - - - " followed by short beep.
3. Connect the gauge to the system to be evacuated.





4. Turn vacuum pump on and read the vacuum level on the screen. The gauge buzzes when the vacuum reaches the set level and the backlight flashes for ten seconds.

5. Press  for three seconds to turn vacuum gauge off.

### Units Change

Press  to change vacuum measurement units between Pa, mBar, mmHg, Micron.

### Set the Vacuum Level Alert

1. Press  for three seconds to enter the setting program.
2. Press  to select the digit position.
3. Press  to set desired vacuum alarm level.
4. Press  to save vacuum alarm data.

### Vacuum Leak Alert

If the vacuum level fails to stay below the set level, the alarm will alert you and the backlit will flash.

### Backlight

Press  to turn the backlight on, and it will stay on for twenty seconds.