
Barometric Pressure Smart Sensor (S-BPA-CM10) Quick Start

Connecting to a Station

1. Stop the station if it is logging
 2. Plug the smart sensor jack into an open smart sensor port on the station.
 3. Start logging.
-

Mounting the Smart Sensor

- The barometric pressure smart sensor must be used inside the logger enclosure. Use the hook-and-loop tape to affix it to the inside of the logger enclosure.
 - The sensor measures air pressure inside the logger enclosure. The vent in the enclosure must be free from obstructions for the sensor to function correctly.
-

For more information about this smart sensor, refer to the full product manual.
