



DIGITAL FOUR CHANNEL TIMER/CLOCK

User's Guide

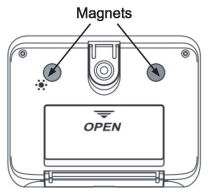

Magnets on back of product can attach to metal products

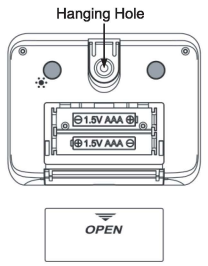

Press down the battery cover and slide to open



OPERATION PRECAUTIONS

1. Do not use or store this timer in areas exposed to temperature extremes, strong magnetism, strong vibration, or strong impact.
2. Heat can shorten battery life and cause malfunction. Keep the timer away from heaters and direct sunlight when using it.
3. Never use the timer in a bathroom or any other area subject to high humidity.
4. Never try to take the timer apart. Doing so can cause malfunction.
5. To clean the timer, use a soft, dry cloth or a cloth moistened in a solution of water and a mild neutral detergent. Wring out all excess moisture from the cloth. Never use thinner, benzene, alcohol or other similar agents.
6. Remember that this timer has a magnet on its clip. Keep it away from credit cards, bank cards, prepaid cards, and other cards with magnetic strips, as well as audio and video tape, floppy diskettes, and other items that can be damaged or rendered unusable by magnetism.
7. Keep your manual and all information handy for future reference.

SETTING THE TIME

1. Hold down the **CLOCK** button for about two seconds until the time starts to flash. This is the setting screen.
2. Press the **HR** button to increase the hour, **MIN** to increase minutes, and **SEC** to increase the seconds.
3. After the setting, press the **CLOCK** button to exit the setting screen.

USING THE TIMER

A. TO START A TIMER OPERATION

1. Press a timer button (**T1** to **T4**) to select a timer.
2. Set the start time. Press the **HR** button to increase the hours, **MIN** to increase the minutes, and **SEC** to increase the seconds.
 - Holding down any button increase its setting at high speed.
 - The maximum start time setting is 99 hours, 59 minutes, 59 seconds.
 - Pressing the **CLEAR** button clears the timer setting to all zeros
3. Press the **START/STOP** button to start the countdown operation. Pressing the **START/STOP** button during a countdown operation stops it. Pressing the **START/STOP** button again restarts the countdown from the point where it was stopped.

B. SIMULTANEOUS TIMING

- You can have all four timers performing countdown operations at the same time.
- When a timer is performing a countdown operation, its timer number flashes on the display when you display the screen of another timer.

C. END OF COUNTDOWN

When the end of a countdown is reached, the timer beeps and the timer starts to measure the time elapsed following the end of the countdown.

- The beeper continues for one minute or until you press the **START/STOP** button.
- Time elapsed from the end of a countdown can be measured up to 99 hours, 59 minutes, 59 seconds.
- To stop the elapsed time operation, press the **START/STOP** button. Pressing the **START/STOP** button again resets the timer to the original start time.
- Pressing the **CLEAR** button resets the timer to all zeros.

D. COUNT UP FUNCTION

When the timer setting is zero, press the **START/STOP** button, timer will start to count up. Press the **START/STOP** again. It will pause count up. The maximum count up time is up to 99 hours, 59 minutes, 59 seconds.


POWER SUPPLY

- Be sure to remove the batteries from the timer when you do not plan to use it for a long time.

A. IMPORTANT!

- Keep batteries out of the reach of small children. If a battery is accidentally swallowed, contact your physician immediately.
- Should batteries never leak, wipe out the interior of the battery compartment while taking care to avoid allowing the battery fluid to come into contact with your skin.
- Make sure the positive (+) and negative (-) sides of the batteries are facing correctly when you load them.
- The batteries that come with the timer are not rechargeable. **Never try to charge them!**
- Replace the batteries at least once a year, even if the current batteries are working properly.
- Slowed or stopped time-keeping indicates low battery power. Do not leave the batteries in the timer when this occurs. Replace batteries as soon as possible.
- The batteries that come with the timer lose some of their power during transport and storage.

B. TO CHANGE BATTERIES

1. Press down at the  point of the battery cover and slide to remove it.
2. Remove the old batteries and insert two new ones.
 - Take care that the positive (+) and negative (-) sides of the batteries are facing correctly.
 - Replace both batteries with new ones.
3. Close the battery cover.

SPECIFICATIONS

Accuracy at normal temperature: ±30 seconds per month.

Display contents

Timekeeping: hour, minutes, seconds, AM/PM, timer indicators (T1 to T4)

Timers: 4

Setting unit: Seconds

Setting range: 1 second to 99 hours, 59 minutes, 59 seconds

Beeper: 1 minute

Elapsed time measurement following end of countdown

(displayed in 1-second units up to 99 hours, 59 minutes, 59 seconds)

Operating temperature: 0°C to 40°C

Power source: 2 x "AAA" batteries