

## BATTERY REPLACEMENT

Erratic readings, a faint display, or no display are all indications that the battery is low and needs to be replaced. To replace the battery, remove the battery cap, located on the top of the unit and marked open, by turning it in the direction of the arrow (counterclockwise). Remove the battery and insert a new Cat. No. 1039 battery. Make certain that the positive (+) side is facing you. Incorrectly installed batteries may damage electronics. Replace the Battery Cap.

## ALL OPERATIONAL DIFFICULTIES

If this thermometer does not function properly for any reason, please replace the battery with a new high quality battery (see "Battery Replacement" section). Low battery power can occasionally cause any number of "apparent" operational difficulties. Replacing the battery with a new fresh battery will solve most difficulties.



## Warranty, service, or recalibration

For warranty, service, or recalibration, contact:

## CONTROL COMPANY

Control Company is ISO 9001:2008 Quality-Certified by DNV and ISO/IEC 17025:2005 accredited as a Calibration Laboratory by A2LA.



5 Commonwealth Ave  
Woburn, MA 01801  
Phone 781-665-1400  
Toll Free 1-800-517-8431

Traceable® is a registered trademark of Control Company.


©2016 Control Company. 92-4337-00 Rev. 2 061716

# TRACEABLE® KEY-CHAIN THERMOMETER INSTRUCTIONS

## SPECIFICATIONS

Range:	-58 to 302°F (-50 to 150°C)
Resolution:	±0.1° from -20.0 to 200.0°, 1° below -20.0 and above 200.0°
Accuracy:	±1.0°C between -20.0 and 100°C
Sampling rate:	1 second in Celsius mode 10 seconds in Fahrenheit mode
Battery:	Cat. No. 1039
Construction:	Stainless steel and plastic

**Figure 1.**

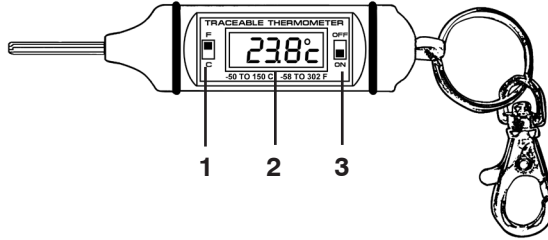

## Description

- 1 - °C/°F Switch
- 2 - Display
- 3 - ON/OFF Switch

## OPERATION

1. Slide the ON/OFF switch (3, Fig. 1) to ON to turn the unit on.
2. Slide the °C/°F switch (1, Fig. 1) to °F to display the temperature in Fahrenheit or to °C to display in Celsius.
3. Insert the stem into air, semi-solid, or liquid material to be measured.
4. Slide the ON/OFF switch (3, Fig. 1) to OFF to turn the unit off. To conserve battery life, always turn the unit off when not in use.