



# ZOMPP1

## **Oil-Max™** **Premium Oil Pump**

1. Remove the rubber cap on the bottom of the Oil-Max Oil Pump and place it into the oil container until it touches bottom.
2. Slide the rubber collar firmly into the container top. This collar supports the pump and seals the container.
3. Connect one side of the refrigerant charging hose to the fitting on the oil pump and tighten.
4. Loosely attach the other side of the charging hose to the access valve on the compressor/equipment. Purge the air from the hose and then tighten the fitting at the compressor/equipment.
5. Open the access valve at the compressor and start pumping oil into the compressor with steady, even strokes. It may help to hold the neck of the pump with your other hand to help stabilize it.
6. Once the desired amount of oil has been pumped into the compressor, close the valve and remove the charging hose. Cap the male flare fitting on the oil pump to keep the pump clean and dry when not in use.



**Test Equipment Depot**  
  
1-800-517-8431

99 Washington Street  
Melrose, MA 02176  
Phone 781-665-1400  
Toll Free 1-800-517-8431

 Visit us at [www.TestEquipmentDepot.com](http://www.TestEquipmentDepot.com)