




TELEDYNE TEST TOOLS
Everywhereyoulook™

T3PM1100

Digital Power Meter

User Manual

Test Equipment Depot - 800.517.8431 - TestEquipmentDepot.com

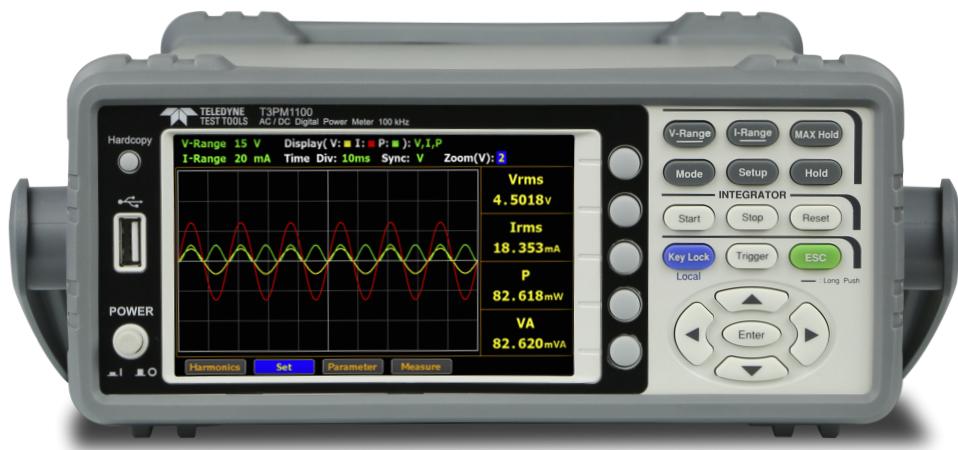

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Teledyne LeCroy company.

The information in this manual was correct at the time of printing. However, Teledyne LeCroy continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

Table of Contents

SAFETY INSTRUCTIONS	5
GETTING STARTED	9
Characteristics	10
Appearance	13
Set Up	22
BASIC SETTING	25
Setting up measurement range	26
Setting up measurement status	30
Setting up System status	62
MEASUREMENT AND OTHER FUNCTIONS	70
Measurement function	71
Other functions	76
Integration measurement function	79
Graph measurement function	90
REMOTE CONTROL	108
Configure Remote Control Interface	109
Configure EOL Character	115
Return to Local Control	115
COMMAND OVERVIEW	116
Command Syntax	116
Command List	120
APPENDIX	198
Specifications	199
Status system	209
Dimensions	213

Power measurement	214
Introduction to IEC-62301	216
EUP Directive Lot6 specifications	217
Connection Guide	218
CERTIFICATIONS.....	221
EMC Compliance	221
Safety Compliance	223
Environmental Compliance	224
RESTRICTION OF HAZARDOUS SUBSTANCES (RoHS)	224

SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow during operation and storage. Read the following before any operation to ensure your safety and to keep the instrument in the best possible condition.

Safety Symbols

These safety symbols may appear in this manual or on the instrument.



WARNING

Warning: Identifies conditions or practices that could result in injury or loss of life.



CAUTION

Caution: Identifies conditions or practices that could result in damage to the T3PM1100 or to other properties.



DANGER High Voltage



Attention Refer to the Manual



Protective Conductor Terminal



Earth (ground) Terminal

I
O

On (Supply)
Off (Supply)

Safety Guidelines

General Guideline • Make sure that the voltage input level does not exceed AC600V.



- Make sure the current input level does not exceed 20A.
- Do not place any heavy object on the instrument.
- Avoid severe impact or rough handling that can lead to damaging the instrument.
- Do not discharge static electricity to the instrument.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block or obstruct the cooling fan vent opening.
- Do not perform measurement at the source of a low-voltage installation or at building installations (Note below).
- Do not disassemble the instrument unless you are qualified as service personnel.
- Make sure that the COM terminal to earth is limited to 600Vpk.
- Remove all test leads before disconnecting the mains power cord from the socket.
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.
- The device should be placed in a way that the plug connected to it can be removed easily.

(Note) EN 61010-1:2010 specifies the measurement categories and their requirements as follows. The T3PM1100 falls under category II 600V.

- Measurement category IV is for measurement performed at the source of low-voltage installation.
 - Measurement category III is for measurement performed in the building installation.
 - Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation.
-

Power Supply



WARNING

- AC Input voltage: 100-240 VAC 50/60Hz
 - The power supply voltage should not fluctuate more than 10%.
 - Connect the protective grounding conductor of the AC power cord to an earth ground, to avoid electrical shock.
-

Cleaning the Instrument

- Disconnect the power cord before cleaning.
 - Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid.
 - Do not use chemicals containing harsh material such as benzene, toluene, xylene, and acetone.
-

Operation Environment

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Temperature: 0°C to 40°C
- Humidity: < 30°C: < 80% RH(non-condensing);
30°C~40°C:<70% RH(non-condensing);
>40°C: <50% RH (non-condensing)
- Altitude: <2000m
- Overvoltage category: OVC II

(Note) EN 61010-1:2010 specifies the pollution degrees and their requirements as follows. The T3PM1100 falls under degree 2.

- Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”.
- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
- Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
- Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

Storage environment

- Location: Indoor
- Temperature: -40°C to 70°C
- Humidity: <90%RH(non-condensing)

Disposal



Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.

GETTING STARTED

This chapter describes the T3PM1100, including accessories, package contents, its main features and front / rear panel introduction.



Characteristics	10
Accessories	12
Package Contents	12
Appearance.....	13
Front Panel.....	13
Main Display Overview.....	16
Rear Panel	19
Set Up	22
Tilting the Stand	22
Power Up.....	23
Connect the wires to the T3PM1100.....	24

Characteristics

The T3PM1100 is a high-precision, programmable power meter for measuring low power devices such as switching power supplies, transformers, power supplies, and adapters. It is equipped with a color TFT-LCD screen and also multiple graph displays which are very convenient for reading the measurement results. The T3PM1100 has become a reliable power measurement instruments because of its simple operation, excellent performance, user-friendly graph displays and automatic measurement interface.

Operation

- Press the buttons on the front panel to easily turn on the T3PM1100 measurement function. All settings and measurements results are displayed on the 5-inches TFT-LCD screen panel for easy use of each function.
 - Standard display mode: 2 main measurement results and 8 secondary measurement results are displayed in this screen.
 - Simple display mode: 4 major measurement results are displayed in this screen.
-

Performance

- 6 selectable voltage ranges available from 15V to 600V with 0.1% of reading + 0.05% of range.
 - 12 selectable current ranges available from 5mA to 20A with 0.1% of reading + 0.05% of range.
 - It can even measure the voltage of abnormal wave of CF 3. The half-range CF is up to 6 or 6A.
 - It can even measure the current of abnormal wave of CF 3. The half-range CF is up to 6 or 6A.
 - Total harmonic distortion measurement.
 - 50-orders harmonic test and analysis function.
 - Graph display for measurement results including harmonic orders distribution.
 - Plug-in USB disk data store function including
-

	log and screenshot.
	<ul style="list-style-type: none">• Auto range function for integration measurement.
Features	<ul style="list-style-type: none">• Full five-digit measurement.• Voltage measurement range: 15V ~ 600V or automatic switching• Current measurement range: 5mA ~ 20A or automatic switching• Maximum accuracy of 0.1% of reading + 0.05% of range• 2 main measurement readings and 8 minor measurement readings are displayed in the screen of standard display mode.• 4 main measurement readings are displayed in the screen of simple display mode.• Added stand-alone display of total harmonic distortion measurement function (50 steps)• Test bandwidth of voltage and current: DC ~ 100kHz.• Selectable boot settings (Previous / Default)• Waveform display up to 10kHz along with Harmonic bar and list table
Interface	<ul style="list-style-type: none">• Standard interface: USB / RS232 / LAN
Application	<ul style="list-style-type: none">• It can be applied to production test such as power supplies, transformers, motors, electrical equipment and other equipment with low standby power.• It can be applied to power measurement conforms to IEC 62301• It can be applied to assess the power consumption of product design.

Accessories

Standard Accessories

Power Cords x 3


Test leads: 1x red, 1x black

Test leads: 1x yellow, 1x blue

Package Contents

Check the contents before using the instrument.

Opening the box

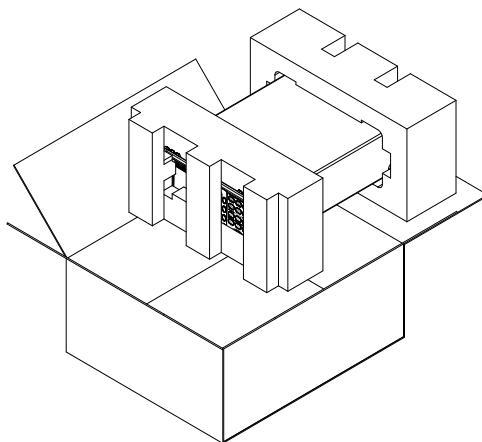


Contents
(single unit)



- Main unit
- Test leads (red x1, black x1, yellow x1, blue x1)
- Power cords x 3
- Quick Start Guide


Appearance

Front Panel

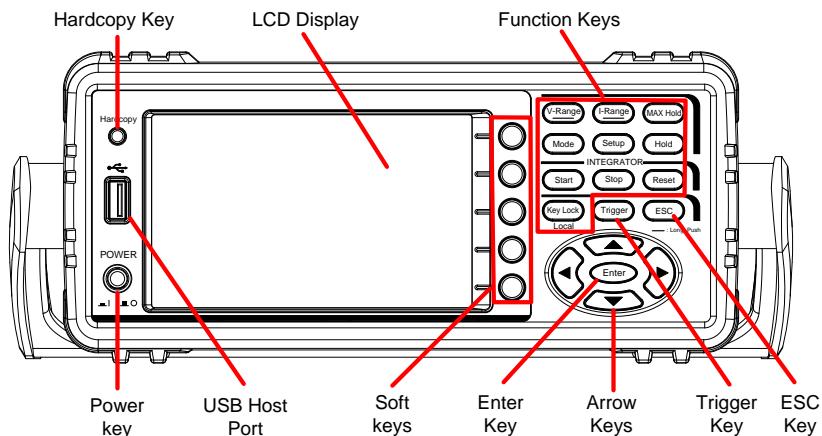


Power Key

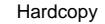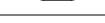

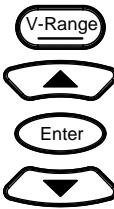Function Keys

V-Range key, up/down arrow keys and Enter key can be used together to select a voltage range or auto range measurement mode. Also, press and hold the V-Range key to toggle between manual and auto range setting. See page 26.

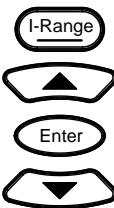

I-Range key, up/down arrow keys and Enter key can be used together to select a current range or auto range measurement mode. Also, press and hold the I-Range key to toggle between manual and auto range setting. See page 26.



Press this button to display the maximum measurement reading. See page 76.




Press this key to select measure mode (DC/AC/AC+DC/V-MEAN). See page 78.



Press this key to enter the measurement settings menu. See page 30.



Press this key to switch window and stop refreshing. See page 77.

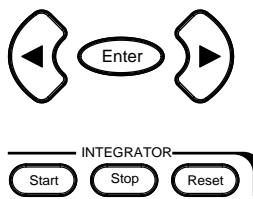

Use the left and right arrow keys to select Integrator mode, and press Enter button to enter the time integrator function. See page 79.



Press this key to toggle to key lock. In Remote control mode, press this button to switch to local mode. See page 77.

Enter Key



This button is used to enter the menu, confirm the settings and switch between the standard display mode and simple display mode (no function table and display icon). See page 77.

Trigger key




Activates the Trigger function. See page 77.

ESC Key



Press this button to cancel the current setting. The cursor returns to the default position or return to the previous menu according to the situation. See page 77.

Arrow Keys

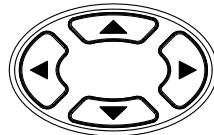


These four arrow keys are used to edit the parameters, browse the menu system and select the parameter range.

Soft Keys



The 5 soft keys have varied functions from the OSD (On-Screen Display) options, individually, per different settings.

Main Display Overview

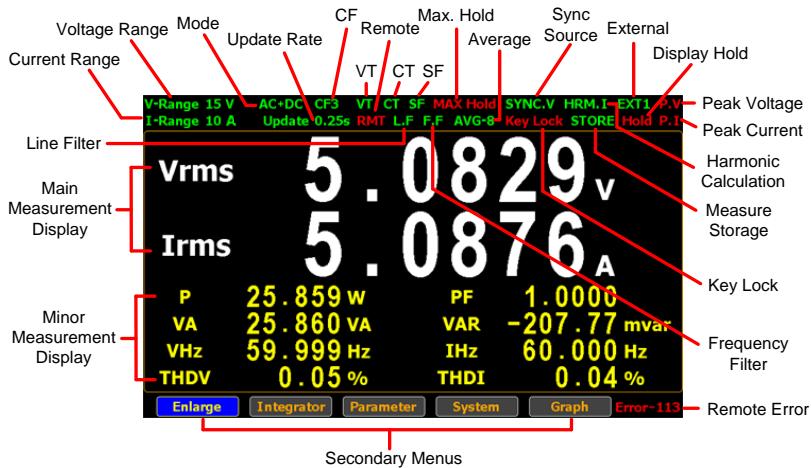

Item	Status icon	Description
Voltage Range	V-Range 15V	Voltage measurement range. Example here range is 15V. V-Auto means that Voltage Auto Range is turned on.
Current Range	I-Range 10A	Current measurement range. Example here range is 10A. I-Auto means that Current Auto Range is turned on.
Mode	AC+DC	Measurement mode (AC, DC, AC+DC, V-MEAN)
Date Update Rate	Update 0.25s	Data update rate (0.1/0.25/0.5/1/2/5/10/20/Auto)
Crest Factor	CF3	Crest Factor (3/6/6A)

VT Ratio State	VT	External voltage magnification (On/Off)
CT Ratio State	CT	External current magnification (On/Off)
Power Ratio State	SF	External power magnification (On/Off)
Remote	RMT	Remote control mode (On/Off)
Line Filter	L.F	Voltage and current filters (On/Off)
Frequency Filter	F.F	Frequency filters (On/Off)
Maximum Hold	MAX Hold	Retain and display the maximum measurement reading.
Average	AVG-8	Average number of sampling (8/16/32/64)
Sync Source	SYNC.V	Synchronization source (V/I/Off)
Keyboard Lock	Key Lock	Lock Key button
Harmonic Calculation	HRM.I	Harmonic calculation method (IEC/CSA/Off)
Measure Storage	STORE	Measured date storage (On/Off)
External Input	EXT1	External signal input function (Ext1/Ext2/Off)
Display Hold	Hold	Retain and display the current measurement reading.
Peak Voltage	P.V	The voltage exceeds the measurement range
Peak Current	P.I	The current exceeds the measurement range
Remote Error	Error-XXX	An error occurs in remote command

Standard Display Mode Display the measurement result of 2 major and 8 minor measurement parameters


Simple Display Mode Display the measurement result of 4 major measurement parameters

Secondary menus Display secondary function menu


To navigate the secondary function menu, use left and right arrow keys alternately. The arrow keys are loopback, which means, for example, when it stops at Graph, press the right arrow key to move to Enlarge in a promptly loopback manner.

- Enlarge This function key is used to switch display of measurement result from 2 major plus 8 minor to 4 major ones.
 - Integrator This function key is used to set up integrator measurement parameters and execute integrator measurement function.
 - Parameter This function key is used to set up measurement parameters.
 - System This function key is used to enter the system setting and system configuration screens.
 - Graph This function key is used to set up graph measurement settings and execute measurement in the intuitive graph displays.
-

Rear Panel

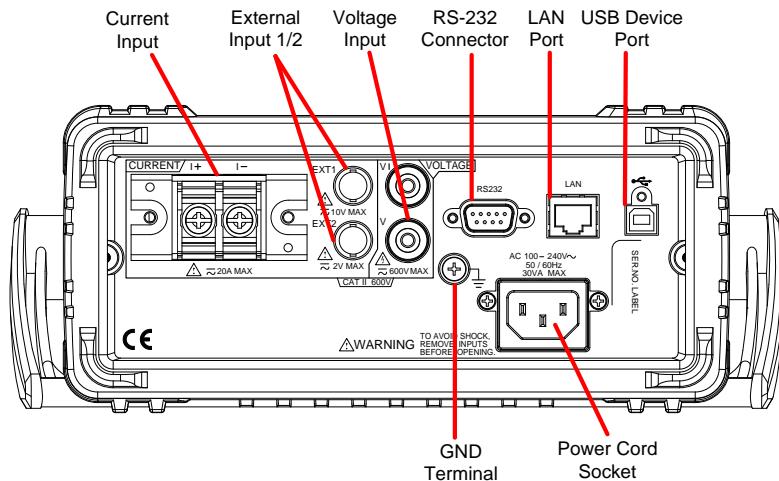


Power Cord Socket

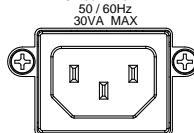

Connects the power cord. AC 100~240V ±10%, 50/60Hz

RS232 Connector

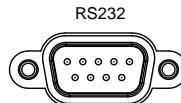


Accepts an RS-232C cable for remote control; DB-9 male connector. For remote control details, see page 110.

USB Device Port



Accepts a USB device cable for remote control; Type B, female connector. For remote control details, see page 109.

LAN Port

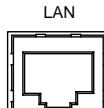


Accepts a LAN for remote control. For remote control details, see page 112.

GND Terminal



Connects the GND (ground) terminal to the earth ground.

Voltage/Current input terminal

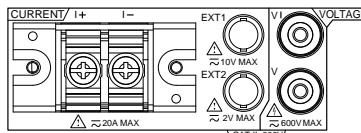

Voltage/Current input terminal is used to connect the main measurement signals.

External Input 1/2



Connects output signal to the EXT1 terminal which receives up to 10V, or the EXT2 terminal that receives at the maximum of 2V. See page 53 for setting.




Warning

- Do not use damaged device. Before using the equipment, check its housing first to sure ensure there are no cracks. Do not operate this device in an environment containing explosive gases, steam or dust.
- The maximum measurable current and voltage are 600 V and 20A for voltage and current terminals of the rear panel of the T3PM1100. Do not input exceeded voltage and current, otherwise it will burn the device.
- The maximum input voltage are 10 V and 2V for EXT1 and EX2 terminals of the rear panel of the T3PM1100. Do not input exceeded voltage, otherwise it will burn the device.
- Always use the supplied cable for connection.
- Before connecting the device, observe all the safety symbols marked on the device.
- Turn off the power to the device and the application system before connecting I/O terminals.
- Do not install replacement parts on the device or perform any unauthorized modifications.

- Do not use this device if the removable cover is removed or loosened.
- Do not connect any cables and terminals before performing self-test.
- Use only the power adapter supplied by the manufacturer to avoid accidental injury.
- Do not use this device for life support systems or any other equipment that has safety requirements.


Set Up

Tilting the Stand

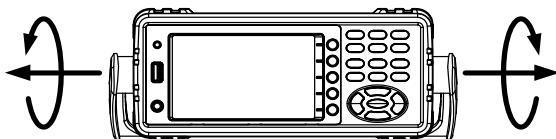


Pull out the handle sideways and rotate it clockwise for the several applications listed below.

Horizontal

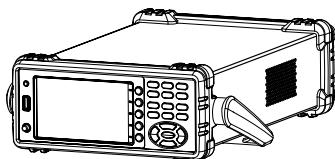


Place the unit horizontally.

Tilt

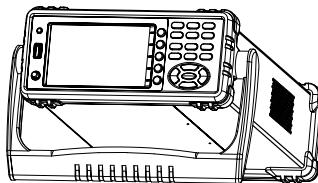

Rotate the handle for tilt stand.

Vertical

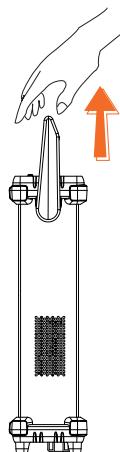


Place the handle vertically for hand carry.

Power Up

Steps


1. Ensure the AC voltage is 100~ 240V.

2. Connect the power cord to the AC voltage input.

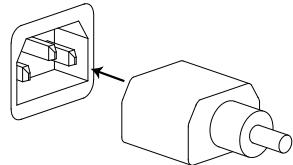

Note Make sure the ground connector on the power cord is connected to a safety ground. This will influence the measurement accuracy.

3. Push to turn on the main power switch on the front panel.

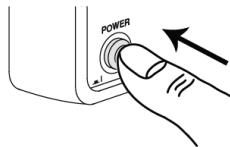


4. The display turns on and shows the last function that was used before the power was reset.

Connect the wires to the T3PM1100

Background

Two separate wires are used to connect the T3PM1100, so voltage and current measurement are isolated and don't interfere with each other.

Connection diagram

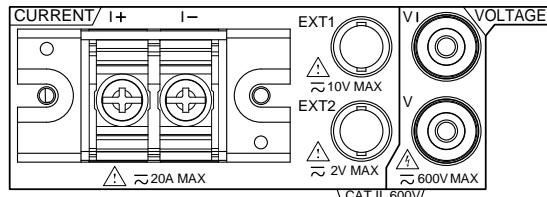

Description	V +	The positive voltage input (+), 600V for input on the rear panel.
	V -	The negative voltage input (-), 600V for input on the rear panel.
	I +	The positive current input (+), 20A for input on the rear panel.
	I -	The negative current input (-), 20A for input on the rear panel.
	EXT1	The external 1 voltage input, 10V for input on the rear panel.
	EXT2	The external 2 voltage input, 2V for input on the rear panel.

BASIC SETTING

Setting up measurement range	26
Auto Range.....	28
Setting up measurement status	30
Setting up synchronization source.....	30
Setting up line filter	31
Setting up frequency filter	32
Setting up crest factor	33
Setting up auto-zero function.....	34
Setting up method of calculating harmonics.....	35
Setting up data update rate	37
Setting up measure storage	39
Setting up average function.....	41
Setting up the voltage and current skipping configuration....	43
Setting up the skipping configuration for external	46
Setting up the VT ratio state.....	49
Setting up the CT ratio state.....	50
Setting up the power ratio state	52
Setting up the external sensor input terminal	53
Saving and loading the setup parameters	55
Setting up the hardcopy and log configuration	57
Setting up the MATH configuration.....	59
Setting up System status	62
System information screen.....	62
System configuration screen	63
Setting up power on status	64
Setting up brightness	65
Setting up key sound	66
Setting up remote interface.....	67
Setting up SCPI identity.....	69

Setting up measurement range

To get accurate measurement results, set an appropriate measurement range before performing measurements.

Set voltage range

1. Press **V-Range** button. The V-Range field turns to bluish.



2. Use up and down arrow keys to select the desired range.



3. Press **Enter** button to confirm your selection.



Available range

Crest Factor **AUTO, 15V, 30V, 60V, 150V, 300V, 600V** is 3:

Crest Factor **AUTO, 7.5V, 15V, 30V, 75V, 150V, 300V** is 6/6A:

Set current range

1. Press **I-Range** button. The I-Range field turns to bluish.



2. Use up and down arrow keys to select the desired range.



3. Press **Enter** button to confirm your selection.



Available range	Crest Factor is 3:	AUTO, 5mA, 10mA, 20mA, 50mA, 100mA, 200mA, 0.5A, 1A, 2A, 5A, 10A, 20A
	Crest Factor is 6/6A:	AUTO, 2.5mA, 5mA, 10mA, 25mA, 50mA, 100mA, 250mA, 0.5A, 1A, 2.5A, 5A, 10A



Note When it is under the manual setting ranging from 5mA to 200mA, the manual range adjusts to auto range automatically if input current exceeds 700mA.



When the measurement range is set manually, if the range status icon lights in green, the measured value meets the setting range. On the contrary, if the range status icon lights in red, the measured value doesn't meet the best setting range. In this case, it is better to switch to another range to get more accurate measurement results.



The P.I status icon lights in red when the current measurement circuit detects that the measured value exceeds setting range by 3 folds (CF is set to 3) or 6 folds (CF is set to 6/6A).

**Note**


The P.V status icon lights in red when the voltage measurement circuit detects that the measured value exceeds setting range by 3 folds (CF is set to 3) or 6 folds (CF is set to 6/6A).

Auto Range


The range is automatically switched according to the voltage and current of input signal.

Range is shift up	<p>The range is shifted up when either of the following conditions is met.</p> <ul style="list-style-type: none">• Vrms or Irms exceeds the measurement range by 130% at CF 3/6.• Vrms or Irms exceeds the measurement range by 260% at CF 6A.• The Vpk or Ipk value of the input signal exceeds the current setting range by 300% at CF 3.• The Vpk or Ipk value of the input signal exceeds the current setting range by 600% at CF 6/6A.
Range is shift down	<p>The range is shifted down when all of the following conditions are met.</p> <ul style="list-style-type: none">• Vrms or Irms is equal to or less than the measurement range by 30% at CF 3/6/6A.• Vrms or Irms is equal to or less than the next lower measurement range by 125% at CF 3/6/6A.• The Vpk or Ipk value of the input signal is equal to or less than the next lower measurement range by 300% at CF 3.• The Vpk or Ipk value of the input signal is equal to or less than the next lower measurement range by 600% at CF 6/6A.

Example

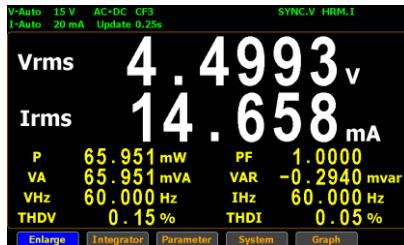

To begin, the measured Irms value is within the current range of I-Auto 20mA.

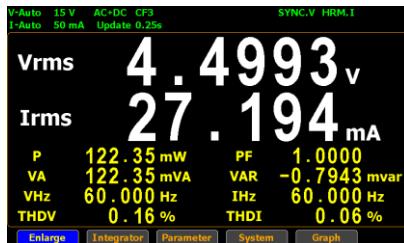

The measured Irms (27.194mA) exceeds the I-Auto 20mA by 130%, so the range is shifted up to 50mA automatically.



The measured Irms (3.9994mA) is less than 30% of the I-Auto 20mA, so the range is shifted down to 10mA automatically.

Setting up measurement status

Setting up synchronization source

Steps	1. Press Setup button.	
	2. Press Enter button.	
	3. Press down arrow key to move cursor to the Sync Source field.	
	4. Use soft keys to select and confirm the desired option.	    
Option	V Select the voltage of signals as synchronization source. The SYNC.V status icon, for example, on the display lights up in green when V is selected for sync source.	
	I Select the current of signals as synchronization source.	
	Off Select the entire interval of data updating period as synchronization source.	
Default value	V	

Setting up line filter

Steps	1. Press Setup button.	
	2. Press Enter button.	
	3. Press down arrow key to move cursor to the Line Filter field.	
	4. Use soft keys to select and confirm the desired option.	
		
Option	On Turn on the line filter function, which is inserted into voltage and current measurement input circuits and affects voltage, current as well as power measurements without high frequency components included within measured values. The L.F status icon on the display lights up in green. Off Turn off the line filter function. The cutoff frequency is 500Hz.	
Default value	Off	


Setting up frequency filter

Steps	<ol style="list-style-type: none"> 1. Press Setup button. 2. Press Enter button. 3. Press down arrow key to move cursor to the Frequency Filter field. 4. Use soft keys to select and confirm the desired option. 																														
	 <p>The screenshot shows the 'SETUP' menu with the following settings:</p> <table border="1"> <thead> <tr> <th>Setting</th> <th>Value</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Sync Source</td> <td>V</td> <td>On</td> </tr> <tr> <td>Line Filter</td> <td>Off</td> <td>Off</td> </tr> <tr> <td>Frequency Filter</td> <td>On</td> <td>On</td> </tr> <tr> <td>Crest Factor</td> <td>3</td> <td></td> </tr> <tr> <td>Auto Zero</td> <td>Off</td> <td></td> </tr> <tr> <td>Harmonics</td> <td>IEC</td> <td>Order 50</td> </tr> <tr> <td>Data Update Rate</td> <td>0.25s</td> <td>Time Out 1s</td> </tr> <tr> <td>Measure Storage</td> <td>Off</td> <td></td> </tr> <tr> <td>Interval</td> <td>00:00:00</td> <td></td> </tr> </tbody> </table>	Setting	Value	Status	Sync Source	V	On	Line Filter	Off	Off	Frequency Filter	On	On	Crest Factor	3		Auto Zero	Off		Harmonics	IEC	Order 50	Data Update Rate	0.25s	Time Out 1s	Measure Storage	Off		Interval	00:00:00	
Setting	Value	Status																													
Sync Source	V	On																													
Line Filter	Off	Off																													
Frequency Filter	On	On																													
Crest Factor	3																														
Auto Zero	Off																														
Harmonics	IEC	Order 50																													
Data Update Rate	0.25s	Time Out 1s																													
Measure Storage	Off																														
Interval	00:00:00																														
Option	<p>On Turn on the frequency filter function, which is inserted into frequency measurement input circuit and affects frequency measurements with high frequency components included within measured values. The F.F status icon on the display lights up in green.</p> <p>Off Turn off the frequency filter function. The cutoff frequency is 500Hz.</p>																														
Default value	Off																														

Setting up crest factor

Steps	1. Press Setup button.	
	2. Press Enter button.	
	3. Press down arrow key to move cursor to the Crest Factor field.	
	4. Use soft keys to select and confirm the desired option.	
		
Option	<p>3 Crest Factor is 3.</p> <p>6 Crest Factor is 6.</p> <p>6A Crest Factor is 6A where input range of measurement range will be extended and greater than 6. This is practical for restraining from frequent range changes while measuring, under auto range, a distorted waveform.</p>	
Default value	3	

Setting up auto-zero function

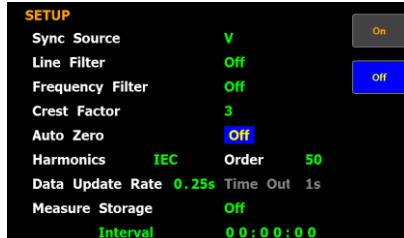Steps	<ol style="list-style-type: none"> 1. Press Setup button. 	
	<ol style="list-style-type: none"> 2. Press Enter button. 	
	<ol style="list-style-type: none"> 3. Press down arrow key to move cursor to the Auto Zero field. 	
	<ol style="list-style-type: none"> 4. Use soft keys to select and confirm the desired option. 	
		
Option	<p>On Auto-zero function is activated once per hour or when range is switched.</p> <p>Off Auto-zero function is only activated once when the range is switched. The auto-zero function is turned off when the integrator function is executed.</p>	
Default value	Off	

Setting up method of calculating harmonics

Steps	1. Press Setup button.																												
	2. Press Enter button.																												
	3. Press down arrow key to move cursor to the Harmonics field.																												
	4. Use soft keys to select and confirm the desired option.																												
	 <p>SETUP</p> <table border="0"> <tr> <td>Sync Source</td> <td>V</td> <td>IEC</td> </tr> <tr> <td>Line Filter</td> <td>Off</td> <td>CSA</td> </tr> <tr> <td>Frequency Filter</td> <td>Off</td> <td>Off</td> </tr> <tr> <td>Crest Factor</td> <td>3</td> <td></td> </tr> <tr> <td>Auto Zero</td> <td>Off</td> <td>Off</td> </tr> <tr> <td>Harmonics</td> <td>IEC</td> <td>Order 50</td> </tr> <tr> <td>Data Update Rate</td> <td>0.25s</td> <td>Time Out 1s</td> </tr> <tr> <td>Measure Storage</td> <td>Off</td> <td></td> </tr> <tr> <td>Interval</td> <td>00:00:00</td> <td></td> </tr> </table>		Sync Source	V	IEC	Line Filter	Off	CSA	Frequency Filter	Off	Off	Crest Factor	3		Auto Zero	Off	Off	Harmonics	IEC	Order 50	Data Update Rate	0.25s	Time Out 1s	Measure Storage	Off		Interval	00:00:00	
Sync Source	V	IEC																											
Line Filter	Off	CSA																											
Frequency Filter	Off	Off																											
Crest Factor	3																												
Auto Zero	Off	Off																											
Harmonics	IEC	Order 50																											
Data Update Rate	0.25s	Time Out 1s																											
Measure Storage	Off																												
Interval	00:00:00																												
Option	IEC Calculate the ratio of harmonic quantity of the 2nd through the upper limit 50th harmonic to the 1st harmonic. The HRM.I status icon, for example, on the display lights up in green when IEC is selected for harmonics.																												
	CSA Calculate the ratio of harmonic quantity of the 2nd through the upper limit 50th harmonic to the 1st through the 50th harmonic.																												
	Off Turn off the harmonic calculation function.																												
Default value	IEC																												

Steps

5. Press right arrow key to move cursor to **Order** field.



6. Use soft keys to increase or decrease the order number.



Option

1-50 Set the upper limit of measured harmonic order within the range from 1 to 50.


Default value

50

Setting up data update rate

Steps	1. Press Setup button.	
	2. Press Enter button.	
	3. Press down arrow key to move cursor to the Data Update Rate field.	
	4. Use soft keys to select and confirm the desired option. Press the “More” soft keys to toggle among pages for further options.	
		
Option	<p>0.1s/0.25s/ 0.5s/1s/2s/ 5s/10s/20s Measured value is updated in accordance with the designated time interval. The Update 5s status icon, for example, on the display lights up in green when 5s option is selected.</p>	
	Auto Data is only updated when a set period (Time Out) of the input waveform is detected.	
Default value	0.25s	
Steps	5. When Auto is selected, press right arrow key to move cursor to Time Out field.	

6. Use soft keys to select and confirm the desired option.

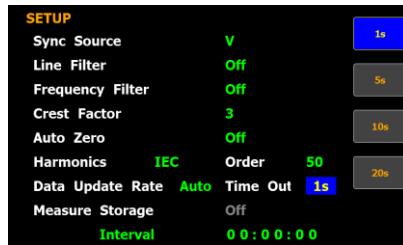

Option	1s/5s/ 10s/20s	Time Out period acts like the time limit for detecting a period of the input waveform.
--------	---------------------------	--


Default value	1s
---------------	-----------




Note

Time Out function is only available when Auto is selected for Data Update Rate.

Setting up measure storage

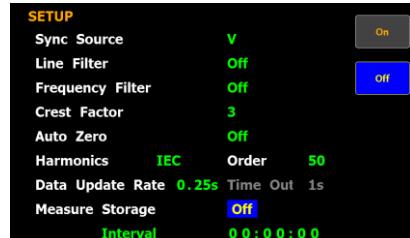Steps	1. Press Setup button.																											
	2. Press Enter button.																											
	3. Press down arrow key to move cursor to the Measure Storage field.																											
Note		Measure Storage function is Not available when Auto is selected for Data Update Rate.																										
	4. Use soft keys to select and confirm the desired option.																											
 <p>SETUP</p> <table border="1"> <tbody> <tr><td>Sync Source</td><td>V</td><td>On</td></tr> <tr><td>Line Filter</td><td>Off</td><td>Off</td></tr> <tr><td>Frequency Filter</td><td>Off</td><td></td></tr> <tr><td>Crest Factor</td><td>3</td><td></td></tr> <tr><td>Auto Zero</td><td>Off</td><td></td></tr> <tr><td>Harmonics</td><td>IEC</td><td>Order 50</td></tr> <tr><td>Data Update Rate</td><td>0.25s</td><td>Time Out 1s</td></tr> <tr><td>Measure Storage</td><td>Off</td><td></td></tr> <tr><td>Interval</td><td>00:00:00</td><td></td></tr> </tbody> </table>		Sync Source	V	On	Line Filter	Off	Off	Frequency Filter	Off		Crest Factor	3		Auto Zero	Off		Harmonics	IEC	Order 50	Data Update Rate	0.25s	Time Out 1s	Measure Storage	Off		Interval	00:00:00	
Sync Source	V	On																										
Line Filter	Off	Off																										
Frequency Filter	Off																											
Crest Factor	3																											
Auto Zero	Off																											
Harmonics	IEC	Order 50																										
Data Update Rate	0.25s	Time Out 1s																										
Measure Storage	Off																											
Interval	00:00:00																											
Option	On All measured date will be stored to the internal memory by designated time interval for repeating the storage operation. The STORE status icon, for example, on the display lights up in green when Measure Storage function is turned on.																											
	Off Turn off the measure storage function.																											
Default value	Off																											
Steps	5. Press down arrow key to move cursor to Interval field.																											

6. Use soft keys to increase or decrease the interval.

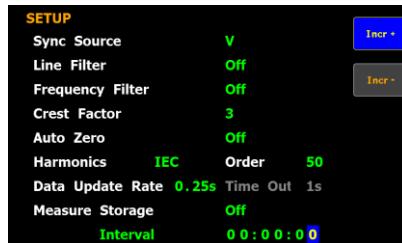

Option	The setting range for Interval is from 00:00:00 to 99:59:59.
Default value	00:00:00

 Note When it is set 00:00:00, the interval for measure storage will be synchronized with the designated Data Update Rate.

Storage stops in the following circumstances:

- When data has been stored to all blocks, Normal measure data can be stored 10000 blocks and Normal with Harmonic data can be stored 1000 blocks.
- When the storage setting is set to Off (while storage is in progress)
- If you press the HOLD key to hold the display while storage is in progress, the measurement operation and the storage interval time counter are held (paused), which causes the storage operation itself to be held. If integration is in progress, this instrument continues measurement and integration in the background.

Setting up average function

Steps	1. Press Setup button.	
	2. Press Average soft key.	
	3. Press Enter button.	
	4. Press down arrow key to move cursor to the State field.	
	5. Use soft keys to select and confirm the desired option.	    
Option	On	Turn Average function On for either Linear or Exponential averages of numeric data. It is particularly practical for large changes in load or power of low input signal frequency.
	Off	Turn off Average function.
Default value	Off	
Steps	6. Press down arrow key to move cursor to Type field.	

7. Use soft keys to select and confirm the desired option.



Option	Linear	With the designated linear count, it is used to compute linear averages.
	Exponent	With the specified attenuation count, numeric data will be averaged exponentially.

Default value	Linear
---------------	---------------

- Steps 8. Press down arrow key to move cursor to **Count** field.



9. Use soft keys to select and confirm the desired option.



Option	8/16/ 32/64	It includes 8, 16, 32 and 64 for exponentially attenuation count and linearly average count. The AVG-8 status icon, for example, on the display lights up in green when 8 is selected for average.
--------	------------------------	--

Default value	8
---------------	----------

Setting up the voltage and current skipping configuration

Steps	1. Press Setup button.	
	2. Press V / I Range soft key.	
	3. Press Enter button.	
	4. Press down arrow key to move cursor to the Mode field.	
	5. Use soft keys to select and confirm the desired option.	   
	 <p>The screenshot shows the 'MEASUREMENT RANGE CONFIG' menu. The 'Mode' section has 'Menu' and 'Quick' buttons. The 'Skipping Config' section is set to 'Off'. The 'V-Range' section includes checkboxes for 7.5V, 15V, 30V, 75V, 150V, and 300V. The 'I-Range' section includes checkboxes for 2.5mA, 5mA, 10mA, 25mA, 50mA, 100mA, 250mA, 0.5A, 1A, 2.5A, 5A, and 10A. 'Peak Over' is set to 'Off' in both sections.</p>	
Option	Menu When user is configuring range setting, the measured data will Not be displayed. Quick The measured data will be displayed simultaneously while measurement range is being switched by user. This is practical for frequent switch of measurement range.	
Default option	Menu	
Steps	6. Press down arrow key to move cursor to Skipping Config field.	

7. Use soft keys to select and confirm the desired option.



Option	On	It is able to skip certain measurement range(s) that are not used by turning on this feature. It can reduce measured data loss which happens while ranges are switched.
	Off	Turn off the function.

Default option	Off
----------------	------------

- Steps
- Press down arrow key to move cursor to each field of both **V-Range** and **I-Range**.
 - Use soft keys to enable or disable the skipping function for each range.



Option	On	The box of range will be checked when the range is enabled for skipping function.
	Off	The range is disabled for skipping function.

Default option	Off
Steps	<p>10. Press down arrow key to move cursor to Peak Over field for V-Range and I-Range, respectively.</p>  <p>11. Use soft keys to select and confirm the desired option. Press the More soft key to toggle among pages for Peak Over of V-Range and I-Range.</p> 
	
Option	<p>When the occurrence of peak over-range happens in Auto range mode, user is able to define a measurement range to switch to. The available options for each mode are listed below.</p> <p>When it is under CF3 mode for V-Range.</p> <p>Off/15V/30V /60V/150V/300V/600V</p> <p>When it is under CF6/6A mode for V-Range.</p> <p>Off/7.5V/15V /30V/75V/150V/300V</p> <p>When it is under CF3 mode for I-Range.</p> <p>Off/5mA/10mA/20mA/50mA/100mA/200mA/0.5A /1A/2A/5A/10A/20A</p> <p>When it is under CF6/6A mode for I-Range.</p> <p>Off/2.5mA/5mA/10mA/25mA/50mA/100mA/250 mA/0.5A/1A/2A/5A/10A</p>
Default option	Off



The available options for Peak Over field are limited within the selected options from the V-Range and I-Range sections above.

Setting up the skipping configuration for external

- | | | |
|-------|---|------------------|
| Steps | <ol style="list-style-type: none"> 1. Press Setup button. | |
| | <ol style="list-style-type: none"> 2. Press V / I Range soft key. | |
| | <ol style="list-style-type: none"> 3. Press Enter button. | |
| | <ol style="list-style-type: none"> 4. Press down arrow key to move cursor to Skipping Config field. | |
| | <ol style="list-style-type: none"> 5. Use soft keys to select and confirm the desired option. |

 |
-
-

Option	On	It is able to skip certain measurement range(s) that are not used by turning on this feature for external input. It can reduce measured data loss which occurs while ranges are switched.
	Off	Turn off the function.
Default option	Off	

Steps	6. Press ESC button.	
	7. Press External soft key.	
	8. Press Enter button.	
	9. Press down arrow key to move cursor to each field of either External Sensor 1 or External Sensor 2 .	
	10. Use soft keys to enable or disable the skipping function for each range.	     
		
Option	On	The box of range will be checked when the range is enabled for skipping function.
	Off	The range is disabled for skipping function.
Default option	Off	
Steps	11. Press down arrow key to move cursor to Peak Over field for External Sensor 1 or External Sensor 2, respectively.	

12. Use soft keys to select and confirm desired option. Press **More** soft key to toggle among pages for Peak Over of Ext-1 and Ext-2, respectively.

**More
1/2**



Option When the occurrence of peak over-range happens in Auto range mode for external input, user is able to define a measurement range to switch to. The available options for each mode are listed below.

When it is under CF3 mode for External Sensor 1.

Off/2.5V/5V/10V

When it is under CF6/6A mode for External Sensor 1.

Off/1.25V/2.5V/5V

When it is under CF3 mode for External Sensor 2.

Off/50mV/100mV/200mV/500mV/1V/2V

When it is under CF6/6A mode for External Sensor 2.

Off/25mV/50mV/100mV/250mV/0.5V/1V

Default option


Off



Note

- The available external is based on which external sensor input is enabled beforehand. Be aware that it requests to enable either Ext1 or Ext2 prior to enabling the skipping config for external.
- The available options for Peak Over field are limited within the selected options from the External Sensor 1 and External Sensor 2 sections above.

Setting up the VT ratio state

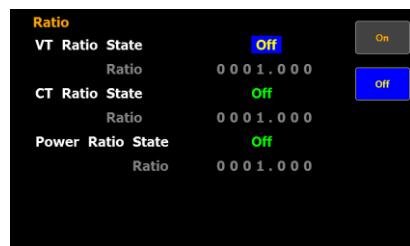Steps	1. Press Setup button.	
	2. Press Ratio soft key.	
	3. Press Enter button.	
	4. Press down arrow key to move cursor to the VT Ratio State field.	
	5. Use soft keys to select and confirm the desired option.	    
		
Option	On Turn on the VT (Voltage Transformer) ratio calculation function and the VT status icon on the display lights up in green.	
	Off Turn off the VT ratio calculation function.	
Default option	Off	
Steps	6. Press down arrow key to move cursor to Ratio field.	

7. Use soft keys to increase or decrease coefficient of VT ratio.



Option The setting range for VT Ratio is from 0000.001 to 9999.999.

Default value **0001.000**

Setting up the CT ratio state

Steps 1. Press **Setup** button.



2. Press **Ratio** soft key.



3. Press **Enter** button.



4. Press down arrow key to move cursor to the **CT Ratio State** field.



5. Use soft keys to select and confirm the desired option.




Option	On Turn on the CT (Current Transformer) ratio calculation function and the CT status icon on the display lights up in green.
	Off Turn off the CT ratio calculation function.
Default option	Off

- Steps 6. Press down arrow key to move cursor to **Ratio** field.



7. Use soft keys to increase or decrease coefficient of CT ratio.

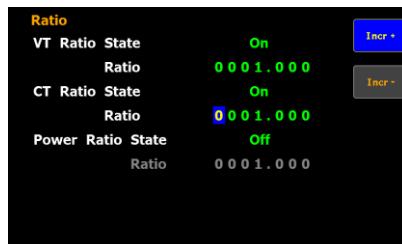


Option	The setting range for CT Ratio is from 0000.001 to 9999.999.
Default value	0001.000

Setting up the power ratio state

Steps	<p>1. Press Setup button.</p> 
	<p>2. Press Ratio soft key.</p> 
	<p>3. Press Enter button.</p> 
	<p>4. Press down arrow key to move cursor to the Power Ratio State field.</p> 
	<p>5. Use soft keys to select and confirm the desired option.</p> 
	
Option	<p>On Turn on the power ratio calculation function and the SF status icon on the display lights up in green.</p>
	<p>Off Turn off the power ratio calculation function.</p>
Default option	Off
Steps	<p>6. Press down arrow key to move cursor to Ratio field.</p> 

7. Use soft keys to increase or decrease coefficient of power ratio.

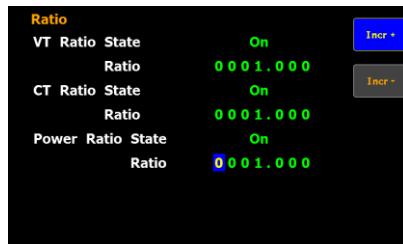

Option The setting range for power ratio is from 0000.001 to 9999.999.

Default value 0001.000

Setting up the external sensor input terminal

Steps 1. Press **Setup** button.



2. Press **External** soft key.




3. Press **Enter** button.



4. Press down arrow key to move cursor to the **External Sensor State** field.




5. Use soft keys to select and confirm the desired option.

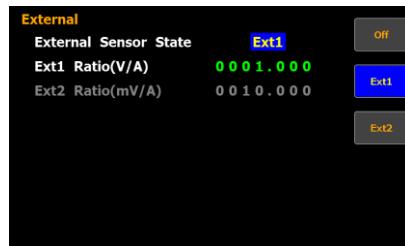

Option	Ext1	Turn on the Ext1 terminal function that receives voltage up to 10V including shunts and clamps from external output current sensor for measurement and the EXT1 status icon on the display lights up in green.
	Ext2	Almost identical with the Ext1, the Ext2 terminal receives up to 2V voltage and the EXT2 status icon on the display lights up in green when it is enabled.
	Off	Turn off the external sensor input and return to current input terminal.
Default option	Off	
Steps	6.	Press down arrow key to move cursor to either Ext1 Ratio (V/A) or Ext2 Ratio (mV/A) field.

7. Use soft keys to increase or decrease the conversion ratio of either Ext1 or Ext2.

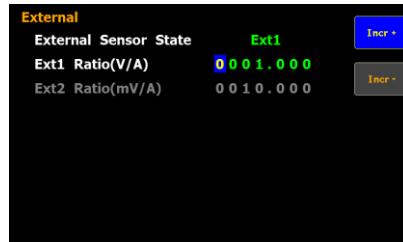

Option The setting range for both Ext1 and Ext2 is from 0000.001 to 9999.999.

Default value Ext1 **0001.000**

 Ext2 **0010.000**



Note In order to enable range skipping configuration for external (page 46), it is required to enable external input function first.

Saving and loading the setup parameters

- Steps 1. Press **Setup** button.
-
2. Press **Page 1/2** soft key.
-
3. Press **Save Load** soft key.
-
4. Press **Enter** button.
-
5. Press down arrow key to move cursor to the **Type** field.
-

6. Use soft keys to select and confirm the desired action.



Option	Save	Select Save to store setup parameters into the internal memory.
	Load	Select Load to recall setup parameters back from the internal memory.

Default option	Save
----------------	-------------

- Steps 7. Press down arrow key to move cursor to **File** field.



8. Use soft keys to select and confirm the desired memory set followed by clicking **Ok** soft key to confirm the Save or Load action.




Option	1 - 4	There are 4 sets of internal memories for saving and loading setup parameters. The State field below indicates the status of selected memory set. Free represents the set is empty without saved parameters, whereas Saved indicates the set has been stored with setup parameters.
--------	--------------	---

Default option **1**

Setting up the hardcopy and log configuration

- | | | |
|-------|--|--|
| Steps | 1. Press Setup button. |  |
| | 2. Press Page 1/2 soft key. |  |
| | 3. Press Hardcopy soft key. |  |
| | 4. Press Enter button. |  |
| | 5. Press down arrow key to move cursor to the Type field. |  |
| | 6. Use soft keys to select and confirm the desired option. | 

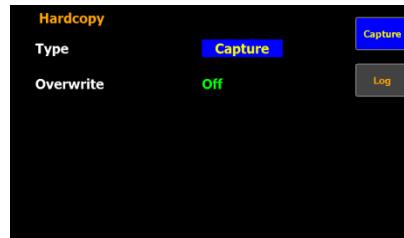
 |
-
- 

Option	Capture	Select Capture to save screenshot file into the inserted USB disk. The file name ranges from SCREEN00.BMP to SCREEN99.BMP.
--------	----------------	--


Log	Select Log to save data log file into the inserted USB disk. The file name ranges from DATA000.CSV to DATA999.CSV
------------	---

Default option	Capture
----------------	----------------

Steps 7. Press down arrow key to move cursor to **Overwrite** field.



8. Use soft keys to select and confirm the desired action.

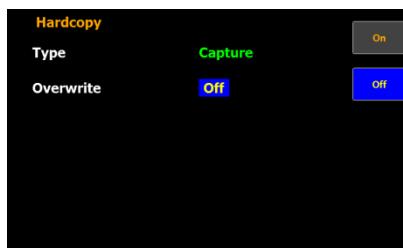

Option	On	Turn on overwrite function so that the existing file within the USB disk will be overwritten when saving action is executed.
--------	-----------	--

Off	By turning off overwrite function, a new file will be created and saved into the USB disk when executing saving action.
------------	---

Default option	Off
----------------	------------

 Note When Overwrite function is On, the latest file name in the inserted USB disk will be overwritten. For instance, when both DATA000.CSV and DATA001.CSV exist in USB disk, the DATA001.CSV will be overwritten accordingly when saving file.

When, on the other hand, Overwrite function is Off,


a new one with the latest file name will be created. However, for example, when both SCREEN00.BMP and SCREEN02.BMP exist, a new file named SCREEN01.BMP will be saved since system fills filename vacancy automatically. Also, when saved files are full in USB disk, e.g., from SCREEN00.BMP to SCREEN99.BMP, a warning message will be shown and save action will be Not available.

Setting up the MATH configuration

- | | | |
|-------|---|---|
| Steps | 1. Press Setup button. |  |
| | 2. Press Page 1/2 soft key. |  |
| | 3. Press MATH soft key. |  |
| | 4. Press Enter button. |  |
| | 5. Press down arrow key to move cursor to the Computation field. |  |
| | 6. Use soft keys to select and confirm the desired option. | 
 |

Option	$A+B$, $A-B$, $A \times B$, A/B , A/B^2 , A^2/B	Up to 6 computations ($A+B$, $A-B$, $A \times B$, $A \div B$, $A \div B^2$, $A^2 \div B$), which are based on the four elementary functions (addition, subtraction, multiplication and division), can be executed by T3PM1100 with 2 select items out of 5 variables (V, I, P, VA, VAR). The result of computation will be a value without units.
Default option	A/B	

7. Press down arrow key to move cursor to **Item A** field.
- 
8. Use soft keys to select and confirm the desired option.

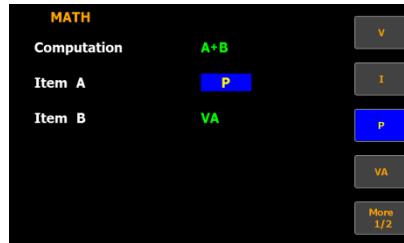


Option	V	Voltage
	I	Current
	P	Active power
	VA	Apparent power
	VAR	Reactive power

Default option V

9. Press down arrow key to move cursor to **Item B** field.
- 

10. Use soft keys to select and confirm the desired option.

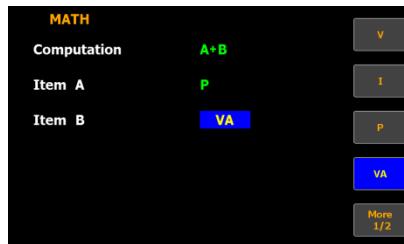


Option	V	Voltage
	I	Current
	P	Active power
	VA	Apparent power
	VAR	Reactive power
Default option	I	

Setting up System status

System information screen

Steps

1. Use left and right arrow keys on the front panel to select **System** function key.

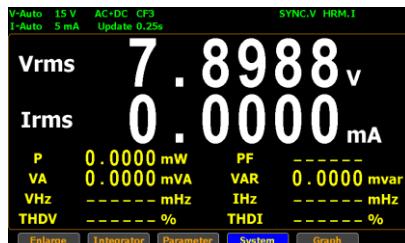

2. Press **Enter** button to Enter **SYSTEM INFORMATION** screen where detailed information including Model, Serial Number, MCU/FPGA Version and MAC Address of the unit is displayed.




3. Press **Enter** button.



4. Press down arrow key to move cursor to **Calibration Password** field.



5. Use soft keys along with left and right arrow keys to input the password followed by pressing **Enter** button twice to enter the Calibration page.

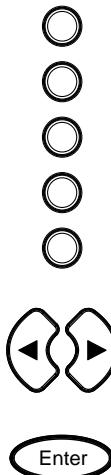

Default option


99999

Note Refer to qualified technician and service manual for the calibration procedure.

System configuration screen

Steps


1. Use left and right arrow keys on the front panel to select **System** function key.
2. Press **Enter** button to Enter SYSTEM INFORMATION screen.
3. Press **Config** soft key to Enter SYSTEM CONFIG setting screen.

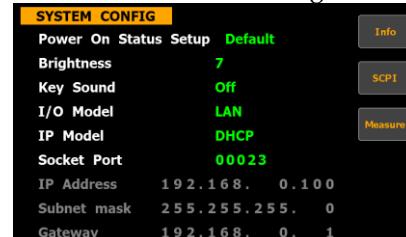

Setting up power on status

Background Continue the following setting from **SYSTEM CONFIG** setting screen

- Steps**
1. Press **Enter** button. 
 2. Press down arrow key to move cursor to **Power On Status Setup** field. 
 3. Use soft keys to select and confirm the desired option. 

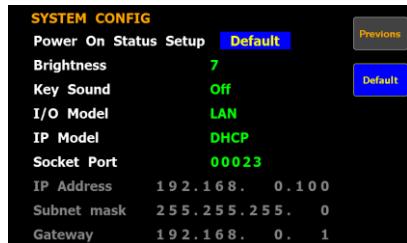

Option **Previous** The status of unit on powering on is set to the status before the last shutdown.


Default The status of unit on powering on is set to the factory default status.

Default value **Default**

Setting up brightness

Background Continue the following setting from **SYSTEM CONFIG** setting screen

- Steps
1. Press **Enter** button.
 2. Press down arrow key to move cursor to **Brightness** field.
 3. Use soft keys to increase or decrease the brightness level
- 

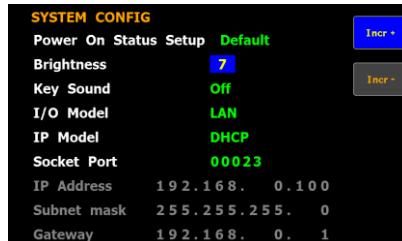


Option 1 - 10 The display is the darkest when set to 1. On the contrary, it turns out the brightest when set to 10.

Default option 7

Setting up key sound

Background Continue the following setting from **SYSTEM CONFIG** setting screen

- Steps**
1. Press **Enter** button.
 2. Press down arrow key to move cursor to **Key Sound** field.
 3. Use soft keys to select and confirm the desired option.

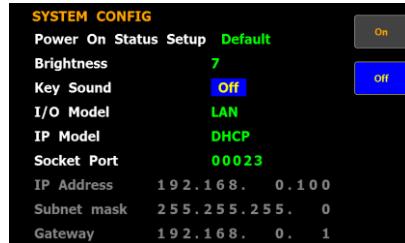

- Option**
- On** A short sound is heard from speaker of unit when pressing the keys on the front panel.
 - Off** No sound from speaker of unit when pressing the keys on the front panel.

Default option **Off**


Setting up remote interface

Background Continue the following setting from **SYSTEM CONFIG** setting screen


- Steps
1. Press **Enter** button.
 2. Press down arrow key to move cursor to **I/O Model** field.
 3. Use soft keys to select and confirm the desired option.




Option **RS232** If interface is set to RS232, the **Baud Rate** and the **Terminator** fields can be selected. For details about configuring RS 232 interface, please see page 110.

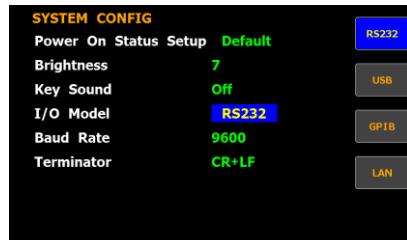

USB For details about configuring USB interface, please see page 109.

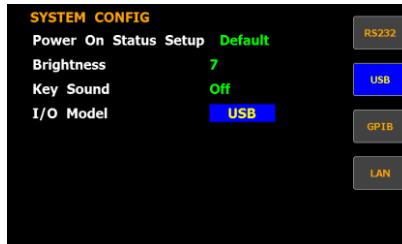

LAN If interface is set to LAN, the IP model is can be selected from “Manual” and “DHCP”. For details about configuring LAN interface, please see page 112.

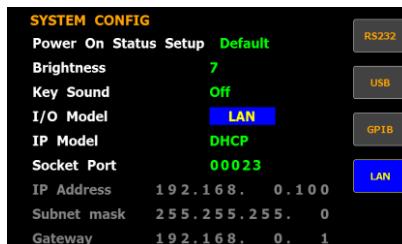

Setting up SCPI identity

Background Continue the following setting from **SYSTEM CONFIG** setting screen

- Steps
1. Press **SCPI** soft key to enter **SCPI** setting screen.
 2. Press **Enter** button.
 3. Press down arrow key to move cursor to **Type** field.
 4. Use soft keys to select and confirm the desired option.
- 
- The image shows a screenshot of the SCPI setting screen. At the top, it says "SCPI". Below that is a table with one row and two columns. The first column is labeled "Type" and the second column has two options: "Default" (which is highlighted in blue) and "User". To the right of the screen, there is a vertical stack of six circles representing soft key buttons. The top three circles are solid black, while the bottom three are white with a black outline. The second circle from the top contains the word "Enter".

Option

Default The return message in remote control returns the default manufacturer, model number, serial number, among other info.

User User-defined manufacturer, model number and so forth will be returned for remote control mode.

Default value

Default

MEASUREMENT AND OTHER FUNCTIONS

Measurement function	71
Introduction to measurement parameters	71
Setting measurement parameters	72
Changing the standard and simple display modes	74
Other functions	76
Introduction to other functions.....	76
Integration measurement function.....	79
Setting up Integrator measurement	79
Introduction to integrator parameters.....	84
Using the integrator function.....	87
Graph measurement function	90
Setting up waveform graph measurement	90
Setting up waveform graph parameter	98
Setting up Harmonics bar graph measurement.....	101
Setting up Harmonics list graph measurement.....	104

Measurement function

The T3PM1100 provides a wide range of basic electricity and power measurement functions. It is equipped with measurement parameters for accurately measuring the voltage, current, power, DC/AC/AC + DC/V-MEAN, power factor, harmonics, frequency, etc. The input impedance of the device is $2M\Omega$, the maximum input voltage is 600Vrms. There are 2 sets of internal resistance (Shunt), $500m\Omega$ and $5m\Omega$ respectively. Also, there are 2 external current input terminals (EXT1, EXT2). The maximum input current is 20Arms. The device will issue a warning sound when the input voltage and current exceed 850 Vrms or 28.5Arms.

Introduction to measurement parameters



Parameter name	Display icon
Voltage	Vac (AC) Vdc (DC) Vrms (AC+DC) Vm _n (V-MEAN)
Current	Iac (AC) Idc (DC) Irms (AC+DC, V-MEAN)
Active Power	P
Apparent Power	VA

Reactive power	VAR
Power Factor	PF
Phase Angle	DEG
Frequency	1Hz, VHz
Voltage Peak	V+pk, V-pk
Current Peak	I+pk, I-pk
Active Power Peak	P+pk, P-pk
Total Harmonic Distortion	THDI, THDV
Crest factor	CFV, CFI
Mathematical Computation	MATH
Maximum Current Ratio (Crest Factor(CFI) / Power Factor)	MCR

Setting measurement parameters

Steps

1. Use left and right arrow keys on the front panel to select **Parameter** function key.




2. Press **Enter** button. The 1st measurement parameter will be highlighted in green.



3. Press up, down, left and right arrow keys to select other desired measurement parameter.



4. Press **Enter** button followed by using up and down arrow keys to switch display options for the selected measurement parameter.

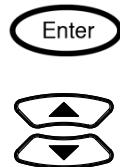

5. User is able to apply the previous

same process for each measurement parameter. There are up to 2 major and 8 minor measurement parameters to be switched.

Changing the standard and simple display modes

Steps

1. In the standard display mode, use left and right arrow keys on the front panel to select **Enlarge** function key.



2. Press **Enter** button to switch display to simple mode.



The simple mode covers 4 major measurement parameters deriving from the top 4 parameters of standard mode as shown below.



3. Press **ESC** button to return back to original display mode.



Other functions

Introduction to other functions



Function name	Button	Description
MAX Hold	(MAX Hold button)	When the MAX Hold button is pressed, the MAX Hold status icon will light in red in the LCD display to indicate that this function is activated. To deactivate this function, press this button again.
		If the MAX Hold function is activated, the display value on the display is updated only when the current measured value is greater than the previous measured value. The maximum display value is retained on the display. Only the following parameters are available for MAX Hold function: V, I, P, S, Q, V+pk,

When the **MAX Hold** button is pressed, the MAX Hold status icon will light in red in the LCD display to indicate that this function is activated. To deactivate this function, press this button again.

If the MAX Hold function is activated, the display value on the display is updated only when the current measured value is greater than the previous measured value. The maximum display value is retained on the display. Only the following parameters are available for MAX Hold function: V, I, P, S, Q, V+pk,

MEASUREMENT AND OTHER FUNCTIONS

V-pk, I+pk, I-pk, P+pk, and P-pk.

Enter	 Enter	This button is used to select function or confirm selection.
Hold	 Hold	When the Hold button is pressed, the Hold status icon will light in red in the LCD display to indicate that this function is activated. To deactivate this function, press this button again. When the Hold function is activated, the displayed value on the LCD display is not updated and the range is locked. Measurement is performed in the background.
Trigger	 Trigger	Press the Trigger button when Hold function is activated to update displayed value to the latest status once in accordance with the Data Update Rate period.
ESC	 ESC	This button is used to exit current screen or return to the main measurement screen.
Local/ Key Lock	 Key Lock Local	Dual function key. When Remote mode is activated, press this button to deactivate Remote mode and switch to Local mode. When Remote mode is not activated, this button is used as lock key of keypad.

Mode

Mode

Press the Mode button to select measurement mode. There are 4 measurement modes.

- **AC+DC:** Displays all the components of measurement signal.
- **DC:** Displays the DC part of the measurement signal.
- **AC:** Displays the AC part of the measurement signal.
- **V-MEAN:** Displays the voltage rectified as a mean value that is calibrated to RMS value. The value is the same as those obtained from RMS mode when sine waves are measured, but it is different when DC or distorted waves are measured.

Integration measurement function

Setting up Integrator measurement

Steps

1. Use left and right arrow keys on the front panel to select **Integrator** function key.



2. Press **Enter** button to enter the integrator measurement screen.



3. Press right arrow key to move cursor to **Set** key.



Select integrator measurement mode

4. Press **Enter** button to enter integrator measurement setting screen.

Enter



5. Press **Enter** button to enter **Mode** field. Use up and down arrow keys to toggle between Manual, Standard and Continuous mode. Press **Enter** button again to confirm your selection.

Enter



If you select **Manual** mode, the Set time is disabled and displayed in gray.

Enter



If you select **Standard** or **Continuous** mode, you need to set integrator measurement time before using integrator function. It can be set from 1 second to 9999 hours, 59 minutes and 59 seconds.



Note

When the Set Time is zero, neither Standard mode nor Continuous mode can be executed.

Select integrator measurement function

6. Press down arrow key to move to **Function** field in the integrator measurement setting screen.



7. Press **Enter** button to enter **Function** field. Use up and down arrow keys to toggle between Ampere Hours and Watt Hours. Press **Enter** button again to confirm your selection.



If you select **Ampere Hours**, the measured value in the bottom half section will be displayed in “q”.



If you select **Watt Hours**, the measured value in the bottom half section will be displayed in “WP”.



Select integrator measurement parameter

8. Press down arrow key to move to the bottom half section where measured values are displayed.



9. Press **Enter** button to enter the 1st minor parameter followed by using up and down arrow keys to switch to preferred measurement parameter. Press **Enter** button again to confirm the selection.



Press left or right arrow keys to move to the 2nd minor parameter followed by using the steps above to select a preferred parameter.



Introduction to integrator parameters

Parameter name	Description
Mode	<ul style="list-style-type: none"> Standard It allows user to define a period of Set Time for integrator measurement, which ranges from 1 second to 9999 hours, 59 minutes and 59 seconds. Manual User is not able to define a Set Time. The integrator measurement will be running constantly till Stop button is pressed by user. Continuous Partly identical with the Standard mode, the integrator measurement runs for a cycle of the Set Time and repeats the cycle indefinitely until Stop button is pressed by user.
Function	<ul style="list-style-type: none"> Watt Hours WP: Total power WP+: Positive total power WP-: Negative total power P(avg): Average power



MEASUREMENT AND OTHER FUNCTIONS

- **Ampere Hours**

q: Total mAh
q+: Positive total mAh
q-: Negative total mAh
q(avg): Average current



Test time

It indicates that elapsed time of integrator measurement.

Set time

It indicates the time of integrator measurement to be set. It can be set from 1 second to 9999 hours, 59 minutes and 59 seconds.



State

- **Running**
Integrator measurement is in progress.



- **Stop**
Integrator measurement has been stopped manually.



- **Timeout**

The time for running integrator measurement is up.



- **Reset**

The integrator measurement status is cleared.



Measured value parameters

For Watt Hours

Positive total power: **WP+**

Negative total power: **WP-**

Average power: **P(avg)**

Voltage: **Vdc** (DC voltage), **Vac** (AC voltage),

Vrms (AC+DC voltage), **Vmn** (Voltage mean)

Current: **Idc** (DC current), **Iac** (AC current), **Irms** (AC+DC current)



For Ampere Hours

Total mAh: **q**

Positive total mAh: **q+**

Negative total mAh: **q-**

Average Current : **q(avg)**

Voltage: **Vdc** (DC voltage), **Vac** (AC voltage),

Vrms (AC+DC voltage), **Vmn** (Voltage mean)

Current: **Idc** (DC current), **Iac** (AC current), **Irms** (AC+DC current)



Using the integrator function

Manual mode

1. In manual mode, you can directly press the **Start** button on the front panel to start integrator function.



2. To stop integration function, press the **Stop** button on the front panel.



3. Press the **Reset** button on the front panel to clear integrator.



- Standard mode
1. Set integrator measurement time before using integrator function.
 2. Other steps are same as running in manual mode.

When integrator performing, the test time will increase until the setting integrator measurement time.



- Continuous mode
1. Set integrator measurement time before using integrator function.
 2. Other steps are same as running in manual mode.

When integrator is running, the test time will increase until the set integrator measurement time (a cycle) and repeat the cycle indefinitely

until the Stop button is pressed by the user.



- In the integration process, select the **Measure** key and press **Enter** button to return main measurement screen. Select **Integrator** key and press **Enter** button to switch back to integration measurement screen.
- In the integration process, you can't change measurement range and enter system to set measurement parameters.
- In the integration process, if the voltage or current measurement value is exceeded, the measured value will display in red. However, it will not turn out red color when Auto Range is activated.



Graph measurement function

The T3PM1100 provides the professional graph measurement functions by which the user can view fluctuations of measured values in waveform and harmonics in bar and list graphs. It is available, under the graph mode, to adjust both voltage and current ranges in real time and change the display modes along with relevant parameters with ease.

Setting up waveform graph measurement


Steps

1. Use left and right arrow keys on the front panel to select **Graph** function key.

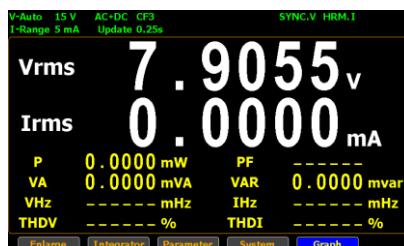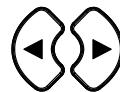


2. Press **Enter** button to enter the Waveform graph display screen in which the measured values are displayed in distinctive waveforms.

Enter

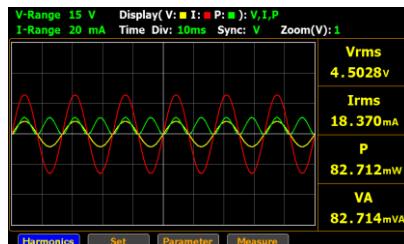


3. Press right arrow key to move cursor to **Set** key.

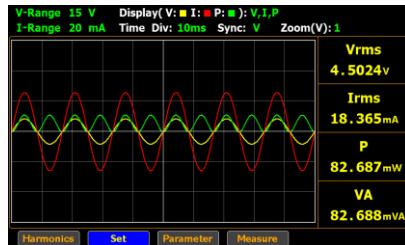


Select waveform display mode

4. Press **Enter** button to enter waveform setting section.

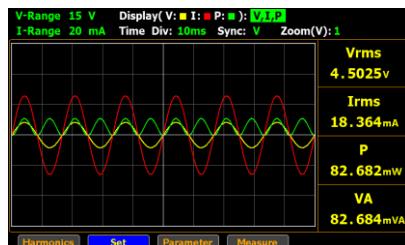

5. Press **Enter** button to enter **Display** field. Use up and down arrow keys to toggle between options. Press **Enter** button again to confirm your selection.

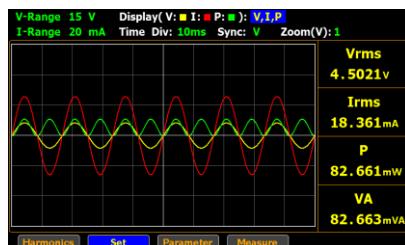


Option	V, I, P	Three items including the measured voltage, current and power are displayed in waveforms of different colors (V: yellow, I: red, Power: green) within the waveform chart.
	V, I	Two items including the measured voltage and current are displayed in waveforms of different colors (V: yellow, I: red) within the waveform chart.
	V	Only the measured voltage in the waveform of yellow color is displayed within the chart.
	I	Only the measured current in the waveform of red color is displayed within the chart.
	P	Only the measured power in the waveform of green color is displayed within the chart.



Default option	V, I, P
----------------	---------

Select waveform display time division

6. Press down arrow key to move to **Time Div** field in the waveform setting section.

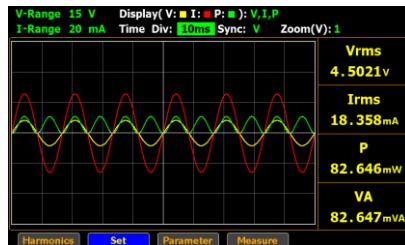

7. Press **Enter** button to enter **Time Div** field. Use up and down arrow keys to toggle between options. Press **Enter** button again to confirm your selection.

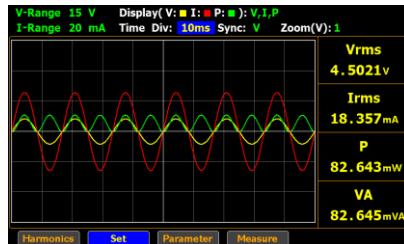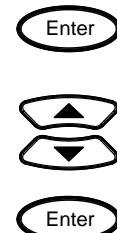


Option	25us, 50us, 100us, 250us, 500us, 1ms, 2.5ms, 5ms, 10ms, 25ms, 50ms, 100ms, 250ms, 500ms, 1s	The diversified time units allow user to customize a preferred waveform graph display. In theory, shorter the measured period, smaller the time unit is fitting. In contrast, longer the measured period, greater the time unit is suitable. Select a proper option per varied measurements.
--------	--	--

Default option	5ms
----------------	------------




Note The available options for Time Div vary per set Update Time. Refer to page 96 for correlations.

Select waveform display sync source	8. Press right arrow key to move to Sync field in the waveform setting section.
-------------------------------------	--

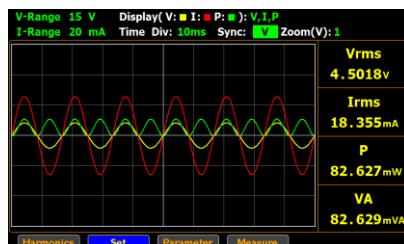


9. Press **Enter** button to enter **Sync** field. Use up and down arrow keys to toggle between options. Press **Enter** button again to confirm your selection.

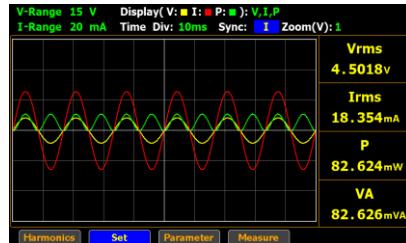


Option	V	Select the voltage of signals as synchronization source.
	I	Select the current of signals as synchronization source.
	Off	Select the entire interval of data updating period as synchronization source.
Default option	V	

- Select waveform display zoom magnification 10. Press right arrow key to move to **Zoom (V)** field in the waveform setting section.


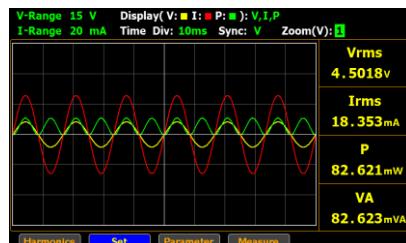


11. Press **Enter** button to enter **Zoom (V)** field. Use up and down arrow keys to toggle between options. Press **Enter** button again to confirm your selection.

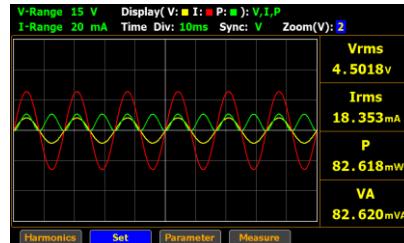

Option	1, 2, 3	The varied zoom magnifications allow user to customize a preferred waveform graph display. In theory, narrower the measured value, greater the zoom magnification is suitable. In contrast, wider the measured value, smaller the zoom magnification is fitting. The 1 stands for the standard magnification and the 3 represents the highest zoom magnification.
--------	----------------	---


Default option	1	
----------------	----------	--

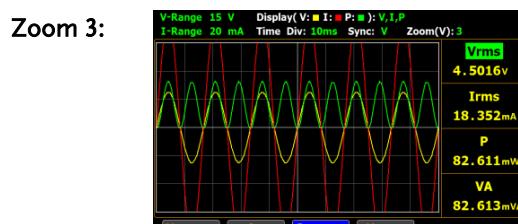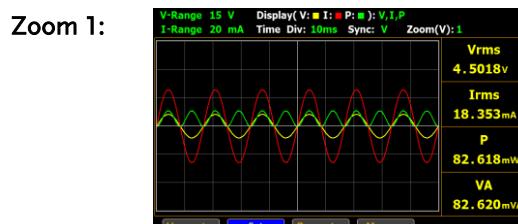

Frequency over limit

When frequency of either voltage or current is beyond the limit, which varies per set Time Div, the warning message in the upper-right corner will be shown to alarm user as the figures below.

F_V_O:
Frequency
Voltage
Over

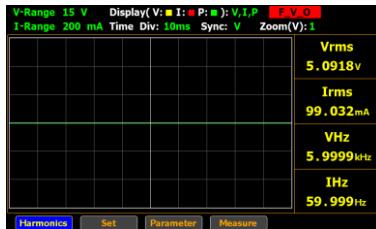

F_I_O:
Frequency
Current
Over



F_V_I_O:
Frequency
Voltage &
Current
Over



Correlation of Limit Frequency, Time Div and Update Time

Time Division	Update Time							
	0.1	0.25	0.5	1	2	5	10	20
1s	●							
500ms								
250ms								
100ms								
50ms								
25ms								
10ms	●	●	●	●	●	●	●	●
5ms	●	●	●	●	●	●	●	●
2.5ms	●	●	●	●	●	●	●	●
1ms	●	●	●	●	●	●	●	●
500us	●	●	●	●	●	●	●	●
250us	●	●	●	●	●	●	●	●
100us	●	●	●	●	●	●	●	●
50us	●	●	●	●	●	●	●	●
25us	●	●	●	●	●	●	●	●
Limit Frequency	10kHz	5kHz	2.5kHz	1kHz	500Hz	250Hz	100Hz	50Hz

Take few examples below that derive from the table above for further descriptions.

- When Update Time is set 20s, the range of Time Div is from 5ms to 1s and the available Frequency is up to 50Hz.
- When Update Time is set 0.1s, the range of Time Div is from 25us to 5ms and the available Frequency is up to 10kHz.
- The maximum frequency for Graph mode is up to 10kHz.
- When the measured frequency of either voltage (VHz) or current (IHz) surpasses the available frequency, which is based on the set Time Div, the warning message will be shown accordingly.




Note

Setting up waveform graph parameter


Steps

1. Use left and right arrow keys on the front panel to select Graph function key.

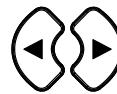


2. Press Enter button to enter the Waveform graph display screen.


Enter

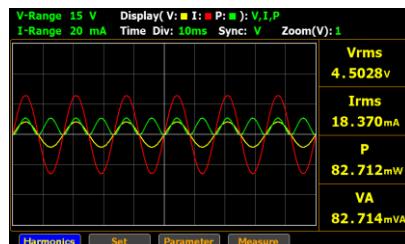

3. Press right arrow key to move cursor to Parameter key.

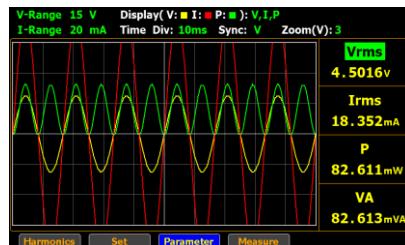


4. Press **Enter** button to enter parameters setting section.

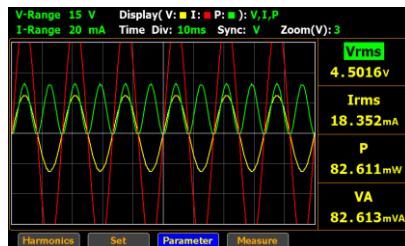



5. Press **Enter** button to enter the 1st parameter. Use up and down arrow keys to toggle between options. Press **Enter** button again to confirm your selection.

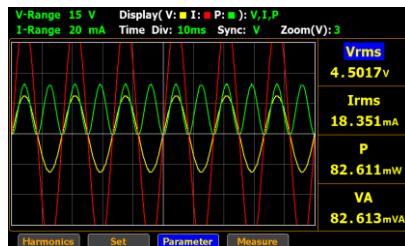

6. Press down arrow key to move cursor to the 2nd parameter and repeat the above steps to set up. Also, repeat the same steps for the 3rd and 4th parameters.

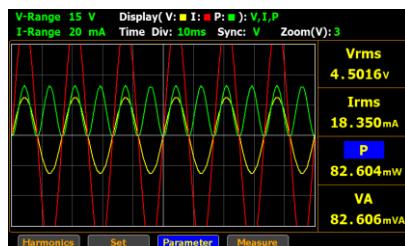



Option	Voltage	V_{ac} (AC) V_{dc} (DC) V_{rms} (AC+DC) V_{mn} (V-MEAN)
	Current	I_{ac} (AC) I_{dc} (DC) I_{rms} (AC+DC, V-MEAN)
	Active Power	P
	Apparent Power	VA
	Reactive power	VAR
	Power Factor	PF
	Phase Angle	DEG
	Frequency	1Hz, VHz
	Voltage Peak	V+pk, V-pk
	Current Peak	I+pk, I-pk
	Active Power Peak	P+pk, P-pk
	Total Harmonic Distortion	THDI, THDV
	Crest factor	CFV, CFI
	Mathematical Computation	MATH
	Maximum Current Ratio	MCR
Default option	Default options are based on the Parameter settings from the standard display mode.	

Setting up Harmonics bar graph measurement


Steps

1. Use left and right arrow keys on the front panel to select **Graph** function key.

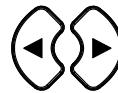


2. Press **Enter** button to enter the Waveform graph display screen.

Enter

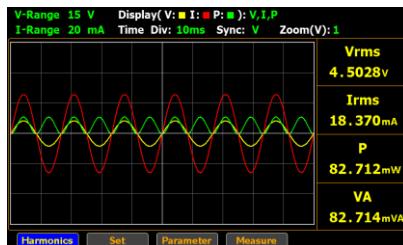

3. Press **Enter** button to enter Harmonics bar graph display screen where measured values of each harmonic order are shown in the histogram-like bar display.

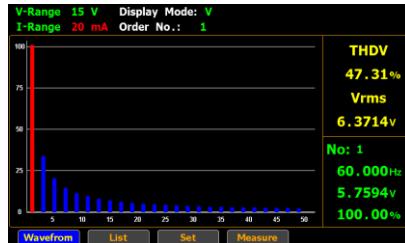


4. Press right arrow key to move cursor to **Set** key.



5. Press **Enter** button to enter harmonics bar setting section.



- Select harmonics display mode
6. Press **Enter** button to enter **Display Mode** field. Use up and down arrow keys to toggle between options. Press **Enter** button again to confirm your selection.

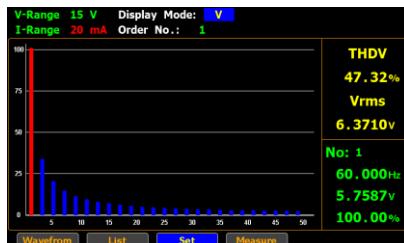

Option	V	The THDV measured factor will be displayed in the right-side section in yellow and also shown in the left-side bar graph.
	I	The THDI measured factor will be displayed in the right-side section in yellow and also shown in the left-side bar graph.
Default option	V	

- Select harmonics display order number
7. Press down arrow key to move to **Order No.** field in the harmonics setting section.



8. Press **Enter** button to enter **Order No.** field. Use up and down arrow keys to toggle between options. Press Enter button again to confirm your selection.

 Enter Enter


Option	1 - 50	Select a measured harmonic order with related values to be displayed in both the right-side section in green and the left-side bar graph. Note that the upper limit of order number is relevant to the Harmonics setting (page 35).
Default option	1	

Setting up Harmonics list graph measurement


- Steps
1. Use left and right arrow keys on the front panel to select **Graph** function key.



2. Press **Enter** button to enter the Waveform graph display screen.

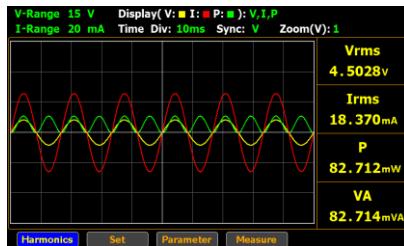

3. Press **Enter** button to enter Harmonics bar graph display screen.

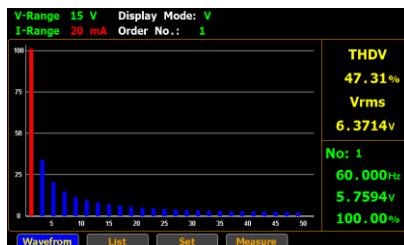

4. Press right arrow key to move cursor to **List** key.



5. Press **Enter** button to enter harmonics list display screen.



V-Auto 150 V		I-Auto 100 mA		PF 0.5706		THDV 2.58%		VHz 60.020 Hz		DEG +55.2°		THDI 136.49%		IHZ 60.027 Hz	
Order	V (V)	I (mA)	P (W)	V Hdf(%)	I Hdf(%)	P Hdf(%)	V(%)	I(%)							
Total	107.08	60.188	3.6772	-----	-----	-----	-----	-----							
1	107.04	35.573	3.5541	100.01	100.01	100.01	55.2	55.2							
2	0.0475	0.3547	0.0000	0.05	1.00	0.01	16.0	58.5							
3	1.9629	32.188	0.0590	1.84	90.49	1.66	-149.7	39.2							
4	0.0213	0.2375	0.0000	0.02	0.67	0.01	-93.9	38.8							
5	1.5199	26.134	0.0371	1.42	73.47	1.05	15.1	6.5							
6	0.0242	0.1681	0.0000	0.03	0.48	0.01	-163.3	-101.1							
7	0.9392	18.680	0.0164	0.88	52.52	0.47	-139.3	23.5							

Waveform Bar Measure

Turn pages of harmonics list

6. Press up and down arrow keys individually to flip over pages of the harmonics list in which relevant values of each order of harmonics are well displayed. See the section below for descriptions of each item within the list.



V-Range 15 V		I-Range 200 mA		PF 1.0000		THDV 0.13%		VHz 60.000 Hz		DEG -0.2°		THDI 0.05%		IHZ 60.000 Hz	
Order	V (V)	I (mA)	P (mW)	V Hdf(%)	I Hdf(%)	P Hdf(%)	V(%)	I(%)							
Total	5.1068	100.47	513.03	-----	-----	-----	-----	-----							
50	0.0052	0.0014	0.0000	0.11	0.01	0.01	48.7	19.0							

Waveform Bar Measure

V-Range 15 V		I-Range 200 mA		PF 1.0000		THDV 0.17%		VHz 60.000 Hz		DEG -0.2°		THDI 0.05%		IHZ 60.000 Hz	
Order	V (V)	I (mA)	P (mW)	V Hdf(%)	I Hdf(%)	P Hdf(%)	V(%)	I(%)							
Total	5.1068	100.47	513.06	-----	-----	-----	-----	-----							
8	0.0002	0.0051	0.0000	0.01	0.01	0.01	-140.4	-166.7							
9	0.0004	0.0019	0.0000	0.01	0.01	0.01	-163.2	-172.3							
10	0.0000	0.0053	0.0000	0.02	0.01	0.01	-174.1	-160.2							
11	0.0009	0.0066	0.0000	0.02	0.01	0.01	-160.2	-154.9							
12	0.0005	0.0067	0.0000	0.01	0.01	0.01	-165.8	-178.0							
13	0.0009	0.0062	0.0000	0.02	0.01	0.01	-153.2	-161.2							
14	0.0004	0.0052	0.0000	0.01	0.01	0.01	-179.0	-174.7							

Waveform Bar Measure

MEASUREMENT AND OTHER FUNCTIONS

Items of the list	Order	The harmonic order number
	V	RMS voltage value of the harmonic order
	I	RMS current value of the harmonic order
	P	Active power value of the harmonic order
	V Hdf(%)	Voltage harmonic distortion factor of the harmonic order
	I Hdf(%)	Current harmonic distortion factor of the harmonic order
	P Hdf(%)	Power harmonic distortion factor of the harmonic order
	V (°)	The phase difference between the fundamental voltage and the voltage of the harmonic order
	I (°)	The phase difference between the fundamental current and the current of the harmonic order

REMOTE CONTROL

This chapter describes basic configuration of IEEE488.2 based remote control. For a command list, refer to the Command Overview chapter on page 116.

Configure Remote Control Interface	109
Configure USB Interface.....	109
Configure RS232 Interface.....	110
Configure LAN Interface.....	112
Configure EOL Character	115
Return to Local Control	115


Configure Remote Control Interface

Configure USB Interface

USB CDC Class Due to the USB port configured to CDC (Communications Device Class) by default, the T3PM1100 will appear as a virtual COM port to a connected PC. Before, hence, using remote control via CDC USB class, install the appropriate CDC USB driver available for download on the Teledyne LeCroy website.

Background Continue the following setting from **SYSTEM CONFIG** setting screen

- Steps**
1. Press **Enter** button. 
 2. Press down arrow key to move cursor to **I/O Model** field. 
 3. Use soft keys to select and confirm the **USB** option. 

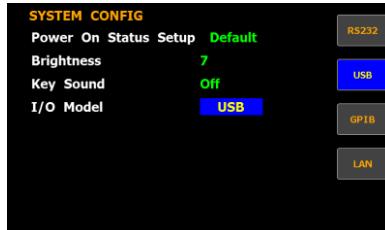


USB Configuration	PC connector	Type A, host
	T3PM1100 connector	Rear panel Type B, slave
	Speed	1.1/2.0 (full speed/high speed)
	USB Class	CDC (Communications device class)
	Hardware flow control	Off

Data Bits	8
Stop bit	1

Configure RS232 Interface

Background Continue the following setting from **SYSTEM CONFIG** setting screen


- Steps
1. Press **Enter** button. 
 2. Press down arrow key to move cursor to **I/O Model** field. 
 3. Use soft keys to select and confirm the **RS232** option. 
-

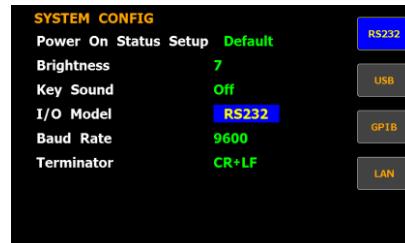


4. Press down arrow key to move cursor to **Baud Rate** field. 
 5. Use soft keys to select and confirm the **Baud Rate** option.
-




Option	9600, 19200, 38400, 57600, 115200
Default value	9600
	<p>6. Press down arrow key to move cursor to Terminator field.</p> 
	<p>7. Use soft keys to select and confirm the Terminator option.</p>

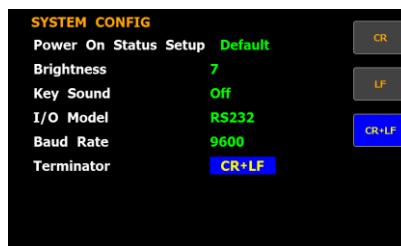

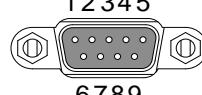Option	CR, LF, CR+LF	Terminator indicates the end of line for return message.
Default value	CR+LF	
RS232 Configuration	Selectable Baud rate	9600, 19200, 38400, 57600, 115200
	Parity	None
	Hardware flow control	Off
	Data Bits	8
	Stop bit	1
RS232 Pin Assignments	Pin 2: RxD Pin 3: TxD Pin 5: GND Pin 1, 4, 6 ~ 9: No Connection	 <p>1 2 3 4 5 6 7 8 9</p>

PC Connection Use a Null Modem connection as shown in the diagram below.

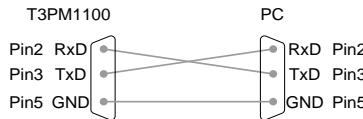


Configure LAN Interface

Background Continue the following setting from **SYSTEM CONFIG** setting screen

- | | |
|-------|--|
| Steps | <ol style="list-style-type: none"> 1. Press Enter button. 
 2. Press down arrow key to move cursor to I/O Model field. 
 3. Use soft keys to select and confirm the LAN option. 
 4. Press down arrow key to move cursor to IP Model field.  |
|-------|--|
- SYSTEM CONFIG**
- | | | |
|-----------------|---------------|-------|
| Power On Status | Setup Default | RS232 |
| Brightness | 7 | USB |
| Key Sound | Off | GPIB |
| I/O Model | LAN | LAN |
| IP Model | DHCP | |
| Socket Port | 00023 | |
| IP Address | 192.168.0.100 | |
| Subnet mask | 255.255.255.0 | |
| Gateway | 192.168.0.1 | |

5. Use soft keys to select and confirm the desired option.

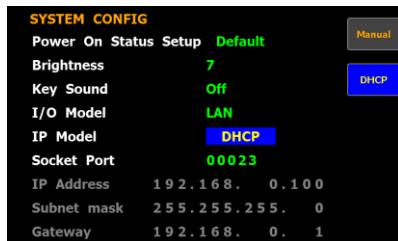

Option	Manual	Set up IP Address, Subnet mask and Gateway manually.
	DHCP	DHCP server automatically assigns IP Address, Subnet mask and Gateway.
Default option	DHCP	

Steps	6. Press down arrow key to move cursor to Socket Port field.	
	7. Use soft keys to increase or decrease the parameter of Socket Port.	



Option	The range of Socket Port is from 00000 to 65535 .
Default option	00023

Steps 8. When selecting Manual for IP Model, press down arrow key to move cursor to **IP Address**, **Subnet Mask** and **Gateway** fields, individually.



9. Use soft keys to increase or decrease the parameters of **IP Address**, **Subnet Mask** and **Gateway** fields, individually.



Default option IP Address: **192.168.0.100**

Subnet Mask: **255.255.255.0**

Gateway: **192.168.0.1**

Configure EOL Character

Description	The system config menu can set the EOL(end-of-line) character for return message. (The USB and LAN's EOL character is fixed with CR+LF)
-------------	---

The EOL characters that can be received from the PC include CR+LF, LF+CR, CR or LF. The most common EOL character is CR+LF.

Return to Local Control


Background	When the unit is in remote control mode, the RMT icon above the main display can be seen. When this icon is not displayed, it indicates that the unit is in local control mode.
Procedure	<ol style="list-style-type: none">1. Press the Local key when in remote mode.2. The unit will go back into local mode and the RMT icon will turn off.

COMMAND OVERVIEW

The Command overview chapter lists all programming commands in functional order as well as alphabetical order. The command syntax section shows you the basic syntax rules you have to apply when using commands.

Command Syntax

Compatible Standard	IEEE488.2 SCPI, 1994	Partial compatibility Partial compatibility
Command Structure		SCPI (Standard Commands for Programmable Instruments) commands follow a tree-like structure, organized into nodes. Each level of the command tree is a node. Each keyword in a SCPI command represents each node in the command tree. Each keyword (node) of a SCPI command is separated by a colon (:). For example, the diagram below shows an SCPI sub-structure and a command example.

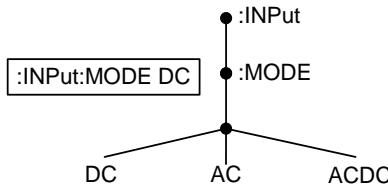

Command Types	There are a number of different instrument commands and queries. A command sends instructions or data to the unit and a query receives data or status information from the unit.
---------------	--

Command types	
Simple	A single command with/without a parameter
Example	:INPut:MODE DC
Query	A query is a simple or compound command followed by a question mark (?). A parameter (data) is returned.
Example	:INPut:CFACTOR?
Command Forms	<p>Commands and queries have two different forms, long and short. The command syntax is written with the short form of the command in capitals and the remainder (long form) in lower case.</p> <p>The commands can be written either in capitals or lower-case, just so long as the short or long forms are complete. An incomplete command will not be recognized.</p> <p>Below are examples of correctly written commands.</p>
Long form	:INPut:SYNChronize VOLTage :COMMUicate:HEADer ON
Short form	:INP:SYNC VOLT :COMM:HEAD ON
Square Brackets	Commands that contain square brackets indicate that the contents are optional. The function of the command is the same with or without the square bracketed items, as shown below. For example, for the query:
	[:INPut]:FILTter? Both :INPut:FILTter? and :FILTter? are valid forms.

Command Format	:INPut:VOLTage:RANGE 300		
	1	2	3
	1. Command header	3. Parameter 1	
	2. Space		
Common Input Parameters	Type	Description	Example
	<Boolean>	boolean logic	0, 1
	<NR1>	integers	0, 1, 2, 3
	<NR2>	decimal numbers	0.1, 3.14, 8.5
	<NR3>	floating point with exponent	4.5e-1, 8.25e+1
	<NRf>	any of NR1, 2, 3	1, 1.5, 4.5e-1
	[MIN] (Optional parameter)	For commands, this will set the setting to the lowest value. This parameter can be used in place of any numerical parameter where indicated.	
		For queries, it will return the lowest possible value allowed for the particular setting.	
	[MAX] (Optional parameter)	For commands, this will set the setting to the highest value. This parameter can be used in place of any numerical parameter where indicated.	
		For queries, it will return the highest possible value allowed for the particular setting.	
Message Terminator (EOL)	Remote Command	Marks the end of a command line. The following messages are in accordance with IEEE488.2 standard.	

	CR+LF	The most common EOL character is CR+LF
Message Separator	EOL or ; (semicolon)	Command Separator

Command List

SCPI Commands	*CLS	124
	*ESE.....	124
	*ESR	125
	*IDN	125
	*OPC	125
	*OPT.....	126
	*RST	126
	*SRE	126
	*STB	127
	*TRG.....	127
AOUTput Commands	:AOUTput	128
	:AOUTput[:NORMAl]:CHANnel<x>	128
	:AOUTput[:NORMAl]:IRTime	129
	:AOUTput[:NORMAl]:MODE<x>	129
	:AOUTput[:NORMAl]:PRESet.....	130
	:AOUTput[:NORMAl]:RATE<x>.....	130
	:AOUTput:DIGital:MODE	131
	:AOUTput:DIGital:OUTPut.....	131
	:AOUTput:DIGital:SETup.....	132
COMMuncate Commands	:COMMUnicate.....	133
	:COMMUnicate:HEADer	133
	:COMMUnicate:LOCKout	134
	:COMMUnicate:REMote	134
	:COMMUnicate:STATus	135
	:COMMUnicate:VERBose.....	135
DISPlay Commands	:DISPlay	137
	:DISPlay:NORMAl	137
	:DISPlay[:NORMAl]:ITEM<x>.....	137
	:DISPlay:INTegrate:ITEM<x>.....	139
	:DISPlay:PAGE.....	140

HARMonics	:HARMonics	141
Command	:HARMonics:DISPlay	141
	:HARMonics:DISPlay[:STATe].....	141
	:HARMonics:DISPlay:ORDer	142
	:HARMonics:PLLSource.....	142
	:HARMonics:ORDer.....	143
	:HARMonics:THD	143
 HOLD Command	:HOLD	144
 INPut Commands	:INPut	145
	[:INPut]:WIRing	146
	[:INPut]:MODE	146
	[:INPut]:VOLTage	147
	[:INPut]:VOLTage:RANGe.....	147
	[:INPut]:VOLTage:AUTO.....	148
	[:INPut]:VOLTage:CONFig.....	148
	[:INPut]:VOLTage:POJump	148
	[:INPut]:CURRent	149
	[:INPut]:CURRent:RANGe.....	149
	[:INPut]:CURRent:AUTO	150
	[:INPut]:CURRent:CONFig.....	150
	[:INPut]:CURRent:POJump	151
	[:INPut]:CURRent:EXTSensor:CONFig<x>	151
	[:INPut]:CURRent:EXTSensor:POJump<x>	152
	[:INPut]:CURRent:SRATio:ELEMent1<x>	152
	[:INPut]:RConfig	153
	[:INPut]:SCALing	153
	[:INPut]:SCALing[:STATe].....	153
	[:INPut]:SCALing:{VT CT SFACtor}:ELEMENT<x>... 154	154
	[:INPut]:SYNChronize	154
	[:INPut]:FILTter	155
	[:INPut]:FILTter:LINE	155
	[:INPut]:FILTter:FREQuency.....	155
	[:INPut]:POVer.....	156
	[:INPut]:CRAnge	156
	[:INPut]:ZERO	157

INTEGrate commands	:INTEGrate	158
	:INTEGrate:MODE	158
	:INTEGrate:FUNCTION.....	159
	:INTEGrate:TImer	159
	:INTEGrate:STARt	159
	:INTEGrate:STOP	160
	:INTEGrate:RESet.....	160
	:INTEGrate:STATe.....	160
Math commands	:MATH	161
MEASure commands	:MEASure.....	162
	:MEASure:AVERaging	162
	:MEASure:AVERaging[:STATE].....	162
	:MEASure:AVERaging:TYPE.....	163
	:MEASure:AVERaging:COUNT.....	163
	:MEASure:MHOLD	163
NUMeric commands	:NUMeric.....	165
	:NUMeric:FORMAT.....	165
	:NUMeric:NORMAl	166
	:NUMeric[:NORMAl]:VALue	166
	:NUMeric[:NORMAl]:NUMBER.....	168
	:NUMeric[:NORMAl]:ITEM<x>	168
	:NUMeric[:NORMAl]:PRESet	172
	:NUMeric[:NORMAl]:CLEar	174
	:NUMeric[:NORMAl]:DElete	174
	:NUMeric[:NORMAl]:HEADER.....	175
	:NUMeric:LIST	175
	:NUMeric:LIST:VALue.....	176
	:NUMeric:LIST:NUMBER.....	177
	:NUMeric:LIST:ORDER	177
	:NUMeric:LIST:SElect	178
	:NUMeric:LIST:ITEM<x>	178
	:NUMeric:LIST:PRESet	179
	:NUMeric:LIST:CLEar.....	180
	:NUMeric:LIST:DELETE	180
	:NUMeric:LIST:HOLD	181

RATE commands	:RATE	183
	:RATE:AUTO	183
	:RATE:AUTO:TIMEout	183
	:RATE:AUTO:SYNChronize	184
RECall commands	:RECall:NUMBER	185
	:RECall[:NORMal]:VALue	185
	:RECall:LIST:VALue	186
	:RECall:PANEl	186
STATus commands	:STATus	187
	:STATus:CONDITION	187
	:STATus:EESE	187
	:STATus:EESR	188
	:STATus:ERRor	188
	:STATus:FILTter<x>	189
	:STATus:QENable	190
	:STATus:QMESSage	190
STORe commands	:STORe	192
	:STORe[:STATe]	192
	:STORe:INTerval	192
	:STORe:PANEl	193
SYSTem commands	:SYSTem	194
	:SYSTem:BRIGHTness	194
	:SYSTem:COMMUnicate:COMMAND	195
	:SYSTem:COMMUnicate:ETHernet:MACaddress ..	195
	:SYSTem:FIRMware:DATE	195
	:SYSTem:KLOCK	196
	:SYSTem:MODEL	197
	:SYSTem:RESolution	197
	:SYSTem:SERial	197
	:SYSTem:VERsion[:FIRMware]	197

SCPI Commands


*CLS	124
*ESE	124
*ESR	125
*IDN	125
*OPC	125
*OPT	126
*RST	126
*SRE	126
*STB	127
*TRG	127

*CLS



Description Clears the standard event status register, extended event status register, and error queue.

Syntax *CLS

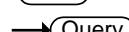

*ESE

Description Sets or returns the ESER (Event Status Enable Register) contents.

Syntax *ESE <NR1>

Query Syntax *ESE?

Parameter/ <NR1> 0~255

Return parameter

Example *ESE 65

Set the ESER to 01000001

*ESE?

->130

ESER=10000010

***ESR**

Description Returns and clears the SESR (Standard Event Status Register).

Query Syntax *ESR?

Return parameter <NR1> 0~255

Example *ESR?
->198
SESR=11000110


***IDN**

Description Returns the manufacturer, model number, serial number, and system version of the instrument.

Query Syntax *IDN?

Return parameter <String>

Example *IDN?
->TELEDYNE,T3PM1100,GXXXXXXXX,V1.00

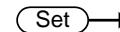***OPC**

Description Sets or returns the operation complete bit (bit0) in SERS (Standard Event Status Register) when all pending operations are completed.

Syntax *OPC

Query Syntax *OPC?

Return parameter <NR1>0 Operation isn't completed.

<NR1>1 Operation is completed.

Example *OPC?
Returns 1.

***OPT**


Description Returns the installed option.

Query Syntax *OPT?

Return parameter	<String>	C1:GBIP C2:RS232 C3:USB Device C7:Ethernet EX1:External Sensor 1(2.5V/5V/10V) EX2:External Sensor 2 (50mV/100mV/200mV/500mV/1V/2V) G5:Harmonic measurement DA4:4 channel D/A output
------------------	----------	---

Example *OPT?

->C1,C2,C3,C7,EX1,EX2,G5,DA4

***RST**


Description Initializes the settings

Syntax *RST




Description Sets or returns SRER (Service Request Enable Register)

Syntax *SRE <NR1>

Query Syntax *SRE?

Parameter/	<NR1>	0~255
Return parameter		

Example	*SER 7 Set the the SRER to 00000111 *SRE? ->3 SRER=00000011
---------	---

***STB** → Query

Description	Returns the SBR (Status Byte Register) contents.
-------------	--

Query Syntax	*STB?
--------------	-------

Return parameter	<NR1> 0~255
------------------	-------------

Example	*STB ? ->34 SBR=00100010
---------	--------------------------------

***TRG** Set →

Description	Executes single measurement (the same operation as when Trigger is pressed).
-------------	--

Syntax	*TRG
--------	------

AOUTput Commands

:AOUTput.....	128
:AOUTput[:NORMAl]:CHANnel<x>	128
:AOUTput[:NORMAl]:IRTIme	129
:AOUTput[:NORMAl]:MODE<x>.....	129
:AOUTput[:NORMAl]:PRESet	130
:AOUTput[:NORMAl]:RATE<x>.....	130
:AOUTput:DIGItal:MODE	131
:AOUTput:DIGItal:OUTPut	131
:AOUTput:DIGItal:SETup	132


:AOUTput




Description Returns all D/A output settings.

Query Syntax :AOUTput?

Return parameter <String>

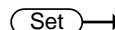

:AOUTput[:NORMAl]:CHANnel<x>

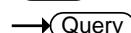

Description Sets or returns a D/A output item.

Syntax :AOUTput[:NORMAl]:CHANnel<X>
 {<Function>[,<Element>]}

Query Syntax :AOUTput[:NORMAl]:CHANnel<X>?


Parameter/ <x> 1 to 4 (channel)

Return parameter <Function> U|I|P|S|Q|LAMBda|PHI|UPeak|IPeak|FU|
 FI|WH|WHP|WHM|AH|AHP|AHM|NONE

<Element> 1 (If <Element> is omitted, the element
 is set to 1) (For the T3PM1100, only set
 to 1 or omitted)

Example	:AOUTPUT:NORMAL:CHANNEL1 NONE Turns D/A channel1 output off (0V) :AOUTPUT:NORMAL:CHANNEL1? ->:AOUTPUT:NORMAL:CHANNEL1 I,1
---------	--

:AOUTput[:NORMAl]:IRTime

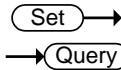

Description	Sets or returns the rated integration time that is used in the D/A output of the integrated value.
-------------	--


Syntax :AOUTput[:NORMAl]:IRTime {<NRf>,<NRf>,<NRf>}

Query Syntax :AOUTput[:NORMAl]:IRTime?

Parameter/	1st <NRf>	0~9999(hour)
Return parameter	2nd <NRf>	0~59(minute)
	3rd <NRf>	0~59(second)

Example	:AOUTPUT:NORMAL:IRTIME 1,1,10 :AOUTPUT:NORMAL:IRTIME? ->:AOUTPUT:NORMAL:IRTIME 1,1,10
---------	---

:AOUTput[:NORMAl]:MODE<x>

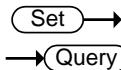

Description	Sets or returns a D/A range mode. (Remote Control Only)
-------------	---

Syntax :AOUTput[:NORMAl]:MODE<x>
 {FIXed|MANual|COMPare}

Query Syntax :AOUTput[:NORMAl]:MODE<x>?

Parameter/	<x>	1 to 4 (channel)
Return parameter	FIXed	Fixed range mode.
	MANual	Manual range mode.
	COMPare	Comparator mode.

Example :AOUTPUT:NORMAL:MODE1 FIXED

:AOUTPUT:NORMAL:MODE1?

->:AOUTPUT:NORMAL:MODE1 FIXED



Note

- FIXed = Fixed range mode (default value)

Outputs +5 V when the rated value of each measurement function is received.

- MANual = Manual range mode

The displayed values of the measurement function when +5 V and -5 V are output as D/A output can be set to any values of your choice. This enables the D/A output to be expanded or reduced for each channel (D/A zoom).

- COMPare = Comparator mode

By comparing with the comparator limits, this instrument outputs +5 V, 0 V, or -5 V.

:AOUTput[:NORMal]:PRESet

→

Description Sets the D/A output items to their default values.

Syntax :AOUTput[:NORMal]:PRESet {NORMal|INTEGrate}

Parameter	NORMal	Sets CH1:U, CH2:I, CH3:P, CH4:FU
-----------	--------	----------------------------------

	INTEGrate	Sets CH1:P, CH2:WH, CH3:AH, CH4:FU
--	-----------	------------------------------------

Example :AOUTPUT:NORAML:PRESET NORMAL

→

:AOUTput[:NORMal]:RATE<x>

→

Description Sets or returns the maximum and minimum values for when the D/A output is in manual range mode. (Remote Control Only)

Syntax :AOUTput[:NORMal]:RATE<x> {<NRf>,<NRf>}

Query Syntax :AOUTput[:NORMal]:RATE<x>?


Parameter/	<x>	1 to 4 (channel)
------------	-----	------------------

Return parameter	<NRf>	-9.999E+12~9.999E+12
------------------	-------	----------------------

Example	:AOUTPUT:RATE1 100,-100 :AOUTPUT:RATE1? ->:AOUTPUT:NORMAL:RATE1 100.0E+00,-100.0E+00
---------	--



- Note
- When the D/A output is in manual range mode
Set the rated value for +5 V output and then that for -5 V output.
 - When the D/A output is in fixed range mode
There is no need to set these values. (The values do not affect the output operation.)
 - When the D/A output is in comparator mode
Set the upper limit and then the lower limit.
-

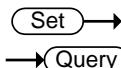

:AOUTput:DIGItal:MODE

Description Sets the application mode of digital I/O (Remote Control Only).

Syntax :AOUTput:DIGItal:MODE {IO|4094}

Query Syntax :AOUTput:DIGItal:MODE?

Parameter/ Return parameter	IO	Sets the digital I/O to IO mode.
	4094	Sets the digital I/O to 4094 (serial to parallel) mode.

Example :AOUTPUT:DIGITAL:MODE IO
:AOUTPUT:DIGITAL:MODE?
->:AOUTPUT:DIGITAL:MODE IO



:AOUTput:DIGItal:OUTPut

Description When the 4094 mode (serial to parallel) is selected for digital I/O, make use of this command to set output status.

Syntax :AOUTput:DIGItal:OUTPut {<NR1>,<Boolean>}

Parameter	<NR1>	0~255 (serial input data)
	<Boolean>	0,1 (strobe pulse)
Example	:AOUTPUT:DIGITAL:MODE 4094 :AOUTPUT:DIGITAL:OUTPUT 10,1	

:AOUTput:DIGital:SETup

Description	When the IO mode is selected for digital I/O, make use of this command to set output status.	
Syntax	:AOUTput:DIGital:SETup {<Boolean>}	
Parameter	<Boolean> 0,1 (OUT1,OUT2,OUT3,OOUT4)	
Example	:AOUTPUT:DIGITAL:MODE IO :AOUTPUT:DIGITAL:SETUP 0,1,0,1 Sets OUT1 to low, OUT2 to high, OUT3 to low, OUT4 to high	

COMMunicate Commands

:COMMunicate	133
:COMMunicate:HEADer.....	133
:COMMunicate:LOCKout.....	134
:COMMunicate:REMote	134
:COMMunicate:STATus	135
:COMMunicate:VERBose	135

:COMMunicate

→  Query

Description	Returns all communication settings.
-------------	-------------------------------------

Query Syntax	:COMMunicate?
--------------	---------------

Return parameter	<String>
------------------	----------

 Set →
→  Query

:COMMunicate:HEADer

Description	Sets or returns whether headers are attached to query responses.
-------------	--

Syntax	:COMMunicate:HEADer {<Boolean>} OFF ON}
--------	---

Query Syntax	:COMMunicate:HEADer?
--------------	----------------------

Parameter	<Boolean>0 OFF <Boolean>1 ON
-----------	---------------------------------

Return parameter	0	Returns without a header.
	1	Returns with a header.

Example	:COMMUNICATE:HEADER ON :COMMUNICATE:HEADER? ->:COMMUNICATE:HEADER 1
---------	---




Example of a response with a header

:INPUT:VOLTAGE:RANGE 150.0E+00

Example of a response without a header

150.0E+00

:COMMUnicate:LOCKOut

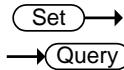

Description Sets or returns local lockout.

Syntax :COMMUnicate:LOCKOut {<Boolean>|OFF | ON}

Query Syntax :COMMUnicate:LOCKOut?

Parameter <Boolean>0 OFF

<Boolean>1 ON

Return parameter 0 Disable the local key.


1 Enable the local key.

Example :COMMUnicate:LOCKOUT ON

:COMMUnicate:LOCKOUT?

-> :COMMUnicate:LOCKOUT 1

:COMMUnicate:REMote

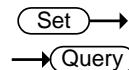

Description Sets or returns the T3PM1100 to remote or local mode. ON is remote mode.

Syntax :COMMUnicate:REMote {<Boolean>|OFF | ON}

Query Syntax :COMMUnicate:REMote?

Parameter <Boolean>0 OFF

<Boolean>1 ON

Return parameter 0 Turn the remote function off.

1 Turn the remote function on.

Example	:COMMUNICATE:REMOTE ON :COMMUNICATE:REMOTE? ->:COMMUNICATE:REMOTE 1
---------	---

:COMMUnicatE:STATUs


Description	Returns and clears the line-specific status.(Only for RS-232)
-------------	---



Query Syntax	:COMMUnicatE:STATUs?
--------------	----------------------

Return parameter (each status bit)	Bit 0	Parity error.
	Bit 1	Framing error.
	Bit 2	Noise error Break character detection.
	Bit 3 and higher	Always zero.

Example	:COMMUNICATE:STATUS? ->0
---------	-----------------------------



- When an event occurs, the corresponding bit is set in the status.
 - When the bit is read, it is cleared.
 - Zero is returned for interfaces other than RS-232.
-

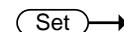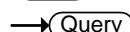

:COMMUnicatE:VERBose

Description	Sets or returns whether the response to a query is returned fully spelled out or in its abbreviated form.
-------------	---

Syntax	:COMMUnicatE:VERBose {<Boolean> OFF ON}
--------	---

Query Syntax	:COMMUnicatE:VERBose?
--------------	-----------------------

Parameter	<Boolean>0 OFF
	<Boolean>1 ON

Return parameter	0	Turn the verbose function off.
------------------	---	--------------------------------

1 Turn the verbose function on.

Example :COMMUNICATE:VERBOSE ON
:COMMUNICATE:VERBOSE?
->:COMMUNICATE:VERBOSE 1



Note Example of a response fully spelled out
:INPUT:VOLTAGE:RANGE 150.0E+00
Example of a response in abbreviated form
:VOLT:RANG 150.0E+00

DISPlay Commands

:DISPlay	137
:DISPlay:NORMAl	137
:DISPlay[:NORMAl]:ITEM<x>	137
:DISPlay:INTegrate:ITEM<x>	139
:DISPlay:PAGE	140

:DISPlay

→ **Query**

Description Returns all display settings.

Query Syntax :DISPlay?

Return parameter <String>

:DISPlay:NORMAl

→ **Query**

Description Returns all normal measurement data display settings.

Query Syntax :DISPlay:NORMAl?

Return parameter <String>

Set →

:DISPlay[:NORMAl]:ITEM<x>

→ **Query**

Description Sets or returns a normal measurement data display item. Refer to page 71 for details.

Syntax :DISPlay[:NORMAl]:ITEM<x>
<Function>[,<Element>]]

Query Syntax :DISPlay[:NORMAl]:ITEM<x>?

Parameter/	<x>	1 to 10 (display).
Return parameter	<Function>	U UPPeak UMPeak I IPPeak IMPeak P PPPeak PMPeak S Q LAMBda CFU CFI PHI FU FI UTHD ITHD MATH MCR
	<Element>	1 (If <Element> is omitted, the element is set to 1) (For the T3PM1100, only set to 1 or omitted)

Example :DISPLAY:NORMAL:ITEM1 U,1
 :DISPLAY:NORMAL:ITEM1?
 ->:DISPLAY:NORMAL:ITEM1 U,1

<Function>	Function	T3PM1100 Indicator
U	Voltage V	[V]
UPPeak	Maximum voltage: V+pk	[V+pk]
UMPeak	Minimum voltage: V-pk	[V-pk]
I	Current I	[I]
IPPeak	Maximum current: I+pk	[I+pk]
IMPeak	Minimum current: I-pk	[I-pk]
P	Active power P	[P]
PPPeak	Maximum power: P+pk	[P+pk]
PMPeak	Minimum power: P-pk	[P-pk]
S	Apparent power S	[VA]
Q	Reactive power Q	[VAR]
LAMBda	Power factor λ	[PF]
CFU	Voltage factor λ	[CFV]
CFI	Current factor λ	[CFI]
PHI	Phase difference Φ	[DEG]
FU	Voltage frequency fV	[VHz]
FI	Current frequency fl	[AHz]

UTHD	Total harmonic distortion of voltage Vthd	[THDV]
ITHD	Total harmonic distortion of current Ithd	[THDI]
MATH	Mathematical Computation	[MATH]
MCR	Maximum Current Ratio	[MCR]

:DISPLAY:INTEGRATE:ITEM<x>  

Description	Sets or returns an Integrate measurement data display item. Refer to page 86 for details.	
Syntax	:DISPLAY:INTEGRATE:ITEM<x> <Function>,[<Element>]	
Query Syntax	:DISPLAY:INTEGRATE:ITEM<x>?	
Parameter/	<x>	1 to 2(display).
Return parameter	<Function>	{WHP WHM WHAVG AHP AHM AHAVG U I}
	<Element>	1 (If <Element> is omitted, the element is set to 1) (For the T3PM1100, only set to 1 or omitted).

Example :DISPLAY:INTEGRATE:ITEM1 WHP,1
 :DISPLAY:INTEGRATE:ITEM1?
 ->:DISPLAY:INTEGRATE:ITEM1 WHP,1

<Function>	Function	T3PM1100 Indicator
WHP	Positive watt hour WP+	[WP+]
WHM	Positive watt hour WP-	[WP-]
WHAVG	Average power	[P(avg)]
AHP	Positive ampere hour q+	[q+]
AHM	Positive ampere hour q	[q-]
AHAVG	Average current	[q(avg)]
U	Voltage V	[V]

I	Current I	[!]
:DISPlay:PAGE		 → → 
Description	Sets or returns the display page item.	
Syntax	:DISPLAY:PAGE {<Function>}	
Query Syntax	:DISPLAY:PAGE?	
Parameter/ Return parameter	<Function>	{MEASurement ENLarge INTEgrator SYSTem_INFO SYSTem_CONFIG SETUp AVERage VA_RANGE_CONFIG EXT_RANGe_CONFIG RATIO EXTernal SAVE_LOG OPTION_DA GRAPH HARMonic_GRAPH HARMonic_LIST_GRAPH HARDCOPY SCPI MATH}
Example	:DISPLAY:PAGE MEASUREMENT :DISPLAY:PAGE? ->:DISPLAY:PAGE MEASUREMENT	

HARMonics Command

:HARMonics.....	141
:HARMonics:DISPlay.....	141
:HARMonics:DISPlay[:STATe]	141
:HARMonics:DISPlay:ORDer	142
:HARMonics:PLLSource	142
:HARMonics:ORDer	143
:HARMonics:THD.....	143

:HARMonics

→ Query

Description Returns all harmonic measurement settings.

Query Syntax :HARMonics?

Return parameter <String>

:HARMonics:DISPlay

→ Query

Description Returns all harmonic measurement display settings.

Query Syntax :HARMonics:DISPlay?

Return parameter <String>

Set →

:HARMonics:DISPlay[:STATe]

→ Query

Description Sets or returns the on/off state of harmonic measurement data display.


Syntax :HARMonics:DISPlay[:STATe] {<Boolean>}|OFF|ON}

Query Syntax :HARMonics:DISPlay[:STATe]?

Parameter
 <Boolean>0 OFF
 <Boolean>1 ON

Return parameter	0	Turn the harmonic display off.
	1	Turn the harmonic display on.

Example : HARMONICS:DISPLAY:STATE OFF
 : HARMONICS:DISPLAY:STATE?
 ->:HARMONICS:DISPLAY:STATE 0

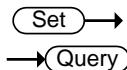

:HARMONICS:DISPlay:ORDDer

Description Sets or returns the harmonic order of the harmonic component that is shown in graph->harmoics->bar page for the harmonic measurement data display.

Syntax :HARMONICS:DISPlay:ORDDer {<NR1>}

Query Syntax :HARMONICS:DISPlay:ORDDer?


Parameter/ <NR1> 1 to 50 (harmonic order).

Return parameter

Example :HARMONICS:DISPLAY:ORDER 1

:HARMONICS:DISPLAY:ORDER?

->:HARMONICS:DISPLAY:ORDER 1

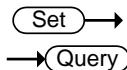

:HARMONICS:PLLSource

Description Sets or returns the PLL source.

Syntax :HARMONICS:PLLSource {U1|I1}

Query Syntax :HARMONICS:PLLSource?

Parameter/ U1 Select pll source at voltage.

Return parameter I1 Select pll source at current.

Example :HARMONICS:PLLSOURCE U1


:HARMONICS:PLLSOURCE?

->:HARMONICS:PLLSOURCE U1

		 Set →
:HARMonics:ORDer		→  Query
<hr/>		
Description	Sets or returns the maximum and minimum harmonic orders that are analyzed.	
Syntax	:HARMonics:ORDer {<NRf>,<NRf>}	
Query Syntax	:HARMonics:ORDer?	
Parameter/ Return parameter	1st <NRf> 2nd <NRf>	1 (minimum harmonic order, fixed at 1) 50 (maximum harmonic order)
Example	<pre>:HARMONICS:ORDER 1,20 :HARMONICS:ORDER? ->:HARMONICS:ORDER 1,20</pre>	
<hr/>		
		 Set →
:HARMonics:THD		→  Query
<hr/>		
Description	Sets or returns the equation used to compute the THD (total harmonic distortion).	
Syntax	:HARMonics:THD {TOTal FUNDamental}	
Query Syntax	:HARMonics:THD?	
Parameter/ Return parameter	TOTal FUNDamental	(CSA) (IEC)
Example	<pre>:HARMONICS:THD FUNDAMENTAL :HARMONICS:THD? ->:HARMONICS:THD FUNDAMENTAL</pre>	
<hr/>		

HOLD Command

:HOLD

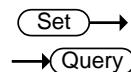

Description Sets or returns the on/off state of the output hold feature for display, communication, and other types of data.

Syntax :HOLD {<Boolean>|OFF|ON}

Query Syntax :HOLD?

Parameter	<Boolean>0	OFF
	<Boolean>1	ON

Return parameter	0	Turn the hold function off.
	1	Turn the hold function on.

Example :HOLD OFF
 :HOLD?
 ->:HOLD 0

INPut Commands

:INPut.....	145
[:INPut]:WIRing.....	146
[:INPut]:MODE	146
[:INPut]:VOLTage.....	147
[:INPut]:VOLTage:RANGE	147
[:INPut]:VOLTage:AUTO	148
[:INPut]:VOLTage:CONFig	148
[:INPut]:VOLTage:POJump.....	148
[:INPut]:CURRent.....	149
[:INPut]:CURRent:RANGE	149
[:INPut]:CURRent:AUTO	150
[:INPut]:CURRent:CONFig	150
[:INPut]:CURRent:POJump.....	151
[:INPut]:CURRent:EXTSensor:CONFig<x>	151
[:INPut]:CURRent:EXTSensor:POJump<x>	152
[:INPut]:CURRent:SRATio:ELEMent1<x>	152
[:INPut]:RCONfig	153
[:INPut]:SCALing	153
[:INPut]:SCALing[:STATe]	153
[:INPut]:SCALing:{VT CT SFACtor}:ELEMent<x> ..	154
[:INPut]:SYNChronize.....	154
[:INPut]:FILTer	155
[:INPut]:FILTer:LINE	155
[:INPut]:FILTer:FREQuency	155
[:INPut]:POVer	156
[:INPut]:CRANge	156
[:INPut]:ZERO	157


:INPut

→ **Query**

Description	Returns all input settings.
-------------	-----------------------------

Query Syntax	:INPut?
--------------	---------

Return parameter	<String>
------------------	----------

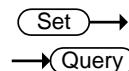

[:INPut]:CFACtor


Description Sets or returns the crest factor.

Syntax [:INPut]:CFACtor {3|6|A6}

Query Syntax [:INPut]:CFACtor?

Parameter/ Return parameter	3	crest factor 3.
	6	crest factor 6.
	A6	Display range expand mode (6A) for crest factor 6.

Example :INPUT:CFATOR 3
 :INPUT:CFATOR?
 ->:INPUT:CFATOR 3

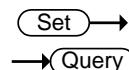

[:INPut]:WIRing


Description Sets or returns the wiring system.

Syntax [:INPut]:WIRing {P1W2}

Query Syntax [:INPut]:WIRing?

Parameter/ Return parameter	P1W2	Single-phase, two-wire system. (For the T3PM1100, the wiring system is fixed to P1W2)
--------------------------------	------	---

Example :INPUT:WIRING P1W2
 :INPUT:WIRING?
 ->:INPUT:WIRING P1W2

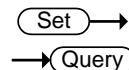

[:INPut]:MODE

Description Sets or returns the voltage and current measurement mode.

Syntax [:INPut]:MODE {DC|AC/RMS|ACDC| VMEan}

Query Syntax	[:INPut]:MODE?	
Parameter/ Return parameter	DC	Select the dc measurement mode.
	AC/RMS	Select the ac measurement mode.
	ACDC	Select the acdc measurement mode.
	VMEan	Select the vmean measurement mode.
Example	<pre>:INPUT:MODE DC :INPUT:MODE? ->:INPUT:MODE DC</pre>	

[:INPut]:VOLTage → Query

Description	Returns all voltage measurement settings.	
<hr/>		

Query Syntax	[:INPut]:VOLTage?	
<hr/>		

Return parameter	<String>	
<hr/>		

[:INPut]:VOLTage:RANGe → Set → Query

Description	Sets or returns the voltage range.	
<hr/>		


Syntax	[:INPut]:VOLTage:RANGe {<Voltage>}	
<hr/>		

Query Syntax	[:INPut]:VOLTage:RANGe?	
<hr/>		

Parameter/ Return parameter	<Voltage>	15, 30, 60, 150, 300, 600(V) when the crest factor is set to 3. 7.5, 15, 30, 75, 150, 300(V) when the crest factor is set to 6 or 6A.
<hr/>		

Example	<pre>:INPUT:VOLTAGE:RANGE 600V :INPUT:VOLTAGE:RANGE? ->:INPUT:VOLTAGE:RANGE 600.0E+00</pre>	
<hr/>		

[:INPut]:VOLTage:AUTO

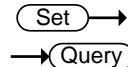

Description Sets or returns the voltage auto range on/off state.

Syntax [:INPut]:VOLTage:AUTO {<Boolean>|OFF|ON}

Query Syntax [:INPut]:VOLTage:AUTO?

Parameter	<Boolean>0 OFF <Boolean>1 ON
-----------	---------------------------------


Return parameter	0 Turn the voltage auto range function off. 1 Turn the voltage auto range function on.
------------------	---

Example :INPUT:VOLTAGE:AUTO ON

:INPUT:VOLTAGE:AUTO?

->:INPUT:VOLTAGE:AUTO 1

[:INPut]:VOLTage:CONFig

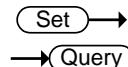

Description Sets or returns the valid voltage range.

Syntax [:INPut]:VOLTage:CONFig {ALL|<Voltage>[,Voltage]...}

Query Syntax [:INPut]:VOLTage:CONFig?

Parameter/	ALL All ranges are valid.
------------	---------------------------


Return parameter	<Voltage> See(:INPUT:VOLTage:RANGE).
------------------	--------------------------------------

Example :INPUT:VOLTAGE:CONFIG 300,150,30

:INPUT:VOLTAGE:CONFIG?

->:INPUT:VOLTAGE:CONFIG 300.0E+00,150.0E+00,
30.0E+00

[:INPut]:VOLTage:POJump

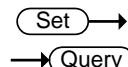

Description Sets or returns the jump destination range that is used when a voltage peak over-range occurs.

Syntax [:INPut]:VOLTage:POJump {OFF|<Voltage>}

Query Syntax	[:INPut]:VOLTage:POJump?	
Parameter/ Return parameter	OFF <Voltage>	No jump destination voltage range. See(:INPut:VOLTage:RANGE).
Example	<pre>:INPUT:VOLTAGE:POJUMP 600V :INPUT:VOLTAGE:POJUMP? ->:INPUT:VOLTAGE:POJUMP 600.0E+00</pre>	

[:INPut]:CURRent

→ 

Description	Returns all current measurement settings.
Query Syntax	[:INPut]:CURRent?
Return parameter	<String>

 →


[:INPut]:CURRent:RANGE

→ 

Description	Sets or returns the current range.								
Query	[:INPut]:CURRent:RANGE {<Current> (EXternal<x>,<Voltage>)}								
Query Syntax	[:INPut]:CURRent:RANGE?								
Parameter/ Return parameter	<table border="1"> <tr> <td><x></td> <td>1,2(EXT1,EXT2)</td> </tr> <tr> <td><Current></td> <td>5, 10, 20, 50, 100, 200, 500(mA) 1, 2, 5, 10, 20(A) when the crest factor is set to 3. 2.5, 5, 10, 25, 50, 100, 250(mA) 0.5, 1, 2.5, 5, 10(A) when the crest factor is set to 6 or 6A.</td> </tr> <tr> <td>EXternal1 <Voltage></td> <td>2.5, 5, 10(V) when the crest factor is set to 3. 1.25, 2.5, 5(V) when the crest factor is set to 6 or 6A.</td> </tr> <tr> <td>EXternal2</td> <td>50, 100, 200, 500,(mV), 1, 2(V) when the crest factor is set to 3.</td> </tr> </table>	<x>	1,2(EXT1,EXT2)	<Current>	5, 10, 20, 50, 100, 200, 500(mA) 1, 2, 5, 10, 20(A) when the crest factor is set to 3. 2.5, 5, 10, 25, 50, 100, 250(mA) 0.5, 1, 2.5, 5, 10(A) when the crest factor is set to 6 or 6A.	EXternal1 <Voltage>	2.5, 5, 10(V) when the crest factor is set to 3. 1.25, 2.5, 5(V) when the crest factor is set to 6 or 6A.	EXternal2	50, 100, 200, 500,(mV), 1, 2(V) when the crest factor is set to 3.
<x>	1,2(EXT1,EXT2)								
<Current>	5, 10, 20, 50, 100, 200, 500(mA) 1, 2, 5, 10, 20(A) when the crest factor is set to 3. 2.5, 5, 10, 25, 50, 100, 250(mA) 0.5, 1, 2.5, 5, 10(A) when the crest factor is set to 6 or 6A.								
EXternal1 <Voltage>	2.5, 5, 10(V) when the crest factor is set to 3. 1.25, 2.5, 5(V) when the crest factor is set to 6 or 6A.								
EXternal2	50, 100, 200, 500,(mV), 1, 2(V) when the crest factor is set to 3.								

	<Voltage> 25, 50, 100, 250,(mV), 0.5, 1(V) when the crest factor is set to 6 or 6A.
--	---

Example	:INPUT:CURRENT:RANGE 20A :INPUT:CURRENT:RANGE? ->:INPUT:CURRENT:RANGE 20.0E+00 :INPUT:CURRENT:RANGE EXTERNAL1,10V :INPUT:CURRENT:RANGE? -> :INPUT:CURRENT:RANGE EXTERNAL1,10.0E+00
---------	---

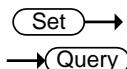

[:INPut]:CURRent:AUTO

Description Sets or returns the current auto range on/off state.


Syntax [:INPut]:CURRent:AUTO {<Boolean>|OFF|ON}

Query Syntax [:INPut]:CURRent:AUTO?

Parameter	<Boolean>0 OFF
	<Boolean>1 ON

Return parameter	0 Turn the current auto range function off.
	1 Turn the current auto range function on.

Example	:INPUT:CURRENT:AUTO ON :INPUT:CURRENT:AUTO? ->:INPUT:CURRENT:AUTO 1
---------	---

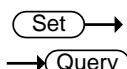

[:INPut]:CURRent:CONFig

Description Sets or returns the valid current range.

Syntax [:INPut]:CURRent:CONFig
{ALL|<Current>[,Current]...}

Query Syntax [:INPut]:CURRent:CONFig?

Parameter/ Return parameter	ALL All ranges are valid. <Current> See(:INPut:CURRent:RANGE).
--------------------------------	---

Example	:INPUT:CURRENT:CONFIG 20,10,1 :INPUT:CURRENT:CONFIG? ->:INPUT:CURRENT:CONFIG 20.0E+00,10.0E+00, 1.0E+00
---------	--

**[:INPut]:CURRent:POJump**

Description Sets or returns the jump destination range that is used when a current peak over-range occurs.

Syntax [:INPut]:CURRent:POJump {OFF|<Current>}

Query Syntax [:INPut]:CURRent:POJump?

Parameter/ Return parameter	OFF	No jump destination current range.
	<Current >	See(:INPut:CURRent:RANGE).

Example :INPUT:CURRENT:POJUMP 20A

:INPUT:CURRENT:POJUMP?

->:INPUT:CURRENT:POJUMP 20.0E+00

**[:INPut]:CURRent:EXTSensor:CONFig<x>**


Description Sets or returns the valid external current sensor range.

Syntax [:INPut]:CURRent:EXTSensor:CONFig<x>
{ALL|<Voltage>[,Voltage]...}

Query Syntax [:INPut]:CURRent:EXTSensor:CONFig<x>?

Parameter/ Return parameter	<x>	1,2(EXT1,EXT2), If <x> is omitted, by default sets or returns EXT2 config.
	ALL	All ranges are valid.
	<Voltage>	See(:INPut:CURRent:RANGE).

Example :INPUT:CURRENT:EXTSENSOR:CONFIG1 2,0.5,0.1
 :INPUT:CURRENT:EXTSENSOR:CONFIG1?
 ->:INPUT:CURRENT:EXTSENSOR:CONFIG1
 2.00E+00,500.0E-03,100.0E-03

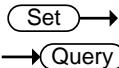

[:INPut]:CURRent:EXTSensor:POJump<x> → [Query]


Description Sets or returns the jump destination range that is used when a current peak over-range occurs.

Syntax [:INPut]:CURRent:EXTSensor:POJump<x>
 {OFF|<Voltage>}

Query Syntax [:INPut]:CURRent:EXTSensor:POJump<x>?

Parameter/ Return parameter	<x>	1,2(EXT1,EXT2), If <x> is omitted, by default sets or returns EXT2 config.
	OFF	No jump destination current range.
	<Voltage>	See(:INPut:CURRent:RANGE).

Example :INPUT:CURRENT:EXTSENSOR:POJUMP1 2V
 :INPUT:CURRENT:EXTSENSOR:POJUMP1?
 ->:INPUT:CURRENT:EXTSENSOR:POJUMP1
 2.00E+00

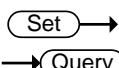

[:INPut]:CURRent:SRATio:ELEMent1<x> → [Query]

Description Sets or returns the external current sensor conversion ratio of the specified element.

Syntax [:INPut]:CURRent:SRATio:ELEMent1<x> {<NRf>}

Query Syntax [:INPut]:CURRent:SRATio:ELEMent1<x>?

Parameter/ Return parameter	<x>	1,2(EXT1,EXT2), If <x> is omitted, by default sets or returns EXT2 config.
	<NRf>	0.001 to 9999

Example	:INPUT:CURRENT:SRATIO:ELEMENT11 10 :INPUT:CURRENT:SRATIO:ELEMENT11? ->:INPUT:CURRENT:SRATIO:ELEMENT1 EXT1,10.000
---------	--

[:INPut]:RCONfig → Set → Query

Description	Sets or returns the on/off state of the range configuration (valid range selection) feature.	
Syntax	[:INPut]:RCONfig {<Boolean> OFF ON}	
Query Syntax	[:INPut]:RCONfig?	
Parameter	<Boolean>0	OFF
	<Boolean>1	ON
Return parameter	0	Turn the range configuration feature off.
	1	Turn the range configuration feature on.
Example	:INPUT:RCONFIG ON :INPUT:RCONFIG? ->:INPUT:RCONFIG 1	

[:INPut]:SCALing → Query

Description	Returns all scaling settings.	
Query Syntax	[:INPut]:SCALing?	
Return parameter	<String>	


[:INPut]:SCALing[:STATe] → Set → Query

Description	Sets or returns the scaling on/off state.	
Syntax	[:INPut]:SCALing[:STATe] {<Boolean> OFF ON}	
Query Syntax	[:INPut]:SCALing[:STATe]?	
Parameter	<Boolean>0 OFF <Boolean>1 ON	

Return parameter	0	Turn the scaling function off.
	1	Turn the scaling function on.

Example :INPUT:SCALING:STATE ON
 :INPUT:SCALING:STATE?
 ->:INPUT:SCALING:STATE 1

[:INPut]:SCALing:{VT|CT|SFACtor}:ELEMENT<x>

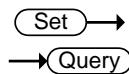

Description Sets or returns the VT ratio, CT ratio, or power coefficient of the specified element.


Syntax [:INPut]:SCALing:{VT|CT|SFACtor}:ELEMENT<x>{<NRF>}

Query Syntax [:INPut]:SCALing:{VT|CT|SFACtor}:ELEMENT<x>?

Parameter/ Return parameter	<x>	1 (If <Element> is omitted, the element is set to 1) (For the T3PM1100, only set to 1 or omitted)
	<NRF>	0.001 to 9999

Example :INPUT:SCALIG:VT:SRATIO:ELEMENT1 10
 :INPUT:SCALIG:VT:SRATIO:ELEMENT1?
 ->:INPUT:SCALIG:VT:SRATIO:ELEMENT1 10

[:INPut]:SYNChronize

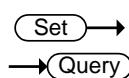

Description Sets or returns the synchronization source.

Syntax [:INPut]:SYNChronize {VOLTage|CURRent|OFF}

Query Syntax [:INPut]:SYNChronize?

Parameter/ Return parameter	VOLTage	Select the voltage synchronization source.
--------------------------------	---------	--

	CURRent	Select the current synchronization source.
	OFF	Select the off synchronization source.
Example	:INPUT:SYNCHRONIZE VOLTAGE :INPUT:SYNCHRONIZE? ->:INPUT:SYNCHRONIZE VOLTAGE	

[:INPut]:FILTter		→ Query
Description	Returns all input filter settings.	
Query Syntax	[:INPut]:FILTter?	
Return parameter	<String>	→ Set
[:INPut]:FILTter:LINE		→ Query

Description	Sets or returns the line filter.	
Syntax	[:INPut]:FILTter:LINE {<Boolean> OFF ON}	
Query Syntax	[:INPut]:FILTter:LINE?	
Parameter	<Boolean>0	OFF
	<Boolean>1	ON
Return parameter	0	Turn the line filter function off.
	1	Turn the line filter function on.
Example	:INPUT:FILTER:LINE OFF :INPUT:FILTER:LINE? ->:INPUT:FILTER:LINE 0	

[:INPut]:FILTter:FREQuency		→ Set
Description	Sets or returns the frequency filter.	
Syntax	[:INPut]:FILTter:FREQuency {<Boolean> OFF ON}	
Query Syntax	[:INPut]:FILTter:FREQuency?	

Parameter	<Boolean>0	OFF
	<Boolean>1	ON
Return parameter	0	Turn the frequency filter function off.
	1	Turn the frequency filter function on.
Example	:INPUT:FILTER:FREQUECNY OFF :INPUT:FILTER:FREQUECNY? ->:INPUT:FILTER:FREQUECNY 0	

[:INPut]:POVer

Description Returns the peak over-range information.

Query Syntax [:INPut]:POVer?

Return parameter	Bit0	Voltage peak over-range is occurring.
	Bit1	Current peak over-range is occurring.

Example :INPUT:POVER?
->:INPUT:POVER 1

[:INPut]:CRAnge

Description Sets or returns the check range status.

Query Syntax [:INPut]:CRAnge?

Return parameter	Bit0	The voltage is at the condition for reducing the auto range or less.
	Bit1	The voltage exceeds the condition for raising the auto range.
	Bit2	The voltage is over-range.
	Bit3	The voltage is peak over-range.
	Bit4	The current is at the condition for reducing the auto range or less.

	Bit5	The current exceeds the condition for raising the auto range.
	Bit6	The current is over-range.
	Bit7	The current is peak over-range.
Example	<pre>:INPUT:CRANGE? ->:INPUT:CRANGE 8 (Indicate the voltage is peak over-range)</pre>	

[:INPut]:ZERO

 Set →

→  Query

Description	Sets or returns the zero state.	
Syntax	[:INPut]:ZERO {<Boolean>} OFF ON}	
Query Syntax	[:INPut]:ZERO?	
Parameter	<Boolean>0	OFF
	<Boolean>1	ON
Return parameter	0	Turn the zero function off.
	1	Turn the zero function on.
Example	<pre>:INPUT:ZERO OFF :INPUT:ZERO? ->:INPUT:ZERO 0</pre>	

INTEGraTe Commands

:INTEGraTe.....	158
:INTEGraTe:MODE	158
:INTEGraTe:FUNCtion	159
:INTEGraTe:TImer.....	159
:INTEGraTe:STARt.....	159
:INTEGraTe:STOP	160
:INTEGraTe:RESet	160
:INTEGraTe:STATe	160


:INTEGraTe

→ 

Description Returns all integration settings.

Query Syntax :INTEGraTe?

Return parameter <String>

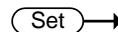 →

:INTEGraTe:MODE

→ 

Description Sets or returns the integration mode.

Syntax :INTEGraTe:MODE {MANUal|NORMAl|CONTinuous}

Query Syntax :INTEGraTe:MODE?

Parameter/ Return parameter	MANUal	Manual integration mode.
	NORMAl	Standard integration mode.
	CONTinuous	Continuous integration mode.

Example :INTEGRATE:MODE MANUAL

:INTEGRATE:MODE?

->:INTEGRATE:MODE MANUAL

:INTEGRATE:FUNCTION

 →
→ 

Description	Sets or returns the integration function.	
Syntax	:INTEGRATE:FUNCTION {WATT AMPERE}	
Query Syntax	:INTEGRATE:FUNCTION?	
Parameter/ Return parameter	WATT AMPERE	Select the integration function watt. Select the integration function ampere.
Example	:INTEGRATE:FUNCTION WATT :INTEGRATE:FUNCTION? ->:INTEGRATE:FUNCTION WATT	

:INTEGRATE:TIMER

 →
→ 

Description	Sets or returns the integration timer value.	
Syntax	:INTEGRATE:TIMER {<NRF>,<NRF>,<NRF>}	
Query Syntax	:INTEGRATE:TIMER?	
Parameter/ Return parameter	1st <NRF> 2nd <NRF> 3rd <NRF>	0 to 9999 (hours) 0 to 59 (minutes) 0 to 59 (seconds)
Example	:INTEGRATE:TIMER 1,0,0 :INTEGRATE:TIMER? ->:INTEGRATE:TIMER 1,0,0	

:INTEGRATE:STARt

 →

Description	Starts integration.
Syntax	:INTEGRATE:STARt
Example	:INTEGRATE:START

:INTEGRATE:STOP

Description Stops integration.

Syntax :INTEGRATE:STOP

Example :INTEGRATE:STOP

:INTEGRATE:RESET

Description Resets the integrated value.

Syntax :INTEGRATE:RESET

Example :INTEGRATE:RESET

:INTEGRATE:STATE

Description Returns the integration status.

Query Syntax :INTEGRATE:STATE?


Return parameter	ERRor	Integration overflows.
	RESET	Integration resets.
	STARt	Integration is in progress.
	STOP	Integration stops.
	TIMEup	Integration stops due to integration timeout.

Example :INTEGRATE:STATE?

->RESET

Math Commands

:MATH

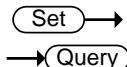

Description	Sets or returns the MATH equation.	
Syntax	:MATH {<Equation>[,<Parameter1>][,<Parameter2>]}	
Query Syntax	:MATH?	
Parameter/	Equation	{ADD SUB MUL DIV DIVA DIVB}
Return parameter	Parameter1	{U P S Q}
	Parameter2	{U P S Q}
Example	<p>:MATH ADD Set math equation to A+B :MATH? ->:MATH ADD</p>	
<Equation>	Definition	
ADD	A+B	
SUB	A-B	
MUL	Ax B	
DIV	A/B	
DIVA	A/B ²	
DIVB	A ² /B	
<Parameter1,2>	Definition	
U	Voltage U	
I	Current I	
P	Active power P	
S	Apparent power S	
Q	Reactive power Q	

MEASure Commands

:MEASure	162
:MEASure:AVERaging	162
:MEASure:AVERaging[:STATe]	162
:MEASure:AVERaging:TYPE	163
:MEASure:AVERaging:COUNT	163
:MEASure:MHOLD	163

:MEASure

→(Query)

Description	Returns all measured and computed data output settings.
-------------	---

Query Syntax	:MEASure?
--------------	-----------

Return parameter	<String>
------------------	----------

:MEASure:AVERaging

→(Query)

Description	Returns all averaging settings.
-------------	---------------------------------

Query Syntax	:MEASure:AVERaging?
--------------	---------------------

Return parameter	<String>
------------------	----------

:MEASure:AVERaging[:STATe]

(Set) →

→(Query)

Description	Sets or returns the on/off state of averaging.
-------------	--

Syntax	:MEASure:AVERaging[:STATe] {<Boolean> OFF ON}
--------	---

Query Syntax	:MEASure:AVERaging[:STATe]?
--------------	-----------------------------


Parameter	<Boolean>0 OFF <Boolean>1 ON
-----------	---------------------------------

Return parameter	0	Turn the averaging function off.
------------------	---	----------------------------------

	1	Turn the averaging function on.
--	---	---------------------------------

Example	:MEASURE:AVERAGING:STATE ON :MEASURE:AVERAGING:STATE? ->:MEASURE:AVERAGING:STATE 1
---------	--

:MEASure:AVERaging:TYPE

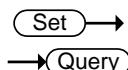


Description	Sets or returns the averaging type.	
Syntax	:MEASure:AVERaging:TYPE {LINEar EXPonent}	
Query Syntax	:MEASure:AVERaging:TYPE?	
Parameter/ Return parameter	LINEar	Select averaging type to linear.
	EXPonent	Select averaging type to exponent.

Example

:MEASURE:AVERAGING:TYPE LINEAR	:MEASURE:AVERAGING:TYPE?
->:MEASURE:AVERAGING:TYPE LINEAR	

:MEASure:AVERaging:COUNT

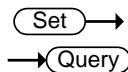


Description	Sets or returns the averaging coefficient.	
Syntax	:MEASure:AVERaging:COUNT {<NRf>}	
Query Syntax	:MEASure:AVERaging:COUNT?	
Parameter/ Return parameter	<NRf>	8,16,32,64

Example

:MEASURE:AVERAGING:COUNT 8	:MEASURE:AVERAGING:COUNT?
->:MEASURE:AVERAGING:COUNT 8	

:MEASure:MHOLD

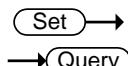

Description	Sets the MAX hold on/off state.	
Syntax	:MEASure:MHOLD {<Boolean>} OFF ON}	
Query Syntax	:MEASureMHOLD?	

Parameter	<Boolean>0	OFF
	<Boolean>1	ON
Return parameter 0		Turn the MAX hold function off.
	1	Turn the MAX hold function on.
Example	:MEASURE:MHOLD ON :MEASURE:MHOLD? ->:MEASURE:MHOLD 1	

NUMeric Commands

:NUMeric	165
:NUMeric:FORMAT	165
:NUMeric:NORMAl	166
:NUMeric[:NORMAl]:VALue	166
:NUMeric[:NORMAl]:NUMBER	168
:NUMeric[:NORMAl]:ITEM<x>	168
:NUMeric[:NORMAl]:PRESet	172
:NUMeric[:NORMAl]:CLEar	174
:NUMeric[:NORMAl]:DELetE	174
:NUMeric[:NORMAl]:HEADer	175
:NUMeric:LIST	175
:NUMeric:LIST:VALue	176
:NUMeric:LIST:NUMBER	177
:NUMeric:LIST:ORDer	177
:NUMeric:LIST:SElect	178
:NUMeric:LIST:ITEM<x>	178
:NUMeric:LIST:PRESet	179
:NUMeric:LIST:CLEar	180
:NUMeric:LIST:DELetE	180
:NUMeric:HOLD	181

:NUMeric

→Query

Description Returns all numeric data output settings.

Query Syntax :NUMeric?

Return parameter <String>

Set →

→Query

:NUMeric:FORMAT

Description Sets or returns the numeric data format.

Syntax :NUMeric:FORMAT {ASCii|FLOat}

Query Syntax :NUMeric:FORMAT?

Parameter/ Return parameter	ASCII FLOAT	Select numeric data format to ASCII. Select numeric data format to float.
Example		:NUMERIC:FORMAT ASCII :NUMERIC:FORMAT? ->:NUMERIC:FORMAT ASCII
 Note	<ul style="list-style-type: none"> • ASCII Physical values are output in the <NR3> format. (Only the elapsed integration time—TIME—is output in <NR1> format). • FLOAT A header (for example, “#240” or “#3208”) is added in front of each numeric data block. A physical value in IEEE single-precision floating point (4-byte) format follows the header. #N (N-digit byte number) (data byte sequence). The byte order of the data of each item is MSB First. 	

:NUMERIC:NORMAl**Description** Returns all normal numeric data output settings.**Query Syntax** :NUMERIC:NORMAl?**Return parameter** <String>

 Note The number of numeric data items output by :NUMERIC[:NORMAl]:ITEM<x> is determined by :NUMERIC[:NORMAl]:NUMBER.

:NUMERIC[:NORMAl]:VALUe**Description** Returns the numeric data.**Query Syntax** :NUMERIC[:NORMAl]:VALUe? {<NRF>}

Parameter	<NRf>	1 to 50 (item number)
Example		<ul style="list-style-type: none"> If <NRf> is specified, only the numeric data for the specified item is output. <p>:NUMERIC:NORMAL:VALUE? 1 -> 103.79E+00</p> <ul style="list-style-type: none"> If <NRf> is omitted, the numeric data items from 1 to the number specified by the : <p>NUMERIC[:NORMAl]:NUMber command are output in order.</p> <p>:NUMERIC:NORMAL:VALUE? -> 103.79E+00,1.0143E+00,105.27E+00,..(omitted)..,50.0 01E+00</p>
Numeric Data Format		<ul style="list-style-type: none"> Measurement values U, I, P, PPPeak, PMPeak, S, Q, LAMBda, CFU, CFI, FU, FI, UTHD and ITHD Integrated values WH, WHP, WHM, AH, AHP and AHM. ASCII: <NR3> format. Example: [-]12.345E+00 Measurement values UPPeak, UMPeak, IPPeak and IMPeak. ASCII: <NR3> format. Example: [-]12.34E+00 Measurement values (PHI) ASCII: <NR3> = 0~9.9 format. Example:[-]9.9E+00 ASCII: <NR3> = 10~99.9 format. Example:[-]99.9E+00 ASCII: <NR3> = 100~999.9 format. Example:[-]999.9E+00 Elapsed integration time (TIME) ASCII: <NR1> format in units of seconds. Example: 3600 for 1 hour (1:00:00). FLOAT: IEEE single-precision floating point (4-byte) format No items (NONE) ASCII: NAN (Not A Number) FLOAT: 0x7E951BEE (9.91E+37)

- Error Data
- Data does not exist (the display shows “----”)
ASCII: NAN (Not A Number)
FLOAT: 0x7E951BEE (9.91E+37)
 - Data over (the display shows “----“)
ASCII: INF (INFinity)
FLOAT: 0x7E94F56A (9.9E+37)

:NUMeric[:NORMAl]:NUMBER

 →

 →

Description Sets or returns the number of numeric data items that are transmitted by the :NUMeric[:NORMAl]:VALue? command.

Syntax :NUMeric[:NORMAl]:NUMBER {<NRf>|ALL}

Query Syntax :NUMeric[:NORMAl]:NUMBER?

Parameter/ <NRf> 1 to 50(ALL)

Return parameter

Example :NUMERIC:NORMAL:NUMBER 10
:NUMERIC:NORMAL:NUMBER
->:NUMERIC:NORMAL:NUMBER 10



- Note
- If the parameter is omitted from the :NUMeric[:NORMAl]:VALue? command, the numeric data items from 1 to the specified value are output in order.
 - By default, the number of numeric data items is set to 3.

:NUMeric[:NORMAl]:ITEM<x>

 →

 →

Description Sets or returns the specified numeric data output item function.

Syntax :NUMeric[:NORMAl]:ITEM<x>
{NONE|<Function>[,<Element>][,Order]}

Query Syntax :NUMeric[:NORMAl]:ITEM<x>?

Parameter/ Return parameter	<x>	1 to 50 (item number)
	NONE	No output item.
	<Function>	{U UPPeak UMPeak I IPPeak IMPeak P PPPeak PPPeak S Q LAMBda CFU CFI PHI FU FI UTHD THD WH WHP WHM AH AHP AHM TIME URANGE IRANGE MATH MCR} {UK IK PK LAMDAK PHIK PHIUK P HIK UHDFK IHDFK PHDFK}
	<Element>	1 (If <Element> is omitted, the element is set to 1) (For the T3PM1100, only set to 1 or omitted)
	<Order>	{TOTal DC <NRf>} (<NRf> = 1 to 50)

Example	:NUMERIC:NORMAL:ITEM1 U,1 :NUMERIC:NORMAL:ITEM1? ->:NUMERIC:NORMAL:ITEM1 U,1 :NUMERIC:NORMAL:ITEM1 UK,1,1 :NUMERIC:NORMAL:ITEM1? ->:NUMERIC:NORMAL:ITEM1 UK,1,1 <ul style="list-style-type: none"> • If <Order> is omitted, the order is set to TOTal. • This instrument does not measure data for <Order> = DC.
---------	--

<Function>	Function	T3PM1100 Indicator
U	Voltage V	[V]
UPPeak	Maximum voltage: V+pk	[V+pk]
UMPeak	Minimum voltage: V-pk	[V-pk]
I	Current I	[I]
IPPeak	Maximum current: I+pk	[I+pk]
IMPeak	Minimum current: I-pk	[I-pk]
P	Active power P	[P]
PPPeak	Maximum power: P+pk	[P+pk]

PMPeak	Minimum power: P-pk	[P-pk]
S	Apparent power S	[VA]
Q	Reactive power Q	[VAR]
LAMBda	Power factor λ	[PF]
CFU	Voltage factor λ	[CFV]
CFV	Current factor λ	[CFI]
PHI	Phase difference Φ	[DEG]
FU	Voltage frequency fV	[VHz]
FI	Current frequency fl	[AHz]
UTHD	Total harmonic distortion of voltage Vthd	[THDV]
ITHD	Total harmonic distortion of current Ithd	[THDI]
WH	Watt hour WP	[WP]
WHP	Positive watt hour WP+	[WP+]
WHM	Positive watt hour WP-	[WP-]
AH	Ampere hour q	[q]
AHP	Positive ampere hour q+	[q+]
AHM	Positive ampere hour q	[q-]
TIME	Integration time	
URAnge	Voltage range	
IRAnge	Current range	
MATH	Mathematical Computation	[MATH]
MCR	Maximum Current Ratio	[MCR]
URMS	True rms voltage Vrms	
UMN	Rectified mean voltage calibrated to the rms value Vmn	[Vm _n]
UDC	Simple voltage average Vdc	[Vdc]
URMN	Rectified mean voltage Vrmn	

UAC	AC voltage component Vac	[Vac]
IRMS	True rms current Irms	
IMN	Rectified mean current calibrated to the rms value Imn	
IDC	Simple current average Idc	[Idc]
IRMN	Rectified mean current Irmn	
IAC	AC current component Iac	[Iac]
UK	Rms voltage of harmonic order k V(k)	[V]
IK	Rms current of harmonic order k I(k)	[A]
PK	Active power of harmonic order k P(k)	[P]
LAMBDAK	Power factor of harmonic order k λ (k)	
PHIK	Phase difference between the voltage and current of harmonic order k ϕ (k)	
PHIUk	Phase difference between harmonic voltage V(k) and the fundamental wave V(1) ϕ V(k)	
PHIk	Phase difference between harmonic current I(k) and the fundamental wave I(1) ϕ I(k)	
UHDFk	Harmonic distortion factor of voltage Vhdf(k)	
IHDFk	Harmonic distortion factor of current Ihdf(k)	
PHDFk	Harmonic distortion factor of power Phdf(k)	

:NUMeric[:NORMAl]:PRESet


Description Presets the numeric data output item pattern.

Syntax :NUMeric[:NORMAl]:PRESet {<NRf>}

Parameter/ <NRf> 1 to 4

Return parameter

Example :NUMERIC:NORMAL:PRESET 1

Patterns 1	ITEM<x>	<Function>
	1	U
	2	I
	3	P
Patterns 2	ITEM<x>	<Function>
	1	U
	2	I
	3	P
	4	S
	5	Q
	6	LAMBda
	7	PHI
	8	FU
	9	FI
Patterns 3	ITEM<x>	<Function>
	1	U
	2	I
	3	P
	4	S
	5	Q
	6	LAMBda

7	PHI
8	FU
9	FI
10	UPPeak
11	UMPeak
12	IPPeak
13	IMPeak
14	PPPeak
15	PMPeak

Patterns 4	ITEM<x>	<Function>
	1	U
	2	I
	3	P
	4	S
	5	Q
	6	LAMBda
	7	PHI
	8	FU
	9	FI
	10	UPPeak
	11	UMPeak
	12	IPPeak
	13	IMPeak
	14	TIME
	15	WH
	16	WHP
	17	WHM
	18	AH

19	AHP
20	AHM

:NUMeric[:NORMAl]:CLEar**Set** →

Description Clears numeric data output items (sets the items to NONE).

Syntax :NUMeric[:NORMAl]:CLEar {ALL|<NRf>[,<NRf>]}

Parameter	ALL	Clear all items.
	1nd <NRf>	1 to 50 (the number of the first item to clear)
	2nd <NRf>	1 to 50 (the number of the last item to clear)

Example :NUMERIC:NORMAL:CLEAR ALL



Note If the 2nd <NRf> is omitted, the output item specified by the first and all following output items (up to number 50) are cleared.

:NUMeric[:NORMAl]:DELetE**Set** →

Description Deletes numeric data output items.

Syntax :NUMeric[:NORMAl]:DELetE {<NRf>[,<NRf>]}

Parameter	1st <NRf>	1 to 50 (the number of the first item to delete)
	2nd <NRf>	1 to 50 (the number of the last item to delete)

Example :NUMERIC:NORMAL:DELETE 1 (Deletes ITEM1 and shifts ITEM2 and subsequent items forward).

:NUMERIC:NORMAL:DELETE 1,3 (Deletes ITEM1 to ITEM3 and shifts ITEM4 and subsequent items forward).



Note

- When output items are deleted, subsequent items shift forward to fill the empty positions.
Empty positions at the end are set to NONE.
- If the second <NRf> is omitted, only the output item specified by the first number is deleted.

:NUMeric[:NORMAl]:HEADer

Description	Returns the numeric data header.
Syntax	:NUMeric[:NORMAl]:HEADer? {<NRf>}
Parameter	<NRf> 1 to 50 (item number)
Example	<ul style="list-style-type: none"> If <NRf> is specified, only the data name for the specified item number is output. <pre>:NUMERIC:NORMAL:HEADER? 1 -> U-E1 <ul style="list-style-type: none"> If <NRf> is omitted, the data names of the items from 1 to the number specified by the : NUMeric[:NORMAl]:NUMBER command are output in order. :NUMERIC:NORMAL:NUMBER 3 :NUMERIC:NORMAL:HEADER? -> U-E1,I-E1,P-E1 </pre>

:NUMeric:LIST

Description	Returns all harmonic measurement numeric list data output settings.
Query Syntax	:NUMeric:LIST?
Return parameter	<String>
Note	The number of numeric list data items output by : NUMeric:LIST:ITEM<x> is determined by : NUMeric:LIST:NUMBER.

:NUMeric:LIST:VALue Query

Description Returns the harmonic measurement numeric list data.

Query Syntax :NUMeric:LIST:VALue? {<NRf>}

Parameter <NRf> 1 to 8 (item number)

- Example**
- if <NRf> is specified :NUMERIC:LIST:VALUE? 1
-> 103.58E+00,NAN,103.53E+00,0.09E+00,2.07E+00,
0.04E+00,.. (omitted) ..,0.01E+00,0.01E+00
(up to 52 data values)
 - if <NRf> is omitted (when :NUMERIC:LIST:NUMBER is set to 5)
:NUMERIC:LIST:VALUE?
-> 103.58E+00,NAN,103.53E+00,0.09E+00,2.07E+00,
0.04E+00,..(omitted) ..,0.00E+00,0.00E+00
(up to 52*5 = 260 data values)
 - When :NUMERIC:FORMAT is set to {FLOAT}
:NUMERIC:LIST:VALUE?
-> #N (N-digit byte number) (data byte sequence)



Note

- A single numeric list data item consists of up to 52 items of numeric data in the following order: TOTal, DC, 1st harmonic, ..., :NUMERIC:LIST:ORDer.
- If <NRf> is specified, only the numeric list data of the specified item number is output (up to 52 items of data)
- If <NRf> is omitted, the numeric list data of item numbers from 1 to :NUMERIC:LIST:NUMBER is output in order (up to 52 times the number specified by :NUMERIC:LIST:ORDer)

:NUMeric:LIST:NUMber

 Set
 Query

Description	Sets or returns the number of numeric list data items that are transmitted by :NUMeric:LIST:VALue? command.
-------------	---

Syntax	:NUMeric:LIST:NUMber {<NRf> ALL}
--------	----------------------------------

Query Syntax	:NUMeric:LIST:NUMber?
--------------	-----------------------

Parameter/ Return parameter	<NRf> 1 to 8(ALL)
--------------------------------	-------------------

Example	:NUMERIC:LIST:NUMBER 3 :NUMERIC:LIST:NUMBER? ->:NUMERIC:LIST:NUMBER 3
---------	---



- If the parameter is omitted from the :NUMeric:LIST:VALue? command, the numeric list data items from 1 to the specified value are output in order.
- By default, the number of numeric data items is set to 3.

:NUMeric:LIST:ORDer

 Set
 Query


Description	Sets or returns the maximum output harmonic order of the harmonic measurement numeric list data.
-------------	--

Syntax	:NUMeric:LIST:ORDer {<NRf> ALL}
--------	---------------------------------

Query Syntax	:NUMeric:LIST:ORDer?
--------------	----------------------

Parameter/ Return parameter	<NRf> 1 to 50(ALL)
--------------------------------	--------------------

Example	:NUMERIC:LIST:ORDER 10 :NUMERIC:LIST:ORDER? ->:NUMERIC:LIST:ORDER 10
---------	--

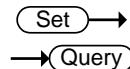:NUMeric:LIST:SELect

Description Sets or returns the output components of the harmonic measurement numeric list data.

Syntax :NUMeric:LIST:SELect {EVEN|ODD|ALL}


Query Syntax :NUMeric:LIST:SELect?

Parameter/ Return parameter	EVEN	Outputs the components of TOTal, DC, and even-order harmonics.
	ODD	Outputs the components of TOTal, DC, and odd-order harmonics .
	ALL	Outputs all components.

Example :NUMERIC:LIST:SELECT ALL

:NUMERIC:LIST:SELECT?

->:NUMERIC:LIST:SELECT ALL

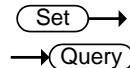:NUMeric:LIST:ITEM<x>

Description Sets or returns the output item (function and element) of the specified harmonic measurement numeric list data item.

Syntax :NUMeric:LIST:ITEM<x>
{NONE|<Function>,<Element>}

Query Syntax :NUMeric:LIST:ITEM<x>?

Parameter/ Return parameter	<x>	1 to 8 (item number)
	NONE	No output item.
	<Function>	{U P PHIU PHII UHDF UHDF PHDF }

<Element>	1 (If <Element> is omitted, the element is set to 1) (For the T3PM1100, only set to 1 or omitted)
------------------------	--

Example	:NUMERIC:LIST:ITEM1 U,1 :NUMERIC:LIST:ITEM1? ->:NUMERIC:LIST:ITEM1 U,1
---------	--

:NUMERIC:LIST:PRESet Set →

Description	Presets the harmonic measurement numeric list data output item pattern.	
Syntax	:NUMERIC:LIST:PRESet {<NRf>}	
Parameter/ Return parameter	<NRf>	1 to 4
Example	:NUMERIC:LIST:PRESET 1	
Patterns 1	ITEM<x>	<Function>
	1	U
	2	I
	3	P
Patterns 2	ITEM<x>	<Function>
	1	U
	2	I
	3	P
	4	PHIU
	5	PHII
Patterns 3	ITEM<x>	<Function>
	1	U
	2	I
	3	P

	4	UHDF
	5	IHDF
	6	PHDF
Patterns 4	ITEM<x>	<Function>
	1	U
	2	I
	3	P
	4	PHIU
	5	PHII
	6	UHDF
	7	IHDF
	8	PHDF

:NUMeric:LIST:CLEar


Description Clears numeric data output items (sets the items to NONE).

Syntax :NUMERIC:LIST:CLEar {ALL|<NRf>[,<NRf>]}

Parameter	ALL	Clear all items.
	1st <NRf>	1 to 8 (the number of the first item to clear)
	2nd <NRf>	1 to 8 (the number of the last item to clear)


Example :NUMERIC:LIST:CLEAR ALL

Note If the 2nd <NRf> is omitted, the output item specified by the first and all following output items (up to number 8) are cleared.

:NUMeric:LIST:DELeTe


Description Deletes numeric data output items.

Syntax	:NUMERIC:LIST:DELETED {<NRF>[,<NRF>]}	
Parameter	1st <NRF>	1 to 50 (the number of the first item to delete)
	2nd <NRF>	1 to 50 (the number of the last item to delete)
Example	<p>:NUMERIC:LIST:DELETE 1 (Deletes ITEM1 and shifts ITEM2 and subsequent items forward).</p> <p>:NUMERIC:LIST:DELETE 1,3 (Deletes ITEM1 to ITEM3 and shifts ITEM4 and subsequent items forward).</p>	
 Note	<ul style="list-style-type: none"> When output items are deleted, subsequent items shift forward to fill the empty positions. Empty positions at the end are set to NONE. If the second <NRF> is omitted, only the output item specified by the first number is deleted. 	

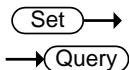:NUMERIC:HOLD

Description	Sets or returns the on/off (hold/release) status of the numeric data hold feature.	
Syntax	:NUMERIC:HOLD {<Boolean> OFF ON}	
Query Syntax	:NUMERIC:HOLD?	
Parameter	<Boolean>0	OFF
	<Boolean>1	ON
Return parameter	0	Turn the numeric hold function off.
	1	Turn the numeric hold function on.
Example	<p>:NUMERIC:HOLD ON</p> <p>:NUMERIC:HOLD?</p> <p>->:NUMERIC:HOLD 1</p>	



Note

- If :NUMeric:HOLD is set to ON before :NUMeric[:NORMAL]:VALue? or :NUMeric:LIST:VALue? is executed, all the numeric data at that point in time can be held internally.
 - As long as :NUMeric:HOLD is set to ON, numeric data is held even when the numeric data on the screen is updated.
 - If :NUMeric:HOLD is set to ON after having already been set to ON before, the numeric data is cleared, and the most recent numeric data is held internally. When retrieving numeric data continuously, this method can be used to circumvent the need to repeatedly set :NUMeric:HOLD to OFF.
-

RATE Commands

:RATE.....	183
:RATE:AUTO	183
:RATE:AUTO:TIMEout	183
:RATE:AUTO:SYNChronize	184

:RATE

 Set

 Query

Description Sets or returns the data update interval.

Syntax :RATE {<TIME>|AUTO}

Query Syntax :RATE?

Parameter/	<TIME>	100, 250, 500(ms), 1, 2, 5, 10, 20(s)
Return parameter	AUTO	Select update rate at auto.

Example :RATE 500MS

:RATE?

->:RATE 500.0E-03

:RATE:AUTO

 Query

Description Returns all applicable settings for when the data update interval is set to Auto.

Query Syntax :RATE:AUTO?

Return parameter <String>

 Set

 Query

:RATE:AUTO:TIMEout


Description Sets or returns the timeout for when the data update interval is set to Auto.

Syntax :RATE:AUTO:TIMEout {<TIME>}

Query Syntax :RATE:AUTO:TIMEout?

Parameter/	<code><TIME></code>	1, 5, 10, 20(s)
Return parameter		

Example RATE:AUTO:TIMEOUT 1
 :RATE:AUTO:TIMEOUT?
 -> :RATE:AUTO:TIMEOUT 1

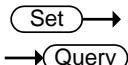

:RATE:AUTO:SYNChronize

Description Sets or returns the synchronization source for when the data update interval is set to Auto.

Syntax :RATE:AUTO:SYNChronize {U1|I1}

Query Syntax :RATE:AUTO:SYNChronize?

Parameter/	U1	Select synchronize source at voltage.
Return parameter	I1	Select synchronize source at current.

Example :RATE:AUTO:SYNCHRONIZE U1
 :RATE:AUTO:SYNCHRONIZE?
 -> :RATE:AUTO:SYNCHRONIZE U1

RECall Commands

:RECall:NUMber	185
:RECall[:NORMAl]:VALue.....	185
:RECall:LIST:VALue.....	186
:RECall:PANel.....	186

:RECall:NUMber

→  Query

Description	Returns the number of blocks of measured data that is stored.
Query Syntax	:RECall:NUMber?
Example	:RECall:NUMber? ->100

:RECall[:NORMAl]:VALue

→  Query

Description	Returns the numeric data at the specified block number.
Query Syntax	:RECall[:NORMAl]:VALue? {<NRf>}
Parameter	<NRf> 1 to 10000 (block number)
Example	<ul style="list-style-type: none"> If <NRf> is specified, the numeric data at the specified block number will be returned. If you omit <NRf> or specify a number greater than the number of blocks that contain stored measured data (the number returned by :RECall:NUMber?), the entire returned numeric data will be “NAN” (no data). The output items and format are the same as those of “:NUMeric[:NORMAl]:VALue? (when the item number is not specified).” To set the output items and format, use the NUMeric group commands.

:RECall:LIST:VALue Query

Description Returns the numeric list data of harmonic measurement at the specified block number.

Query Syntax :RECall:LIST:VALue? {<NRF>}

Parameter <NRF> 1 to 1000 (block number)

Example

- if <NRF> is specified, the numeric list data at the specified block number will be returned.
- If you omit <NRF> or specify a number greater than the number of blocks that contain stored measured data (the number returned by :RECall:NUMber?), the entire returned numeric data will be “NAN” (no data).
- The output items and format are the same as those of “:NUMeric:LIST:VALue? (when the item number is not specified).” To set the output items and format, use the NUMeric group commands.

:RECall:PANEl Set

Description Loads a setup parameter file.

Syntax :RECall:PANEl {<NRF>}

Parameter <NRF> 1 to 4 (file number)

Example :RECall:PANEl 2

STATus Commands

:STATus	187
:STATus:CONDition	187
:STATus:EESE	187
:STATus:EESR	188
:STATus:ERRor.....	188
:STATus:FILTer<x>	189
:STATus:QENable	190
:STATus:QMESsage.....	190

:STATus

→ **Query**

Description Returns all the settings for the communication status feature.

Query Syntax :STATus?

Return parameter <String>

:STATus:CONDition

→ **Query**

Description Returns the contents of the condition register.

Query Syntax :STATus:CONDition?

Return parameter <NR1> 0 to 65535

Example :STATUS:CONDITION?
-> 8



Note For information about the condition register, see Appendix, "Status system" at page 209.

:STATus:EESE

Set →

→ **Query**

Description Sets or returns the extended event enable register.

Syntax :STATus:EESE {<NRf>}

Query Syntax :STATUs:EESE?

Parameter/	<NRf>	0 to 65535
Return parameter		

Example

:STATUS:EESE 16	
:STATUS:EESE?	
-> :STATUS:EESE 16	

**Note**

For information about the condition register, see
Appendix, "Status system" at page 209.

:STATUs:EESR

→ **Query**

Description Returns the contents of the extended event register and clears the register.

Query Syntax :STATUs:EESR?

Return parameter	<NR1>	0 to 65535
------------------	-------	------------

Example

:STATUS:EESR?	
-> 16	

**Note**

For information about the condition register, see
Appendix, "Status system" at page 209.

:STATUs:ERROr

→ **Query**

Description Returns the error code and message of the last error that has occurred (top of the error queue).

Query Syntax :STATUs:ERROr?

Return parameter	<String>
------------------	----------

Example

:STATUS:ERROR?	
-> 113,"Underdefined Header"	



Note

- If no errors have occurred, 0,"No error" is returned.
- User can use the :STATUs:QMESsage command to specify whether the message is included.
- Error message description:
Error_103: Invalid separator
Error_104: Data type error.
Error_108: Parameter not allowed.
Error_109: Missing parameter.
Error_113: Undefined header.
Error_131: Invalid suffix.
Error_141: Invalid character data.
Error_221: Setting conflict.
Error_222: Data out of range.
Error_813: Invalid operation.

Set →

→ Query


:STATUs:FILTTer<x>

Description	Sets or returns the transition filter.	
Syntax	:STATUs:FILTTer<x> {RISE FALL BOTH NEVer}	
Query Syntax	:STATUs:FILTTer<x>?	
Parameter/ Return parameter	<x>	1~16
	RISE	An event is set when the bit changes from 0 to 1.
	FALL	An event is set when the bit changes from 1 to 0.
	BOTH	An event is set when the bit changes either from 1 to 0 or form 0 to 1.
	NEVer	An event is never trigger.
Example	<pre>:STATUS:FILTER2 RISE :STATUS:FILTER2? -> :STATUS:FILTER2 RISE</pre>	



- Set how each bit in the condition register must change to trigger the setting of an event.
- For information about the condition register, see Appendix, "Status system" at page 209.

:STATUs:QENable

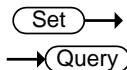

Description Sets or returns whether messages other than errors will be stored to the error queue (ON) or not (OFF).

Syntax :STATUs:QENable {<Boolean>}|OFF|ON}

Query Syntax :STATUs:QENable?


Parameter	<Boolean>0	OFF
	<Boolean>1	ON

Return parameter	0	Function is off.
	1	Function is on.

Example

```
:STATUS:QENABLE ON
:STATUS:QENABLE?
-> :STATUS:QENABLE 1
```

:STATUs:QMESsage

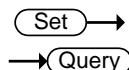

Description Sets or returns whether message information will be attached to the response to the STATUs:ERRor? query (ON/OFF).

Syntax :STATUs:QMESsage {<Boolean>}|OFF|ON}

Query Syntax :STATUs:QMESsage?

Parameter	<Boolean>0	OFF
	<Boolean>1	ON

Return parameter	0	Function is off.
	1	Function is on.

Example :STATUS:QMESSAGE ON
 :STATUS:QMESSAGE?
 -> :STATUS:QMESSAGE 1

STORe Commands

:STORe	192
:STORe[:STATe]	192
:STORe:INTerval.....	192
:STORe:PANel.....	193

:STORe

Description Returns all storage settings.

Syntax :STORe?

Return parameter <String>

:STORe[:STATe]

Description Sets or returns the storage on/off state.

Syntax :STORe[:STATe] {<Boolean>|OFF|ON}

Query Syntax :STORe[:STATe]?

Parameter <Boolean>0 OFF

<Boolean>1 ON

Return parameter 0 Storage function is off.

1 Storage function is on.

Example :STORE:STATE ON

:STORE:STATE?

->:STORE:STATE 1

:STORe:INTerval

Description Sets or returns the storage interval.

Syntax :STORe:INTerval {<NRF>,<NRF>,<NRF>}

Query Syntax	:STORe:INTerval?	
Parameter/	1st <NRF>	0 to 99 (hours)
Return parameter	2nd <NRF>	0 to 59 (minutes)
	3rd <NRF>	0 to 59 (seconds)

Example	:STORE:INTERVAL 0,0,1
	:STORE:INTERVAL?
	->:STORE:INTERVAL 0,0,1

 Note	When time interval is set 00:00:00, the storage interval is identical with the designated data update interval.
--	---

:STORe:PANel	
	
Description	Saves setup parameters to a file.
Syntax	:STORe:PANel {<NRF>}
Parameter	<NRF> 1 to 4 (file number)
Example	:STORe:PANel 1

SYSTem Commands

:SYSTem.....	194
:SYSTem:BRIGHTness	194
:SYSTem:COMMUnicatE:COMMand.....	195
:SYSTem:COMMUnicatE:ETHernet:MACaddress ..	195
:SYSTem:FIRMware:DATE	195
:SYSTem:KLOCK	196
:SYSTem:MODel.....	197
:SYSTem:RESolution	197
:SYSTem:SERial	197
:SYSTem:VERsion[:FIRMware]	197

:SYSTem

→ 

Description Returns all system settings.

Query Syntax :SYSTem?

Return parameter <String>

 →

→ 

:SYSTem:BRIGHTness

Description Sets or returns the brightness level.

Syntax :SYSTem:BRIGHTness {<NRf>}

Query Syntax :SYSTem:BRIGHTness?

Parameter/ <NRf> 1~10

Return parameter

Example :SYSTEM:BRIGHTNESS 7

:SYSTEM:BRIGHTNESS?

->:SYSTEM:BRIGHTNESS 7

:SYSTem:COMMUnicatE:COMMAND

Description	Sets or returns the command type.	
Syntax	:SYSTem:COMMUnicatE:COMMAND {DEFAULT USER}	
Query Syntax	:SYSTem:COMMUnicatE:COMMAND?	
Parameter/	DEFAULT	GPM8310.
Return parameter	USER	User-define.
Example	<pre>:SYSTEM:COMMUNICATE:COMMAND DEFAULT :SYSTEM:COMMUNICATE:COMMAND? ->:SYSTEM:COMMUNICATE:COMMAND DEFAULT</pre>	
	Note The SCPI mode is used to determine whether the *IDN? query returns the “Default” or “User” identification string.	

:SYSTem:COMMUnicatE:ETHernet:MACaddress


Description	Returns the Ethernet MAC address.	
Query Syntax	:SYSTem:COMMUnicatE:ETHernet:MACaddress?	
Example	<pre>:SYSTEM:COMMUNICATE:ETHERNET:MACADDRESS? - ->:SYSTEM:COMMUNICATE:ETHERNET:MACADDRESS S 00:22:24:00:00:00</pre>	

:SYSTem:FIRMware:DATE

Description	Returns the firmware date.	
Query Syntax	:SYSTem:FIRMware:DATE?	
Return parameter	<Date>	yyyymmdd

Example :SYSEM:FIRMWARE:DATE?
->:SYSEM:FIRMWARE:DATE 20200101

:SYSTem:KEY:BEEPer

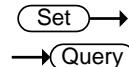

Description Sets or returns the keyclick beeper state.

Syntax :SYSTem:KEY:BEEPer {<Boolean>|OFF|ON}


Query Syntax :SYSTem:KEY:BEEPer?

Parameter	<Boolean> 0	OFF
	<Boolean> 1	ON

Return parameter	0	Turn the keyclick beeper function off.
	1	Turn the keyclick beeper function on.

Example :SYSTEM:KEY:BEEPER OFF
:SYSTEM:KEY:BEEPER?
->:SYSTEM:KEY:BEEPER 0

:SYSTem:KLOCK

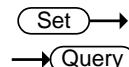

Description Sets or returns the on/off state of the key protection.

Syntax :SYSTem:KLOCK {<Boolean>|OFF|ON}

Query Syntax :SYSTem:KLOCK?

Parameter	<Boolean> 0	OFF
	<Boolean> 1	ON

Return parameter	0	Turn the key protection function off.
	1	Turn the key protection function on.

Example :SYSTEM:KLOCK OFF
:SYSTEM:KLOCK?
->:SYSTEM:KLOCK 0

:SYSTem:MODel → Query

Description	Returns the model code.
Syntax	:SYSTem:MODel?
Example	:SYSTEM:MODEL? ->:SYSTEM:MODEL "T3PM1100"

:SYSTem:RESolution → Query

Description	Returns the numeric data display resolution.
Query Syntax	:SYSTEM:RESolution?
Example	:SYSTEM:RESOLUTION? ->:SYSTEM:RESOLUTION 5

:SYSTem:SERial → Query

Description	Returns the serial number.
Syntax	:SYSTEM:SERial?
Example	:SYSTEM:SERIAL? ->:SYSTER:SERIAL 123456789A

:SYSTem:VERsion[:FIRMware] → Query

Description	Returns the firmware version.
Query Syntax	:SYSTem:VERsion[:FIRMware]?
Example	:SYSTEM:VERSION:FIRMWARE? ->"V1.00"
 Note	Returns the Ver. item string of the system Information menu.

APPENDIX

Specifications	199
General Specifications.....	199
Input.....	200
Voltage and Current Accuracy.....	201
Active Power Accuracy.....	202
Voltage, Current and Active Power Measurements.....	203
Frequency Measurement.....	205
Integration	206
Harmonic Measurement.....	207
Status system	209
Dimensions	213
Power measurement	214
Measurement for small current	214
Measurement for large current	215
Introduction to IEC-62301	216
Recommended parameters for power measurement	216
EUP Directive Lot6 specifications	217
Connection Guide	218
Rear panel	218
Direct connection: $I < 1A$	218
Direct connection: $1A < I < 20A$	219
Connection with CT/VT	219
Connection with EXT1/2.....	220

Specifications

Below are the basic conditions required to operate the T3PM1100 within specification:

- Calibration: Yearly
- Operating Environment: 18~28 °C (64.4~82.4°F)
- Humidity: <80%RH,
- Accuracy: ± (% of reading + % of range)
- The specifications apply when the unit is warmed up for at least 30 minutes and operates in the slow rate.
- The power supply cable must be grounded to ensure accuracy.
- Input voltage and current must be standard sine wave.
- The power factor must be 1.
- The crest factor must be 3.
- The common-mode voltage must be zero.

General Specifications

Specification Conditions:

Temperature: 23°C±5°C

Humidity: <80%RH(non-condensing)

Operating Environment: (0~40°C)

Temperature Range: 30~40°C, Relative Humidity: <70%RH(non-condensing);
>40°C, Relative Humidity: <50%RH(non-condensing)

Indoor use only

Altitude: <2000 meters

Pollution degree 2

Storage Conditions (-40~70°C)

Humidity: <90%RH(non-condensing)

General:

Power Source: 100-240 VAC 50/60Hz

Power Consumption: Max 30VA

Bench Dimensions: 268 mm (W) X 107 mm (H) X 379 mm (D) (w/t bumpers)

Weight: Approximately 2.9 kg

Input

Item	Specifications	
Input type	Voltage	Floating input through resistive voltage divider
	Current	Floating input through shunt
Measure range	Voltage	15 V, 30 V, 60 V, 150 V, 300 V, 600 V
	Current	5 mA, 10 mA, 20 mA, 50 mA, 100 mA, 200 mA, 0.5 A, 1 A, 2 A, 5 A, 10 A, 20 A
Input impedance	Sensor input	EX1: 2.5 V, 5 V, 10 V EX2: 50 mV, 100 mV, 200 mV, 500 mV, 1 V, 2 V
	Voltage	Input resistance: approach 2 MΩ
Input impedance	Current	Input resistance: ~ 200 mA approach 505 mΩ Input resistance: ~ 20 A approach 5 mΩ
	Sensor input	Input range 2.5 V ~ 10 V Input resistance: (EX1) approach 100 kΩ Input range 50 mV ~ 2 V Input resistance: (EX2) approach 20 kΩ
Continuous maximum allowable input	Voltage	peak value of 1.5 kV or RMS value of 1 kV, whichever is less
	Current	peak value of 30 A or RMS value of 20 A, whichever is less
Continuous maximum allowable input	Direct input range 0.5A ~ 20 A	peak value of 100 A or RMS value of 30 A, whichever is less
	Sensor input	peak value less than or equal to 5 times of the rated range
Input bandwidth	DC, 0.1 Hz ~ 100kHz	
Continuous maximum	600 Vrms, CAT II	
Common-mode voltage		
Line filter	select OFF or ON (cut off frequency of 500 Hz)	
Frequency filter	select OFF or ON (cut off frequency of 500 Hz)	
A/D converter	Simultaneous conversion voltage and current inputs	
	Resolution	16bits
	Maximum conversion rate	Approx. 300kHz

Voltage and Current Accuracy

Item	Specifications	
Temperature	23 ± 5°C	
Humidity	30~75% RH	
Input waveform	Sine wave crest factor = 3	
common-mode voltage	0 V	
Number of displayed digits	5 digits	
Requirements	Frequency filter Turn on to measure voltage or current of 200 Hz or less After 30 minutes of warm-up time has passed After measurement range is changed (zero-level compensation) Update interval is 250 ms	
Accuracy	DC ± (0.1% of reading + 0.2% of range) 0.1 Hz ≤ f < 45 Hz ± (0.1 % of reading + 0.2 % of range) 45 Hz ≤ f ≤ 66 Hz ± (0.1 % of reading + 0.05 % of range) 66 Hz < f ≤ 1kHz ± (0.1 % of reading + 0.2 % of range) 1 kHz < f ≤ 10 kHz ± (0.07 *f) % of reading + 0.3% of range 10 kHz < f ≤ 100 kHz ± (0.5 % of reading + 0.5 % of range) ± [(0.04x(f-10))% of reading]	
Temperature coefficient	Add	±0.03% of reading/°C within the range 5 to 18°C or 28 to 40°C.
When the line filter is turned ON	45 ~ 66 Hz	Add 0.2 % of reading
	< 45 Hz	Add 0.5 % of reading
Accuracy when the crest factor is set to 6 or 6A	Accuracy obtained by doubling the measurement range error for the accuracy when the crest factor is set to 3	
Accuracy changes caused by data update interval	When the data update interval is 100 ms, and Auto, add 0.05% of reading to the 0.1 Hz to 1 kHz accuracy.	
Influence of temperature	Add 0.02% of range/°C to the DC voltage accuracy. Add the following value to the DC current accuracies.	

changes after zero-level compensation or range change	5 mA/10 mA/20 mA/50 mA/100 mA/200 mA ranges 0.5 A/1 A/2 A/5 A/10 A/20 A ranges	5 μ A/°C 500 μ A/°C
Accuracy when the crest factor is set to 6 or 6A	External current sensor input (/EX1) External current sensor input (/EX2)	1 mV/°C 50 μ V/°C
Accuracy changes caused by data update interval	accuracy obtained by doubling the measurement range error for the accuracy when the crest factor is set to 3	When the data update interval is 100 ms, and Auto, add 0.05% of reading to the 0.1 Hz to 1 kHz accuracy.

Active Power Accuracy

Item	Specifications	
Requirements	Same as the conditions for voltage and current.	
Accuracy	Power factor	1
	DC	(0.1 % of reading + 0.2 % of range)
	$0.1\text{Hz} \leq f < 45\text{ Hz}$	$\pm (0.3 \% \text{ of reading} + 0.2 \% \text{ of range})$
	$45\text{ Hz} \leq f \leq 66\text{ Hz}$	$\pm (0.1 \% \text{ of reading} + 0.05 \% \text{ of range})$
	$66\text{ Hz} < f \leq 1\text{kHz}$	$\pm (0.2 \% \text{ of reading} + 0.2 \% \text{ of range})$
	$1\text{ kHz} < f \leq 10\text{ kHz}$	$\pm (0.1 \% \text{ of reading} + 0.3 \% \text{ of range}) \pm [(0.067 \times (f-1)) \% \text{ of reading}]$
Influence of power factor	$10\text{ kHz} < f \leq 100\text{ kHz}$	$\pm (0.5 \% \text{ of reading} + 0.5 \% \text{ of range}) \pm [(0.09 \times (f-10)) \% \text{ of reading}]$
	When power factor (λ) = 0 (S: apparent power) $\pm 0.1 \% \text{ of S for } 45\text{ Hz} \leq f \leq 66\text{ Hz}$	
	$\pm \{(0.1 + 0.15 \times f) \% \text{ of S}\}$ for up to 100 kHz as reference data $\bullet f$ is frequency of input signal in kHz	
When $0 < \lambda < 1$ (Φ : phase angle of the Voltage and current)		

	(power reading) × [(power reading error%) + (power range %) × (power range / indicated apparent power value) + {tanΦ × (influence when λ=0)%}]
When the line filter is turned ON	45 ~ 66 Hz Add 0.3 % of reading < 45 Hz Add 1 % of reading
Temperature coefficient	Same as the temperature coefficient for voltage and current
Accuracy when the crest factor is set to 6 or 6A	Accuracy obtained by doubling the measurement range error for the accuracy when the crest factor is set to 3
Accuracy of apparent power S	voltage accuracy + current accuracy
Accuracy of reactive power Q	accuracy of apparent power + $(\sqrt{1.0004 - \lambda^2}) - (\sqrt{1 - \lambda^2}) \times 100\%$ $\pm [(\lambda - \lambda/1.0002) + \cos\phi - \cos\{\phi + \sin^{-1}(\text{influence from the power factor when } \lambda = 0\% / 100)\}] \pm 1 \text{ digit}$
Accuracy of power factor λ	when voltage and current are at the measurement range rated input $\pm [\phi - \cos^{-1}(\lambda/1.0002) + \sin^{-1}(\text{influence from the power factor when } \lambda = 0\% / 100)] \pm 1 \text{ digit}$ when voltage and current are at the measurement range rated input
Accuracy of phase difference Φ	Accuracy obtained by doubling the measurement range error for the accuracy when the crest factor is set to 3
Accuracy when the crest factor is set to 6 or 6A	When the data update interval is 100 ms, and Auto, add 0.05% of reading to the 0.1 Hz to 1 kHz accuracy.

* f is the frequency of input signal in kHz

Voltage, Current and Active Power Measurements

Item	Specifications
Measurement method	Digital sampling method
Crest factor	3 or 6 (6A)
Wiring system	Single-phase , two-wire(1 P2 W)
Range select	Select manual or auto ranging
Auto range	Auto-range increase The range is upped when any of the following conditions is met.

	Vrms or Irms exceeds 130% of the currently set measurement range.
Crest factor 3	Vpk, Ipk value of the input signal exceeds 300% of the currently set measurement range.
Crest factor 6	Vrms or Irms exceeds 130% of the currently set measurement range. Vpk, Ipk value of the input signal exceeds 600% of the currently set measurement range.
Crest factor 6A	Vrms or Irms exceeds 260% of the currently set measurement range. Vpk, Ipk value of the input signal exceeds 600% of the currently set measurement range.
Auto-range decline	The range is downed when all of the following conditions are met.
Crest factor 3	Vrms or Irms is less than or equal to 30% of the measurement range. Vpk, Ipk value of the input signal exceeds 300% of the currently set measurement range.
Crest factor 6 or 6A	Vrms or Irms is less than or equal to 30% of the measurement range. Vrms or Irms is less than or equal to 125% of the next lower measurement range. Vpk, Ipk value of the input signal exceeds 600% of the currently set measurement range.
Display mode	Vrms (the true RMS value of voltage and current)
Switching	VOLTAGE MEAN (the rectified mean value calibrated to the RMS value of the voltage)
	AC

	DC
Measurement synchronization source	Select voltage, current, or off In the case of Auto Update Rate, select the voltage or current from the equipped element.
Line filter	Select OFF or ON (cutoff frequency at 500 Hz). Measures the peak (max, min) value of voltage, current or power from the instantaneous voltage, instantaneous current or instantaneous power that is sampled.
Peak measurement	
Zero-level compensation	Removes the internal offset of the measure unit (After measurement range is changed)
	Voltage Vrms , Vmn, Vdc , Vac
	Current Irms , Idc , Iac
	Active Power P
	Apparent Power VA
	Reactive power VAR
	Power Factor PF
Measurement parameters	Crest Factor CFI,CFV
	Phase Angle DEG
	Frequency IHZ and VHZ
	Voltage Peak V+pk and V-pk
	Current Peak I+pk and I-pk
	Active Power Peak P+pk and P-pk
	Total Harmonic Distortion THDI and THDV
	Mathematical Computation MATH
	Maximum Current Ratio MCR

Frequency Measurement

Item	Specifications	
Measurement item	Voltage and current	
Measurement frequency range	Data update interval 0.1 s 0.25 s 0.5 s 1 s 2 s 5 s 10 s	Measurement Frequency Range 20 Hz \leq f \leq 100 kHz 10 Hz \leq f \leq 100 kHz 5 Hz \leq f \leq 100 kHz 2.0 Hz \leq f \leq 100 kHz 1.0 Hz \leq f \leq 100 kHz 0.5 Hz \leq f \leq 100 kHz 0.2 Hz \leq f \leq 100 kHz

	20 s	$0.1 \text{ Hz} \leq f \leq 100 \text{ kHz}$
	Auto (*)	$0.1 \text{ Hz} \leq f \leq 100 \text{ kHz}$
(*) Limit of the measurement lower limit frequency by the Timeout setting		
	Timeout	lower limit frequency
	1 s	2.0 Hz
	5 s	0.5 Hz
	10 s	0.2 Hz
	20 s	0.1 Hz
Measurement range	Auto switching among six types: 100mHz, 1 Hz, 10 Hz, 100 Hz, 1 kHz, 10 kHz, and 100 kHz.	
Frequency filter	Select OFF or ON (cut off frequency of 500 Hz)	
Accuracy	Requirements	When the input signal level is 30% or more of the measurement range If the crest factor is set to 3.
		(60% or more if the crest factor is set to 6 or 6A) • Frequency filter is ON when measuring voltage or current of 200 Hz or less.
$\pm (0.06\% \text{ of reading})$		

Integration

Item	Specifications
Mode	Select manual integration mode, standard integration mode, or repetitive integration mode.
Timer	Automatically stop integration by setting a timer. Selectable range: 0 hours 00 minutes 00 seconds to 9999 hours 59 minutes 59 seconds
Accuracy	$\pm (\text{Power accuracy (or current accuracy)} + 0.1\% \text{ of reading})$ (fixed range)
Range setting	Auto range or fixed range is available for Integration
Timer accuracy	$\pm 0.02\%$
Remote control	Start, stop and reset operations are available using an external remote signal. (option)


Harmonic Measurement

Item	Specifications			
Measured item	Voltage, Current, Power			
Measured method	Zero-cross simultaneous calculation method			
Frequency range	10 Hz to 1.2 kHz.			
FFT data length	Fundamental Frequency	Sample rate	Window Width	upper limit of Analysis orders
	45 Hz to 55 Hz	$f \times 512$	10	50
	54 Hz to 66 Hz	$f \times 512$	12	50
FFT data length	1024			
Sample rate, window width, and upper limit of Analysis orders*	Fundamental Frequency	Sample rate	Window Width	upper limit of Analysis orders
	10 Hz to 67 Hz	$f \times 1024$	1	50
	67 Hz to 150 Hz	$f \times 512$	2	32
	150 Hz to 300 Hz	$f \times 256$	4	16
	300 Hz to 600 Hz	$f \times 128$	8	8
	600 Hz to 1200 Hz	$f \times 64$	16	4
Accuracy	Frequency	Voltage	Current	Power
	$10 \text{ Hz} \leq f < 45 \text{ Hz}$	0.15% of reading + 0.35% of range	0.15% of reading + 0.35% of range	0.35% of reading + 0.50% of range
	$45 \text{ Hz} \leq f < 440 \text{ Hz}$	0.15% of reading + 0.35% of range	0.15% of reading + 0.35% of range	0.25% of reading + 0.50% of range
	$440 \text{ Hz} \leq f < 1.2 \text{ kHz}$	0.20% of reading + 0.35% of range	0.20% of reading + 0.35% of range	0.40% of reading + 0.50% of range

- * 50Hz/60Hz Compliant IEC61000-4-7 (Update Rate must be $\geq 0.25S$).
- * Harmonic calculation: FFT method in which FFT data length is divided into 2 types: 1024 and 4096.
- * FFT data length automatically switches in accord with the Frequency and Update Rate of measured signal.

Status system

The diagram below is a description of the status system

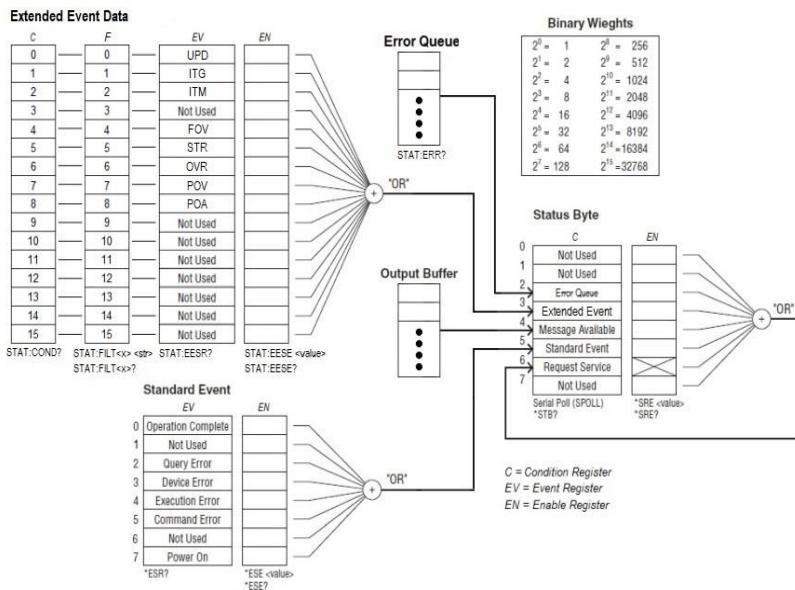

The extended event register receives information about changes in the condition register, which indicates the instrument's internal condition. The information is the result of edge detection performed by the transition filter.

The following table lists the bit definitions for the condition register:

Bit	Name	Decimal	Definition
0	Updating	1	The measured data is being updated. UPD changing from 1 to 0 indicates that updating has been completed.
1	Integrate Busy	2	During integration.
2	Integrate Time Busy	4	The integration timer is operating.
3	Not Used	8	(Reserved for future use)
4	Frequency Over	16	The frequency is outside the measurement range.
5	Store Busy	32	During storage.
6	Measured Data Over	64	The voltage or current exceeds its range.
7	Voltage Peak Over	128	A peak over-range is detected in the voltage.
8	Current Peak Over	256	A peak over-range is detected in the current.
9	Not Used	512	(Reserved for future use)
10	Not Used	1024	(Reserved for future use)
11	Not Used	2048	(Reserved for future use)
12	Not Used	4096	(Reserved for future use)
13	Not Used	8192	(Reserved for future use)
14	Not Used	16384	(Reserved for future use)
15	Not Used	32768	(Reserved for future use)

The transition filter parameters detect changes in the specified condition register bits (numeric suffixes 1 to 16) and overwrite the extended event register in the following ways.

Condition	Definition
RISE	The specified extended event register bit is set to 1 when the corresponding condition register bit changes from 0 to 1.
FALL	The specified extended event register bit is set to 1 when the corresponding condition register bit changes from 1 to 0.
BOTH	The specified extended event register bit is set to 1 when the corresponding condition register bit changes from 0 to 1 or from 1 to 0.
NEVer	Always zero.


The following table describes the Standard Event Register

Bit	Name	Decimal	Definition
0	Operation Complete	1	All commands prior to and including *OPC have been executed.
1	Not Used	2	(Reserved for future use)
2	Query Error	4	The instrument tried to read the output buffer but it was empty. Or, a new command line was received before a previous query has been read. Or, both the input and output buffers are full.
3	Device Error	8	A device error, including a self-test error or calibration error, occurred (an error in the -300 range or any positive error has been generated).
4	Execution Error	16	An execution error occurred (an error in the -200 range has been generated).
5	Command Error	32	A command syntax error occurred (an error in the -100 range has been generated).
6	Not Used	64	(Reserved for future use)
7	Power On	128	Power has been cycled since the last time the event register was read or cleared.



The following table describes the Status Byte Register.

Bit	Name	Decimal	Definition
0	Not Used	1	(Reserved for future use)
1	Not Used	2	(Reserved for future use)
2	Error Queue	4	One or more errors have been stored in the Error Queue. Use STAT:ERR? to read and delete errors.
3	Extended Event	8	One or more bits are set in the Extended Event Register (bits must be enabled, see STAT:EESE).
4	Message Available	16	Data is available in the instrument's output buffer.
5	Standard Event	32	One or more bits are set in the Standard Event Register (bits must be enabled, see *ESE).
6	Request Service	64	One or more bits are set in the Status Byte Register and may generate a Request for Service (RQS). Bits must be enabled using *SRE.
7	Not Used	128	(Reserved for future use)

Dimensions

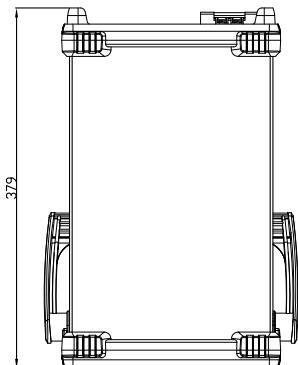

Units = mm

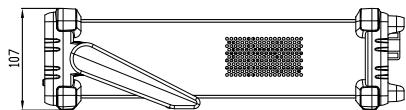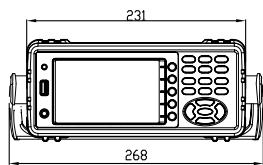

Power measurement


Method

- Direct read method: Directly read the measurement value measured from power measuring instrument.
- The average power method: Record the actual power value within a settable period of time and then take the average. A settable period of time isn't less than 10min. The maximum measurement interval is one second.
- Energy accumulation method: Measure the energy within a settable period of time and then divide it by the time to get the power. A settable period of time isn't less than 10min. The cumulative energy must be greater than the resolution by 200 times.

Measurement for small current

Voltage measurement mode measured from power supply side (Connect to ammeter internally). The current measurement is accurate. The voltage measurement on load could be larger than the actual one due to partial pressure of multi-measurement ammeter.

Connection

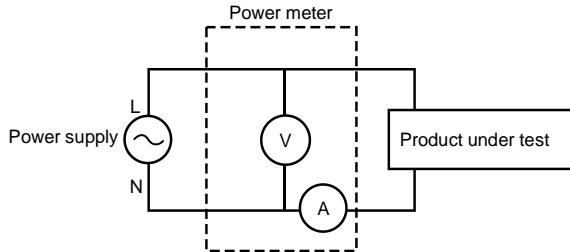


$$\text{Power loss} = (\text{Input current}[A])^2 \times 505\text{m}\Omega$$

Measurement for large current

Voltage measurement mode measured from load side (Connect to ammeter externally).

The voltage measurement is accurate. The current measurement on load could be larger than the actual one due to leakage current of multi-measurement voltage.

Connection

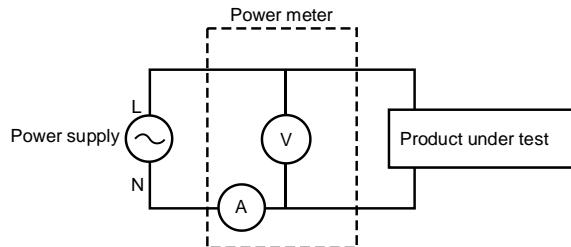

$$\text{Power loss} = (\text{Input voltage[V]})^2 / 2M\Omega$$

Introduction to IEC-62301

IEC 62301-2011 standard is an international basic standard for measuring standby power consumption of household appliances which is issued by IEC. It is a standby power consumption measurement method for the various household appliances, power supply, audio and video appliances to comply with. The latest version for this standard is second edition of German standard IEC62301: 2011 (British regulations EN50564: 2011) which is issued on January, 2011. Only products that comply with the standard can have CE marking affixed on it.

Recommended parameters for power measurement

- Power resolution is less than or equal to 1mW.
- Time integrator function is available.
- Electric energy resolution is less than or equal to 1mWh and cumulative time resolution is less than or equal to 1 second.
- The crest factor is greater than or equal to 3.
- The minimum current range is less than or equal to 10mA.
- The active power includes AC and DC components.
- Over-range automatic alarm function is available.
- Turning off the auto range function is available.
- Harmonic bandwidth is greater than or equal to 2.5kHz.

The T3PM1100 meets all of the features listed above.

EUP Directive Lot6 specifications

Ecodesign directive for energy-using products:

The power loss requirement for the products with external power supply such as information devices, consumer electronics product, household appliances, toys, entertainment and sports products and so on in standby and off mode is as below.


Mode/Limit		2010.01	2013.01
Standby mode	Products with time display function.	$\leq 2W$	$\leq 1W$
	Products without time display function.	$\leq 1W$	$\leq 0.5W$
Shutdown mode		$\leq 1W$	$\leq 0.5W$

Connection Guide


Rear panel

Direct connection: $I < 1A$

Method 1

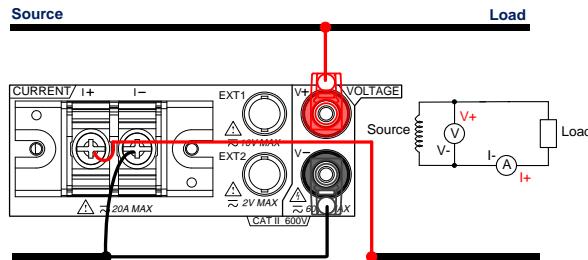


Method 2

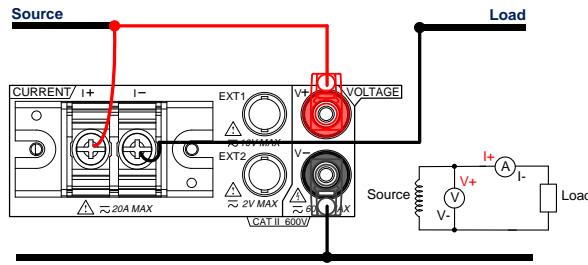


Direct connection: $1A < I < 20A$


Method 1

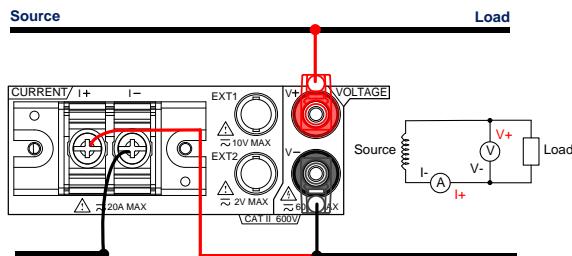

Method 2

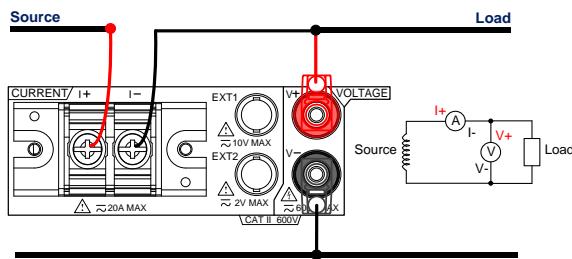


Connection with CT/VT

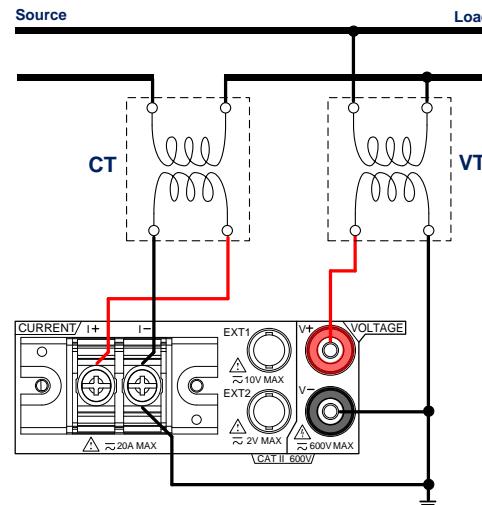


Connection with EXT1/2

EXT1

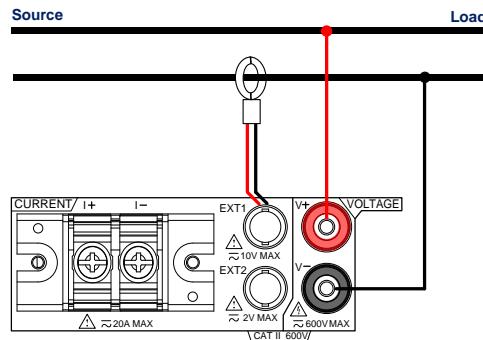

EXT2

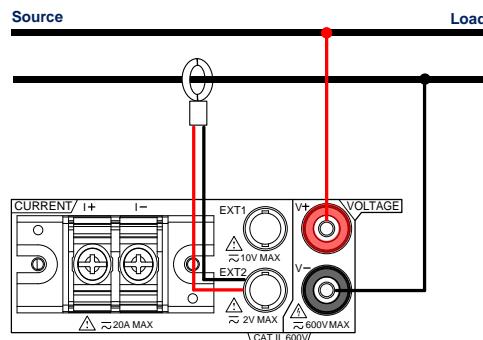

Note

A current probe similar to T3CP150-12 can be used for measuring current greater than 20A. The output of the current probe can be connected to EXT1/EXT2.

CERTIFICATIONS

Teledyne LeCroy certifies compliance to the following standards as of the time of publication. Please see the EC Declaration of Conformity document shipped with your product for current certifications.

EMC Compliance

EC DECLARATION OF CONFORMITY - EMC

The instrument meets intent of EC Directive 2014/30/EU for Electromagnetic Compatibility. Compliance was demonstrated to the following specifications listed in the Official Journal of the European Communities:

EN 61326-1:2013, EN 61326-2-1:2013 EMC requirements for electrical equipment for measurement, control, and laboratory use.¹

Electromagnetic Emissions:

EN 55011:2016+A1:2017, Radiated and Conducted Emissions Group 1, Class A²³

EN 61000-3-2:2014 Harmonic Current Emissions, Class A

EN 61000-3-3:2013 Voltage Fluctuations and Flickers, Pst = 1

Electromagnetic Immunity:

EN 61000-4-2:2009 Electrostatic Discharge, 4 kV contact, 8 kV air, 4 kV vertical/horizontal coupling planes⁴

EN 61000-4-3:2006+ A2:2010 RF Radiated Electromagnetic Field, 3 V/m, 80-1000 MHz; 3 V/m, 1400 MHz - 2 GHz; 1 V/m, 2 GHz - 2.7 GHz

EN 61000-4-4:2012 Electrical Fast Transient/Burst, 1 kV on power supply lines, 0.5 kV on I/O signal data and control lines⁴

EN 61000-4-5:2014+A1:2017 Power Line Surge, 1 kV AC Mains, L-N, L-PE, N-PE⁴

EN 61000-4-6:2014 RF Conducted Electromagnetic Field, 3 Vrms, 0.15 MHz - 80 MHz

EN 61000-4-11:2004+A1:2017 Mains Dips and Interruptions, 0% / 1 cycle, 70% / 25 cycles, 0% / 250 cycles^{4,5}

¹ To ensure compliance with all applicable EMC standards, use high-quality shielded interface cables.

² Emissions which exceed the levels required by this standard may occur when the instrument is connected to a test object.

³ This product is intended for use in nonresidential areas only. Use in residential areas may cause electromagnetic interference.

⁴ Meets Performance Criteria "B" limits of the respective standard: during the disturbance, product undergoes a temporary degradation or loss of function or performance which is self-recoverable.

⁵ Performance Criteria "C" applied for 70% / 25 cycle voltage dips and for 0% / 250 cycle voltage interruption test levels per EN61000-4-11.

European Contact:*

Teledyne GmbH, European Division

Im Breitspiel 11c

D-69126 Heidelberg

Germany

Tel: + 49 6221 82700

AUSTRALIA & NEW ZEALAND DECLARATION OF CONFORMITY – EMC

The instrument complies with the EMC provision of the Radio Communications Act per the following standards, in accordance with requirements imposed by Australian Communication and Media Authority (ACMA):

AS/NZS CISPR 11:2015 Radiated and Conducted Emissions, Group 1, Class A.

Australia / New Zealand Contacts:^{*}

RS Components Pty Ltd. Suite 326 The Parade West Kent Town, South Australia 5067	RS Components Ltd. Units 30 & 31 Warehouse World 761 Great South Road Penrose, Auckland, New Zealand
--	---

* Visit teledynelecroy.com/support/contact for the latest contact information.

Safety Compliance

EC DECLARATION OF CONFORMITY – LOW VOLTAGE

The instrument meets intent of EC Directive 2014/35/EU for Product Safety. Compliance was demonstrated to the following specifications as listed in the Official Journal of the European Communities:

EN 61010-1:2010 Safety requirements for electrical equipment for measurement, control, and laboratory use –

Part 1: General requirements

EN 61010-2:030:2010 Safety requirements for electrical equipment for measurement, control, and laboratory use –

Part 2-030: Particular requirements for testing and measuring circuits

The design of the instrument has been verified to conform to the following limits put forth by these standards:

- Mains Supply Connector: Overvoltage Category II, instrument intended to be supplied from the building wiring at utilization points (socket outlets and similar).
- Measuring Circuit Terminals: No rated measurement category. Terminals not intended to be connected directly to the mains supply.

- Unit: Pollution Degree 2, operating environment where normally only dry, non-conductive pollution occurs. Temporary conductivity caused by condensation should be expected.

Environmental Compliance

END-OF-LIFE HANDLING



The instrument is marked with this symbol to indicate that it complies with the applicable European Union requirements of Directives 2012/19/EU and 2006/66/EC on Waste Electrical and Electronic Equipment (WEEE) and Batteries.

The instrument is subject to disposal and recycling regulations that vary by country and region. Many countries prohibit the disposal of waste electronic equipment in standard waste receptacles. For more information about proper disposal and recycling of your Teledyne LeCroy product, please visit teledynelecroy.com/recycle.

RESTRICTION OF HAZARDOUS SUBSTANCES (RoHS)

EC DECLARATION OF CONFORMITY – RoHS

Unless otherwise specified, all the materials and processes are compliant with RoHS Directive 2011/65/EU in its entirety, inclusive of any further amendments or modifications of said Directive.

CHINA RoHS 2

Unless otherwise specified, all the materials and processes are compliant with the latest requirements of China RoHS 2. The hazardous substances contained in the instrument are disclosed in accordance with the standards SJ/T 11364-2014 (Marking for the restricted use of hazardous substances in electronic and electrical products) and GB/T 26572-2011 (Requirements on concentration

limits for certain restricted substances in electrical and electronic products). The instrument is marked with an appropriate Environmental Friendly Use Period (EFUP) symbol. The packaging materials include the appropriate recycling labels. The below substance disclosure tables (in Chinese and English languages) provide the required compliance information.

部件名称	有毒有害物质和元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
	X	O	O	O	O	O
PCBAs	X	O	O	O	O	O
机械硬件	O	O	O	O	O	O
金属片	O	O	O	O	O	O
塑料部件	O	O	O	O	O	O
电缆组件	X	O	O	O	O	O
显示器	O	O	O	O	O	O
电源	O	O	O	O	O	O
风扇	O	O	O	O	O	O
电池	O	O	O	O	O	O
电源线	O	O	O	O	O	O
外部电源(如有)	X	O	O	O	O	O
探头(如有)	X	O	O	O	O	O
熔丝(如有)	O	O	O	O	O	O
产品外壳(如有)	O	O	O	O	O	O
适配器/模块(如有)	O	O	O	O	O	O
鼠标(如有)	O	O	O	O	O	O
O: 表明该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11364-2014 标准规定的限量要求之下。						
X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11364-2014 标准规定的限量要求。						

EFUP (对环境友好的使用时间): 30 年。

使用条件: 参阅用户手册“环境条件”部分的规定。

探头 EFUP: 10 年。

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr6+)	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
PCBAs	X	O	O	O	O	O
Mechanical Hardware	O	O	O	O	O	O
Sheet Metal	O	O	O	O	O	O
Plastic Parts	O	O	O	O	O	O
Cable Assemblies	X	O	O	O	O	O
Display	O	O	O	O	O	O
Power Supply	O	O	O	O	O	O
Fans	O	O	O	O	O	O
Batteries	O	O	O	O	O	O
Power Cord	O	O	O	O	O	O
Ext Power Supply (if present)	X	O	O	O	O	O
Probes (if present)	X	O	O	O	O	O
Fuse (if present)	O	O	O	O	O	O
Product Case (if present)	O	O	O	O	O	O
Adapters/Modules (if present)	O	O	O	O	O	O
Mouse (if present)	O	O	O	O	O	O

O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement specified in SJ/T11364-2014.

X: Indicates that this toxic or hazardous substance contained in at least one of the homogenous materials used for this part is above the limit requirement specified in SJ/T11364-2014.

EFUP (Environmental Friendly Use Period): 30 years.

Use Conditions: Refer to the environmental conditions stated in the User Manual.

EFUP for Probes: 10 years.

ABOUT TELEDYNE TEST TOOLS



TELEDYNE TEST TOOLS
Everywhereyoulook™

Company Profile

Teledyne LeCroy is a leading provider of oscilloscopes, protocol analyzers and related test and measurement solutions that enable companies across a wide range of industries to design and test electronic devices of all types. Since our founding in 1964, we have focused on creating products that improve productivity by helping engineers resolve design issues faster and more effectively. Oscilloscopes are tools used by designers and engineers to measure and analyze complex electronic signals in order to develop high-performance systems and to validate electronic designs in order to improve time to market.

The Teledyne Test Tools brand extends the Teledyne LeCroy product portfolio with a comprehensive range of test equipment solutions. This new range of products delivers a broad range of quality test solutions that enable engineers to rapidly validate product and design and reduce time-to-market. Designers, engineers and educators rely on Teledyne Test Tools solutions to meet their most challenging needs for testing, education and electronics validation.

Location and Facilities

Headquartered in Chestnut Ridge, New York, Teledyne Test Tools and Teledyne LeCroy has sales, service and development subsidiaries in the US and throughout Europe and Asia. Teledyne Test Tools and Teledyne LeCroy products are employed across a wide variety of industries, including semiconductor, computer, consumer electronics, education, military/aerospace, automotive/industrial, and telecommunications.

Distributed by: