



USB2-GPIB Converter User's Manual

Foreword

Thank you for purchasing Te edyne eCroy s USB2-GP B Converter (hereafter referred to as USB2-GP B or adapter)

This manual describes notes on use and basic usage of the USB2-GP B

Before using this adapter, please read this manual thoroughly to gain a good understanding of it. After reading, please keep the manual in a safe place.

© 2013 by Te edyne eCroy, Inc. All rights reserved.

Te edyne eCroy s are registered trademarks of Te edyne eCroy, Inc. Other product or brand names are trademarks or registered trademarks of their respective holders. Information in this publication supersedes all earlier versions. Specifications are subject to change without notice.

92357 -00 Rev A
Sep 2013

Table of Contents

Overview	1
Safety information	2
Maintenance	2
How to Use the USB2-GP B	3
(a) Connect on	3
(b) Setting up the GP B	4
(c) Communication Status	5
(d) Firmware Upgrade	6
Specifications	7
Service	8
Warranty	8
Certifications	9

Notes

- Parts of the contents of this manual may be modified without prior notice for improvements in performance and functions
- Reproduction or reprinting of the contents of this manual without prior permission from Teledyne eCroy is prohibited
- If you have questions about this adapter, please contact Teledyne eCroy at customersupport@teledyneecroy.com, 1-800-5-eCroy

Overview

The USB2-GP B Converter enables you to remotely control an oscilloscope from a PC using standard GP B commands

- The GP B connector conforms to IEEE488.2 standard. Its default settings are F+EO
- The USB connector conforms to USB 2.0. For details of the GP B commands, see the Remote Control Manual on the Teledyne eCroy website. Note that the USB2-GP B does not function as a controller
- Minimum firmware version required for this device is 6.5.0.x

Safety Information



This symbol may appear on the product to alert you to additional information contained in the operator's manual. The corresponding information in this guide is summarily denoted.

To avoid personal injury or damage to the USB2-GP B or any equipment connected to it, review and comply with the following safety precautions.

Use only as intended. Use of the USB2-GP B and/or the equipment it is connected to in a manner not specified by the manufacturer(s) may impair the protection mechanisms.

Connect and disconnect properly. Do not connect or disconnect equipment to the GP B connector of the USB2-GP B during data transfer. The green LED of the USB2-GP B stays lit while the communication is in progress. Disconnecting equipment during this time may result in data corruption or equipment damage.

Do not use in wet/damp or explosive atmospheres.

For indoor use only. The USB2-GP B is intended for indoor use and should be operated in a clean, dry, environment.

Do not operate with suspected failures. Do not use USB2-GP B if any parts are damaged. All maintenance should be referred to qualified service personnel.

Keep product surfaces clean and dry.

Maintenance

USB2-GP B is a high quality, precision adapter. To maintain accuracy and significant life, avoid mechanical shock, as well as damage to the cable through excessive bending. It is recommended to inspect cables before use to ensure they are in good condition and are properly connected. Poor cables and/or connections will result in data corruption.

Refer all maintenance and component replacement to qualified personnel. Do not remove external covers in an attempt to clean internal parts.

Clean the outside of the USB2-GP B with a soft cloth dampened with either deionized / distilled water or isopropyl alcohol. Allow the surface to dry completely before returning the adapter to service.

How to Use the USB2-GPIB

(a) Connection

As shown in Figure 1 below, insert the USB connector into the USB port of the oscilloscope, then attach the IEEE-488/GPIB connector to the PC. During the first use of the adaptor, Windows will install the device driver. You may need to restart the oscilloscope for the adaptor to be functional.

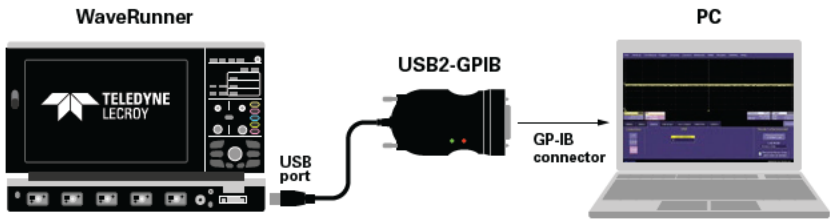


Figure 1 Connection Diagram of GPIB Control

(b) Setting Up the GPIB

Set up the GPIB on the measurement screen of the oscilloscope (Figure 2) following the steps shown below.

- ① Touch [Utilities] in the menu bar and select [Utilities Setup] from the pull-down menu.
- ② Click the Remote tab in the setup area in the lower part of the screen.
- ③ Select GPIB in the Control From section.
- ④ Select the GpibAddress and set an address by entering a value.

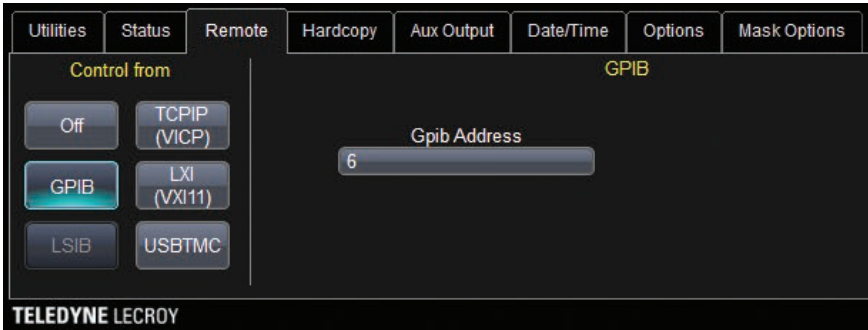


Figure 2 Remote Control Setup Screen of the WaveRunner 6 Z

(c) Communication Status

The USB2-GPIB is equipped with two LEDs on the GPIB connector side to indicate the communication status. The LEDs indicate the following statuses:

- ① Red READY LED is ON: Power to the USB2-GPIB is ON.
- ② Green ACTIVE LED blinks to indicate GPIB activity.

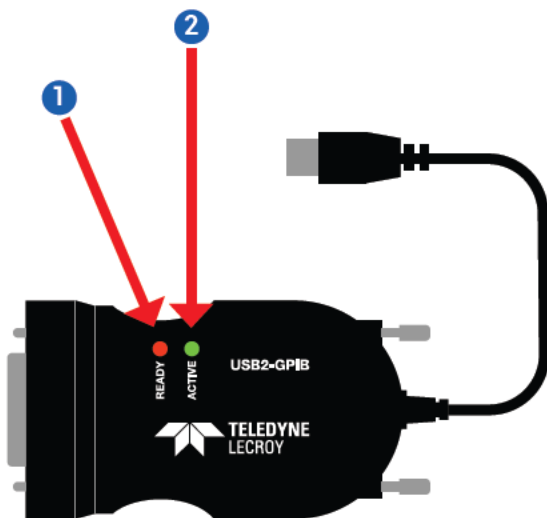


Figure 3 Drawing of USB2-GPIB

b) Firmware Upgrade

After installing a driver or an oscilloscope firmware upgrade, it may be necessary to upgrade the dongle firmware on the USB2-GPIB. A pop up window will appear to indicate incompatibility and instruct you to remove the device. Follow these steps to upgrade the dongle firmware.

1. Download USB2-GPIB dongle firmware upgrade from teedynetecroy.com. Extract this archive to a local folder of the controller computer (e.g., C:\Temp).
 2. **Before reconnecting the USB2-GPIB device**, open the Windows Device Manager utility on your computer. Go to the Windows Start Menu and choose Control Panel > System > Device Manager.
 3. **While pressing the dongle button underneath the case**, plug the USB2-GPIB dongle into the computer USB port. The dongle should show up as AT32UC3A in the Windows Device Manager list of devices.
 4. Install the Atmel USB DFU driver.
 - Right click on AT32UC3A in the Device Manager and choose Update Driver Software.
 - If using Windows 7, choose Browse my computer for driver software, if using Windows XP, choose Install from a list or specific location (Advanced).
 - Browse to the Atmel_DFU_USB_Driver folder of the extracted download archive.
- The dongle should now show up as AT32UC3A3 under the Atmel USB Devices folder of the Windows Device Manager list of devices.
5. Double-check the DFU_UpgradeDongleFW.bat file in the driver folder, which will upgrade the dongle with the latest firmware. The dongle firmware upgrade is successful if the red LED is on.

USB2-GPIB Specifications

Item	Specifications
Power feed	Bus-powered
USB standard	Conforms to USB Specification 2.0
USB connector	Type A
GPIB connector	Amphenol 24-pin (male)
Power consumption	350mA at the maximum (during operation)
Temperature, operating	5 to 40 °C
Temperature, storage	-40 to 71 °C
Humidity, operating	≤ 80% RH (non-condensing)
Altitude, operating	3048 m (10,000 ft) max at ≤ 25 °C
External dimensions	61 (W) × 22 (H) × 113 (D) (mm)
Cable length	750 (mm)
Mass	Approx. 140 g

Notes:

- The source voltage is supplied from the USB port
- The appearance or parts of the specifications subject to change without prior notice
- GPIB driver needs to be properly configured to allow HS488 high speed mode, including proper definition of the cable length

Service

If the adapter is nonoperable, send it back to Teledyne eCroy. Contact us for a Return Material's Authorization (RMA) number and shipping instructions before sending it. (Refer to the contact information on page 1 of this manual.) We will repair it without charge as long as it is under warranty.

When sending back the adapter, explicitly describe the following:

- RMA number
- Product name and serial number
- Description of the trouble
- Name/post/phone number of the owner

Warranty

NOTE: THE WARRANTY BELOW REPLACES ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS, OR ADEQUACY FOR ANY PARTICULAR PURPOSE OR USE. TELEDYNE ECROY SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER IN CONTRACT OR OTHERWISE. THE CUSTOMER'S RESPONSIBILITY FOR THE TRANSPORTATION AND INSURANCE CHARGES FOR THE RETURN OF PRODUCTS TO THE SERVICE FACILITY, TELEDYNE ECROY, WILL RETURN ALL PRODUCTS UNDER WARRANTY WITH TRANSPORT PREPAID.

The adaptor is warranted for normal use and operation, within specifications, for a period of three years from shipment. Teledyne eCroy will either repair or, at our option, replace any product returned to one of our authorized service centers within this period. However, in order to do this we must first examine the product and find that it is defective due to workmanship or materials and not due to misuse, neglect, accident, or abnormal conditions or operation.

Teledyne eCroy shall not be responsible for any defect, damage, or failure caused by any of the following: a) attempted repairs or installations by personnel other than Teledyne eCroy representatives or b) improper connection to incompatible equipment, or c) for any damage or malfunction caused by the use of non-Teledyne eCroy supplies. Furthermore, Teledyne eCroy shall not be obligated to service a product that has been modified or integrated where the modification or integration increases the task duration or difficulty of servicing. The adaptor spare and replacement parts, and repairs, shall have a 90-day warranty.

Certifications

EMC Compliance

EC DECLARATION OF CONFORMITY - EMC

The converter meets intent of EC Directive 2004/108/EC for Electromagnetic Compatibility Compliance was demonstrated to the following specifications as stated in the Official Journal of the European Communities

EN 61326 1 2006, EN 61326 2 1 2006 EMC requirements for electronic equipment for measurement, control, and laboratory use

European Contact

AUSTRALIA & NEW ZEALAND DECLARATION OF CONFORMITY - EMC

The converter complies with the EMC provisions of the Radio Communications Act per the following standards, in accordance with requirements imposed by Australian Communications and Media Authority (ACMA)

C SPR 11 2003 Radiated and Conducted Emissions, Group 1, Class A, in accordance with EN61326 1 2006 and EN61326 2 1 2006

Safety Compliance

EC DECLARATION OF CONFORMITY - LOW VOLTAGE

The probe meets intent of EC Directive 2006/95/EC for Product Safety Compliance was demonstrated to the following specifications as stated in the Official Journal of the European Communities

EN 61010 1 2010 Safety requirements for electronic equipment for measurement, control, and laboratory use – Part 1 General requirements

EN 61010 031/A1 2008 Safety requirements for electronic equipment for measurement, control, and laboratory use – Part 031 Safety requirements for handheld probe assemblies for electronic measurement and test

Environmental Compliance

END-OF-LIFE HANDLING



The converter is marked with this symbol to indicate that it complies with the applicable European Union requirements to Directives 2002/96/EC and 2006/66/EC on Waste Electrical and Electronic Equipment (WEEE) and Batteries

The converter is subject to disposal and recycling regulations that vary by country and region. Many countries prohibit the disposal of waste electronic equipment in standard waste receptacles. For more information about proper disposal and recycling of your Teledyne eCroy product, please visit teledyneecroy.com/recycle

RESTRICTION OF HAZARDOUS SUBSTANCES (RoHS)

The converter conforms to 2011/65/EU RoHS2 Directive based on the fact that it is classified as Industrial Monitoring and Control Instrument (per Article 3, Paragraph 24) and these product(s) & associated accessories are exempt from RoHS compliance until 22 July 2017 (per Article 4, Paragraph 3)

Thank You for Purchasing a USB2-GPIB

Test Equipment Depot - 800.517.8431 - 5 Commonwealth Ave, MA 01801
TestEquipmentDepot.com