




**Mastercool<sup>®</sup>**  
*"World Class Quality"*

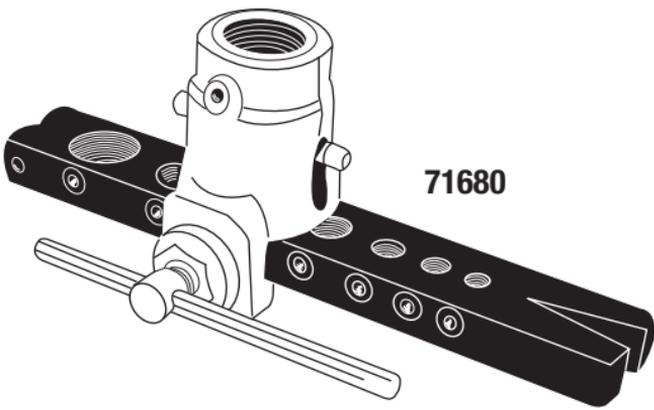

**INSTRUCTION MANUAL  
HYDRAULIC FLARING ACCESSORY**


**Test Equipment  
Depot**  
1-800-517-8431

99 Washington Street  
Melrose, MA 02176  
Phone 781-665-1400  
Toll Free 1-800-517-8431



Visit us at [www.TestEquipmentDepot.com](http://www.TestEquipmentDepot.com)


# HYDRAULIC FLARING ACCESSORY INSTRUCTIONS

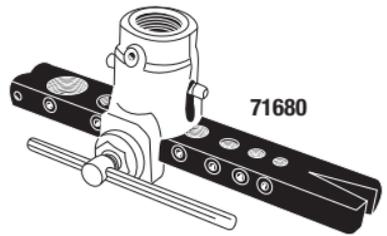


**WARNING**




**Wear Safety Goggles**

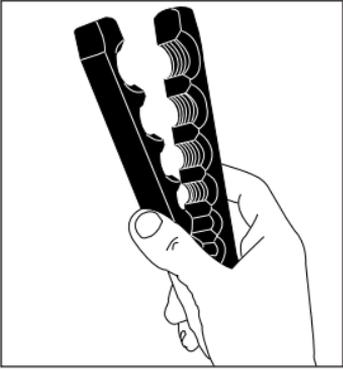


1.) Take the bar and open it.

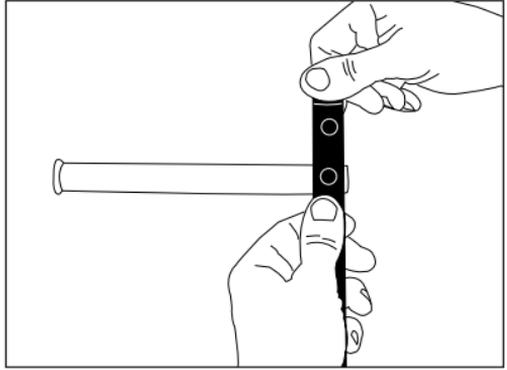


2.) Install the copper tube at the desired size and line up to the bar.

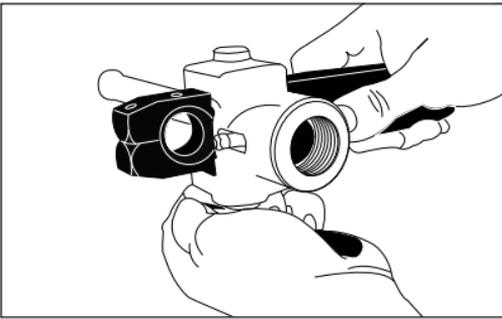

3.) Slide the yoke over the bar until the bars line up to the copper tube at the selected size. Tighten the handle on the yoke.

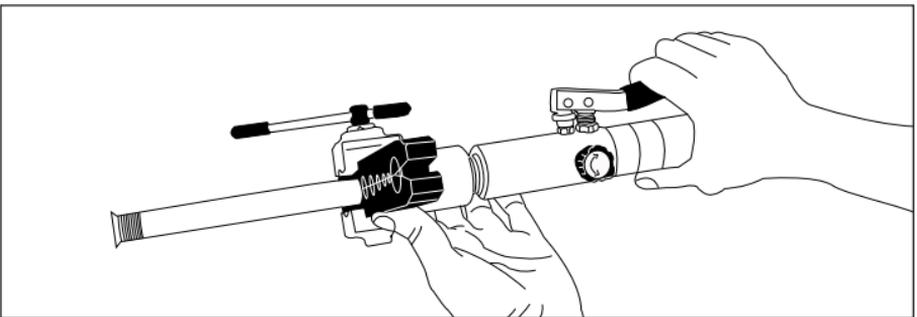

4.) Assemble the hydraulic pump. Turn the hydraulic bar until it is tight. Close the relief valve knob and pump handle until it becomes firm.

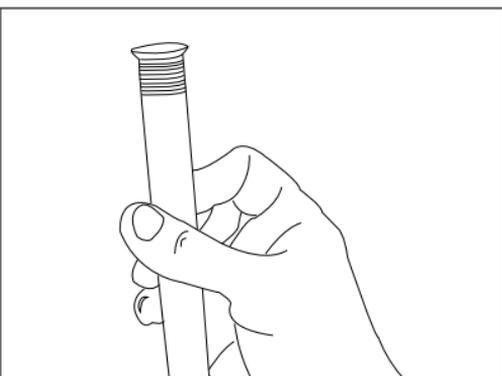

5.) Loosen the relief valve, unscrew the pump and disassemble yoke from bar.



Test Equipment Depot - 800.517.8431  
99 Washington Street, Melrose, MA 02176  
**TestEquipmentDepot.com**