
R1234vf PIERCING DESIGN RECHARGE KIT

FEATURES

Charge A/C systems using R1234vf pierce designed cans

SAFETY WARNING AND PRECAUTIONS






WARNING: Make sure hose has been purged

or vacuumed before use

WARNING: Wear safety glasses

The 1990 amendments to the United States Clean Air Act mandate that all personnel who service refrigerant systems must be trained and certified. Fines are in place for violations and compliance is now being monitored by the U.S. EPA.

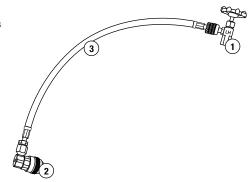

OPERATING INSTRUCTIONS

- 1. Connect can tap fitting to hose and coupler assembly.
- 2. Connect refrigerant can to the bottom of can tap, turn *counterclockwise*.
- 3. Turn handle clockwise to pierce the refrigerant can.
- 4. Turn counterclockwise to flow refrigerant.
- 5. First time use, purge air in hose.
- 6. Connect coupler to low side of system, refrigerant will flow into the system.
- 7. When can is empty properly discard can.

PARTS LIST

ITEM#	PART#	DESCRIPTION
1	85510-YF	R1234yf 1/2" ACME-LH thread piercing design can tap valve
2	67534	R1234yf low side quick coupler 12 mm-F x 14 mm
3	83181	R1234yf 18" blue hose



Test Equipment 99 Washington Street Melrose, MA 02176 Phone 781-665-1400 Toll Free 1-800-517-8431



△ WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.