

Seven easy steps to use the JackRapid



1. Strip cable jacket.



2. Determine wiring scheme. Dress all 4 pairs (8 wires).



3. Insert jack in JackRapid front first with IDC slots facing blades of JackRapid.



4. Ensure jack is completely and securely inserted in jack holder bed with IDC slots facing the blades.



5. Pull trigger completely until you hear an audible "click".



6. Wires will be seated and cut for a solid termination.



7. Release handle and remove jack from JackRapid tool. Visually verify proper termination.


Test Equipment Depot
1-800-517-8431

99 Washington Street
Melrose, MA 02176
Phone 781-665-1400
Toll Free 1-800-517-8431


Visit us at www.TestEquipmentDepot.com

Six easy steps to change the blade

To attach blade head

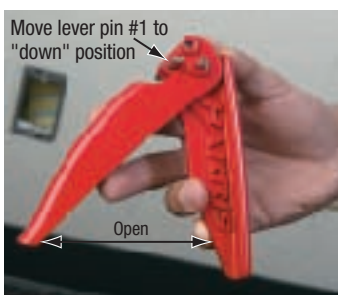

1. Open tool handle and move lever to pin #1 "down" position.

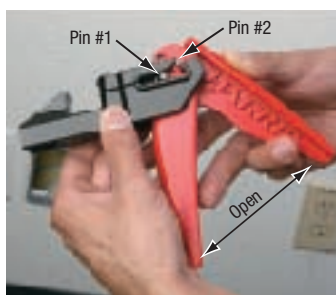

2. Angle handle, and insert pin one into blade head first. Be sure to keep tool handle in open position.




3. Make sure handle is open. Once pin #1 has been inserted, slide pin #2 into blade head.

To remove blade head



1. Make sure handle is in open position. Push handle and blade toward each other.

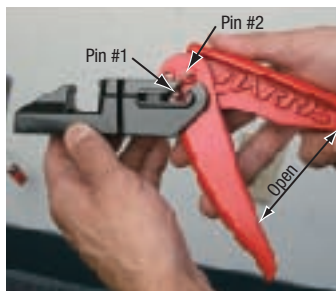

2. Angle handle so that pin #2 will slide out first. Then slide out pin #1.



3. You have successfully removed the blade head.