

## Dual DVB-S/S2 receiver with CAM and ASI-TS output



The **DT-302** (dual) modules are digital satellite receivers compatible with DVB-S and DVB-S2 standards. They can receive a satellite transponder and deliver the transport stream in the form of TS-ASI.

Each satellite receiver has two identical TS-ASI outputs. This is because satellite transponders can typically allocate a higher number of services than DVB-T mutiplexes and therefore more than one

COFDM modulator may be required if we want to deliver all services of the transponder to the TV distribution system

Each satellite receiver allows inserting a Conditional Access Module (*CAM*). Several types of CAM can be used for de-encrypting one or more of the available encrypted programmes and being distributed (see **DT 902**).

Specifications	DT-302
DVB-S/S2 FI input Type Connector Range Frequency Input Level Information	2 independent DVB-S/S2 FI inputs 75 Ω Type-F, Female From 950 MHz to 2150 MHz 40 – 110 dBμV MER of the signal
LNB Power supply Voltage Current 22 kHz Signal Voltage Frequency	OFF, 13 V and 18 V (± 1 V)  < 400 mA  ON, OFF  0.65 V ±0.35 V  22 kHz ± 4 kHz
DVB-S Receiver Parameters Symbol Rate Roll off Code Rate Spectral Inversion	2 – 45 Mbauds 0.35 Automatic (1/2, 2/3, 3/4, 5/6, 7/8) Automatic (ON, OFF)
DVB-S2 Receiver Parameters Constellation Symbol Rate (QPSK) Symbol Rate (8PSK) Roll-off Factor Code Rate (QPSK) Code Rate (8PSK) Spectral Inversion	QPSK, 8PSK (Auto)  2 – 33 Mbauds  2 – 30 Mbauds  Automatic (0.20 , 0.25 and 0.35)  Automatic (1/4, 1/3, 2/5, 1/2, 3/5, 2/3, 3/4, 4/5, 5/6, 8/9, 9/10 )  Automatic (3/5, 2/3, 3/4, 5/6, 8/9, 9/10)  Automatic (ON, OFF)
Decrypting multiples services Interface Maximum number of decrypted services	2 independent Common Interfaces Depending on the CAM module you use (see <b>DT-902</b> )
Configuration	Through the <b>DT-800</b> Control Module in local or remote mode (PC). See <b>DT-800</b> specifications




## Dual DVB-S/S2 receiver with CAM and ASI-TS output

Transport Stream Process Basic Functions  Advanced Functions (only available when connecting to DT-1XX modulator)	Simultaneous decryption of multiples services (using a proper CAM module. (See DT-902) * Selection of decrypted services by name  Selection of Services by name or streams filtering by PID Automatic Regeneration of PAT and SDT tables Distribution of TS services among various output multiplexes Adaptation of the NIT table: - NID (Network IDentifier) editable - Management of LCN (Logic Channel Number) for each module and each service
TS Output Type Connector Packets	2 independent DVB-ASI double outputs ** BNC femelle, 75 $\Omega$ TS Packets of 204 bytes length
Power supply Connector Voltage and highest consumption	Via the <b>DT-800</b> Control and Power module  JST B08P-XL-HDS (connecting cable supplied with <b>DT-800</b> )  +12 V < 0.55 A  +5 V < 1.4 A
Mechanical features Dimensions Weight	50 mm (W.) x 262 mm (H.) x 230 mm (D.) 1.28 kg
Included accessories 1x 0 CC024 1x 0 CC027 1x 0 MI1622	BNC/BNC Cable 25 cm BNC/BNC Cable 50 cm User's Manual
Recommended accessories DT-902	CAM multiservice module for conditional access (maximum of 12 services) (Viaccess, Mediaguard, Irdeto, Conax, Betacrypt, Cryptoworks)
Minimal configuration needed 1x DT-800 1x Mounting structure	Power and Control Module Rack and wall mounting structure ( <b>DT-900</b> ) or Rack mounting structure ( <b>DT-900B</b> )

<sup>\*</sup> It is recommended to use the module CAM **DT-902** for other types of CAM.

<sup>\*\*</sup> Double TS outputs deliver 2 copies of the same TS. Combining them with a **DT-1xx** modulator, allows distributing easily various services from a TS in 2 different output multiplexes, but only using one receiver.

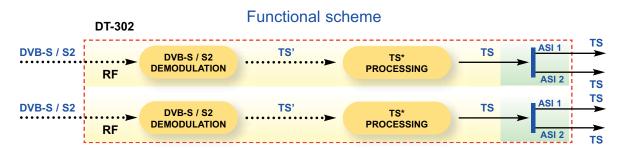

<sup>\*\*</sup> Available functions to process TS depend on the chosen combination of "Digital To TV" modules. For more details, see modules specifications.