




testo TopSafe
0516.0220, 0516.0221, 0516.0222

Application information

The protection class IP65 is reached with the cap for the respective instrument and attached waterproof probes or inserted socket plugs.

The TopSafe is manufactured from a food-safe material. Foodstuffs that stain, (e.g. tomato ketchup) can colour the TopSafe permanently. The protective function is not affected by this.

Use

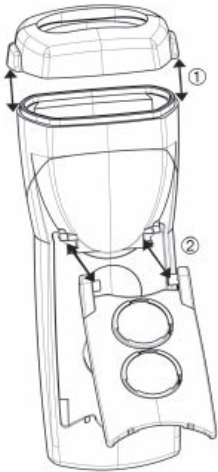

> Inserting the instrument

- 1 Prise up the cap at the side and remove ①.
- 2 Push the instrument into the TopSafe.
- 3 Attach the correct cap and press tight:



testo 110, 112,
416, 425, 625,
720, 512



testo 925
testo 926



testo 922

> Fitting the stand:

- > Clip the stand on or off as required ②.



WARNING! Magnetic field

May be harmful to those with pacemakers.

- > Keep a minimum distance of 15 cm between pacemaker and instrument.



ATTENTION! Magnetic field

Damage to other devices!

- > Keep a safe distance away from products which could be damaged by the effects of magnetism (e.g. monitors, computers or credit cards).

> Cleaning TopSafe:

- > Clean the stand with a mild soap solution.
- > Clean TopSafe without the stand in the dishwasher.