


**INSTRUCTION SHEET**  
**PRO Strip 25R**  
**P/N 15028**

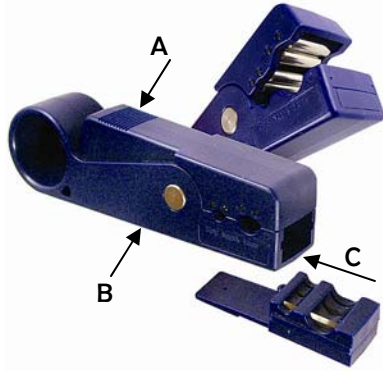

**Instructions for use:**

1. Open stripper jaws (A).
2. Select proper cable stripper location per cable size designated on side of tool
3. Insert coaxial cable from left to right.
4. Close the stripper jaws by releasing grip.
5. Rotate the stripper 3 to 6 times clockwise.
6. Keeping the jaws closed, pull both cable & stripper away from each other.
7. Open the jaws and clean out removed coax material.

**Replacing the Blade  
Cartridge P/N 15029C**

1. On the underside of the stripper, push down and forward on the cartridge (B) to slide it out and finish removing it by hand.
2. Slide the new cartridge into the slot (C) until you hear it click into position.



**Test Equipment  
Depot**  
1-800-517-8431

99 Washington Street  
Melrose, MA 02176  
Phone 781-665-1400  
Toll Free 1-800-517-8431

 Visit us at [www.TestEquipmentDepot.com](http://www.TestEquipmentDepot.com)