


NOZZLE QUICK CHANGER C5045/C5046


Test Equipment Depot
 99 Washington Street
 Melrose, MA 02176
 Phone 781-665-1400
 1-800-517-8431 Toll Free 1-800-517-8431

Visit us at www.TestEquipmentDepot.com

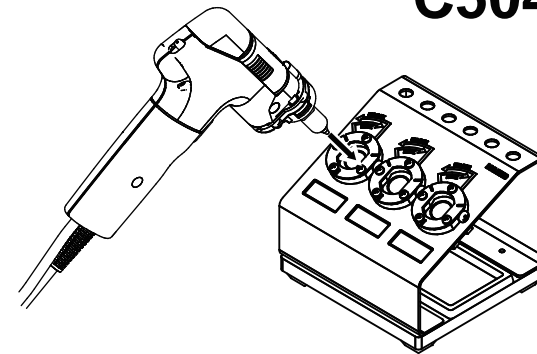



CAUTION
 The nozzle quick changer is not an iron holder.
 Placing a hot iron on the changer for a long time raises the base temperature, causing a danger of burns.
 Always place the iron on the iron holder when the iron is not going to be used for a long time.

• Removal method

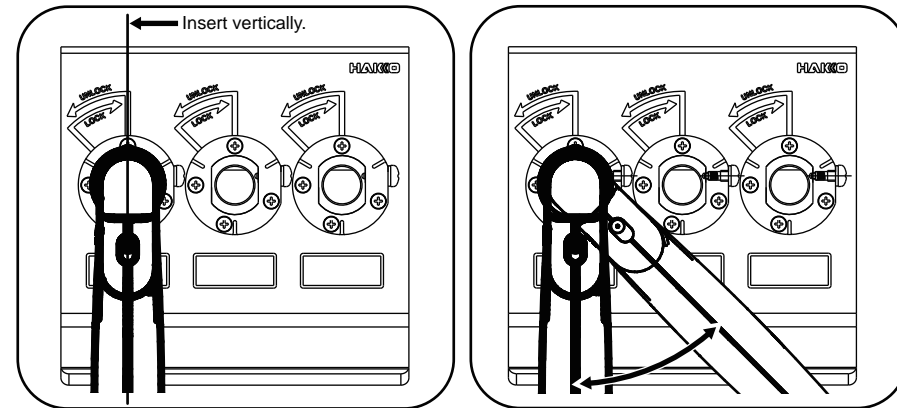

• Attachment method

Point to note when placing the replacement enclosure pipe assembly
 Align the guides of the quick changer with the convex parts of the enclosure pipe assembly.

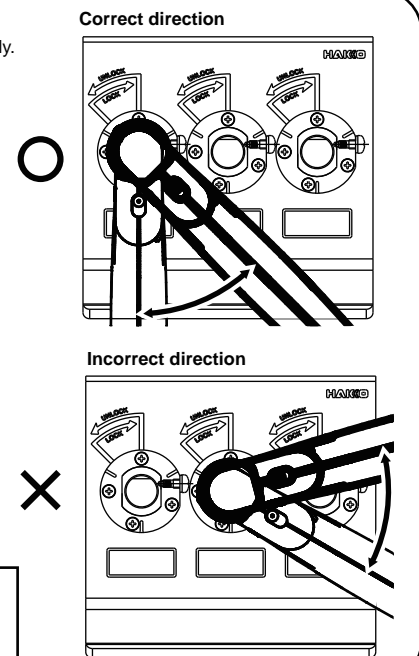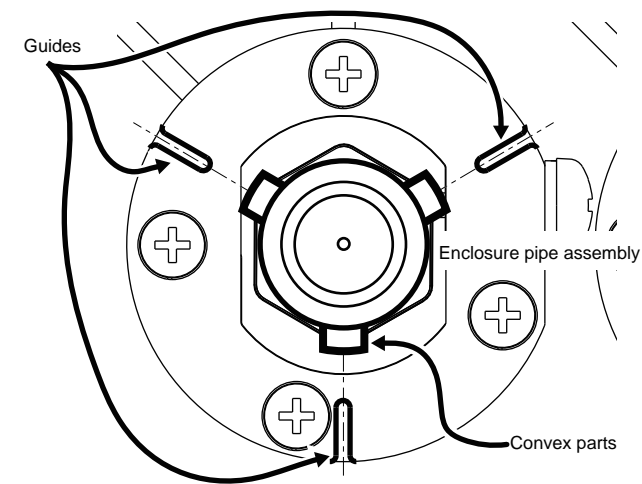

—Note—
 If the convex parts of the enclosure pipe assembly are not aligned with the guides, the attachment angle of the iron changes.
 Place the enclosure pipe assembly in the correct direction.