



ERGO PRO BACKPACK VACUUM OWNER'S MANUAL

Model: VACBPAI

120V 12A, 1400W ETL US Canada

Test Equipment Depot - 800.517.8431 - 99 Washington Street Melrose, MA 02176

TestEquipmentDepot.com

≠A DCF H5 BH'G5 : 9 HM≠BGHF I 7 H≠CBG'

Y @} Á•ā * Áē Á|∧&d æāÁē } |æē & Ææ æÁ|∧&æē cā } Á @~ |áÁē, æ•Á∧Á| III, ^áÆē &| āā * Á@Á| III, ā * ÁÁ
F958'5 @@-BGHF I 7H≠CBG'69: CF9' I G-B; 'H<-G'5 DD@5 B79'


K 5 FB=B; '

V[Á∧ā~ & Á@Áā\ Á Áā∧Æ|∧&d æÁ @ & Æ| Áē b|∧Á

FÈÖ[Á[ó∧æ∧Áæ~ { Á|∧æ∧Á| Á @} Á|∧**áāÆ ÈM}] |∧* Á|{ Á~ d'ó @} Á[ó∧ Á•∧Áē áÁ∧|∧^Á∧|çāā * È
GÈÖ|∧&d æāÁ @ & Á æ Á && |ÁÁ•∧áÁ~ cā[|∧Á|Á } Á ^ó∧~ |∧æ∧
HÈÖ[Á[ó∧|, Áē Á∧Á•∧áÁē Áá∧^ ÈÖ[∨∧Áæc } cā } Á∧Á∧∧•æ∧ Á @} Á•∧áÁ∧ Á|Á∧æ∧Á@á|∧} È
| ÈV∧^Á } |∧ Á∧Á• & æ∧áÁ Á@Á æ∧ æÈV∧^Á } |∧ Á æ∧ æc'∧|ç Á∧ & { { } á∧áÁ•d' &cā } •È
Í ÈÖ[Á[ó∧^Á æ∧æ∧ æ∧áÁÁ|áÁ|∧ * ÈÖ} |æē & Á Á[ó [|∧ ā * Á∧Á @~ |áÆæ Á∧∧ } Á|]] ^áÈ
áæ æ∧áÁÆ∧~ cā[|∧ Á|Á|]] ^áÁ d' Á æ∧|Æ∧c' } ÁÁ Á@Á@Á } æā } æÈ
Î ÈÖ[Á[ó∧ |∧ Á|Áæ∧ Á∧ Á|áÆ∧^Á|áÁ∧ Á@Á æ∧ Á|Æ[∨∧Áæc [|Á } Á|áÆ∧ Á~ |∧ Á|áÁæ[~ } áÁ @æ } Á∧∧^Á~
&| } ∧|• ÈÖ[Á[ó∧ } Áē } |æē & Á ç∧Á|áÆ∧^Á } Á|áÁæ æ Á|{ Á@æ∧Á~ |∧æ∧^Æ
Ï ÈÖ[Á[ó∧]] * Á∧ Á~ |∧ ā * Á } Á|áÆ∧[Á]] * È∧|æ } Á|∧ * È∧[ó@Á|áÆ]]
ì ÈÖ[Á[ó@æ á∧Á|∧ * Á|Áē } |æē & Á æ∧^ó@æ á•È
JÈÖ[Á[ó∧ ~ ó∧ ^ Á áb&æ d' Á] } ā * ÈÖ[Á[ó∧^Á æ∧æ∧ Á] } ā * Á| & ∧áÁ∧∧ Á∧∧Á Á~ • cāā c'æÁæ } á
æ∧ @æ * Á@æÁ æ Á∧ā~ & Áæ∧|, È
FÈÈ∧∧ Á@æÈ[∨∧Á| çā * Èā * ∧| Áæ áÁ|Á[á Á æ∧ Áæ æ Á|{ { } Á] } ā * Áæ áÁ [çā * Á æ∧ È
FFÈÖ[Á[ó∧ Á } Áæ ~ cā * Á@æÁ } } ā * Á|Á{ [|∧ ā * Á & @æ Áæ æ∧æ∧ È æ&@• Á|Á@æ @•È
FGÈÖ[Á[ó∧^Á æ∧~ Áæ∧|Á } |æÈ
FHÈV' } Á ~ Á|Á } d[|∧ Á∧|∧^Á]] |∧**ā * È
FI ÈV∧^Á c'æææ∧ Á @} Á|∧æ∧ ā * Á } Áæ∧•È
FÍ ÈÖ[Á[ó∧^Á Á } Áæ Á } Áæ ~ á∧ æ∧ &| āā * Áæ { æ∧Á|Á|Á { á~ cā∧Áā~ á•Á~ &@æ Áæ [|á∧Á|Á•∧Á
æ∧æ∧ @∧|∧@∧ Á æ∧Á∧|∧∧ } cā
FÍ ÈÖ[}] ^áÁæ Á|]] ∧|∧ Á|] } á∧áÁ~ d'ó }] È
FÏ ÈV@ Áē } |æē & Á Á[ó∧ c' } á∧áÁ|Á•∧Á∧ Á∧|∧|∧•Á } •Áæ &| āā * Á@á|∧ } Dá æ∧Á∧~ &∧Á @• ææÈ∧ } • [|∧ Á|
{ } æ∧ææ æāā• È∧ Áæ Á Á c' |á } & Áæ áÁ [, |á∧^Æ } |∧•Á@∧ Á@æ∧Á∧∧ Áæ∧ } Á~ |∧|çāā } Á|Á•d' &cā } Á
&| } &| } ā * Á•∧Á Á@Á } |æē & Á Á∧∧|∧|∧ } Á∧|∧|∧• æ∧Á|Á|Á@áÁæ∧c ÈÖ@á|∧ } Á @~ |áÁ∧∧~ |∧|çā∧áÁ Á
∧ } ~ |∧ Á@æÁ~ Á[Á[ó∧ æ∧ Á æ∧@Á } |æē & Á

G5 J9 'H<9 G9 '≠BGHF I 7 H≠CBG''

GETTING TO KNOW YOUR ERGO PRO Series VACUUM

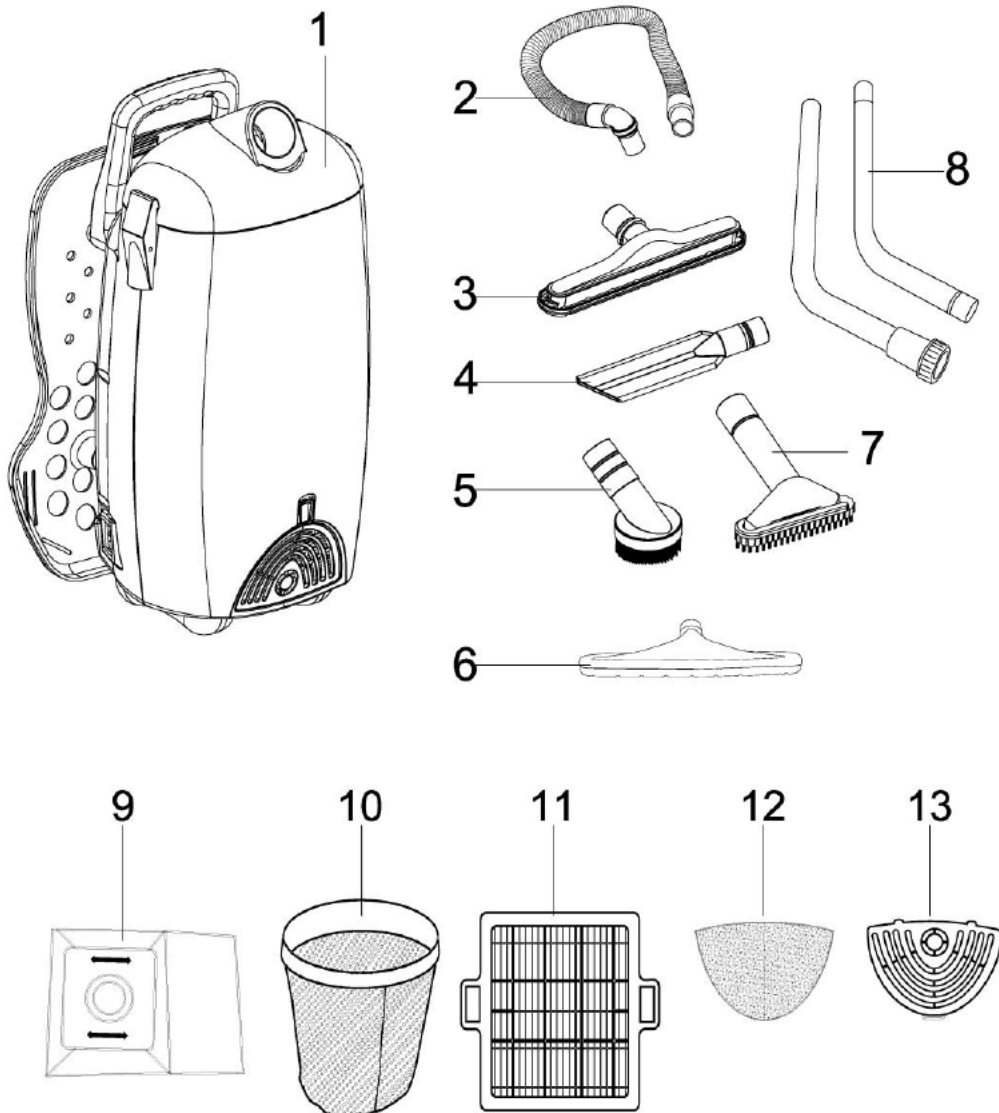

1. Replacement 1.5" Lid Grey (VACBPAILIDG)
 1A Replacement Latch (BP34-38)
 1B Replacement Handle, Webbing and Harness Assembly (VACBPHARNES)
2. Replacement Hose 1.5" (VACBPAI39)
3. Floor Tool w/Scallops 1.5" (VACBPAI34)
4. Crevice Tool 1.5" (VACBPAI36)
5. Round Dusting Brush 1.5" (VACBPAI33)
6. Floor Tool with Bristles 1.5" (VACBPAI35)
7. Upholstery Tool w/Brush 1.5" (VACBPAI32)

8. 1.5" Aluminum Wand (VACBPAI37 "hose end" and 1.5" VACBPAI38 "utensil end")
9. HEPA Bag (VACBP6-10P)
10. Reusable Cloth Shake-Out Bag (VACBP8)
- 11 and 12. HEPA Pre-Motor Filter and Exhaust Filter (BPFILPACK)
13. Exhaust Filter Cover (BP18)

Operating Instructions

Warning: To reduce the risk of electric shock, the power cord must be disconnected from the wall outlet before removing and replacing filters or performing maintenance.

Replacing the HEPA Bag

1. To open the canister lid, pull up the canister lid tabs on each side of the unit and remove canister lid. (Fig.1)
2. Pull the tab on the HEPA bag holder out slightly and flip upwards.(Fig. 2)
3. Holding the HEPA bag in your hand, slide/pull it out of the bag holder and dispose. (Fig. 2)
4. Insert/slide new bag. Cardboard face should rest securely in the bag cover guides.(Fig. 3)



Fig.1



Fig.2



Fig. 3

Cleaning the Cloth Shake-out Bag

1. Remove the Shake-out bag from the canister. (Fig. 4)
2. As necessary, hand or machine wash the cloth shake-out bag and let it air dry before reinserting it onto canister lip.

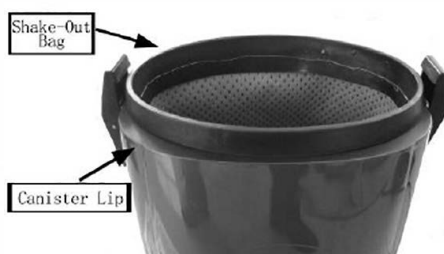


Fig. 4

Cleaning the HEPA Pre-motor Filter

1. Press/pinch both tabs and pull upwards on filter.
2. Tap out the contents of the HEPA filter over a garbage can.
3. If necessary, thoroughly rinse the HEPA filter using regular tap water. Then shake off any excess water and allow to dry completely before reinserting it.
4. To reinsert, place filter over the tabs and press down. You should hear two "clicks" if installed correctly. (Fig. 5)

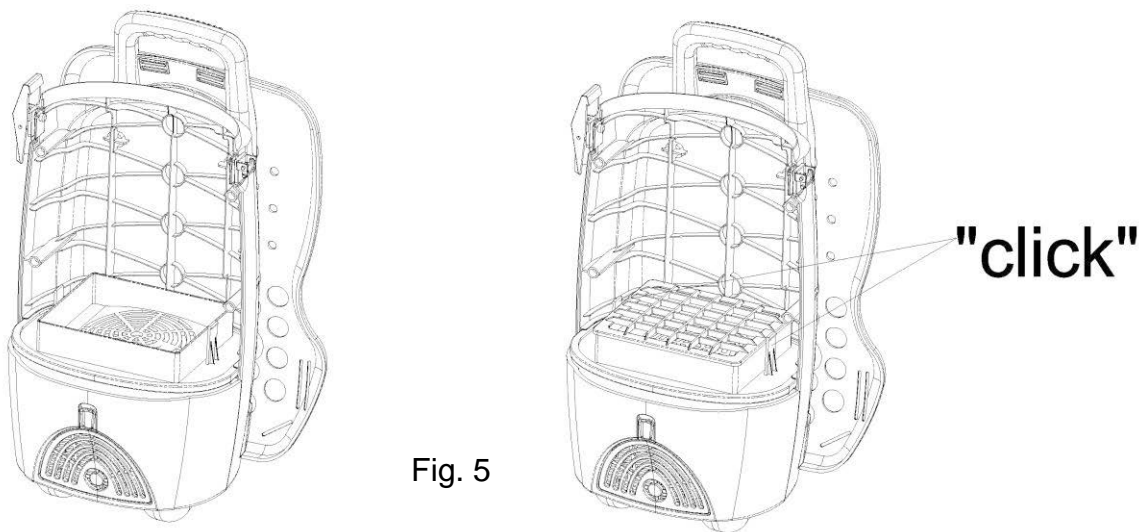


Fig. 5

Caution: The HEPA pre-motor filter will stop most of the tiniest dust particles and airborne allergens from re-entering the air you breathe. In fact, it can stop 99.97% of most particles as small as 0.3 microns. Over time, this HEPA pre-motor filter will accumulate fine dust particles. Clean or replace the HEPA pre-motor when you see a lot of dust and dirt embedded.

Cleaning the Exhaust Filter

1. Pull up and hold the exhaust tab and pull out the exhaust cover. (Fig. 6)
2. Remove the exhaust filter.
3. As necessary, hand or machine wash the cloth filter and let dry before reinserting it.

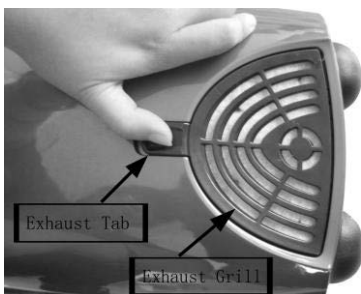


Fig.6

Assembling Your Vacuum

- Push/press fit the hose into the lid opening. (Fig 7)



Fig. 7

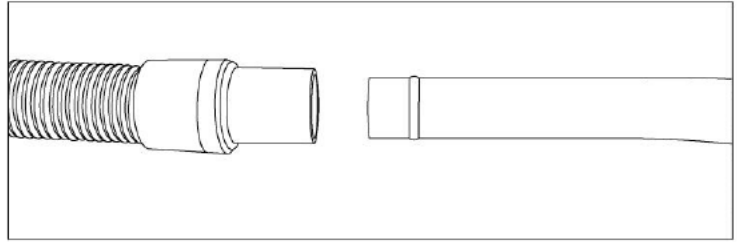


Fig. 8

- To connect the hose and attachment wand, slide the hose over the hose end wand attachment and over the bump by approx. $\frac{1}{2}$ ". (Fig. 8)
- Take the hose end attachment wand and insert it into the lower attachment wand (utensil end). (Fig.9)

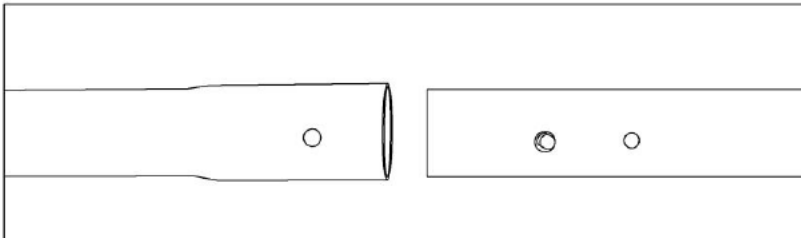


Fig. 9

- Secure the utensil to the end of wand. Align the brass ring with the groove on the floor tool to ensure a secure fit (Fig. 10)

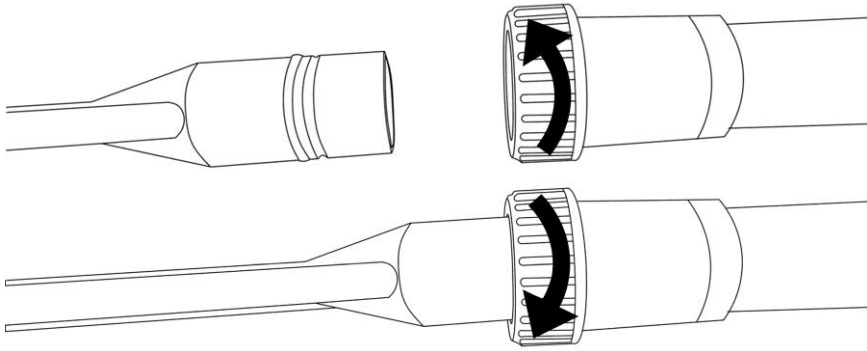


Fig.10

Using Your Vacuum

1. Connect the extension cord to extension cord relief (BP99) (Fig 12) and connect vacuum plug to extension cord. Plug extension cord into the electrical outlet.
2. Connect hose and wand and/or utensil.
3. Correctly place shoulder straps on each shoulder and secure the waist band with hook and loop strips. (Fig. 11)

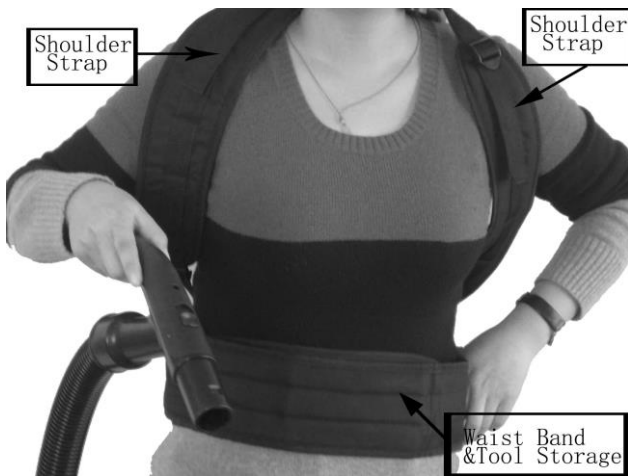


Fig. 11



Fig. 12

