


# FACT-1

## FEEDER AMMETER CLEAR TEST

### Operating & Instruction Manual



**Test Equipment  
Depot**



1-800-517-8431

99 Washington Street  
Melrose, MA 02176  
Phone 781-665-1400  
Toll Free 1-800-517-8431



Visit us at [www.TestEquipmentDepot.com](http://www.TestEquipmentDepot.com)

## IMPORTANT SAFETY NOTES

**IMPORTANT!** Please read the Operator's Manual thoroughly before operating the unit. Having a complete understanding of the Feeder Ammeter Clear Test (FACT-1) operation and issues that may influence its performance is key to obtaining the maximum effectiveness of this unit.

The FACT-1 outputs 120VAC to the cable under test and therefore extreme caution must be exercised to prevent electrical shock.

Never obstruct the intake or exhaust grills in the cord storage compartment.

Never attempt to close the cover while the unit is operating or while any cables are connected.

Do not connect the FACT-1 unit to a GFI protected circuit.

Before connecting the FACT to any circuit, test and ground that circuit to verify it is both de-energized and discharged.

DO NOT use the FACT-1 if any chance of a back feed exists.

The FACT-1 contains sensitive electronic parts. Although the housing is rugged, care should be taken to prevent any impact to the unit. An impact could damage the internal circuitry or display. The unit should never be opened except by the manufacturer. No user serviceable parts are inside.

## REPAIRS

If any damage is found please contact us at 800-435-0786 to arrange for service.

## FACT-1 DESCRIPTION

Alternating Current (AC) Ammeter Clear tests are used to indicate the presence of either grounds or short circuits on a primary feeder's three phase conductors or either grounds or short circuits on transformer secondaries.


Intentional grounding of the feeder cables may occur during some types of maintenance. Failure to remove these grounds at the end of the maintenance procedure is unintentional but nevertheless could cause potential damage if an attempt is made to put the feeder back in service.

The Feeder Ammeter Clear Test Set has been specifically designed for utilities that do not or cannot disconnect their transformers from the primary cable under test. A 120V AC, 60Hz source is used to check for grounds or short circuits. The AC signal is also adequate to energize the transformers connected to the feeder sufficiently enough to detect grounds left on the secondary side of a transformer.

In the primary phase-to-ground fault scenario, the LCD ammeter display will indicate a fault current of approximately 5 Amps with a nominal line voltage of 120V. A maximum of 5 Amps is provided by the Test Set and is limited by an internal 24 ohm power resistor. In the primary phase-to-phase fault scenario, the LCD ammeter display will also indicate a fault current of approximately 5 Amps with a nominal line voltage of 120V.

In the secondary side fault scenario, a short circuit fault from a feeder transformer secondary conductor to ground occurs. This allows more current to flow through the primary windings of this transformer which current then flows through the primary feeder. The value of the current flowing will depend on the nominal voltage of the feeder being tested since the turns ratio of the transformer will vary. For example, when a 13.8kV primary feeder connected to a transformer with a 120V secondary is tested, the LCD ammeter display reading would be about four amperes while on a 27kV feeder with a transformer to 120V, the LCD ammeter display reading would be about 1.4 amperes. These are only estimates and can vary depending on feeder voltage and the type of wire (impedance) used to ground the feeder.

Under a "No Fault" condition, the LCD ammeter display will generally indicate a fault current of less than about 0.3A and will indicate that No Fault has occurred. This ammeter reading would then represent the sum of transformer excitation currents on a given typical feeder should said transformers not be disconnected from feeder on the primary side.

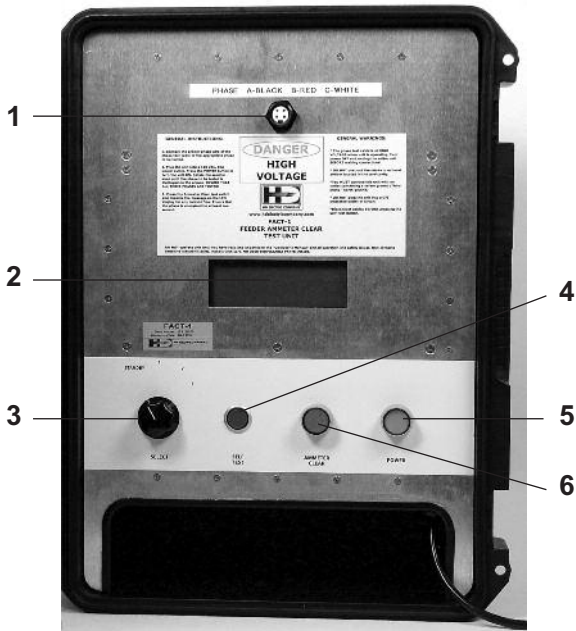

## FACT-1 FRONT PANEL DESCRIPTION

1. **TEST CABLE CONNECTOR** - 3 binding posts for making connections to the individual phases of the feeder. Each post is labeled to correspond to a particular phase of the feeder.
2. **LCD DISPLAY** - The Liquid Crystal Display (LCD) for displaying instructions, messages, and ammeter current.
3. **SELECTOR KNOB** - This rotary switch selects which phase is being tested at any given time. When the knob is in the STANDBY position, no phase is selected.
4. **SELF-TEST** - Pressing this button initiates the Feeder All Clear Test Set the self-test mode to assure proper operation. The test cable assembly must be removed during the self test.
5. **POWER** - This button is the master power switch for the Feeder Ammeter Clear Test Set. It is a latching pushbutton type. Pressing this button powers up all the electronics and fan for operation
6. **AMMETER CLEAR** - Pressing this button provides 120V AC to the selected binding post (Phase). It is a momentary pushbutton type. The button should not be pressed for long periods of time since substantial heat can develop in the unit when there is a ground on the feeder.
7. **POWER CORD** - Power cord for the unit. Cord must only plug into a 120V AC, 60Hz, non-GFCI 15 ampere outlet.

## USING THE FACT-1

**CAUTION:** Steps 1 through 6 should be performed with the feeder "grounded".

1. Make sure test cable assembly is NOT connected to the FACT-1.
2. Plug the FACT-1 into a 120V, 60Hz, 3-prong outlet. The outlet should be rated for a minimum of 15 Amps. Press the Red POWER switch to turn on the unit. The POWER switch should illuminate and the fan located in the cord cavity should start.

**IMPORTANT:** The FACT-1 is not designed to work with any type of GFCI protection device. In a situation where a ground is left connected to the feeder, the FACT-1 will output current on the corresponding phase however, the return current will be on the neutral/sheath of the feeder and/or earth ground. Therefore the GFCI device will detect the large differential in current and open the circuit, prohibiting the unit from operating.

3. Perform a "Self-Test" of the unit prior to normal operation (see "Diagnostics").  
**IMPORTANT:** The test cable assembly should NOT be connected to the FACT-1 during the Self-Test or the results may be incorrect and the test leads will become energized with 120V.

4. Turn off the power to the unit by pressing the POWER switch again. The POWER switch should no longer be illuminated and the fan will stop.

**CAUTION:** Assure that the feeder cable being connected to the FACT-1 is not energized. The Feeder Ammeter Clear Test Set is not designed to be used or connected in the presence of voltages greater than 300V.

5. Connect the test cable assembly to the FACT-1. Connect the appropriate test leads to the A, B and C phase of the cables under test. Connect the ground lead to the neutral.
6. Turn the power on to the unit by pressing the POWER button.

**NOTE:** If for some reason the 3rd prong safety ground is not connected properly, a message will be displayed on the LCD to repair the 3rd prong ground before operating.

**CAUTION:** The Feeder grounds need to be removed at this point. Assure there is no back feed condition or voltage being applied to the feeder prior to the removal of the grounds.

**IMPORTANT:** The FACT-1 has been designed to also operate in situations where the polarity of the 120 VA C outlet is "reversed". When the polarity is reversed, the output post that becomes "live" when the AMMETER CLEAR button is pressed is also reversed. This will be indicated on the LCD so that the operator does not have to remember; he simply rotates the selector knob until the phase he wishes to test is indicated on the display. The table below describes the internal logic:

120V Source Polarity	Rotary Switch Position	Phase to Ground Test (Output Phase)	Phase to Phase Test (Output Phase/Return Phase)
Correct	Standby	OFF	OFF
Correct	A	PHASE A	PHASE A to PHASE B
Correct	B	PHASE B	PHASE B to PHASE C
Correct	C	PHASE C	PHASE C to PHASE A
Reversed	Standby	OFF	OFF
Reversed	A	PHASE B	PHASE B to PHASE A
Reversed	B	PHASE C	PHASE C to PHASE B
Reversed	C	PHASE A	PHASE A to PHASE C

7. After the unit initializes, rotate the Selector Knob to Position A. The LCD will indicate which phase the 120V AC voltage will be applied to.

8. Press and hold the AMMETER CLEAR button for several seconds. If there is any significant current flow, the digital ammeter will display the current flow in 0.25Amp increments. If there are no grounds connected to the phase either on the primary or secondary of a transformer, and the phase indicated is not shorted to another, then the "NO FAULT" message will be displayed:

**A-ALIVE  
NO FAULT DETECTED**

Depending on the number of transformers connected to the network feeder during the test, some small current (<0.3Amp) could be detectable due to the excitation currents of the transformers. If the FACT-1 detects maximum current flow in the "live" (selected) phase only, a phase to ground fault exists and is displayed:

**A-ALIVE  
PHASE A TO GND FAULT**

If the FACT-1 detects maximum equal current in the output phase and the return phase, then a phase-to-phase fault exists and is displayed:

**B-ALIVE  
PHASE B TO C FAULT**

If the FACT-1 is operating with the transformer primaries connected to a feeder and a ground is present on the secondary, the FACT-1 will detect its presence and display only a partial reading. The actual reading obtained for a secondary fault will be dependent on the windings of the transformer (turns-ratio) and the size (gauge) of the grounding conductor. The heavier the grounding wire, the higher the current will be for secondary faults. When secondary faults exist, they will be displayed as a phase-to-phase fault.

**B-ALIVE  
PHASE B TO C FAULT**

9. After the selected phase has been tested and the AMMETER CLEAR button is released, rotate the select knob to another position to test the other phases and repeat step 7 for each phase. The LCD will always indicate which phase that is being tested.

## **THERMAL OVERLOAD**

The FACT-1 contains several resistors to limit the current supplied to the selected phase. Since these resistors are required to dissipate several hundred watts, significant heat can build up inside the case if the AMMETER CLEAR button is pressed for a long time on a faulted cable. If the internal sensor detects a temperature that is too high, a message will be displayed to the LCD:

**Unit Temperature is Too High. Please Allow to Cool (with power switch on)**

If this situation occurs, leave the FACT-1 plugged in with the POWER switch ON. This will operate the fan and reduce the internal temperature. When the unit temperature drops to an operational level, the message will disappear and the unit may be used for testing again.

## **REVERSED POLARITY OPERATION**

The FACT-1 has been designed to not only protect against an incorrectly wired outlet, but to operate normally if such a situation arises. If the unit detects incorrect polarity, a message is displayed to the operator to alert him of the situation. The operator must then press the SELF-TEST button momentarily to clear the notice:

**NOTICE: LINE CORD POLARITY IS REVERSED PRESS SELF-TEST TO CONTINUE**

## **DIAGNOSTICS**

The FACT-1 has built-in comprehensive diagnostics to assure that the FACT-1 is operating correctly. The test cable assembly should NOT be connected to the FACT-1 during the Self-Test. The Self Test mode is entered by pressing the SELF-TEST button. If at any time, you wish to exit the Self-Test mode, simply press the SELF-TEST button a second time. The FACT-1 will guide the operator through the Self-Test procedure using messages on the LCD.

Once Self-Test mode is entered, a message will be displayed to rotate the selector knob to the correct position:

### **Rotate Switch to Pos A, then Press & Hold Ammeter Clear Button (Self-Test to Cancel)**

If the selector knob was already in that position or if the selector knob is rotated to that position, the LCD will instruct the operator to press & hold the AMMETER CLEAR button until a test PASS or test FAIL message is displayed. Once the AMMETER CLEAR button is released, the operator will be instructed to rotate the selector knob to each of the remaining positions and to press the AMMETER CLEAR button.

At the conclusion of the test, an ALL TESTS PASSED or TEST FAILURE message will be displayed before returning to normal operation.

The FACT-1 should never be operated outside of its maximum operating temperature range of -20C to +60C (-4F to +140F). Operating the FACTS outside of its temperature range may permanently damage the unit.

# TERMS AND CONDITIONS OF SALE

HD Electric Company is herein referred to either as "HDE" or "Seller" and the customer or person or entity purchasing goods or services (hereinafter collectively referred to as "Goods") is referred to as the "Buyer". These Terms and Conditions, any price list or schedule, quotation, acknowledgment or invoice from HDE relevant to the sale of the Goods and all documents incorporated by specific reference therein, constitute the complete and exclusive statement of the terms of the agreement governing the sale of Goods by HDE to Buyer. Buyer's acceptance of the Goods will manifest Buyer's assent to these terms and conditions with variation or addition. Any different or additional terms in Buyer's purchase order or other Buyer documents are hereby objected to. HDE reserves the right in its sole discretion to refuse orders.

**1. PRICES AND TAXES:** Unless a fixed price is quoted, the price at which the order is accepted is subject to adjustment to HDE's price in effect at the time of order. Any current or future tax or governmental charge (or increase in same) affecting Seller's costs or production, sale or delivery of which Seller is otherwise required to pay or collect in connection with the sale, purchase, delivery, storage, processing, use or consumption of Goods (but excluding any tax on Seller's net income or profit) shall be for Buyer's account and shall be added to the price.

**2. TERMS OF PAYMENT:** Terms are stated on HDE's invoice in U.S. currency. HDE shall have the right, among other remedies, either to terminate this agreement or to suspend further performance under this and/or other agreements with the Buyer in the event Buyer fails to make any payment when due, which other agreements Buyer and Seller hereby amend accordingly, or HDE otherwise deems itself insecure. Buyer shall be liable for all expenses, including attorney's fees, relating to the collection of past due amounts. Should Buyer's financial responsibility become unsatisfactory to HDE, cash payments or security satisfactory to HDE may be required by HDE for future deliveries and for the goods thereafter delivered. If such cash payment or security is not provided, in addition to HDE's other rights and remedies, HDE may discontinue deliveries. HDE may apply a finance charge for payments made by credit card.

**3. SHIPMENT AND DELIVERY:** Unless otherwise expressly provided, shipments are made F.O.B. HDE's shipping point. Risk of loss or damage and responsibility shall pass from HDE to Buyer upon delivery to and receipt by common carrier. Any claims for shortages or damages suffered in transit are the responsibility of Buyer and shall be submitted by the Buyer directly to the carrier. Shortages or damages must be acknowledged and signed for at the time of delivery. While HDE will use all reasonable commercial efforts to maintain the delivery date(s) acknowledged or quoted by HDE, all shipping dates are approximate and not guaranteed. HDE reserves the right to make partial shipments. HDE, at its option, shall be bound to tender delivery of Goods to the Buyer, but does not provide shipping instructions. If the shipment of Goods is postponed or delayed by HDE for any reason, Buyer agrees to reimburse HDE for any and all handling and storage costs and other additional expenses resulting therefrom. All claims for shipping errors, lost shipments or any other discrepancies must be made within ninety (90) days or they will be disallowed and deemed waived.

**4. HDE LIMITED WARRANTY:** HDE covers its products with a manufacturer's warranty against defects in material or workmanship for a period of ten years in the case of Capacitor Controls and in all other circumstances for a period of one year, unless otherwise stated by HDE in writing. To take advantage of this warranty, the complete product must be delivered prepaid to HDE or an HDE Authorized Service Center. This warranty shall not apply to any Goods including but not limited to products which: (a) Have been repaired or altered outside HDE's factory (or Authorized Service Center) or in any manner so as, in HDE's judgment, to affect its serviceability or proper operation; (b) have been subjected by persons other than HDE (or Authorized Service Center) to improper handling, operation, maintenance, repair or alteration; and, (c) have been subjected to normal wear and tear and misuse, neglect, improper use, or abuse. Under this warranty, the Buyer's exclusive remedy shall be limited to HDE's repair or replacement of any allegedly defective Goods or issuance of credit. HDE requires the return of any allegedly defective Goods, transportation prepaid, before honoring any claim. All returned Goods are subject to inspection, and if examination does not disclose any defect covered by this warranty, replacement of such Goods or issuance of credit for same will not be approved. THE FOREGOING CONSTITUTES HDE'S SOLE WARRANTY RESPONSIBILITY AND BUYER'S EXCLUSIVE REMEDY WHETHER SOUNDING IN TORT, CONTRACT, STRICT LIABILITY OR OTHERWISE, EXCEPT AS OTHERWISE EXPRESSLY SET FORTH IN THIS AGREEMENT. THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, WHETHER OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR OTHERWISE. No employee, agent, dealer, or other person is authorized to give any warranty on behalf of HDE. This warranty extends only to persons or organizations who purchase the Goods from HDE for resale.

**5. LIMITATION OF REMEDY AND LIABILITY; THE SOLE AND EXCLUSIVE REMEDY FOR BREACH OF ANY WARRANTY HEREUNDER SHALL BE LIMITED TO REPAIR, CORRECTION, REPLACEMENT OR CREDIT UNDER SECTION 4. HDE SHALL NOT BE LIABLE FOR DAMAGES CAUSED BY DELAY IN PERFORMANCE, AND IN NO EVENT, REGARDLESS OF THE FORM OF THE CLAIM OR CAUSE OF ACTION (WHETHER BASED IN CONTRACT, INFRINGEMENT, NEGLIGENCE, STRICT LIABILITY, OTHER TORT OR OTHERWISE), SHALL HDE'S LIABILITY TO BUYER AND/OR ITS CUSTOMERS EXCEED THE PRICE PAID BY BUYER FOR THE SPECIFIC GOODS GIVING RISE TO THE CLAIM OR CAUSE OF ACTION, AND BUYER SHALL INDEMNIFY HDE FOR ANY DAMAGES IN EXCESS THEREOF. BUYER AGREES THAT IN NO EVENT SHALL HDE'S LIABILITY TO BUYER AND/OR ITS CUSTOMERS INCLUDE SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL OR PUNITIVE DAMAGES OF ANY CHARACTER IN CONNECTION WITH THE SALE, RESALE OR USE OF THE GOODS, WHICH ARE WAIVED BY BUYER AND AS TO WHICH BUYER SHALL INDEMNIFY HDE. The term "consequential damages" shall include, but not be limited to, loss of anticipated profits, business interruption, loss of use of revenue, cost of capital or loss of or damage to property, equipment, or data, or loss of reputation. Further, Buyer shall indemnify and hold HDE harmless from any liability to Buyer, Buyer's employees, workers, contractors or any other persons arising out of Buyer's, and any other persons', use of the Goods. All instructions and warnings supplied by HDE will be passed on to those persons who use the Goods. HDE's Goods are to be used in their recommended applications and all warning labels adhered to the Goods by HDE shall be left intact. It is impossible to eliminate all risks associated with the use of the Goods. Risks of serious injury or death, including risks associated with electrocution, arc flash and formal burns, are inherent in work in and around energized electrical systems. Such risks arise from the wide variety of electrical systems and equipment to which Goods may be applied, the manner of use or application, weather and environmental conditions or other unknown factors, all of which are beyond the control of HDE. HDE does not agree to be an insurer of these risks, and shall have no liability for any claims arising from such risks. WHEN YOU BUY OR USE THESE PRODUCTS, YOU AGREE TO ACCEPT THESE RISKS.**

**6. EXCUSE OF PERFORMANCE (FORCE MAJEURE):** HDE shall not be liable for delays in performance or for non-performance due to acts of God; acts of Buyer; war; fire; flood; weather; sabotage; strikes; labor disputes; civil disturbances or riots; governmental restrictions, restrictions, allocations, laws, regulations, orders or actions; unavailability of or delays in transportation; default of suppliers; or unforeseen circumstances or events beyond HDE's reasonable control. Deliveries or other performance may be suspended for an appropriate period or cancelled by HDE upon notice to Buyer in the event of any of the foregoing, but the total of this agreement shall otherwise remain unaffected. If HDE determines that its ability to supply the total demand for the Goods, or to obtain material used directly or indirectly in the manufacture of the Goods, is hindered, limited or made impracticable due to causes set forth herein, HDE may allocate its available supply of the Goods or such material (without obligation to acquire other supplies of any such Goods or materials) among itself and its purchasers on such basis as HDE determines to be equitable without liability for any failure of performance which may result therefrom.

**7. CHANGES:** HDE reserves the right to change designs and specifications for standard Goods without prior notice to Buyer, but not with respect to custom Goods made by Buyer. HDE shall have no obligation to install or make such change in any Goods manufactured prior to the date of such change.

**8. ASSIGNMENT:** Buyer shall not assign its rights or delegate its duties hereunder or any interest herein without the prior written consent of HDE, and any such assignment, without such consent, shall be void.

**9. INSTALLATION:** Buyer shall be responsible for receiving, inspecting, testing, storing, installing, starting up and maintaining all Goods.

**10. INSPECTION/TESTING:** Buyer, at its expense, agrees that it will promptly inspect the Goods upon receipt thereof, and in no event later than thirty (30) days from the date of receipt of the Goods. Buyer shall deliver to HDE within fifteen (15) days of inspection, but in no event later than forty-five (45) days from the date of receipt of the Goods, written notice of all defects, deficiencies, defects, variations from specifications or complaints of any kind with respect to the quantity, quality, condition, shipment, performance, fit, or appearance of the Goods so received by Buyer. In the event no such written notice is received by HDE, Buyer shall be deemed conclusively to have inspected and accepted all such Goods unconditionally and to have waived any and all rights and claims, including without limitation any right to reject the Goods or to claim damages in respect thereof. Buyer may not return goods without first advising HDE of the reasons therefor, obtaining from HDE a material authorization number and observing such instructions as HDE may give in authorizing such return. In the event a return is authorized by HDE, a restocking for any Goods requiring repackaging or maintenance a twenty percent (20%) restocking fee shall be assessed to Buyer in the final credit amount.

**11. SERVICES:** If this agreement requires HDE to perform or provide any services, HDE (including without limitation its successors, assigns, agents or any person or entity acting as HDE's direction) shall not be responsible for any damages, claims, liabilities or expenses of any nature arising out of such services.

**12. U.S. EXPORT CONTROL LAWS:** All Goods sold to Buyer by HDE hereunder are subject to U.S. Export Control Laws. Buyer hereby agrees not to re-sell or divert any goods contrary to such laws.

**13. COMPLIANCE:** Seller/Contractor shall comply with all applicable federal, state or local laws, rules, regulations, or orders. Seller/Contractor shall comply with Executive Order 11246, as amended by Executive Order 11375, and the applicable provisions of the Office of Federal Contract Compliance Programs (OFCCP), 41 CFR Part 60, which are incorporated herein by this reference. Buyer shall comply with all applicable federal, state or local laws, rules, regulations or orders including but not limited to the Foreign Corrupt Practices Act of 1977, as amended. HDE reserves the right to delay or refuse delivery if requests for reasonable assurances of Buyer's compliance are not tendered as requested.

**14. MISCELLANEOUS:** These terms and conditions supersede all other communications, negotiations and prior oral or written statements regarding the subject matter hereof. No change, modification, rescission, discharge, abandonment, or waiver of these terms and conditions shall be binding upon HDE unless made in writing and signed on its behalf by its duly authorized representative. No conditions, usage or trade, course of dealing or performance, understanding or agreement purporting to modify, vary, explain, or supplement these terms and conditions shall be binding unless hereafter made in writing and signed by Seller. No modification shall be effected by HDE's receipt or acceptance of Buyer's purchase orders, shipping instruction forms, or other documentation containing terms in variance with or in addition to those set forth herein, all of which are objected to by HDE. Any such modifications or additional terms are specifically rejected by HDE. No waiver by HDE with respect to any breach or default of any right or remedy and no course of dealing, shall be deemed to constitute a continuing waiver of any other breach or default of any other right or remedy, unless such waiver be expressed in writing and signed by HDE. All typographical or clerical errors made by HDE in any quotation, acknowledgment or publication are subject to correction. Validity and performance relating to the interpretation and effect of this agreement shall be governed by the laws of the state of Illinois without regard to its conflict of law principles.

**15. DISPUTE RESOLUTION:** In the event of any dispute INCLUDING, BUT NOT LIMITED TO, BREACH OF CONTRACT, BREACH OF WARRANTY, CLAIMS BASED IN TORT, NEGLIGENCE, PRODUCT LIABILITY, FRAUD, MARKETING, STATE OR FEDERAL REGULATIONS, ANY CLAIMS REGARDING THE ENFORCEABILITY OF THIS LIMITED WARRANTY, AND THE WAIVER OF CLASS ACTION TRIALS between Buyer and Seller, either may choose to resolve the dispute by binding arbitration, as described below, instead of in court. THIS MEANS IF EITHER BUYER OR SELLER CHOOSE BINDING ARBITRATION, NEITHER PARTY SHALL HAVE THE RIGHT TO LITIGATE SUCH CLAIM IN COURT OR HAVE A JURY TRIAL. DISCOVERY AND APPEAL RIGHTS ARE LIMITED IN BINDING ARBITRATION. Buyer and Seller agree that the proper venue of arbitration is not chosen by Buyer or Seller of all actions arising in connection herewith shall be only in the state of Illinois and the parties agree to submit to such jurisdiction. No action, regardless of form, arising out of transactions relating to the agreement, may be brought by either party more than two (2) years after the cause of action has accrued. The U.N. Convention on Contracts for the International Sales of Goods shall not apply to this agreement.

**16. CLASS ACTION WAIVER: BINDING ARBITRATION MUST BE ON AN INDIVIDUAL BASIS. THIS MEANS NEITHER BUYER NOR SELLER MAY JOIN OR CONSOLIDATE CLAIMS IN ARBITRATION OR BY AGAINST OTHERS, OR LITIGATE IN COURT OR ARBITRATE ANY CLAIMS AS A REPRESENTATIVE OR MEMBER OF A CLASS OR IN A PRIVATE ATTORNEY GENERAL CAPACITY. ADMINISTRATION OF ARBITRATION:** The binding arbitration will be administered by the American Arbitration Association ("AAA") in accordance with its Commercial Arbitration Rules and/or Supplementary Procedures for Consumer-Related Disputes (including proceedings to mitigate costs of AAA). This binding arbitration is governed by the Federal Arbitration Act ("FAA") (9 USC §1, et. seq.) and will govern the interpretation and enforcement. The binding arbitration shall be held at a location determined by AAA, or at such other location as mutually agreed. In addition to the terms stated above, the following will apply to the binding arbitration: (1) the arbitrator, and not any federal, state, or local court or agency, will have exclusive authority to resolve any dispute relating to the interpretation, applicability, enforceability or formation of this Agreement including any claim that all or any part of this Agreement is void or voidable; (2) the arbitrator shall apply Illinois law consistent with the FAA.

HD Electric Company is committed to ongoing review and improvement of its product lines, and thus reserves the right to modify product design and specifications without notice.

HD Electric Company® products are available through HDE® sales representatives worldwide.

HD Electric products receive final assembly and shipment from HDE's production facility at

Suite 400 - 4320 Executive Drive, Southaven, MS 38672.

HD Electric Company is ISO 9001:2015 certified

Printed in U.S.A. © HD Electric Company 2020 • Bulletin NO. FACT IM-300a