

# Electrical Safety Analyzer

GPT-10000 Series

---

## USER MANUAL



ISO-9001 CERTIFIED MANUFACTURER

**GW INSTEK**

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

**Good Will Instrument Co., Ltd.**  
**No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.**

---

# Table of Contents

<b>SAFETY INSTRUCTIONS .....</b>	<b>5</b>
<b>GETTING STARTED.....</b>	<b>9</b>
GPT-12000 Series Overview .....	10
Front Panel Overview .....	14
Rear Panel Overview .....	18
Set Up.....	21
<b>OPERATION .....</b>	<b>28</b>
Menu Tree.....	30
Test Lead Connection.....	35
Manual Tests .....	38
Special MANU Test Mode (000) .....	87
Sweep Function.....	89
Automatic Tests .....	92
System Settings .....	116
<b>EXTERNAL CONTROL .....</b>	<b>144</b>
External Control Overview.....	145
<b>REMOTE CONTROL.....</b>	<b>151</b>
Interface Configuration .....	152
Command Syntax .....	156
Command List .....	159
Error Messages.....	208
<b>FAQ.....</b>	<b>209</b>
<b>APPENDIX.....</b>	<b>211</b>
Fuse Replacement.....	211
Test Errors .....	212

GPT-12000 Specifications .....	214
GPT-12001/12002/12003 Dimensions	220
GPT-12004 Dimensions.....	221
Declaration of Conformity.....	222
<b>INDEX.....</b>	<b>223</b>








# S SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow during operation and storage. Read the following before any operation to ensure your safety and to keep the instrument in the best possible condition.

## Safety Symbols

These safety symbols may appear in this manual or on the instrument.

---

	<b>WARNING</b>	Warning: Identifies conditions or practices that could result in injury or loss of life.
	<b>CAUTION</b>	Caution: Identifies conditions or practices that could result in damage to the instrument or to other properties.
	<b>DANGER</b>	High Voltage
	<b>Attention</b>	Refer to the Manual
	<b>Protective Conductor Terminal</b>	
	<b>Frame or Chassis Terminal</b>	
	<b>Earth (ground) Terminal</b>	



Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

## Safety Guidelines

---

### General Guideline



#### CAUTION

- Do not place any heavy object on the instrument.
- Avoid severe impact or rough handling that leads to damaging the instrument.
- Do not discharge static electricity to the instrument.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block the cooling fan opening.
- Do not disassemble the GPT-10000 unless you are qualified.

### Position Guideline



#### WARNING

- The rear position of the GPT-10000 should be placed in an area with easy accessible for power disconnection, that is, unplugging the power cord with ease.
- Keep away from the device under test which connects with the GPT-10000 when test is underway. In addition, while test is ongoing, never touch the device under test, the GPT-10000 as well as other relevant units.
- Any inappropriate manner that is unspecified by the manufacturer may result in irreversible harms or impaired protection by the GPT-10000.

(Measurement categories) EN 61010-1:2010 specifies the measurement categories and their requirements as follows. The GPT-10000 does not fall under category II, III or IV.

- Measurement category IV is for measurement performed at the source of low-voltage installation.
- Measurement category III is for measurement performed in the building installation.
- Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation.

---

#### Power Supply



WARNING

- AC Input voltage range:  
AC 100V – 240V  $\pm$  10%
- Frequency: 50Hz/60Hz
- To avoid electrical shock connect the protective grounding conductor of the AC power cord to an earth ground.

---

#### Cleaning the GPT-10000

- Disconnect the power cord before cleaning.
- Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid.
- Do not use chemicals containing harsh material such as benzene, toluene, xylene, and acetone.

---

#### Operation Environment

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Relative Humidity:  $\leq$  70% (no condensation)
- Altitude: < 2000m
- Temperature: 0°C~40°C

(Pollution Degree) EN 61010-1:2010 specifies the pollution degrees and their requirements as follows. The GPT-10000 falls under degree 2.

Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”.

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
- Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
- Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

---

#### Storage environment

- Location: Indoor
- Temperature: -10°C to 70°C
- Relative Humidity: ≤ 85% (no condensation)

---

#### Disposal



Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.



# G E T T I N G   S T A R T E D

This chapter describes the safety analyzer in a nutshell, including its main features and front / rear panel introduction. After going through the overview, please read the safety considerations in the Set Up chapter.

---

<b>GPT-12000 Series Overview .....</b>	<b>10</b>
Series lineup .....	10
Lineup Overview .....	11
Main Features .....	11
Accessories .....	12
Package Contents .....	13
<b>Front Panel Overview .....</b>	<b>14</b>
GPT-12001/12002/12003/12004 .....	14
<b>Rear Panel Overview .....</b>	<b>18</b>
GPT-12001/12002/12003/12004 .....	18
<b>Set Up .....</b>	<b>21</b>
Tilting the Stand .....	21
Line Voltage Connection and Power Up .....	22
Installing the Optional GPIB Card .....	23
Workplace Precautions .....	24
Operating Precautions .....	25
Basic Safety Checks .....	27

## GPT-12000 Series Overview

### Series lineup

The GPT-12000 Series Safety Analyzers are AC/DC withstanding voltage, insulation resistance, ground bond and continuity safety analyzers.

The GPT-12001 is AC withstanding voltage and continuity tester, the GPT-12002 is AC/DC withstanding voltage and continuity tester and the GPT-12003 is AC/DC withstanding voltage, insulation resistance and continuity tester. The GPT-12004 includes all the test functions of the previous models, plus the ground bond testing. Also, for the all the models, the testing terminals are also mirrored on the rear panel for added safety and for more permanent safety testing environments.

The GPT-12000 Series can store up to 100 manual tests, as well as run up to 10 manual tests sequentially as an automatic test, allowing the safety analyzers to accommodate any number of safety standards, including IEC, EN, UL, CSA, GB, JIS and others.

Note: Throughout this user manual, the terms ACW, DCW, IR, GB and CONT refer to AC Withstanding, DC Withstanding, Insulation Resistance, Ground Bond and Continuity testing, respectively.

## Lineup Overview

Model name	ACW	DCW	IR	GB	CONT
GPT-12001	✓				✓
GPT-12002	✓	✓			✓
GPT-12003	✓	✓	✓		✓
GPT-12004	✓	✓	✓	✓	✓

## Main Features

### Performance

- ACW: 5kVAC
- DCW: 6kVDC
- IR: 50V~1200V (50V steps)\*
- GB: 3A~30A
- CONT: 100mA

### Features

- Ramp up time control
- Ramp down time control
- Safety discharge
- 100 test conditions (MANU mode)
- 100 automatic tests (AUTO mode)
- Over temperature, voltage and current protection
- Pass, Fail, Test, High Voltage and Ready indicators
- PWM output (90% efficiency, increased reliability)
- Interlock (configurable)
- Rear panel output

- Interface
- Remote control start/stop interface terminal
  - RS232/USB interface for programming
  - Optional GPIB interface for programming
  - Signal I/O port for pass/fail/test monitoring and start/stop control/interlock


## Accessories

Standard Accessories	Part number	Description
	GHT-115x1	Test lead
	Region dependent	Power cord
	GTL-215x1	GB test lead (GPT-12004 only)
	GHT-119	Remote terminal cable
	N/A	Interlock key
Optional Accessories	Part number	Description
	GHT-205	High Voltage Test Probe
	GHT-113	High Voltage Test Pistol
	GTL-232	RS232C cable
	GTL-248	GPIB cable
	GTL-246	USB cable (A to B type)
Options	Part number	Description
	Opt.01 GPIB Interface	GPIB module

## Package Contents

Check the contents before using the GPT-12000 series.

### Opening the box

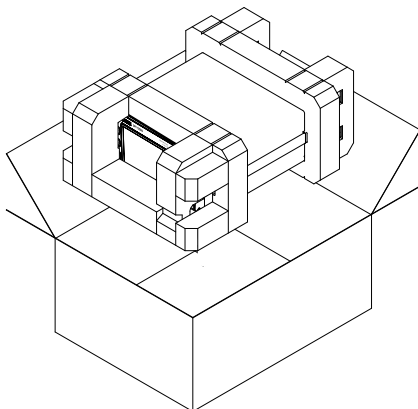

#### Contents (single unit)


- GPT-12000 unit
- Quick Start Guide
- User manual CD
- CTC (Calibration Traceable Certificate)
- Power cord x1 (region dependent)
- GHT-115 test leads x1
- GTL-215 GB test leads x1 (GPT-12004)
- GHT-119 Remote terminal cable
- Interlock key




Keep the packaging, including the box, polystyrene foam and plastic envelopes should the need arise to return the unit to GW Instek.


## Front Panel Overview


GPT-12001/12002/12003/12004

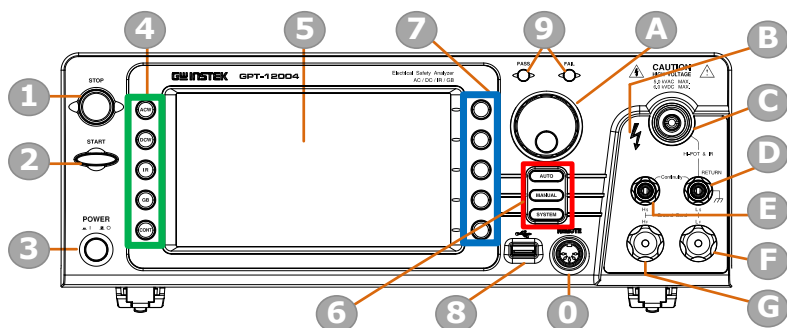

Item	Description
1	STOP Button
2	START Button
3	POWER Switch
4	Test Function Keys (Green Zone)
5	Display
6	Mode Keys (AUTO, MANUAL, SYSTEM in Red Zone)
7	Soft Keys (Blue Zone)
8	USB A-Type Host Port
9	PASS/FAIL Indicators
0	REMOTE Terminal
A	Scroll Wheel
B	HIGH VOLTAGE Indicator
C	HIGH VOLTAGE Output Terminal
D	SENSE L & RETURN Terminal
E	SENSE H & Output Terminal
F	SOURCE L (GPT-12004 only)
G	SOURCE H (GPT-12004 only)

**STOP button**  The STOP button is used to stop/cancel tests. The STOP button will also put the safety analyzer in the READY status to begin testing.


**START button**  The START button is used to start tests. The START button can be used to start tests when the tester is in the READY status. Pressing the START button will put the tester in the TEST status.

**POWER switch**  Turns the power on. The safety analyzer will always start up with the last test setting from when the instrument was last powered down.

**Test Function Keys** The keys indicate the 5 testing functions including ACW, DCW, IR, GB and CONT. Pressing one of the keys enters the function settings.


**Display** 7" Color TFT LCD display in 800 X 480 resolution

**AUTO button**  Press to enter the AUTO test mode.


**MANUAL button**  Press to enter the MANUAL test mode.

**SYSTEM button**  Press to enter the SYSTEM mode.

**Soft Keys** The Soft keys correspond to the menu keys directly above on the main display.

**USB Host Port**  It can connect with USB flash drive for data storage.

Pass/Fail indicators



The PASS and FAIL indicators light up upon a PASS or FAIL test result at the end of a manual test or automatic test.

REMOTE terminal



The REMOTE terminal is used to connect to a remote controller.

Scroll wheel




The scroll wheel is used to edit parameter values.

HIGH VOLTAGE indicator



The HIGH VOLTAGE indicator will light up red when an output terminal is active. Only after the test has finished or stopped will the indicator turn off.

HIGH VOLTAGE output terminal

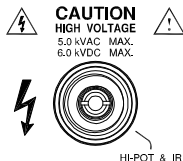


The HIGH VOLTAGE terminal output is used for outputting the testing voltage in ACW, DCW and IR tests. The terminal is recessed for safety. This terminal is used in conjunction with the RETURN terminal.

 **WARNING**

**USE EXTREME CAUTION.**  
Do not touch the HIGH VOLTAGE terminal during testing.

RETURN terminal

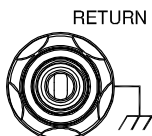


The RETURN terminal is used for ACW, DCW, IR and CONT tests.



OUTPUT and  
RETURN  
terminals


All models



The OUTPUT terminal (red)  
and RETURN terminal (black)  
are used for CONT  
(Continuity) test.

SENSE H/L and  
SOURCE H/L  
terminals


GPT-12004 only

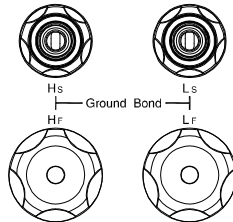

The SENSE H, SENSE L,  
SOURCE H and SOURCE L,  
terminals are used for GB  
(Ground Bond) test.


## Rear Panel Overview


GPT-12001/12002/12003/12004

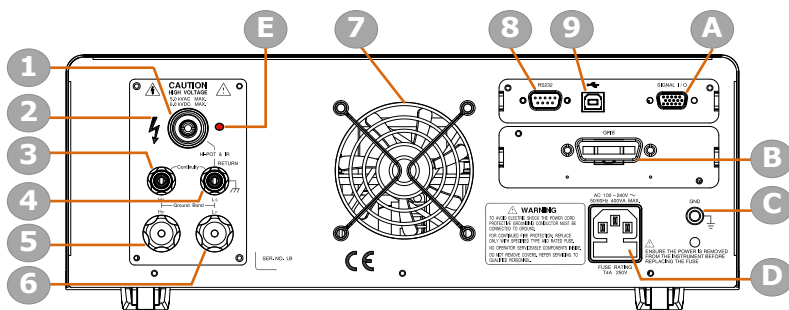

Item	Description
1	HIGH VOLTAGE Output Terminal
2	HIGH VOLTAGE Indicator
3	SENSE H & Output Terminal
4	SENSE L & RETURN Terminal
5	SOURCE H (GPT-12004 only)
6	SOURCE L (GPT-12004 only)
7	Fan
8	RS-232 Port
9	USB B-Type Interface Port
A	Signal I/O Port
B	GPIB Port (Optional)
C	GND
D	AC Mains Input (Power Cord Socket)
E	HIGH VOLTAGE pilot lamp


**SIGNAL I/O port**    **SIGNAL I/O**    The SIGNAL I/O port is used to monitor the tester status (PASS, FAIL, TEST) and input (START/STOP signals). It is also used with the Interlock key.




**USB B-Type port**        The USB B-Type port is used for remote control.




**RS232 interface port**    **RS232**    The RS-232 port is used for remote control and firmware updates.




**Fan/Fan Vents**        Exhaust fan. Allow enough room for the fan to vent. Do not block the fan openings.

**GND**    **GND**    Connect the GND (ground) terminal to the earth ground.




**AC Mains Input**    **AC 100 - 240V ~ 50/60Hz 400VA MAX.**    AC Mains Input for Power Cord Socket: 100 - 240 VAC ±10%.

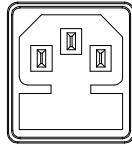


FUSE RATING  
T4A 250V

The fuse holder contains the AC mains fuse. For fuse replacement details, see page 45.

**Optional GPIB port**    **GPIB**    Optional GPIB interface for remote control.



HIGH VOLTAGE output terminal

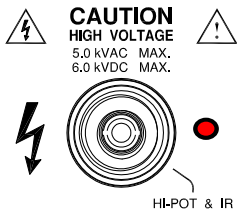

The HIGH VOLTAGE terminal output is used for outputting the testing voltage in ACW, DCW and IR tests. The terminal is recessed for safety and used in conjunction with the RETURN terminal.

 **WARNING**


**USE EXTREME CAUTION.** Do not touch the HIGH VOLTAGE terminal during testing.

HIGH VOLTAGE pilot lamp




The HIGH VOLTAGE pilot lamp will light up red when an output terminal is active. Only after the test has finished or stopped will the lamp turn off.

RETURN terminal

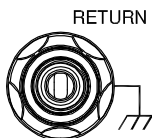


The RETURN terminal is used for ACW, DCW, IR and CONT tests.

OUTPUT and RETURN terminals

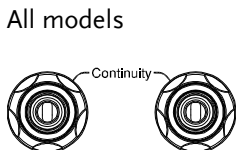

The OUTPUT terminal (red) and RETURN terminal (black) are used for CONT (Continuity) test.

SENSE H/L and SOURCE H/L terminals

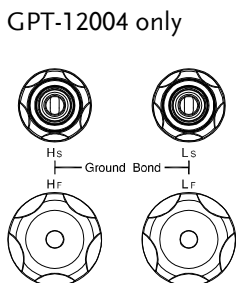

The SENSE H, SENSE L, SOURCE H and SOURCE L, terminals are used for GB (Ground Bond) test.


## Set Up

### Tilting the Stand

---


Horizontal position

Place the unit on a flat surface horizontally.

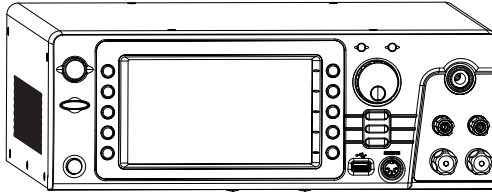

Tilt stand position


Gently pull the 2 stands out from the bottom and the unit will be placed in the tilt stand position.

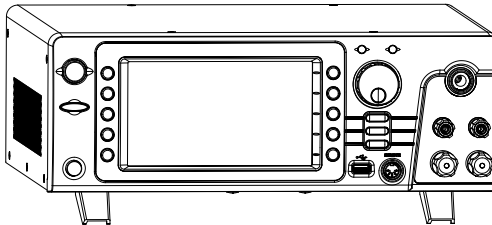


## Line Voltage Connection and Power Up

**Background**                      The GPT-12000 accepts line voltages of 100 - 240V at 50Hz or 60Hz.

**Steps**                              1. Connect the power cord to the AC Mains Input socket on the rear panel.

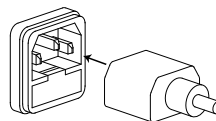


2. If the power cord does not have an earth ground, ensure the ground terminal is connected to an earth ground.

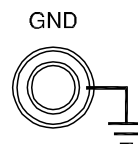


Ensure the power cord is connected to an earth ground. Failure could be harmful to the operator and instrument.

3. Press the Power button.

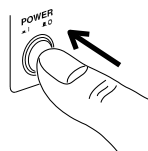

4. When the unit is powered up, the display will show the last time parameters in either MANU or AUTO test mode as shown below.

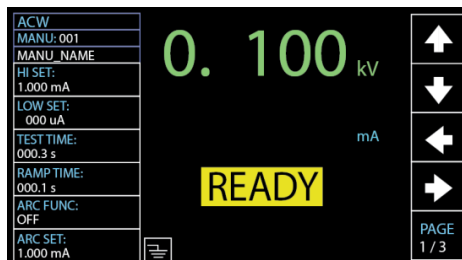

## Installing the Optional GPIB Card

**Background** The optional GPIB is a user-installable option. Follow the instructions below to install the GPIB card.




**WARNING**

Before installing optional GPIB card ensure the GPT-12000 is turned off and disconnected from power.


**Steps**

1. Remove screws from the rear panel cover plate.

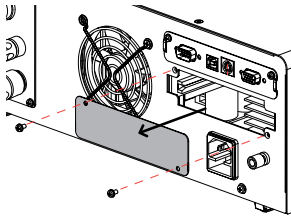

2. Insert the GPIB card into the opening of rear panel. Push the card gently until it is fully inserted followed by fastening the screws.

GPIB Card

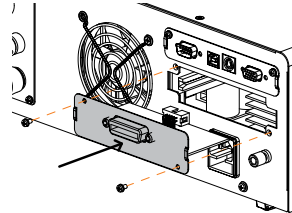

## Workplace Precautions

---

**Background**                      The GPT-12000 is a high voltage instrument that outputs dangerous voltages. The following section describes precautions and procedures that must be followed to ensure a safe work environment.

---



### WARNING

The GPT-12000 generates voltages in excess of 5kVAC or 6kVDC. Follow all safety precautions, warnings and directions given in the following section when using the instrument.

---

1. Only technically qualified personnel should be allowed to operate the safety analyzer.
2. The operating workplace must be fully isolated, especially when the instrument is in operation. The instrument should be clearly labeled with appropriate warning signage.
3. The operator should not wear any conductive materials, jewelry, badges, or other items, such as wrist watches.
4. The operator should wear insulation gloves for high voltage protection.
5. Ensure the earth ground of the line voltage is properly grounded.
6. Ensure any devices that are adversely affected by magnetic fields are not placed near the tester.



## Operating Precautions

---

**Background**      The GPT-12000 is a high voltage instrument that outputs dangerous voltages. The following section describes precautions and procedures that must be followed to ensure that the tester is operated in a safe manner.

---



### WARNING

The GPT-12000 generates voltages of up to 5kVAC or 6kVDC. Follow all safety precautions, warnings and directions given in the following section when using the instrument.

---

1. Never touch the safety analyzer, lead wires, terminals, probes and other connected equipment when the tester is testing.
2. Do not turn the safety analyzer on and off quickly or repeatedly. When turning the power off, please allow a few moments before turning the power back on. This will allow the protection circuits to properly initialize.

Do not turn the power off when a test is running, unless in an emergency.

3. Only use those test leads supplied with the instrument. Leads with inappropriate gauges can be dangerous to both the operator and the instrument.  
For GB testing, never use the Sense leads on the SOURCE terminals.
4. Do not short the HIGH VOLTAGE terminal with ground. Doing so could charge the chassis to dangerously high voltages.

5. Ensure the earth ground of the line voltage is properly grounded.
6. Only connect the test leads to the HIGH VOLTAGE/SOURCE H/SENSE H terminals before the start of a test. Keep the test leads disconnected at all other times.
7. Always press the STOP button when pausing testing.
8. Do not leave the safety analyzer unattended. Always turn the power off when leaving the testing area.
9. When remotely controlling the safety analyzer, ensure adequate safety measures are in place to prevent:
  - Inadvertent output of the test voltage.
  - Accidental contact with the instrument during testing. Ensure that the instrument and DUT are fully isolated when the instrument is remotely controlled.
10. Ensure an adequate discharge time for the DUT.

When DCW or IR tests are performed, the DUT, test leads and probes become highly charged. The GPT-12000 has discharge circuitry to discharge the DUT after each test. The time required for a DUT to discharge depends on the DUT and test voltage.

Never disconnect the safety analyzer before a discharge is completed.

## Basic Safety Checks

---

Background                      The GPT-12000 is a high voltage device and as such, daily safety checks should be made to ensure safe operation.

---

1. Ensure all test leads are not broken and are free from defects such as cracks or splitting.
  2. Ensure the safety analyzer is always connected to an earth ground.
  3. Test the safety analyzer operation with a low voltage/current output:  
    Ensure the safety analyzer generates a FAIL judgment when the HIGH VOLTAGE and RETURN terminals are shorted (using the lowest voltage/current as the testing parameters).
- 



### WARNING

Do not use high voltages/currents when the HIGH VOLTAGE and RETURN terminals are shorted. It may result in damage to the instrument.

---

# OPERATION


---

<b>Menu Tree .....</b>	<b>30</b>
Menu Tree Overview .....	31
<b>Test Lead Connection .....</b>	<b>35</b>
ACW, DCW, IR Connection .....	35
GB Connection .....	36
CONT Connection .....	37
<b>Manual Tests .....</b>	<b>38</b>
Setting the Test Function .....	39
Choose/Recall a Manual Test Number .....	40
Creating a MANU Test File Name .....	41
Setting the Upper and Lower Limits .....	42
Setting the Test Time .....	44
Setting the Ramp Up Time .....	46
Setting the Ramp Down Time .....	48
Setting the Test Voltage or Test Current .....	50
Setting the Test Frequency .....	52
Setting a Reference Value .....	53
Setting an Initial Voltage .....	54
Setting the Wait Time .....	56
Setting the ARC Function .....	58
Setting MAX HOLD .....	61
Setting PASS HOLD .....	62
Setting IR Mode .....	63
Setting GND OFFSET .....	65
Setting GB Contact .....	67
Zero Check for the Test Leads .....	69
Setting the Grounding Mode .....	72
Running a MANU Test .....	76
PASS / FAIL MANU Test .....	81

<b>Special MANU Test Mode (000) .....</b>	<b>87</b>
<b>Sweep Function.....</b>	<b>89</b>
<b>Automatic Tests .....</b>	<b>92</b>
Choose/Recall an AUTO Test .....	93
Creating an AUTO Test File Name .....	94
Adding a Step to the AUTO Test .....	95
Continuous AUTO Tests .....	97
AUTO Test Page Editing .....	99
Running an Automatic Test .....	104
Automatic Test Results.....	110

## Menu Tree

This section describes the overall structure of the operation statuses and modes for the GPT-12000 safety analyzers. The testers have two main testing modes (MANU, AUTO), one system mode (SYSTEM) and 5 main operation statuses (READY, TEST, PASS, FAIL and STOP).

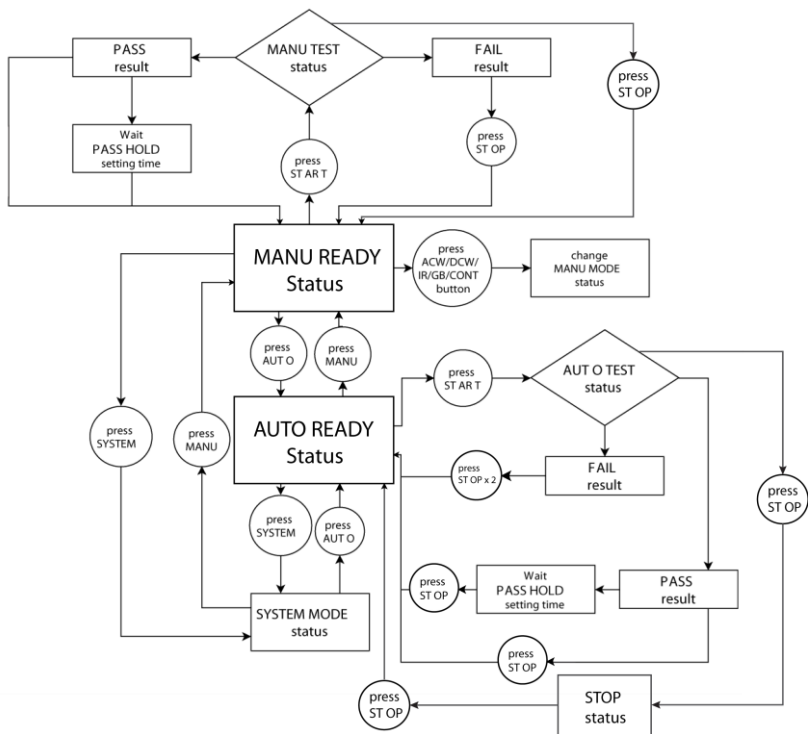

## Menu Tree Overview

**MANU Mode**                      MANU mode is used to create and/or execute a single test. Only under MANU mode can parameters be edited for each manual test.

MANU mode



**AUTO Mode**                      AUTO mode indicates that the tester is automatic, which consists of a sequential AUTO test of up to 10 MANU steps. Also, several groups of AUTO tests can be further interconnected for an advanced AUTO test.

AUTO mode

AUTO 001		AUTO_NAME			READY	
MANU STEP	TEST MODE	V/I SETTING	HI SETTING	LOW SETTING	STEP HOLD	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C	
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C	
026	IR	0.050kV	49.99GΩ	001.0MΩ	P.C/F.C	

The table is displayed on a screen with directional arrow buttons on the right side.

**SYSTEM Mode**

System mode covers the Display Set, Buzzer, Interface, Control, System Time, Data Initialize, Information, Statistics and USB Disk settings. These settings are system-wide and applied to both MANU and AUTO tests.


**SYSTEM mode**



**READY Status (Yellow Color)**

When the tester is in READY status of MANU or AUTO test, it is ready to begin testing. Pressing the START button will begin testing and put the tester into TEST status. Pressing the AUTO key will change from MANU - READY status to AUTO - READY status and vice versa.

**READY status in MANU test**

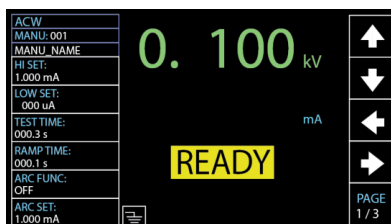

**READY status in AUTO test**


AUTO:001	AUTO_NAME		READY			STEP	
MANU TEST	V/I	HI	LOW	SETTING	SETTING	HOLD	
STEP	MODE	SETTING	SETTING	SETTING	SETTING		
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.H		
002	ACW	0.100kV	1.000mA	000 uA	P.H/F.C		
005	IR	0.050kV	066.8MΩ	000.1MΩ	P.C/F.S		
010	ACW	0.200kV	2.000mA	000 uA	P.C/F.C		SKIP
006	DCW	0.500kV	1.500mA	000 uA	P.H/F.S		
							DEL.
							STEP
							HOLD



TEST Status  
(Orange Color)

TEST status is active when a MANU test or AUTO test is running. Pressing STOP will cancel the MANU test or the remaining steps in an AUTO test instantly. The TEST status in AUTO test is identical with that of MANU test.


TEST status  
in MANU  
test

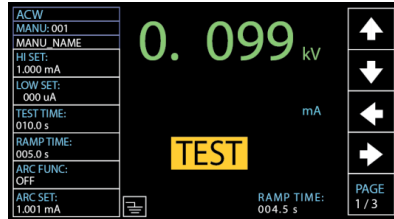

PASS Status  
(Green Color)

When a MANU test result is within the range of HI and LOW sets, the PASS status is shown on display. For AUTO test, the PASS status only shows when all the affiliated test steps are passed.

PASS status  
in MANU  
test

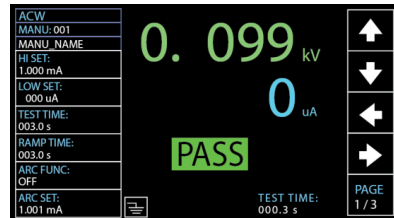


PASS status  
in AUTO  
test

AUTO 001	AUTO_NAME					PASS
MANU	TEST	READ	READ	TEST	TEST	
STEP	MODE	DATA1	DATA2	TIME	RESULT	
001	DCW	0.099kV	000 uA	T000.3s	PASS	
002	ACW	0.099kV	000 uA	T000.3s	PASS	
						PAGE 1/1

**FAIL Status  
(RED Color)**

When a MANU test result is beyond the range of HI and LOW sets, the FAIL status is shown on display. For AUTO test, the FAIL status is shown when any of the test steps fails, even only one of them.

**FAIL status  
in MANU  
test**

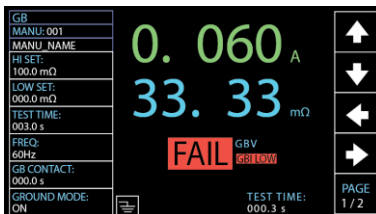

**FAIL status  
in AUTO  
test**

AUTO-001		AUTO_NAME				FAIL
MANU STEP	TEST MODE	READ DATA1	READ DATA2	TEST TIME	TEST RESULT	
001	DCW	0.099kV	000 uA	T000.3s	PASS	
002	ACW	0.099kV	000 uA	T000.3s	PASS	
026	IR	0.049kV	60.00GΩ	T000.3s	FAIL	
						PAGE 1 / 1

**STOP Status  
(Red Color)**

STOP status is shown when an AUTO test did not finish running and has been stopped by user. Pressing STOP will return the tester to READY status. STOP status is not shown in MANU test as it returns to READY status directly after user pressed STOP button in MANU test.

**STOP status  
in AUTO  
test**

AUTO-001		AUTO_NAME				STOP
MANU STEP	TEST MODE	READ DATA1	READ DATA2	TEST TIME	TEST RESULT	
001	DCW	0.099kV	000 uA	T000.3s	PASS	
002	ACW	0.099kV	000 uA	T000.3s	PASS	
001	DCW	0.000kV	000 uA	T000.0s	SKIP	
001	DCW	0.099kV	000 uA	T000.3s	PASS	
002	ACW	0.099kV	000 uA	T000.3s	PASS	
026	IR	0.049kV	60.00GΩ	T000.3s	FAIL	
001	DCW	0.097kV	000 uA	T000.1s	STOP	
002	ACW	0.000kV	000 uA	T000.3s		
						PAGE 1 / 1

## Test Lead Connection

This section describes how to connect the GPT-12000 to a DUT for withstanding, insulation resistance, ground bond as well as continuity testing.


### ACW, DCW, IR Connection

---


**Background** ACW, DCW and IR tests use the HIGH VOLTAGE terminal and RETURN terminal with the GHT-115 test leads.

---

**ACW, DCW, IR Connection**

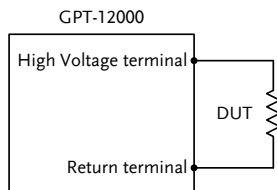

- Steps**
1. Turn the power off on the safety analyzer.
  2. Connect the high voltage test lead (red) to the HIGH VOLTAGE terminal and screw firmly into place.
  3. Connect the return test lead (white) into the RETURN terminal and screw the protector bar into place, as shown below.

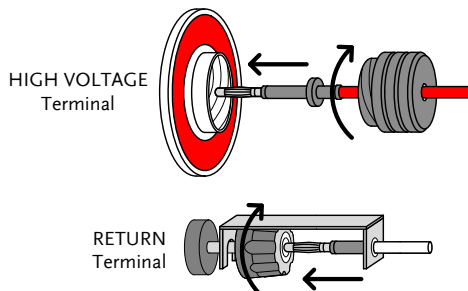


## GB Connection

### Background


GB tests use the SENSE H/L and SOURCE H/L terminals with the GTL-215 test leads.

### GB Connection

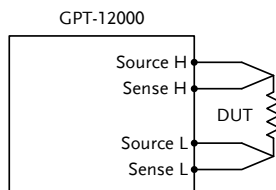

### Steps


1. Turn the power off on the safety analyzer.
2. Connect the Sense H lead to the SENSE H terminal.
3. Connect the Sense L lead to the SENSE L terminal.
4. Connect the Source H lead to the SOURCE H terminal.
5. Connect the Source L lead to the SOURCE L terminal.

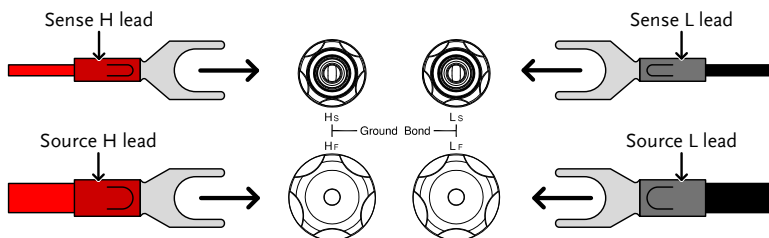


## CONT Connection

**Background**                      CONT tests use the OUTPUT and RETURN terminals with the GTL-115 test leads.

**CONT Connection**

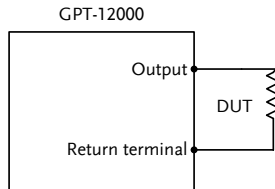

- Steps**
1. Turn the power off on the safety analyzer.
  2. Connect the OUTPUT test lead (red) to the OUTPUT terminal.
  3. Connect the RETURN test lead (black) into the RETURN terminal and screw the protector bar into place, as shown below.

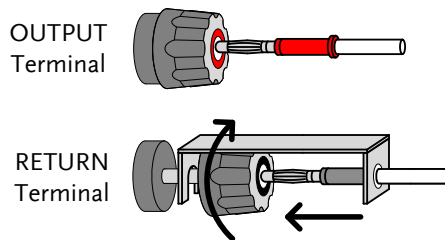

## Manual Tests


This section describes how to create, edit and run a *single* ACW, DCW, IR, GB and CONT manual tests. Each Manual setting described in this chapter *only applies to the selected* manual test – *no other manual tests are affected*.

Each manual test can be stored/recalled to/from one of 100 memory locations. Each stored manual test can be used as a test step when creating an AUTO test (page 89).

- Setting the Test Function → from page 39.
- Choose/Recall a Manual Test Number → from page 40.
- Creating a MANU Test File Name → from page 41.
- Setting the Upper and Lower Limits → from page 42.
- Setting the Test Time → from page 44.
- Setting the Ramp Up Time → from page 46.
- Setting the Ramp Down Time → from page 48.
- Setting the Test Voltage or Test Current → from page 50.
- Setting the Test Frequency → from page 52.
- Setting a Reference Value → from page 53.
- Setting an Initial Voltage → from page 54.
- Setting the Wait Time → from page 56.
- Setting the ARC Function → from page 58.
- Setting MAX HOLD → from page 61.
- Setting PASS HOLD → from page 62.
- Setting IR Mode → from page 63.
- Setting GND OFFSET → from page 65.
- Setting GB Contact → from page 67.
- Zero Check for the Test Leads → from page 69.
- Setting the Grounding Mode → from page 72.
- Running a MANU Test → from page 76.
- PASS / FAIL MANU Test → from page 81.
- Special MANU Test Mode (000) → from page 87.
- Sweep Function → from page 89.

## Setting the Test Function

**Background** There are five test functions, AC Withstand, DC Withstand, Insulation Resistance, Ground Bond and Continuity tests.

- Steps**
1. If the tester is in AUTO or SYSTEM mode, press the MANUAL key to put the tester into MANU mode. 
  2. To choose the test function, press the ACW, DCW, IR, GB or CONT key on the front panel.



3. The key of selected test function is lit, and the test function selected is shown on the upper-left corner of the display.


Selected Test Function



## Choose/Recall a Manual Test Number


**Background** ACW, DCW, IR, GB and CONT tests can only be created and edited in the MANU mode. MANU number 001 to 100 can be saved and thus be loaded when editing/creating a MANU test or AUTO test. MANU number 000 is a special mode. See page 87 for details on the special mode.

- Steps**
1. If the tester is in AUTO or SYSTEM mode, simply press the **MANUAL** key to switch to MANU mode.
  2. Use the scroll wheel to choose the MANU number.
- MANU # 001~100  
(MANU# 000 is a special mode)

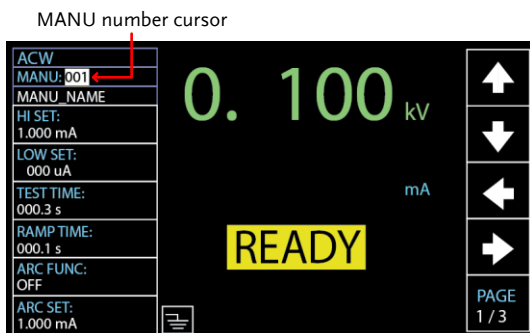

 **Note**

Manual number can only be selected or recalled when the “READY” status shows on the screen. If the “FAIL” status appears, it is required to press STOP key first before selecting or recalling procedure.

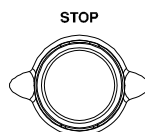



## Creating a MANU Test File Name


**Background** Each manual test can have a user-defined name (default: MANU\_NAME) up to 10 characters long. See the available list of characters below.

### Character List

0	1	2	3	4	5	6	7	8	9	_
A	B	C	D	E	F	G	H	I	J	K
L	M	N	O	P	Q	R	S	T	U	V
W	X	Y	Z	a	b	c	d	e	f	g
h	i	j	k	l	m	n	o	p	q	r
s	t	u	v	w	x	y	z			

### Steps

1. Press the UP / DOWN arrow soft-keys to bring the cursor to the MANU\_NAME (default name) field. The characters table will appear in the right hand accordingly.

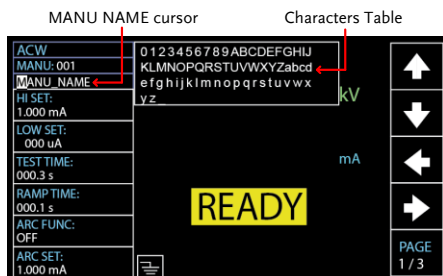

2. Use the scroll wheel to scroll through the available characters.



3. Press the LEFT / RIGHT arrow soft-keys to move the cursor to the next character.




4. The MANU test file name is set when the cursor is moved to another setting.





Neither number (0 – 9) nor underline (\_) can be set for the 1<sup>st</sup> character in MANU test file name.

## Setting the Upper and Lower Limits

**Background** There is both a LOW and HI judgment setting. When the measured value is below the LOW SET setting, the test will be judged as FAIL. When the value exceeds the HI SET setting the test will be judged as FAIL. Any measurement between the LOW SET and HI SET setting is judged as PASS. The LOW SET limit cannot be made greater than the HI SET limit.


- Steps**
1. Press the UP / DOWN arrow soft-keys to bring the cursor to the HI SET setting. 

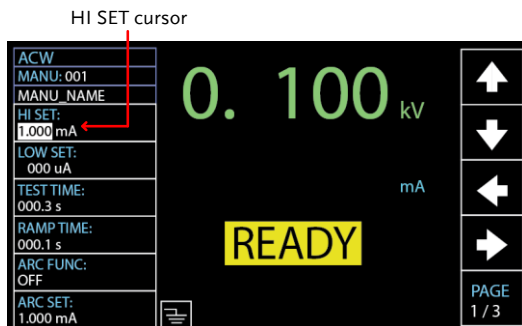

2. Use the scroll wheel to set the HI SET limit. 

ACW (HI)	0.001mA~042.0mA
DCW (HI)	0.001mA~011.0mA
IR (HI)	000.2MΩ~50.00GΩ
GB (HI)	000.1mΩ ~ 650.0mΩ
CONT (HI)	00.01Ω ~ 90.00Ω

3. Press the UP / DOWN arrow soft-keys to bring the cursor to the LOW SET setting.

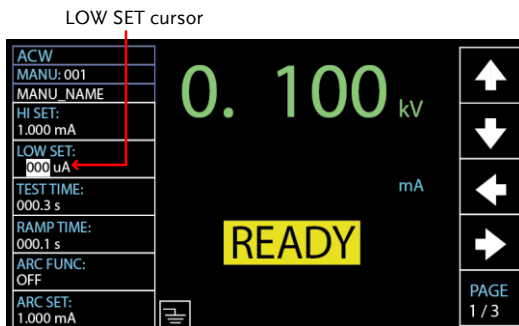

4. Use the scroll wheel to set the LO SET limit.



ACW (LOW)	0.000mA~041.99mA
DCW (LOW)	0.000mA~010.9mA
IR (LOW)	000.1MΩ~49.99GΩ
GB (LOW)	000.0mΩ ~ 649.9mΩ
CONT (LOW)	00.00Ω ~ 89.99Ω



Note

\*Please note that the resolution of the measured value depends on the resolution of HI SET setting.



Note

The LO SET setting is limited by the HI SET setting. The LO SET limit cannot be greater than the HI SET limit.

When setting the current, be aware that a maximum of 200VA can be set for ACW and 50W for DCW, respectively.


## Setting the Test Time

### Background

This setting is used to set the test time for a test. The test time determines how long the test voltage or current is applied to the DUT. This test time does not include RAMP UP time or RAMP DOWN time (note: GB and CONT do not have RAMP UP or RAMP DOWN). The test time can be set from 0.3 seconds to 999.9 seconds for ACW, DCW, IR, GB and CONT, with a resolution of 0.1 seconds for all modes. Also, the test time can be turned off when using the ACW or DCW test functions.


Each test has a RAMP UP and RAMP DOWN time (except GB and CONT), respectively. Refer to page 46 & 48 for more details.

### Output Voltage Timing Chart (Resistive load)

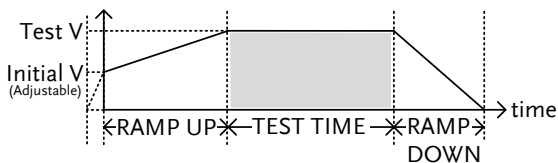

### Steps

1. Press the UP / DOWN arrow soft-keys to bring the cursor to the TEST TIME setting.

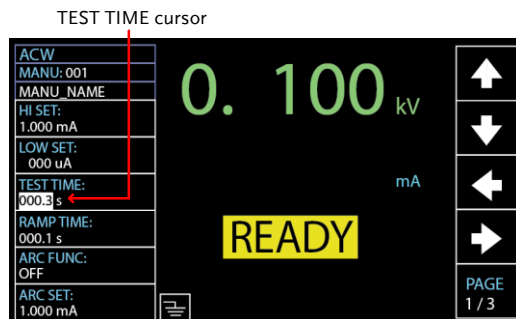

- Use the scroll wheel to set the TEST TIMER value.



ACW	000.3s~999.9s
DCW	000.3s~999.9s
IR	000.3s~999.9s
GB	000.3s~999.9s
CONT	000.3s~999.9s




Note

With the ACW test function, when the test current is beyond 30mA, the Ramp Up Time + Test Time cannot exceed 240 seconds. At this current level, the tester also needs to pause after a test for a time equal to or greater than the output time.

Turn Off Test Time

When in either ACW or DCW test, the TEST TIME can be turned off, which means the test without test time will last infinitely until FAIL judgment occurs.

Identical with the regular setting for TEST TIME, turn off the timer by using the scroll wheel to set OFF for TEST TIME value.

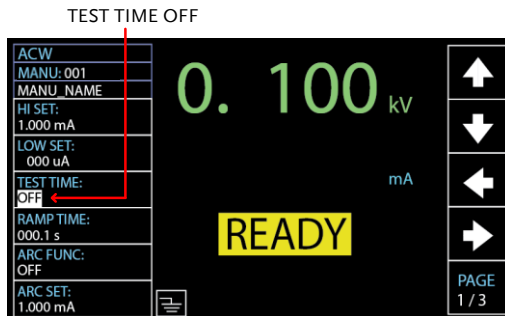


## Setting the Ramp Up Time

### Background


The Ramp Up time is the total time taken for the tester to reach the test voltage level. The Ramp Up time starts with a start voltage of 50 volts. The Ramp Up time can be set from 000.1 to 999.9 seconds. The Ramp Up time is only applicable for ACW, DCW and IR tests.

### Output Voltage Timing Chart (Resistive load)

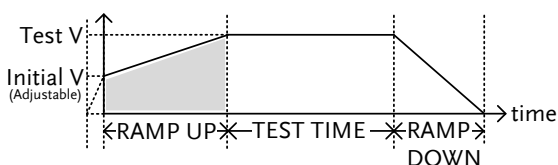

### Steps

1. Press the UP / DOWN arrow soft-keys to bring the cursor to the RAMP TIME setting.

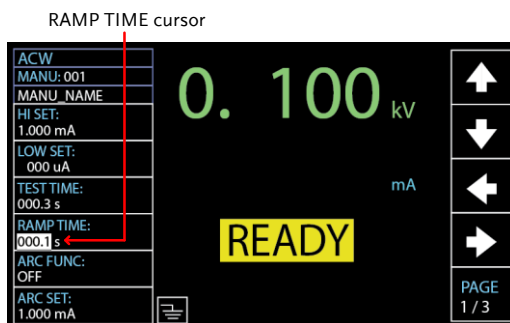


2. Use the scroll wheel to set the RAMP TIME value.



ACW	000.1s~999.9s
DCW	000.1s~999.9s
IR	000.1s~999.9s

Ramp Time  
Duration  
Indicator

After pressing START to begin a test with set RAMP TIME, a section at the lower right corner of display shows the counting duration of RAMP TIME, which will run to the set value followed by the test time. See the screenshot shown below.

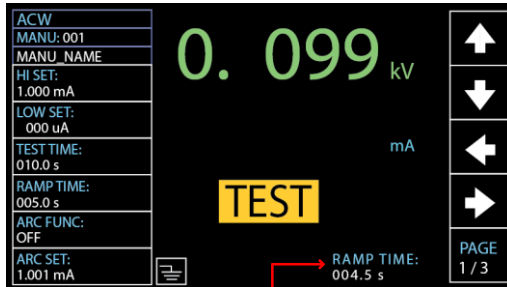


RAMP TIME duration indicator

## Setting the Ramp Down Time

### Background

The Ramp Down time is the time taken for the DUT to discharge the test voltage level. The Ramp Down time can be set from 000.0 to 999.9 seconds. The Ramp DOWN time is only applicable for ACW, DCW and IR tests.

### Output Voltage Timing Chart (Resistive load)

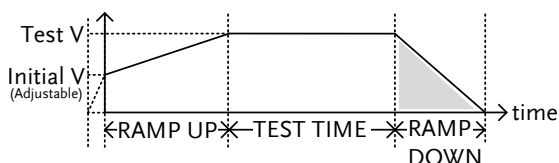

### Steps

1. Press the PAGE soft-key to move to the 2/3 page where RAMP DOWN setting appears for ACW and DCW.



As for IR test, the RAMP DOWN setting shows in the 2/2 page.



2. Press the UP / DOWN arrow soft-keys to bring the cursor to the RAMP DOWN setting.



RAMP DOWN cursor






- Use the scroll wheel to set the RAMP DOWN value.



ACW            000.0s~999.9s  
 DCW           000.0s~999.9s  
 IR             000.0s~999.9s

Ramp Down  
 Duration  
 Indicator


After the set TEST TIME is fully completed, a section at the lower right corner of display shows the counting duration of RAMP DOWN, which will run to the set value by user. See the screenshot shown below.

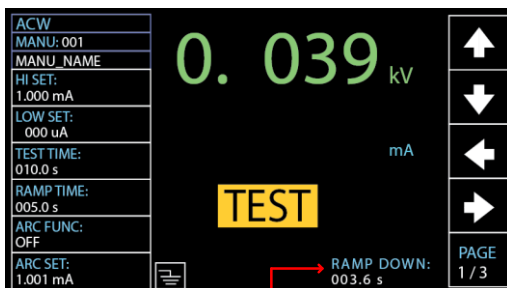



RAMP DOWN duration indicator

## Setting the Test Voltage or Test Current

**Background**                      The test voltage can be set from 0.050kV to 5kV for ACW, 0.050kV to 6kV for DCW and 0.050 to 1kV for IR (50V steps\*). For GB tests the test current can be set from 3A to 30A. As for CONT test, the test current is fixedly set at the default value of 100mA.

- Steps**
1. Press the UP / DOWN arrow soft-keys to bring the cursor to the voltage or ampere setting depending on selected test function. 

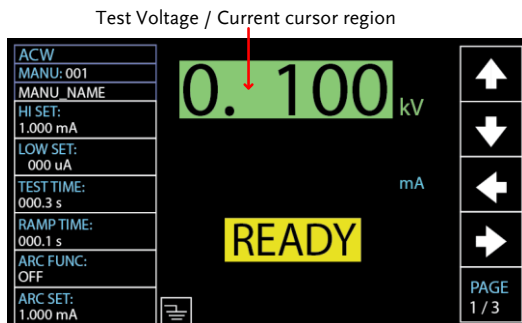

2. Use the scroll wheel to set the test voltage or ampere level. 

ACW	0.050kV ~ 5kV <sup>1</sup>
DCW	0.050kV ~ 6kV <sup>2</sup>
IR	0.05kV ~ 1kV (50V steps)
GB	3.00A ~ 33.00A
CONT	100mA <sup>3</sup>

<sup>1</sup> At least 0.3 seconds is needed to reach a set voltage of 50V/10mA.

<sup>2</sup> At least 0.3 seconds is needed to reach a set voltage of 50V/2mA.

<sup>3</sup> Test current for CONT is fixed at 100mA

---




Note


When setting the current, be aware that a maximum of 200VA can be set for ACW and 50W for DCW, respectively.


The ground bond voltage (GBV) is calculated as the HI SET limit x Test Current.


## Setting the Test Frequency

**Background** A test frequency of 60Hz or 50Hz can be set, regardless of the input line voltage. The test frequency setting only applies to ACW and GB tests.

 **Note** The test frequency can only be set for ACW or GB tests.


**Steps** 1. Press the PAGE soft-key to move to the 2/3 page where **FREQ** setting appears for ACW. 

As for GB test, the **FREQ** setting shows in the 1/2 page directly. 

2. Press the UP / DOWN arrow soft-keys to bring the cursor to the **FREQ** setting. 

FREQ setting cursor





3. Use the scroll wheel to set the test frequency. 


ACW, GB 50Hz, 60Hz


## Setting a Reference Value


**Background**                      The REF# acts as an offset. The REF VALUE is subtracted from the measured current (ACW, DCW) or measured resistance (IR, GB, CONT).


**Steps**                              1. Press the PAGE soft-key to move to the 3/3 page where REF VALUE setting appears for ACW and DCW. 

As for IR and GB, the REF VALUE setting shows in the 2/2 page. 

The REF VALUE setting appears in the 1/1 page directly for CONT. 

2. Press the UP / DOWN arrow soft-keys to bring the cursor to the REF VALUE setting. 

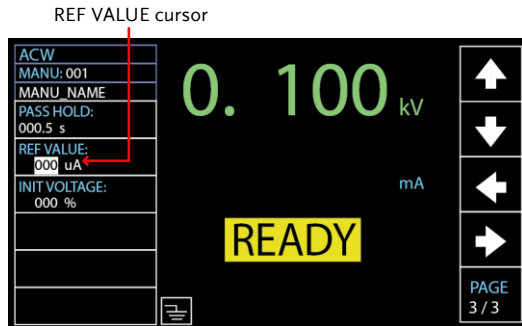

3. Use the scroll wheel to set the REF value. 

ACW	0.000mA~HI SET current-0.1mA *HI SET + REF value $\leq$ 42.00 mA
DCW	0.000mA~HI SET current-0.1mA *HI SET + REF value $\leq$ 11.00 mA
IR	000.0M $\Omega$ ~50.00G $\Omega$
GB	000.0m $\Omega$ ~650.0m $\Omega$ *ISET x (HI SET + REF value) is no greater than 7.2V
CONT	00.00 $\Omega$ ~90.00 $\Omega$ *ISET(100mA) x (HI SET + REF value) is no greater than 9V



Note

For IR test, a reference value of tester can be automatically created via the GND OFFSET function. See page 65 for details.

For GB and CONT tests, a reference value of test lead can be automatically created via the ZERO CHECK function. See page 69 for details.

## Setting an Initial Voltage

### Background

In essence, the test voltage for both ACW and DCW will gradually and linearly rise up, from zero, to the target set voltage in accord with the set RAMP TIME ahead of the TEST TIME.

Nevertheless, under certain circumstances, user may have preferences on the percentage of starting test voltage. Therefore, the INIT VOLTAGE provides another alternative for different applications on user side.

It is easy to set a preferred percentage of the test voltage in the INIT VOLTAGE setting and the starting test voltage will commence from

the value corresponding to the set percentage relative to the target test voltage.



Note

INIT VOLTAGE setting is only applicable to both ACW and DCW tests.

Steps

1. Press the PAGE soft-key to move to the 3/3 page where the INIT VOLTAGE setting appears for ACW and DCW.
2. Press the UP / DOWN arrow soft-keys to bring the cursor to the INIT VOLTAGE setting.



INIT VOLTAGE cursor

3. Use the scroll wheel to set the percentage of INIT VOLTAGE.



INIT VOLTAGE 000% ~ 099%

## Setting the Wait Time

---

### Background

The Wait Time refers to the pending time before FAIL judgment appears. By default, FAIL judgment appears when Test Time has reached 0.3 second at the earliest manner. However, when user sets 1.0 second for Wait Time on the tester with 0.5 second of Ramp Up time and 1.0 second of Test Time, the FAIL judgment will be shown when Test Time has reached 0.5 second. In short, Wait Time is the pending duration which dominates the priority over both Ramp UP time and Test Time in terms of timing of FAIL judgment.

The WAIT TIME is only applicable for ACW, DCW and IR tests.

---

### Steps

1. Press the PAGE soft-key to move to the 2/3 page where WAIT TIME setting appears for ACW and DCW.



As for IR test, the WAIT TIME setting shows in the 1/2 page.



2. Press the UP / DOWN arrow soft-keys to bring the cursor to the WAIT TIME setting.






WAIT TIME cursor



Wait Time Indicator

While the WAIT TIME is set, the indicator of WAIT TIME will be shown on the display in the set duration during a test progress for clear identification for user.

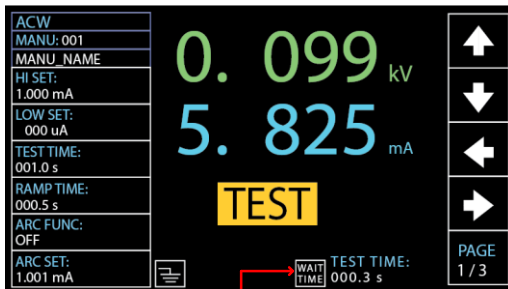

WAIT TIME indicator

## Setting the ARC Function

---

### Background

ARC detection, otherwise known as flashover detection, detects fast voltage or current transients that are not normally detected. Arcing is usually an indicator of poor withstanding insulation, electrode gaps or other insulating problems that cause temporary spikes in current or voltage during ACW and DCW testing.

There are three ARC detection settings: OFF, ON & CONT, ON & STOP.


The ON & CONT setting will detect arcs over the ARC current level and continue the test, the ON & STOP setting will stop the test when an arc is detected.

ARC mode settings only apply to both ACW and DCW tests.

---

### Steps

1. Press the UP / DOWN arrow soft-keys to bring the cursor to the ARC FUNC setting.

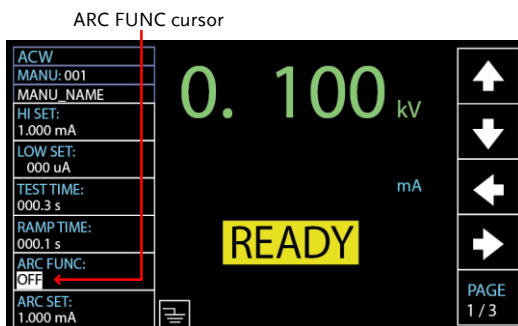


2. Use the scroll wheel to set the ARC modes setting.



ARC MODES: OFF  
 ON & CONT  
 ON & STOP

- If the ARC MODE was set to either ON & CONT, or ON & STOP, the ARC current level can be edited. Press the DOWN arrow soft-key to bring the cursor to the ARC SET setting field.

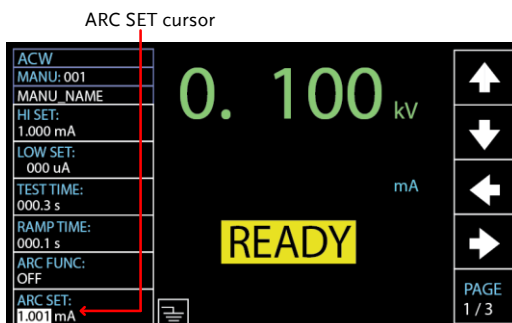

- Use the scroll wheel to edit the ARC SET level.




---


ACW	1.000mA~080.0mA
DCW	1.000mA~080.0mA

---

- If the ARC MODE was set to either ON & CONT, or ON & STOP, the ARC speed, which indicates the threshold for width of detected ARC, can be edited. Press the PAGE soft-key to move to the 2/3 page where ARC SPEED setting appears for ACW and DCW.



6. Press the UP / DOWN arrow soft-keys to bring the cursor to the ARC SPEED setting field.

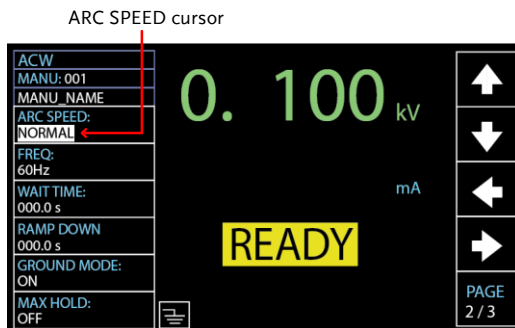

7. Use the scroll wheel to select the ARC SPEED modes.



ARC SPEED	FAST	Threshold for the narrowest width of detected arc, which is the most sensitive manner.
	NORMAL	Threshold for the general width of detected arc.
	SLOW	Threshold for the widest width of detected arc, which is the manner of high tolerance.

## Setting MAX HOLD

### Background

The MAX HOLD setting will hold the maximum current measured in the ACW and DCW tests or the maximum resistance measured in the IR and GB tests.

For instance, when running an IR test with 120 seconds of test time and MAX HOLD enabled, the highest resistance measured in the 30 seconds of the test time will be retained on display until the next largest value. If there is no further maximum resistance occurred, the value measured in 30 seconds will be remained till the end of the test of 120 seconds.

### Steps

1. Press the PAGE soft-key to move to the 2/3 page where MAX HOLD setting appears for ACW and DCW.

PAGE  
2 / 3

As for IR and GB, the MAX HOLD setting shows in the 2/2 page.

PAGE  
2 / 2

2. Press the UP / DOWN arrow soft-keys to bring the cursor to the MAX HOLD setting.



MAX HOLD cursor



- Use the scroll wheel to set MAX HOLD.



MAX HOLD      OFF, ON

## Setting PASS HOLD

---

**Background**      The PASS HOLD setting refers to the holding duration after PASS judgment is shown on the display. When the PASS HOLD setting is set, a PASS judgment is held until the set duration is fully reached.



**Note**

The PASS HOLD setting only applies to MANU tests. This setting is ignored when running AUTO test.

### Steps

- Press the PAGE soft-key to move to the 3/3 page where PASS HOLD setting appears for ACW.



And it is the 2/3 page where PASS HOLD setting appears for DCW.



As for IR and GB, the PASS HOLD setting shows in the 2/2 page.




The PASS HOLD setting appears in the 1/1 page directly for CONT.



- Press the UP / DOWN arrow soft-keys to bring the cursor to the PASS HOLD setting.



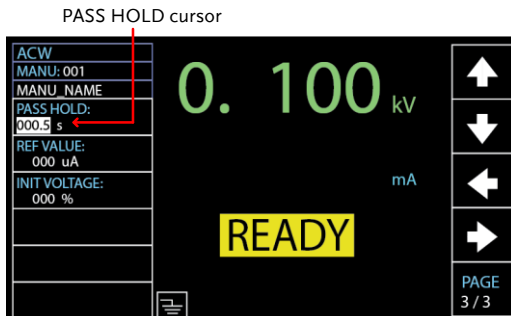

- Use the scroll wheel to set PASS HOLD duration.



PASS HOLD 000.0s ~ 999.9s



The STOP key can be pressed at any time in the set duration of PASS HOLD to promptly halt the set PASS HOLD duration. In short, user can stop, if necessary, the duration of PASS HOLD any time.

## Setting IR Mode

### Background

The IR MODE setting, which contains three options, STOP ON FAIL, STOP ON PASS, TIMER, only applies to IR test.

When IR MODE is set to STOP ON FAIL, the tester will show the FAIL judgment, if available, in the 0.3 second of test time at the earliest manner, regardless of the set test time.

When set to PASS ON FAIL, the tester will show the PASS judgment, if available, in the 0.3 second of test time at the earliest manner, regardless of the set test time.

The TIMER mode will run a test in a full course

completely in accordance with the set test time, whether the final judgment is PASS or FAIL.



Note

If the DUT is under the situation of abnormal measurement, e.g., short circuit, the FAIL judgment of SHORT warning, though TIMER is set, will appear in the early manner regardless of the set test time.

Steps

1. Press the PAGE soft-key to move to the 2/2 page where IR MODE setting appears for IR test.



2. Press the UP / DOWN arrow soft-keys to bring the cursor to the IR MODE setting.



IR MODE cursor

3. Use the scroll wheel to set the IR MODE.






IR MODE      STOP ON FAIL  
                  STOP ON PASS  
                  TIMER



## Setting GND OFFSET

**Background**                      The GND OFFSET is used to determine the offset resistance of the tester. When a GND OFFSET is performed, the reference is automatically set to the measured resistance.


 **Note**                                      GND OFFSET setting is only applicable to IR test.

- Steps**
1. Press the PAGE soft-key to move to the 2/2 page where GND OFFSET setting appears for IR testing. 
  2. Press the UP / DOWN arrow soft-keys to bring the cursor to the GND OFFSET setting. When selecting ON, the ZERO CHECK indicator will be shown on the display. 



GND OFFSET cursor      ZERO CHECK indicator

3. Press the START button to perform the GND OFFSET. The resistance of the tester, after the GND OFFSET has finished, will be added into the REF VALUE field as the display shown below.



Resistance of the tester

## Setting GB Contact

**Background** Basically, GB test has no ramp up time and thus starts from the set test time by user directly. However, due to some cases where a buffer time before test time is in fact required for GB test, e.g., in conveyor where DUTs are tested for GB by batches and certain buffer duration needed for test leads or jigs connecting with DUTs, the GB CONTACT setting practically allows user to apply to customized scenarios when necessary occurs.




Note

GB CONTACT setting is only applicable to GB test.

Steps

1. Press the UP / DOWN arrow soft-keys to bring the cursor to the GB CONTACT setting.

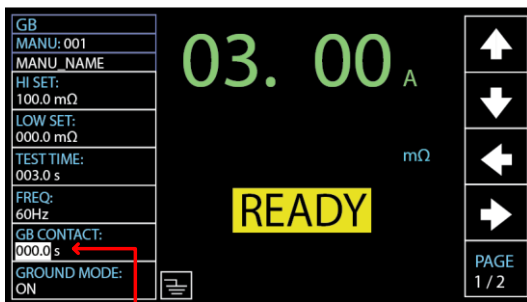

GB CONTACT cursor


2. Use the scroll wheel to set the value of GB CONTACT



GB CONTACT 000.0 s ~ 999.9 s

**GB CONTACT**  
Duration  
Indicator

After every parameter including GB CONTACT is well set, press START to begin the GB test. A section at the lower right corner of display shows the counting duration of GB CONTACT, which will run to the set value followed by the test time. See the screenshot shown below.

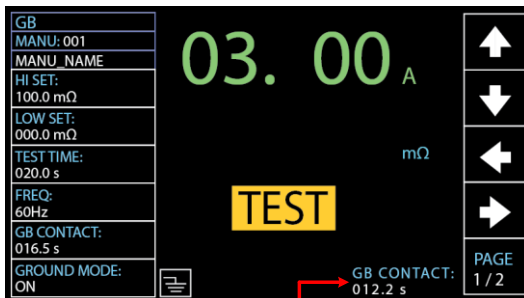

GB CONTACT duration indicator

## Zero Check for the Test Leads

---

**Background** The Zeroing function is used to determine the resistance of the test leads for GB and CONT tests. When a ZERO CHECK is performed, the reference is automatically set to the measured resistance of the test leads.

---




**Note**

ZERO CHECK setting is only applicable to both GB and CONT tests.

---

**Steps**

1. Short the positive and negative alligator clips as shown below.

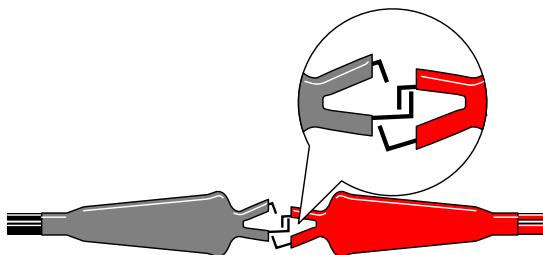

2. Press the PAGE soft-key to move to the 2/2 page where ZERO CHECK setting appears for GB testing.


PAGE  
2 / 2

As for CONT, ZERO CHECK setting shows in the 1/1 page directly.

PAGE  
1 / 1



3. Press the UP / DOWN arrow soft-keys to bring the cursor to the ZERO CHECK setting. When selecting ON, the ZERO CHECK indicator will be shown on the display.



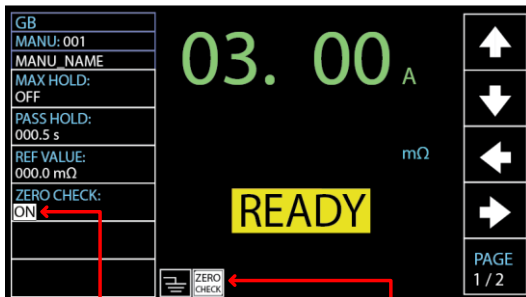

ZERO CHECK cursor      ZERO CHECK indicator

4. Press the START button to perform the zero check. The resistance of the test leads, after the ZERO CHECK has finished, will be added into the REF VALUE field as the display shown below.

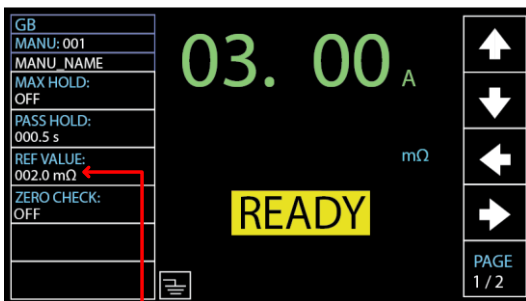

Resistance of the test leads




Note

Remember to replace the test leads to the proper position on the DUT before testing.

**FAIL – GBI LOW**


If SOURCE H/L terminals are open or poorly connected, the FAIL – GBI LOW status will appear on the screen. Please re-check the connection of SOURCE H/L terminals again.

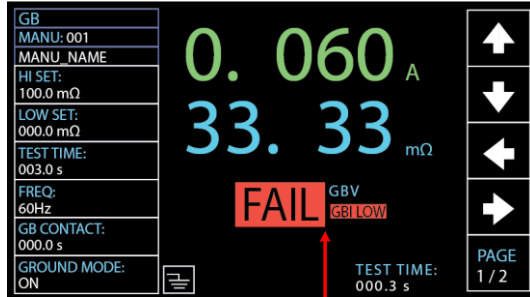

FAIL – GBI LOW status

**REF VALUE = 0**

Press STOP button to exit and the resistance of test leads were not properly added into the REF VALUE, which shows 000.0 mΩ as shown below. Re-check the connection of SOURCE H/L terminals and press START button again to proceed to the ZERO CHECK procedure.



REF VALUE = 0

## Setting the Grounding Mode


---

### Background

When GROUND MODE is set to ON, the GPT-12000 grounds the return terminal to the ground. This mode is best for DUTs that are grounded to an earth ground by their chassis, fixtures or operation environment. This mode measures the potential of the HIGH VOLTAGE terminal with respect to earth ground. This means that any stray capacitance/resistance that leaks to earth ground will also be measured. This is the safest testing mode, though potentially not as accurate.


When GROUND MODE is set to OFF, the return terminal is floating with respect to the earth ground. This mode is for DUTs that are floating and not directly connected to an earth ground. This is more accurate than when GROUND MODE is set to ON as any stray capacitance/resistance that leaks to the earth ground from the DUT side of the testing circuit will not be measured. For this reason, this testing mode is able to measure to a higher resolution.

GROUND MODE = ON, DUT grounded

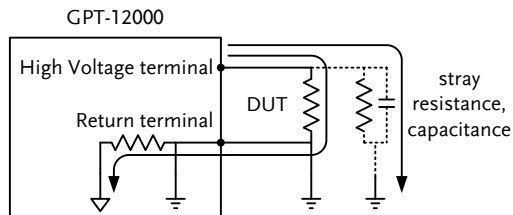





GROUND MODE = ON, DUT floating

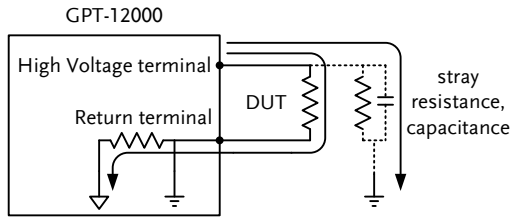


GROUND MODE = OFF, DUT floating

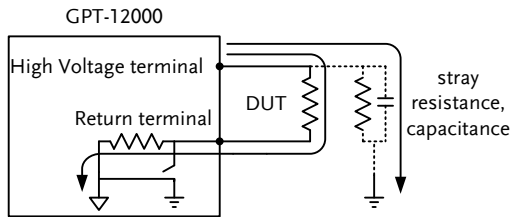


GPT-12000 (GB testing)

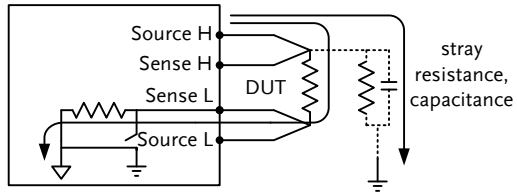

GROUND MODE = OFF, DUT grounded

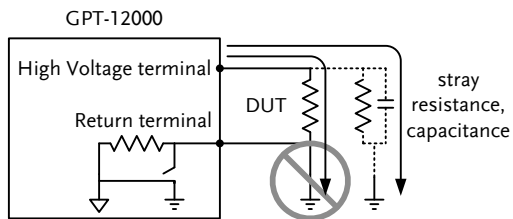

GPT-12000 (GB testing)

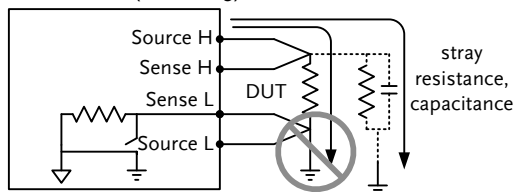

Warning

When GROUND MODE is set to OFF, the DUT, fixtures or connected instrumentation cannot be grounded. This will short circuit the internal circuitry during a test.

For ACW and DCW tests, if it is not known whether the DUT test setup is grounded or not, always set GROUND MODE to ON.

Only set GROUND MODE to OFF when the DUT is floating electrically.

Steps

1. Press the PAGE soft-key to move to the 2/3 page where GROUND MODE setting appears for ACW and DCW.


**PAGE**  
**2 / 3**

As for IR and GB, the GROUND MODE setting shows in the 1/2 page.

**PAGE**  
**1 / 2**

2. Press the UP / DOWN arrow soft-keys to bring the cursor to the GROUND MODE setting.



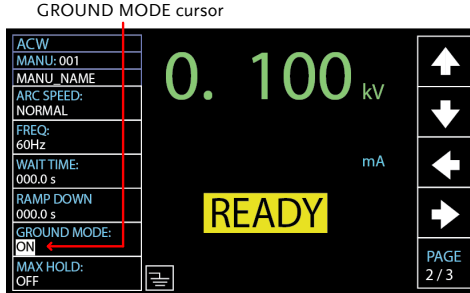


- Use the scroll wheel to set the GROUND MODE.




GROUND MODE      OFF, ON

- The GROUND MODE icon on the display changes accordingly.

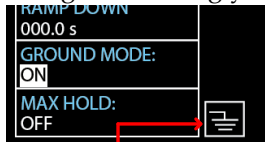

GROUND MODE ON

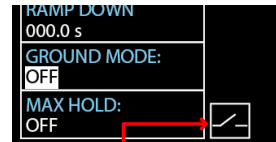

GROUND MODE OFF



Under the IR test mode, when GROUND MODE is ON but test time is set < 0.5s, the error message “TEST TIMR<0.5s” will be shown, by which user is not able to start the IR test mode unless the test time is reset to > 0.5s. Refer to page 44 for how to set the test time manually.



GROUND MODE ON

Error Message Prompts

## Running a MANU Test

---

Background                      A test can be run when the tester is in READY status.

---



Note

The tester cannot start to run a test under the following conditions:

- A protection setting has been tripped; when a protection setting has been tripped the corresponding error message is displayed on the screen. See page 212 for a comprehensive list of the all the setting errors.
  - The INTERLOCK function is ON and the Interlock key is not inserted in the signal I/O port (page 123).
  - The STOP signal has been received remotely.
  - If Double Action is ON, ensure the START button is pressed immediately after the STOP button (<0.5s).
- 



Note

When a test is running the voltage output cannot be changed, unless the test is under the special manual mode. See page 87 for details.


---

Steps                              1. Ensure the tester is in READY status for the test to come.                      Page 32


## READY status



2. Press the START button when the tester is in the READY status. The manual test starts accordingly and the tester goes into the TEST status.




## TEST status

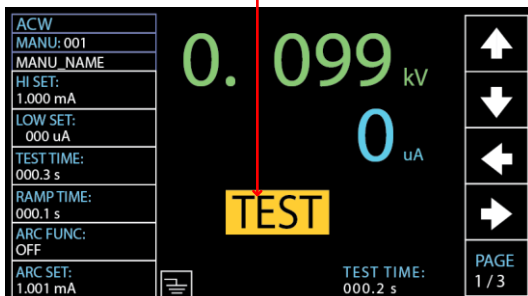

3. The test will start by showing the ongoing ramp up time followed by the ongoing test time and the ongoing ramp down time. The test will continue until the test is finished or stopped.

**RAMP UP TIME**

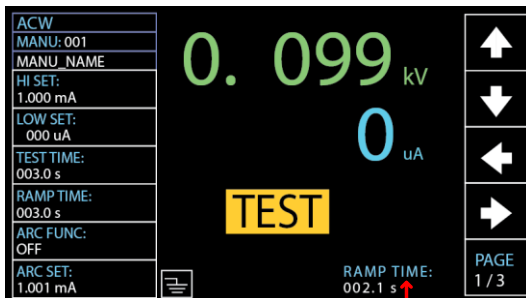


Ongoing RAMP UP TIME

**TEST TIME**



Ongoing TEST TIME

**RAMP DOWN TIME**

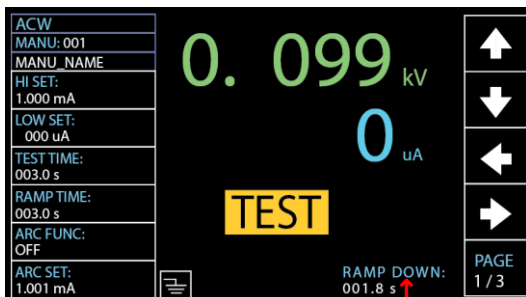

Ongoing RAMP DOWN TIME

 **Note**

RAMP DOWN time only appears when user has activated it. See page 48 for details.

ACW Example

	Test Voltage	Measured Current
ACW	0.099 kV	271 uA
MANU: 001		
MANU_NAME		
HI SET:		
1.000 mA		
LOW SET:		
000 uA		
TEST TIME:		
003.0 s		
RAMP TIME:		
003.0 s		
ARC FUNC:		
OFF		
ARC SET:		
1.001 mA		
		TEST TIME: 002.0 s
		PAGE 1 / 3


DCW Example

	Test Voltage	Measured Current
DCW	0.099 kV	361.6 uA
MANU: 001		
MANU_NAME		
HI SET:		
1.000 mA		
LOW SET:		
000 uA		
TEST TIME:		
003.0 s		
RAMP TIME:		
003.0 s		
ARC FUNC:		
OFF		
ARC SET:		
1.001 mA		
		TEST TIME: 001.9 s
		PAGE 1 / 3


IR Example

	Test Voltage	Measured Resistance
IR	0.097 kV	5.536 GΩ
MANU: 001		
MANU_NAME		
HI SET:		
10.00 GΩ		
LOW SET:		
001.0 MΩ		
TEST TIME:		
003.0 s		
RAMP TIME:		
003.0 s		
WAIT TIME:		
000.0 s		
GROUND MODE:		
ON		
		TEST TIME: 002.0 s
		PAGE 1 / 2

GB Example

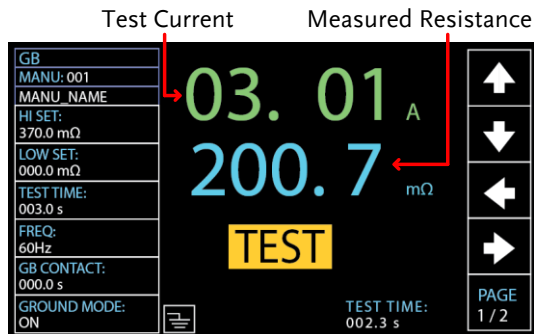


CONT Example

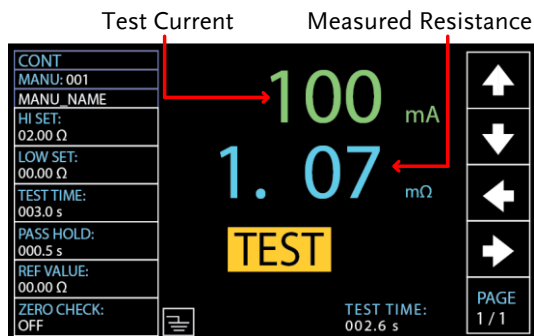

Stop the Test

1. To stop the test at any time when it is running, press the STOP button. The test will stop immediately. When the STOP button is pressed, a judgment is not made and the tester will restore to READY status.

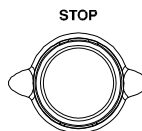

 Note

Do not touch any terminals, test leads or any other connections when the test is on.



## PASS / FAIL MANU Test

**Background**                      If the test is allowed to run to completion (the test is not stopped or a protection setting is not tripped) then the tester will judge the test as either PASS or FAIL.



**Note**

The test will be judged PASS when:

- The HI SET and LO SET limits have not been tripped during the test time.

The test will be judged FAIL when:


- Either the HI SET or LO SET limit has been tripped during the test time.
- A protection setting has been tripped during the test time. See page 212 for a list of error messages.

**PASS Judgment**    1. When the test is judged as PASS, PASS will be displayed on screen, the buzzer will sound and the PASS indicator will be lit green.

**PASS**




PASS Judgment

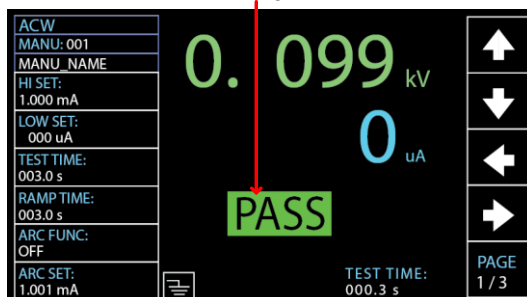

2. The tester will immediately restore back to the READY status after PASS judgment. However, if the PASS HOLD is activated, PASS judgment will persist until the set duration of PASS HOLD is fully met. Refer to page 62 for details.

In addition, pressing the STOP button during the set duration of PASS HOLD can return to READY status immediately.

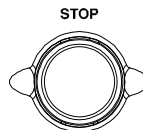

Note


The buzzer will only sound if the Buzzer is set to ON. See page 118 for details.

The START button is disabled when the buzzer is beeping.


### PASS Timing Diagrams

The timing diagrams below show the ACW, DCW, IR, GB and CONT timing for the START status, TEST status and PASS judgment.


#### ACW PASS Timing

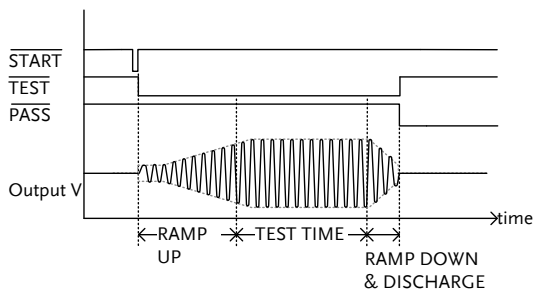


**DCW PASS**  
Timing

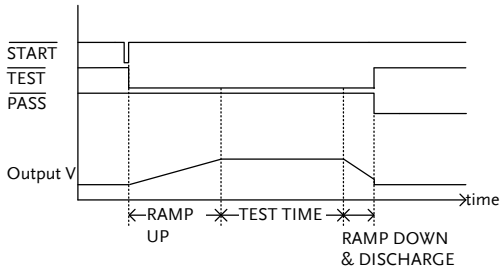


**IR PASS** Timing

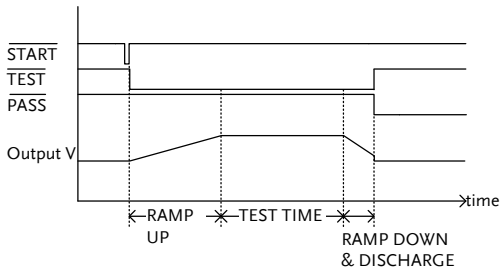

**GB PASS** Timing

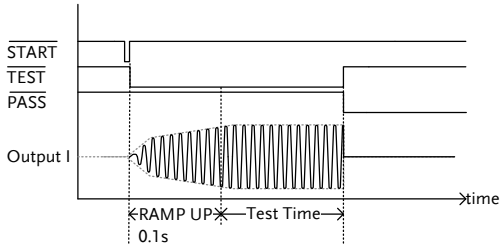

**CONT PASS**  
Timing

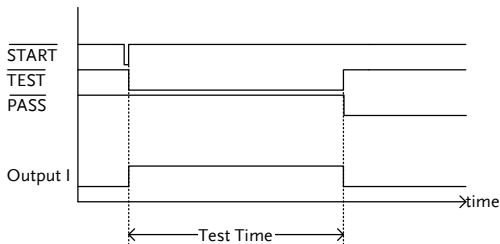


- FAIL Judgment
1. When the test is judged as FAIL, FAIL will be displayed on screen, the buzzer will sound and the FAIL indicator will be lit red.

**FAIL**




As soon as a test is judged FAIL, power is cut from the terminals.

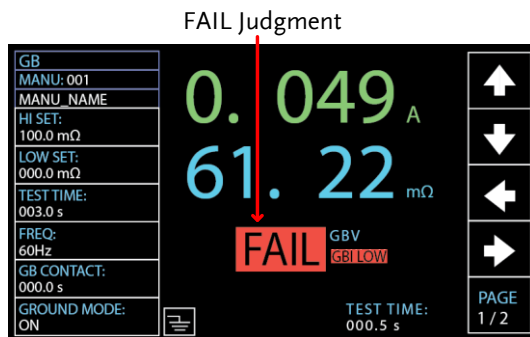

2. The FAIL judgment will be held on the display until the STOP button is pressed. Pressing the STOP button will return the tester back to the READY status.

**STOP**




The buzzer will only sound if Fail Sound is set to ON. See page 118 for details.


FAIL Timing Diagrams

The timing diagrams below show the ACW, DCW, IR, GB and CONT timing for the START status, TEST status and FAIL judgment.


ACW FAIL Timing

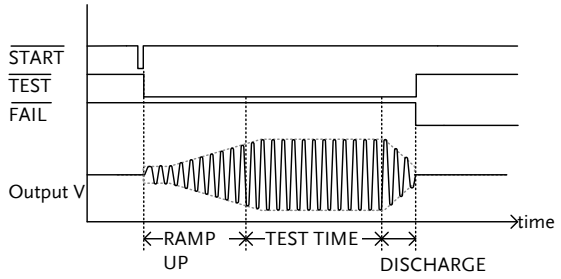


DCW FAIL Timing

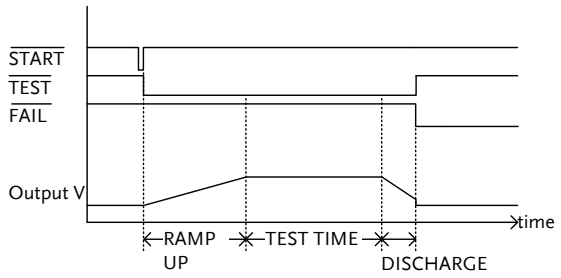


IR FAIL Timing

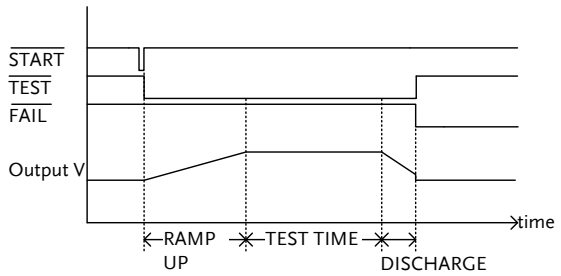

**GB FAIL Timing**

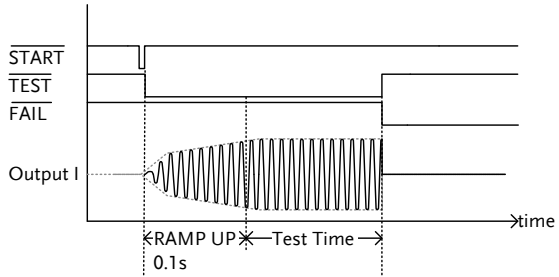

**CONT FAIL  
Timing**

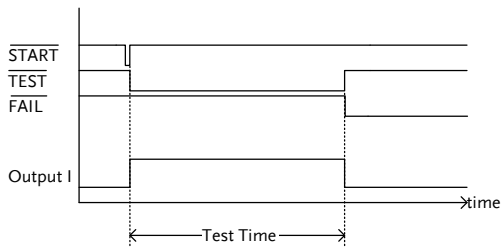

## Special MANU Test Mode (000)

### Special Test Mode Overview

When MANU number 000 is selected, the special test mode is activated. Under the special test mode, the voltage can be changed during a test in real time (ACW, DCW only). The test function can also be changed when in READY status, unlike under normal operation.

Separate settings can be saved under the special test mode for each of the testing functions: ACW, DCW, IR, GB and CONT. This means different test setups for ACW, DCW, IR, GB and CONT can be saved within the MANU number 000 concurrently.

### Steps

1. Choose MANU number 000 to enter the special test mode.

Page 40

2. The settings of a previous test can be loaded by pressing the corresponding soft-keys on the front panel.


For example, if you are currently in DCW mode, pressing the ACW key will load the ACW settings that were previously stored in the special manual mode.



3. Set all the necessary parameters for Pages 41 ~ 72 a test and save.

Note: A different test setup can be saved for each test function (ACW, DCW, IR, GB and CONT). Below is an example of ACW function in special manual mode.

Special MANU Number 000

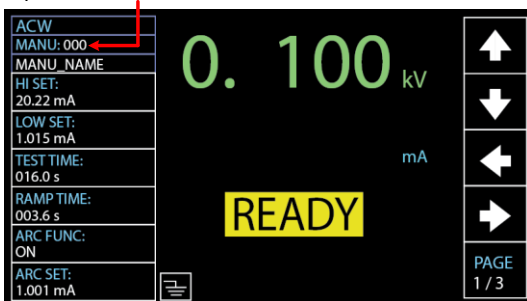

Running the Test

1. In special test mode (000), tests are started and stopped in the same way as for the normal manual test mode. See page 76 for details.
2. If required, the scroll wheel can be used to set the voltage level in real-time as the test is running under either ACW or DCW mode.



ACW            0.050kV ~ 5kV  
DCW            0.050kV ~ 6kV

Results

Test judgments are the same as those for the normal manual tests. Please see the PASS/FAIL MANU Test section for details.

Page 81




# Sweep Function

## Sweep Function Overview

The GPT-10000 Series has access to the sweep mode function, which creates a graph of one of the ACW, DCW, IR, GB or CONT tests in either Manual test or the special MANU mode. The graph will plot the output voltage, current or resistance versus time. After the test has been completed, the test current, voltage or resistance at any point in time can be fetched and viewed in the graph.

Below is an example of the resultant sweep plot of a DCW test where a DC voltage is ramped up to a user-defined level until the HI SET current level has been tripped or the test time runs out.

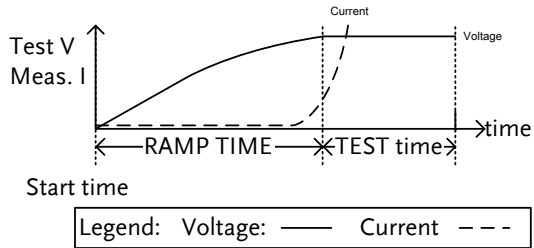


The test items that are plotted on the sweep graph depend on the type of test that is performed.

TEST	Graph Test Items
ACW	Test voltage, measured current (V, I)
DCW	Test voltage, measured current (V, I)
IR	Test voltage, measured resistance (V, R)
GB	Test current, measured resistance (I, R)
CONT	Test current, measured resistance (I, R)


Steps of View Sweep Graph

1. When a test has finished, press the corresponding button, e.g., DCW button for DCW test, to view the result of the sweep in an intuitive graph.

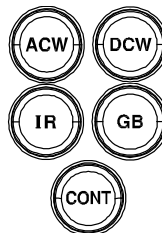

Graph Test Items:		
TEST	GREEN	BLUE
ACW	Test voltage	Test current
DCW	Test voltage	Test current
IR	Test voltage	Test resistance
GB	Test current	Test resistance
CONT	Test current	Test resistance

DCW Sweep Graph Example

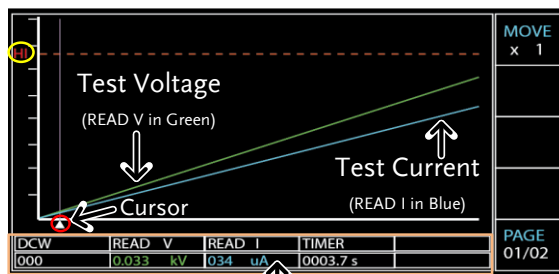

The values of point by cursor

- Use the scroll wheel to move the cursor on the time axis (red highlight in x-axis). The measured values on the green and blue lines at that particular point in time are shown within the table below (orange highlight). Also, the test function along with the test number is clearly shown within the table. The HI in y-axis (yellow highlight) along with the dotted line in red indicates the HI SET value and the point of tripped time.



Turn Pages

- The resultant graph will be over 1 page when test time is beyond 650 steps (the interval of each step is 0.1s). In this case, press PAGE soft-key to switch among each page for full graphs.

**PAGE**  
01/02

**PAGE**  
02/02

Fast-forward


- Press the MOVE soft-key before moving the cursor to fast-forward steps by 10 times (x 10), which is practical when steps are many. Press the MOVE soft-key again to return back to the normal "x 1" speed.

**MOVE**  
x 1

**MOVE**  
x 10

Exit the Results Graph

To exit the sweep graph, press the corresponding button again to return back to Manual test.

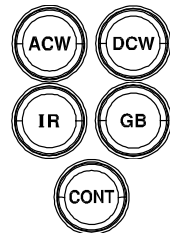

## Automatic Tests

This section describes how to create, edit and run automatic tests. Automatic tests allow you to link up to 10 different MANU tests and run them sequentially within a single AUTO test. Each stored MANU test is used as a test step when creating an AUTO test. In addition, up to 5 groups of AUTO test can be interconnected together to present an ever-advanced AUTO tests.

- Choose/Recall an AUTO Test → from page 93
- Creating an AUTO Test File Name → from page 94
- Adding a Step to the AUTO Test → from page 95
- Continuous AUTO Tests → from page 97
- AUTO Test Page Editing → from page 99
- Running an Automatic Test → from page 104
- Automatic Test Results → from page 110

Before operating the GPT-12000 please read the safety precautions as outlined in the Set Up chapter on page 21.

Choose/Recall an AUTO Test

**Background**                      The tester must first be put into AUTO mode to create or run automatic tests.

Up to 100 automatic tests can be saved or recalled.

- Steps**
1. If the tester is in MANU or SYSTEM mode, press the AUTO key on the front panel. This will put the tester into Auto mode.



2. After entering the AUTO mode, first use the scroll wheel to choose the AUTO number.




AUTO #     001~100

AUTO number cursor     READY status

AUTO-001	AUTO_NAME					READY	↑
MANU STEP	TEST MODE	V/I SETTING	H/I SETTING	LOW SETTING	STEP HOLD	↓	
							←
							→

**Note**

The AUTO number can only be chosen in READY status. If the status is either PASS or FAIL, press the STOP button to restore back to the READY status.



## Creating an AUTO Test File Name

### Background

Each automatic test can have a user-defined test file name (Default: AUTO\_NAME) up to 10 characters long. See the character list below for the allowed characters.

### Character List

0	1	2	3	4	5	6	7	8	9	
A	B	C	D	E	F	G	H	I	J	K
L	M	N	O	P	Q	R	S	T	U	V
W	X	Y	Z	a	b	c	d	e	f	g
h	i	j	k	l	m	n	o	p	q	r
s	t	u	v	w	x	y	z			

### Steps

1. Use the LEFT/RIGHT arrow soft-keys to move the cursor to the AUTO\_NAME (default name) field. The characters table will appear in the right hand accordingly.



AUTO name cursor      Character Table

AUTO-001	AUTO_NAME	READY	
MANU TEST	0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J	STEP	↑
STEP MODE	K L M N O P Q R S T U V W X Y Z a b c d	HOLD	↓
	e f g h i j k l m n o p q r s t u v w x		←
	y z		→

2. Use the scroll wheel to scroll through the available characters.
3. Press the LEFT / RIGHT arrow soft-keys to move the cursor to the next character.



- The AUTO test file name is set when the current AUTO test is saved or when the cursor is moved to another setting.



Note

Neither number (0 – 9) nor underline (\_) can be set for the 1st character in AUTO test file name.

## Adding a Step to the AUTO Test

Background

Up to 10 MANU tests (steps) can be added to an automatic (AUTO) test. Each step is added in a sequential order.

Steps

- Press the DOWN arrow key to bring the cursor to the MANU STEP number.



MANU STEP number cursor

AUTO-001		AUTO_NAME				READY
MANU STEP	TEST MODE	V/I SETTING	HI SETTING	LOW SETTING	STEP HOLD	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C	
						↑
						↓
						SKIP
						DEL.
						STEP HOLD

- Use the scroll wheel to choose a MANU STEP number to add to the automatic test.



MANU STEP number      001~100, CON

CON      It indicates that this group of AUTO test can be connected with the next group. Refer to page 97 for more details.

- Further press the DOWN arrow key followed by using the scroll wheel to choose another MANU STEP number to add to the automatic test.



MANU STEP number cursor (2nd)

AUTO-001		AUTO_NAME				READY
MANU STEP	TEST MODE	V/I SETTING	HI SETTING	LOW SETTING	STEP HOLD	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C	↑
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C	↓
						SKIP
						DEL.
						STEP HOLD

- Repeat the previous steps for any other MANU tests that you wish to add to the automatic test.



## Continuous AUTO Tests

**Background** As mentioned previously, up to 10 MANU steps can be grouped to form an AUTO test and user can designate each step from MANU step number 1 to 100 for an AUTO test. However, it is available to interconnect different AUTO tests together to present a series of AUTO tests.

- Steps**
1. Follow the steps of “Adding a Step to the AUTO Test” in page 95 first. See the example below where 5 MANU steps have been added into the AUTO-001 group.

AUTO-001		AUTO_NAME				READY	↑
MANU STEP	TEST MODE	V/I SETTING	HI SETTING	LOW SETTING	STEP HOLD	↓	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.H		
002	ACW	0.100kV	1.000mA	000 uA	P.H/F.C		
005	IR	0.050kV	066.8MΩ	000.1MΩ	P.C/F.S		
010	ACW	0.200kV	2.000mA	000 uA	P.C/F.C	SKIP	
006	DCW	0.500kV	1.500mA	000 uA	P.H/F.S		
						DEL.	
						STEP HOLD	

2. Press the DOWN arrow key to bring the cursor to the next MANU STEP field followed by using the scroll wheel to choose CON from the MANU STEP options.



AUTO-001		AUTO_NAME				READY	↑
MANU STEP	TEST MODE	V/I SETTING	HI SETTING	LOW SETTING	STEP HOLD	↓	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.H		
002	ACW	0.100kV	1.000mA	000 uA	P.H/F.C		
005	IR	0.050kV	066.8MΩ	000.1MΩ	P.C/F.S		
010	ACW	0.200kV	2.000mA	000 uA	P.C/F.C	SKIP	
006	DCW	0.500kV	1.500mA	000 uA	P.H/F.S		
CON						DEL.	
						STEP HOLD	

CON is chosen from MENU STEP

- Repeat the step 1 to form another group of AUTO-002 test as the following display shown.

AUTO-002 comprising 3 MANU steps

AUTO-002		AUTO_NAME				READY	↑
MANU STEP	TEST MODE	V/I SETTING	HI SETTING	LOW SETTING	STEP HOLD	↓	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.H		
002	ACW	0.100kV	1.000mA	000 uA	P.H/F.C		
026	IR	0.150kV	069.8MΩ	000.6MΩ	P.C/F.S		
							SKIP
							DEL.
							STEP HOLD

- After the previous steps, return to the AUTO-001 test page followed by pressing START button for automatic test. The AUTO-002 test will ensue from the end of AUTO-001 test. The continuous AUTO tests are thus established perfectly.



 Note

- Up to 5 groups of AUTO tests can be interconnected. The former 4 groups of AUTO tests, due to CON occupation, owns up to 9 MANU steps, respectively, whereas the last group can own up to 10 MANU steps. Thus, it is 46 MANU steps at the maximum for a continuously interconnected AUTO test.
- The interconnected groups of AUTO test are limited in serial numbers. That is to say, when initializing from AUTO-005, for example, the next group will be definitely AUTO-006 followed by AUTO-007, if available, and so forth up to 5 groups.

## AUTO Test Page Editing

**Background**                      The AUTO test page contains each added MANU step (up to 10 steps) in order on the list along with the corresponding settings including Test Mode, Test V/I Setting, HI & LOW Settings as well as Step Hold action, respectively. Each step can be skipped, deleted or edited for its Step Hold actions.

**Skip a MANU STEP**

1. Press the UP / DOWN arrow soft-keys to bring the cursor to the target MANU STEP on list.



Target MANU STEP cursor

AUTO-001		AUTO_NAME				READY
MANU STEP	TEST MODE	V/I SETTING	HI SETTING	LOW SETTING	STEP HOLD	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C	
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C	
						SKIP
						DEL.
						STEP HOLD

2. Press the SKIP soft-key.
3. The designated MANU STEP will be grayed out in color of setting.



The gray-out MANU STEP

AUTO-001		AUTO_NAME				READY	↑
MANU STEP	TEST MODE	V/I SETTING	HI SETTING	LOW SETTING	STEP HOLD	↓	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C		
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C		
							SKIP
							DEL.
							STEP HOLD



Note

When the AUTO test is run next time, the grayed-out steps will be simply skipped.

Delete a MANU STEP

1. Press the UP / DOWN arrow soft-keys to bring the cursor to the target MANU STEP on list.



Target MANU STEP cursor

AUTO-001		AUTO_NAME				READY	↑
MANU STEP	TEST MODE	V/I SETTING	HI SETTING	LOW SETTING	STEP HOLD	↓	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C		
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C		
							SKIP
							DEL.
							STEP HOLD

2. Press the DEL. soft-key.
3. The designated MANU STEP will be deleted from the list.



The designated MENU STEP is removed

AUTO-001		AUTO_NAME				READY
MANU STEP	TEST MODE	V/I SETTING	HI SETTING	LOW SETTING	STEP HOLD	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C	
						SKIP
						DEL.
						STEP HOLD

Step Hold Editing

- Press the UP / DOWN arrow soft-keys to bring the cursor to the target MANU STEP on list.



Target MANU STEP cursor

AUTO-001		AUTO_NAME				READY
MANU STEP	TEST MODE	V/I SETTING	HI SETTING	LOW SETTING	STEP HOLD	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C	
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C	
						SKIP
						DEL.
						STEP HOLD

- Press the STEP HOLD soft-key to bring the cursor to the STEP HOLD setting field.



STEP HOLD cursor

AUTO-001		AUTO_NAME				READY	↑
MANU STEP	TEST MODE	V/I SETTING	HI SETTING	LOW SETTING	STEP HOLD	↓	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C		
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C		
							SKIP
							DEL.
							STEP HOLD

- Use the scroll wheel to choose the options from STEP HOLD setting as listed below.



**P.H/F.H** Step which is judged PASS will be held until START button pressed by user for next step. Step which is judged FAIL will be held until START button pressed by user for next step.

**P.H/F.S** Step which is judged PASS will be held until START button pressed by user for next step. The AUTO test will be immediately stopped when Step is judged FAIL.

**P.H/F.C** Step which is judged PASS will be held until START button pressed by user for next step. The AUTO test will automatically continue although the step is judged FAIL.

- P.C/F.H      The AUTO test will automatically continue when the step is judged PASS. Step which is judged FAIL will be held until START button pressed by user for next step.
- P.C/F.S      The AUTO test will automatically continue when the step is judged PASS. The AUTO test will be immediately stopped when step is judged FAIL.
- P.C/F.C      The AUTO test will automatically continue when the step is judged PASS. The AUTO test will automatically continue although the step is judged FAIL.
- 0.1 ~ 999.9 s      The step will be held for specified seconds (0.1 ~ 999.9s) until the next step, regardless of PASS or FAIL judgment.

## Running an Automatic Test

**Background** An automatic test can be run when the tester is in READY status.



Note

The tester cannot start to run an AUTO test under the following conditions:

- Any protection modes have been tripped.
- The INTERLOCK function is ON and the Interlock key is not inserted in the signal I/O port (page 149).
- The STOP signal has been received remotely.

If Double Action is ON, ensure the START button is pressed immediately after the STOP button (<0.5s).



Warning

Do not touch any terminals, test leads or the DUT when a test is running.


**Steps** 1. Ensure the tester is in READY status for the AUTO test to come. Page 93

READY status indicator

AUTO-001		AUTO_NAME				READY	STEP HOLD
MANU STEP	TEST MODE	V/I SETTING	HI SETTING	LOW SETTING	STEP HOLD		
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.H		↑
002	ACW	0.100kV	1.000mA	000 uA	P.H/F.C		↓
005	IR	0.050kV	066.8MΩ	000.1MΩ	P.C/F.S		SKIP
010	ACW	0.200kV	2.000mA	000 uA	P.C/F.C		
006	DCW	0.500kV	1.500mA	000 uA	P.H/F.S		DEL.
							STEP HOLD



2. Press the START button when the tester is in the READY status. The AUTO test starts automatically and the display changes to each MANU TEST in sequence.



3. Each test will start by showing the ongoing ramp up time followed by the ongoing test time and the ongoing ramp down time. Each test will be tested in sequence until the last test has finished or the test is stopped.




RAMP DOWN time only appears when user has activated it. See page 48 for details.

**PASS & FAIL HOLD**


1. If P.H (Pass Hold) or F.H (Fail Hold) is set for a MANU STEP, then the tester will “hold” the testing when a PASS or FAIL judgment for that particular MANU STEP occurs. See page 102 for more details.

PASS HOLD Indicator

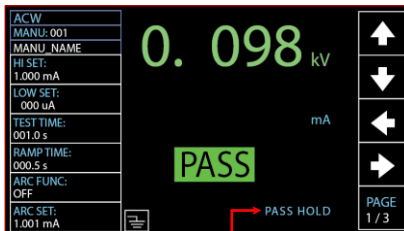


PASS HOLD indicator

FAIL HOLD Indicator

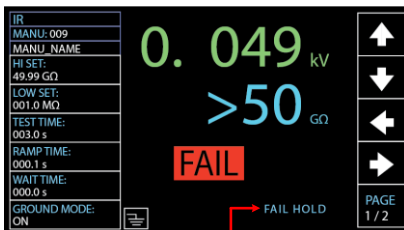


FAIL HOLD indicator


2. The PASS or FAIL indicator on the front panel will also be lit. The buzzer will sound when activated.



3. To continue to the next MANU STEP after HOLD is displayed on-screen, press the START button.



4. To stop the whole AUTO test when HOLD is displayed on-screen, press the STOP button.

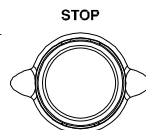



Note

When in HOLD status, only the START and STOP buttons can be pressed, all other keys are disabled.

**FAIL STOP**

1. If F.S (Fail Stop) is set for a MANU STEP, then the tester will “Stop” the whole AUTO test immediately when a FAIL judgment for that particular MANU STEP occurs. See page 103 for more details.

**FAIL STOP Setting**

AUTO-001		AUTO_NAME				READY	
MANU STEP	TEST MODE	V/I SETTING	HI SETTING	LOW SETTING	STEP HOLD		
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C		↑
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C		↓
026	IR	0.150kV	069.8MΩ	000.6MΩ	P.C/F.S		
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C		SKIP
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C		DEL.
							STEP HOLD

FAIL STOP setting

**FAIL HOLD Result Indicator**

AUTO test stops in FAIL status


AUTO-001		AUTO_NAME				FAIL	
MANU STEP	TEST MODE	READ DATA1	READ DATA2	TEST TIME	TEST RESULT		
001	DCW	0.099kV	000 uA	T000.3s	PASS		
002	ACW	0.099kV	000 uA	T000.3s	PASS		
026	IR	0.049kV	60.00GΩ	T000.3s	FAIL		
001	DCW	0.000kV	000 uA	I000.0s			
002	ACW	0.100kV	000 uA	I000.0s			
							PAGE 1 / 1

FAIL STOP indicator on exact MANU STEP

2. The FAIL indicator on the front panel will also be lit. The buzzer will sound when activated.



3. When FAIL is displayed on-screen, press the STOP button twice to return to the READY status.

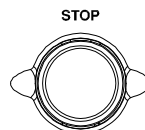

Return to  
READY  
status

Restore to READY status

AUTO_001		AUTO_NAME					READY
MANU	TEST	V/I	HI	LOW	STEP	↑	
STEP	MODE	SETTING	SETTING	SETTING	HOLD		
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C	↓	
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C		
026	IR	0.150kV	069.8MΩ	000.6MΩ	P.C/F.S	SKIP	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C		
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C	DEL.	
						STEP	
						HOLD	




Note

When in FAIL status, only the STOP button can be pressed, all other keys are disabled.

Stop a  
Running Test

- To stop the AUTO test at any time when it is running, press the STOP button. The AUTO test will stop immediately. When the STOP button is pressed, a judgment is not made on the current test and any remaining tests are aborted.

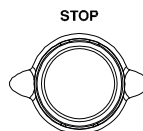

All panel keys except the STOP and START buttons are disabled when the tester has been stopped. All the results up until when the AUTO test was stopped are shown on-screen. See page 110 for more details on automatic test results.


Below is example of an automatic test that has been stopped in the midway. The remaining MANU STEPs are aborted without test results.

AUTO test stops

AUTO_001		AUTO_NAME				STOP
MANU STEP	TEST MODE	READ DATA1	READ DATA2	TEST TIME	TEST RESULT	
001	DCW	0.099kV	000 uA	T000.3s	PASS	
002	ACW	0.099kV	000 uA	T000.3s	PASS	
026	IR	0.022kV	000.0MΩ	R000.0s	STOP	
001	DCW	0.000kV	000 uA	I000.0s		
002	ACW	0.100kV	000 uA	I000.0s		
						PAGE 1 / 1

The exact stopped MANU STEP


- To put the tester back into READY status, press the STOP button again.

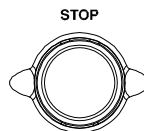

Restore to READY status

AUTO_001		AUTO_NAME				READY
MANU STEP	TEST MODE	V/I SETTING	HI SETTING	LOW SETTING	STEP HOLD	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C	↑
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C	↓
026	IR	0.150kV	069.8MΩ	000.6MΩ	P.C/F.S	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C	SKIP
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C	
						DEL.
						STEP HOLD

- Or press the START button to restart the AUTO TEST again directly.



Note

When in STOP status, only the START and STOP buttons can be pressed, all other keys are disabled.

## Automatic Test Results

### Background

If all the test steps are allowed to run to completion (the AUTO test is not stopped or a protection setting is not tripped) then the tester will judge each step as either PASS or FAIL. This is shown as a table after the automatic test has finished running. If the test has been stopped, then any remaining tests will not be run and thus the AUTO test will not finish running.

### Overview

AUTO TEST result indicator

AUTO-001		AUTO_NAME					STOP
MANU STEP	TEST MODE	READ DATA1	READ DATA2	TEST TIME	TEST RESULT		
001	DCW	0.099kV	000 uA	T000.3s	PASS		
002	ACW	0.099kV	000 uA	T000.3s	PASS		
001	DCW	0.000kV	000 uA	T000.0s	SKIP		
001	DCW	0.099kV	000 uA	T000.3s	PASS		
002	ACW	0.099kV	000 uA	T000.3s	PASS		
026	IR	0.049kV	60.00GΩ	T000.3s	FAIL		
001	DCW	0.097kV	000 uA	T000.1s	STOP		
002	ACW	0.000kV	000 uA	T000.3s			
						PAGE 1 / 1	

MANU STEP results indicators



Note

The PASS/FAIL/STOP result shown on the top-right corner for an AUTO TEST as a whole depends on the results of all the steps (MANU STEPs) that compose an AUTO TEST:

If Interlock function is enabled but without interlock inserted into Signal I/O port, the Interlock Open message will be shown on top-right corner and AUTO test will be unable to start. Refer to page 130 for details.

**PASS Judgment**

Each MANU STEP must be passed to present a PASS judgment on an AUTO TEST. (Excluding skipped MANU STEPS in gray color).

**PASS**

When all the tests have been judged as PASS, the PASS indicator will be lit green and the buzzer will sound if activated.

AUTO TEST PASS judgment

AUTO-001		AUTO_NAME				PASS
MANU STEP	TEST MODE	READ DATA1	READ DATA2	TEST TIME	TEST RESULT	
001	DCW	0.099kV	000 uA	T000.3s	PASS	
002	ACW	0.099kV	000 uA	T000.3s	PASS	
						PAGE
						1 / 1

All MANU STEPs with PASS results

**Note**

The Buzzer setting must to set to ON for the buzzer to sound (page 119).

**FAIL Judgment**

A FAIL result from a single MANU STEP will result in FAIL judgment for the whole AUTO TEST.

**FAIL**

When any of the tests have been judged as FAIL, the FAIL indicator will be lit red and the buzzer will sound if activated.

AUTO TEST FAIL judgment

AUTO-001	AUTO_NAME					FAIL
MANU STEP	TEST MODE	READ DATA1	READ DATA2	TEST TIME	TEST RESULT	
001	DCW	0.099kV	000 uA	T000.3s	PASS	
002	ACW	0.099kV	000 uA	T000.3s	PASS	
026	IR	0.049kV	60.00GΩ	T000.3s	FAIL	
						PAGE 1 / 1

One of the MANU STEPs with FAIL result



Note

The Buzzer setting must to set to ON for the buzzer to sound (page 119).

STOP Result

Once a MANU STEP is stopped, the AUTO TEST will be presented STOP in its result. In other words, if a MANU STEP is stopped, the entire AUTO TEST is in STOP result, neither PASS nor FAIL judgment. And the remaining MANU STEP(s) will be ignored with blank in test result field.

AUTO TEST STOP result

AUTO-001	AUTO_NAME					STOP
MANU STEP	TEST MODE	READ DATA1	READ DATA2	TEST TIME	TEST RESULT	
001	DCW	0.099kV	000 uA	T000.3s	PASS	
002	ACW	0.099kV	000 uA	T000.3s	PASS	
001	DCW	0.000kV	000 uA	I000.0s	SKIP	
001	DCW	0.099kV	000 uA	T000.3s	PASS	
002	ACW	0.099kV	000 uA	T000.3s	PASS	
026	IR	0.049kV	60.00GΩ	T000.3s	FAIL	
001	DCW	0.097kV	000 uA	T000.1s	STOP	
002	ACW	0.000kV	000 uA	T000.3s		
						PAGE 1 / 1

One of the MANU STEPS was stopped



Note

The Buzzer setting must to set to ON for the buzzer to sound (page 119).



Steps of  
Viewing Results

1. When an AUTO TEST is finished, the detailed test results along with values of each MANU STEP will be presented within the resultant table. The Read Data1 indicates the actual test V/I. The Read Data2 refers to the measured I/R. The Test Time simply means the set test time for MANU STEP.

AUTO 001		AUTO_NAME				FAIL
MANU STEP	TEST MODE	READ DATA1	READ DATA2	TEST TIME	TEST RESULT	
001	DCW	0.099kV	000 uA	T000.3s	PASS	
002	ACW	0.099kV	000 uA	T000.3s	PASS	
026	IR	0.049kV	60.00GΩ	T000.3s	FAIL	
					PAGE 1 / 1	

Test results &amp; values of each MANU STEP

2. Turn the scroll wheel right to flip page for checking parameter settings of each MANU STEP in table. Turn left to return back to previous page.



Refer to page 99 for more details on parameters including Step Hold, Test Mode, Test V/I Setting and HI & LOW Settings.

AUTO 001		AUTO_NAME				FAIL
MANU STEP	TEST MODE	V/I SETTING	HI SETTING	LOW SETTING	STEP HOLD	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C	
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C	
026	IR	0.050kV	49.99GΩ	001.0MΩ	P.C/F.C	
					PAGE 1 / 1	

Parameter settings of each MANU STEP




Note

Press STOP button before turning the scroll wheel right when FAIL judgment of AUTO TEST occurs.

Return to Ready Status

1. The PASS/FAIL/STOP results will be held on the screen until the STOP button is pressed.
2. To put the tester back into READY status, simply press the STOP button (twice for a FAIL result).
3. The READY indicator will be shown on the top of display.

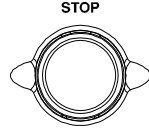

READY status indicator

AUTO-001		AUTO_NAME						READY
MANU	TEST	V/I	HI	LOW	STEP			
STEP	MODE	SETTING	SETTING	SETTING	SETTING	SETUP	HOLD	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C			
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C			
026	IR	0.050kV	49.99GΩ	001.0MΩ	P.C/F.C			

Check Multiple Pages of Results

The tester is able to interconnect up to 5 groups of AUTO TESTs and present a result of multiple pages. In this case, it is available to toggle between pages for checking. Refer to page 97 for how to organize a continuous AUTO TEST.

Steps

1. After a continuous AUTO TEST is completed, press PAGE soft key on the front panel to flip among different pages

**PAGE**  
1 / 2

Test Result of Page 1/2

AUTO-001		AUTO_NAME				READ
MANU	TEST	READ	READ	TEST	TEST	
STEP	MODE	DATA1	DATA2	TIME	RESULT	
001	DCW	0.099kV	000 uA	T000.3s	PASS	
002	ACW	0.099kV	000 uA	T000.3s	PASS	
026	IR	0.049kV	60.00GΩ	T000.3s	FAIL	

Multiple Pages indicator - 1/2


Test Result of  
Page 2/2

AUTO: 002	AUTO_NAME						PAGE
MANU	TEST	READ	READ	TEST	TEST	TEST	
STEP	MODE	DATA1	DATA2	TIME	RESULT		
001	DCW	0.099kV	000	uA	T000.3s	PASS	
002	ACW	0.099kV	000	uA	T000.3s	PASS	
							PAGE
							2 / 2


Multiple Pages indicator - 2/2

2. The test results in multiple pages of continuous AUTO TEST are almost identical with that of single AUTO TEST. Refer to page 110 to 113 for details on checking test results.

PASS Timing  
Diagram

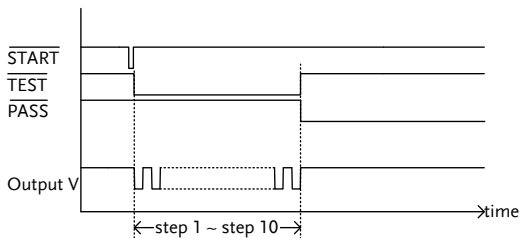

FAIL Timing  
Diagram

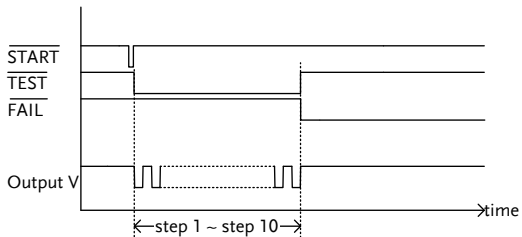

## System Settings



The System settings are system-wide settings that apply to both MANU tests and AUTO tests.

The System menu includes the following settings:


- Display Set settings → from page 117.
- Buzzer Settings → from page 119.
- Interface Settings → from page 121.
- Control settings → from page 123.
- System Time settings → from page 131.
- Data Initialize settings → from page 135.
- Information section → from page 138.
- Statistics settings → from page 139.
- USB Disk settings → from page 141.

## Display Set Setting

**Description**                      The Display Set page includes both brightness level and language settings.

- Steps**
1. Press the SYSTEM button on the front panel when the tester is under READY status in either MANU or AUTO test. 
  2. The SYSTEM page will be shown where DISPLAY SET is on top of the left-side list. Press the ENTER soft-key to enter the setting page. 



3. Use the scroll wheel to set the Brightness level. 



LCD Brightness      1 bar (low) ~ 10 bars (high)

4. Press the UP/DOWN arrow soft-keys to move the cursor to the Language setting followed by using the scroll wheel to set the options of Language setting.



Language options      English  
    繁體中文 (Traditional Chinese)  
    简体中文 (Simplified Chinese)

5. Press the EXIT soft-key to exit from the DISPLAY SET page.



Note

- The changes in DISPLAY SET are saved instantly.
- The AUTO or MANUAL button can be pressed at any time to jump to its belonging page, individually. Alternatively, it is available to promptly return back to the previous page with settings, whether it's AUTO or MANUAL mode, by simply pressing SYSTEM button.

## Buzzer Settings


**Description** The Buzzer settings allow you to set whether the Buzzer will sound for PASS/FAIL judgments. Also, it is available to set Key Sound for buttons being pressed.

**Steps**

1. Press the SYSTEM button on the front panel when the tester is under READY status in either MANU or AUTO test.




2. The SYSTEM page will be shown. Press the UP/DOWN arrow soft-keys to move the cursor to the BUZZER setting.

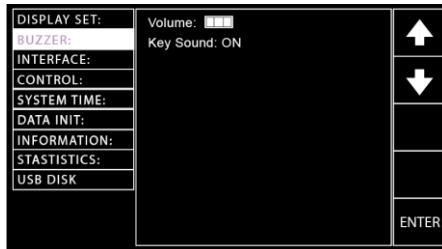


3. Press the ENTER soft-key to enter the Volume setting followed by using the scroll wheel to set the Volume level.



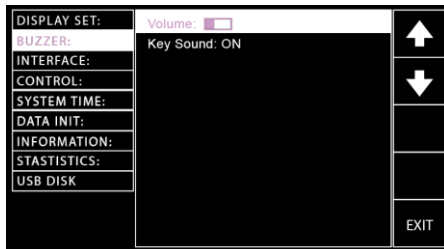

Buzzer Volume    1 bar (low) ~ 3 bars (high)

4. Press the UP/DOWN arrow soft-keys to move the cursor to the Key Sound setting followed by using the scroll wheel to set the Key Sound setting.

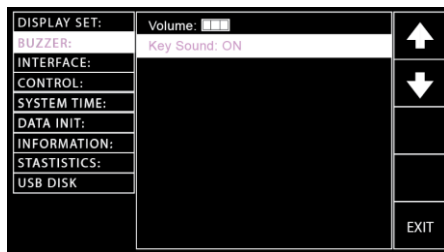

Key Sound            ON, OFF

5. Press the EXIT soft-key to exit from the BUZZER page.



Note

When in the AUTO test, the Buzzer sound only applies to the overall judgment of an AUTO test. There will no Buzzer sound for judgment of each test step within a group of an AUTO test.



Note

The changes in BUZZER setting are saved instantly.



## Interface Settings

**Description** The interface settings allows user to choose the remote interface configuration. USB, RS232 and GPIB (optional) can be selected.

**Steps**

1. Press the SYSTEM button on the front panel when the tester is under READY status in either MANU or AUTO test.



2. The SYSTEM page will be shown. Press the UP/DOWN arrow soft-keys to move the cursor to the INTERFACE setting.





3. Press the ENTER soft-key to enter the Interface setting followed by using the scroll wheel to select the Interface options.



Interface Options



RS-232, USB, GPIB

4. When RS-232 is selected, press the UP/DOWN arrow soft-keys to move the cursor to the Baud Rate setting followed by using the scroll wheel to set the Baud Rate setting.

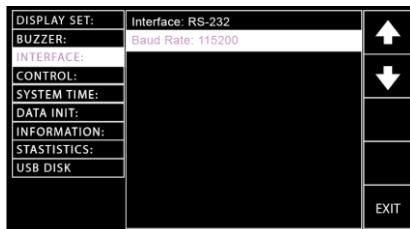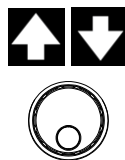

Baud Rate Setting      9600, 19200, 38400,  
for RS-232              57600, 115200,

5. When GPIB is selected, press the UP/DOWN arrow soft-keys to move the cursor to the Address setting followed by using the scroll wheel to set the Address setting.

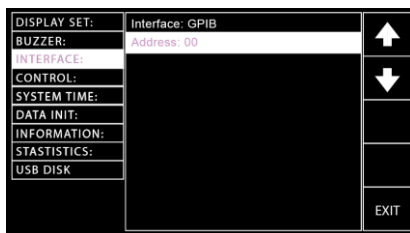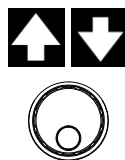

Address Setting for GPIB      00~31

6. Press the EXIT soft-key to exit from the INTERFACE page.



Note

Ensure the baud rate settings or GPIB address matches the host machine.

Note

The changes in INTERFACE setting are saved instantly.

## Control Settings

---

Description	<p>The Control settings include 6 options: Control By, Double Action, Key Lock, Interlock, Start Click For 1 Second, and Power GND Check.</p> <ul style="list-style-type: none"><li>• Control By is used to determine how a test is started. Tests can be started via the front panel (START/STOP buttons), from a remote controller or via the SIGNAL I/O port.</li><li>• The Double Action function is a safety feature used to prevent accidentally starting a test. Normally to start a test, the START button is pressed when the tester is in the READY status. To start a test when Double Action is ON, the STOP button must first be pressed, followed by the START button within 500ms.</li><li>• Key Lock disables the front panel keys from changing the test number, mode or testing parameters. Only the START &amp; STOP buttons required for testing are not disabled. Also, the SYSTEM button remains functional for user to return back to the system setting.</li><li>• The Interlock function is a safety feature. The interlock function prevents a test from running, unless the interlock pins on the signal I/O port connector are shorted. The included interlock key can be used for this purpose. See page 150 for details.</li><li>• The Start Click For 1 Second indicates another safety feature that requires the START button being pressed for 1 second so that a test, whether MANU or AUTO, can be started.</li></ul>
-------------	--


- The Power GND Check detects if the ground terminal from power cord of instrument connects to earth ground properly.

**Steps**


1. Press the SYSTEM button on the front panel when the tester is under READY status in either MANU or AUTO test.



2. The SYSTEM page will be shown. Press the UP/DOWN arrow soft-keys to move the cursor to the CONTROL setting.

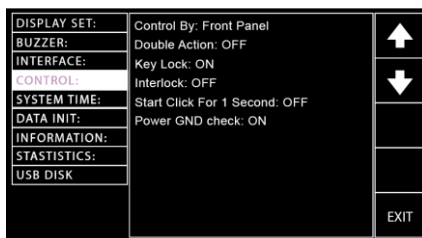


3. Press the ENTER soft-key to enter the Control By setting followed by using the scroll wheel to select the following options.

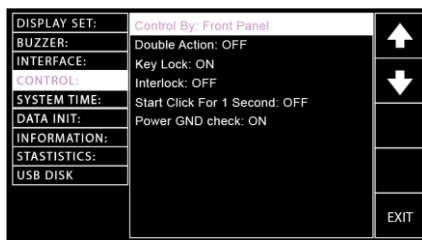


Control By settings      Front Panel  
    Remote  
    SIGNAL IO

When SIGNAL IO is selected, press the PIN SET soft-key to enter the specific setting page.

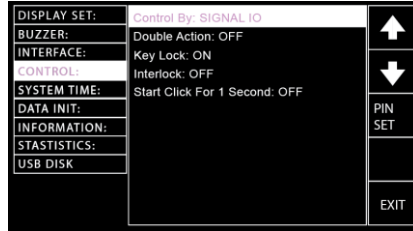

The setting page is divided into 2 sections; the upper is for output pins settings, whilst the lower part indicates the methods of Signal IO selections under AUTO test mode. Refer to the figure below.

SIGNAL IO Output PINs (green zone)

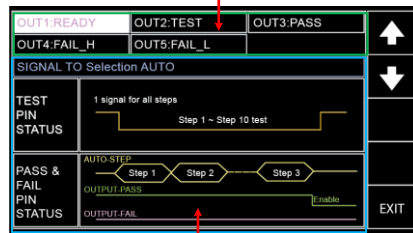

SIGNAL IO Selection for AUTO Test (blue zone)

Press the UP/DOWN arrow soft-keys to move the cursor to target PINs (1~5) followed by using the scroll wheel to select the following 6 options for each pin.




PINs  
Settings

READY, TEST, PASS, FAIL,  
FAIL\_H, FAIL\_L


Further press the UP/DOWN arrow soft-keys to move the cursor to the TEST PIN STATUS followed by using the scroll wheel to select the following 2 options for TEST PIN under AUTO test mode.



**1 signal for all** It means one signal output of TEST PIN will be delivered to all steps all the way till the end of an AUTO test.

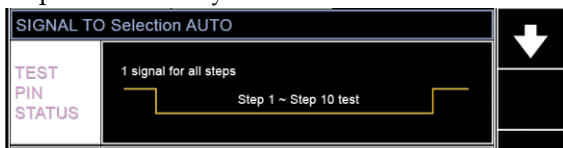

**1 signal for each step** It means one signal output of TEST PIN will be delivered to each step with continuous counters within each interval between each step, which is particularly practical for certain applications.

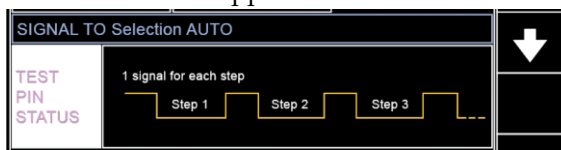


Further press the UP/DOWN arrow soft-keys to move the cursor to the PASS & FAIL PIN STATUS followed by using the scroll wheel to select the following 2 options for PASS & FAIL PINs under AUTO test mode.




Pass & Fail judgment in final step      Regardless of judgments of each step in an AUTO test, a PASS or FAIL will be given after the whole steps are completed. However, an AUTO test will be stopped in the mid way when F.C is activated. Refer to page 102 for details.



Pass & Fail judgment for each step      Pass or Fail judgment will be given for each step within an AUTO test. By doing so, the judgments of each step can be concretely recognized, individually for user.

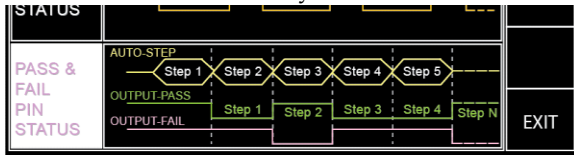


4. Press the UP/DOWN arrow soft-keys to move the cursor to the Double Action setting followed by using the scroll wheel to set the Double Action setting.

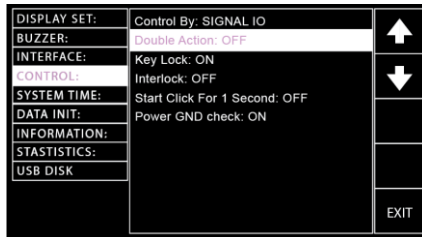


Double Action settings      ON, OFF

5. Press the UP/DOWN arrow soft-keys to move the cursor to the Key Lock setting followed by using the scroll wheel to set the Key Lock setting.

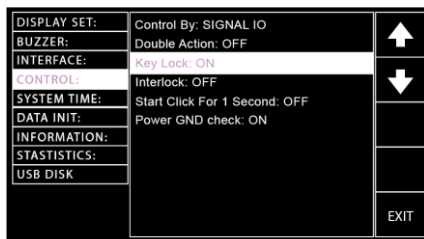

Key Lock settings      ON, OFF

6. Press the UP/DOWN arrow soft-keys to move the cursor to the Interlock setting followed by using the scroll wheel to set the Interlock setting.

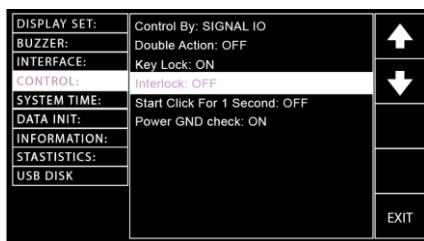


Interlock settings      ON, OFF

7. Press the UP/DOWN arrow soft-keys to move the cursor to the Start Click For 1 Second setting followed by using the scroll wheel to set the Start Click For 1 Second setting.







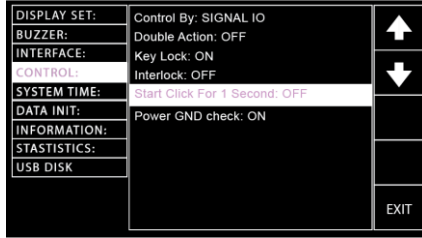

Start Click For 1 Second settings      ON, OFF

8. Press the UP/DOWN arrow soft-keys to move the cursor to the Power GND Check setting followed by using the scroll wheel to set the Power GND Check setting.

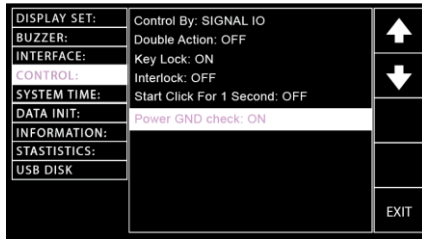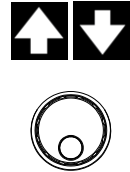

Power GND Check settings      ON, OFF

When Power GND Check setting is ON but the instrument doesn't connect to earth ground, the prompt message will appear in either MANU or AUTO mode as the figures below shown.

MANU  
MODE



POWER GND FAIL Message

AUTO  
MODE

GND FAIL Message

AUTO-001	AUTO_NAME	GND FAIL		READY	
MANU TEST	V/I	HI	LOW	STEP	
STEP	MODE	SETTING	SETTING	HOLD	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C
026	IR	0.150kV	069.8MΩ	000.6MΩ	P.C/F.S
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C

9. Press the EXIT soft-key to exit from the CONTROL page.



Note

The changes in CONTROL setting are saved instantly.



Note

The Double Action setting is ignored when the GPT-12000 is being controlled remotely via the USB, RS232 or GPIB interface.



Note

If a test is started with INTERLOCK ON, but the interlock signal I/O pins are not shorted (either with the included interlock key or manually), the Interlock Open message will be displayed, whether in MANU or AUTO test, to prevent the test from starting for safety reason.

MANU  
Test

ACW					
MANU: 001					
MANU_NAME					
HI SET:					
1.000 mA					
LOW SET:					
000 uA					
TEST TIME:					
001.0 s					
RAMP TIME:					
000.5 s					
IRRC FUNC:					
OFF					
IRRC SET:					
1.001 mA					

Interlock Open Message

AUTO  
Test

Interlock Open Message

AUTO-001	AUTO_NAME	Interlock Open		READY	
MANU TEST	V/I	HI	LOW	STEP	
STEP	MODE	SETTING	SETTING	HOLD	
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C
026	IR	0.150kV	069.8MΩ	000.6MΩ	P.C/F.S
001	DCW	0.100kV	1.000mA	000 uA	P.C/F.C
002	ACW	0.100kV	1.000mA	000 uA	P.C/F.C

## System Time Settings

**Description**                      The date and time for tester system can be edited under this section. The button cell battery used for system date & time has the lifecycle of approximate 2 years in general. Hence, it is suggested to replace with new battery of the type of CR-2032 every 2 years.

**Steps**                              1. Press the SYSTEM button on the front panel when the tester is under READY status in either MANU or AUTO test.



2. The SYSTEM page will be shown. Press the UP/DOWN arrow soft-keys to move the cursor to the SYSTEM TIME setting.





3. Press the ENTER soft-key to enter the Year setting followed by using the scroll wheel to select the Year setting for system.






Year settings      2000 ~ 2099

4. Press the UP/DOWN arrow soft-keys to move the cursor to the Month setting followed by using the scroll wheel to set the Month setting for system.

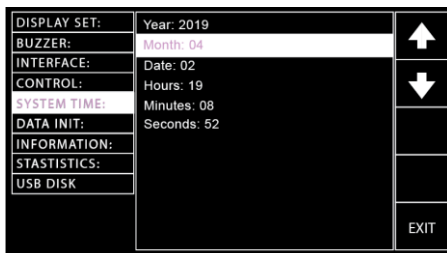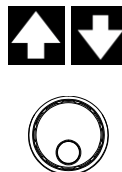

Month settings                      01 ~ 12


5. Press the UP/DOWN arrow soft-keys to move the cursor to the Date setting followed by using the scroll wheel to set the Date setting for system.

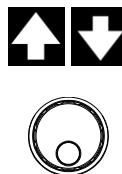




Date settings 01 ~ 31

6. Press the UP/DOWN arrow soft-keys to move the cursor to the Hours setting followed by using the scroll wheel to set the Hours setting for system.

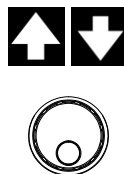

Hours settings 00 ~ 23


7. Press the UP/DOWN arrow soft-keys to move the cursor to the Minutes setting followed by using the scroll wheel to set the Minutes setting for system.

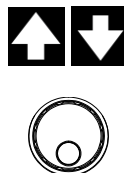



Minutes settings      00 ~ 59

8. Press the UP/DOWN arrow soft-keys to move the cursor to the Seconds setting followed by using the scroll wheel to set the Seconds setting for system.

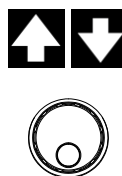

Seconds settings      00 ~ 59

9. Press the EXIT soft-key to exit from the SYSTEM TIME page.



Note

The changes in SYSTEM TIME setting are saved instantly.


## Data Initialize Settings

**Description**                      The settings of AUTO test, MANU test and SYSTEM saved by user can be initialized within this section.

**Steps**                              1. Press the SYSTEM button on the front panel when the tester is under READY status in either MANU or AUTO test.




2. The SYSTEM page will be shown. Press the UP/DOWN arrow soft-keys to move the cursor to the DATA INIT setting.

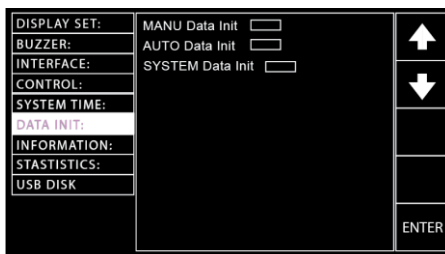



3. Press the ENTER soft-key to enter the Manu Data Init setting followed by pressing the right arrow soft-key for consecutive 3 times to initialize the Manu Data settings.



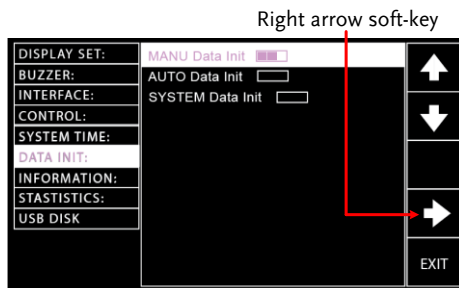

The status bar of Manu Data Init consists of 3 bars, which indicate the initializing action will not be implemented until 3 bars are fully achieved. After the initializing, the “OK” message appears.



4. Press the UP/DOWN arrow soft-keys to move the cursor to the Auto Data Init setting followed by pressing the right arrow soft-key for consecutive 3 times to initialize the Auto Data settings.

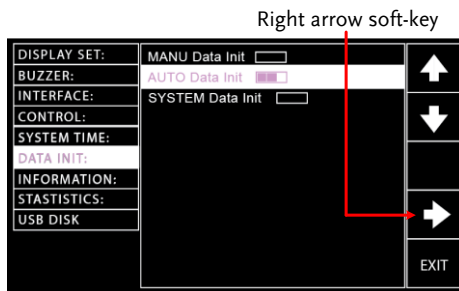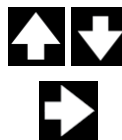

The status bar of Auto Data Init consists of 3 bars, which indicate the initializing action will not be implemented until 3 bars are fully achieved. After the initializing, the “OK” message appears.



5. Press the UP/DOWN arrow soft-keys to move the cursor to the System Data Init setting followed by pressing the right arrow soft-key for consecutive 3 times to initialize the System Data settings.

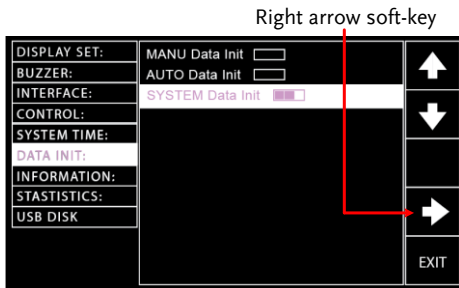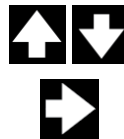

6. Press the EXIT soft-key to exit from the DATA INIT page.




The status bar of System Data Init consists of 3 bars, which indicate the initializing action will not be implemented until 3 bars are fully achieved. After the initializing, the “OK” message appears.

## Information Section

**Description**                      The Information section here discloses some basic information including model name, firmware version and the available functions.

**Steps**

1. Press the SYSTEM button on the front panel when the tester is under READY status in either MANU or AUTO test.



2. The SYSTEM page will be shown. Press the UP/DOWN arrow soft-keys to move the cursor to the INFORMATION section.



3. The basic information of the tester will be clearly exposed on the screen.

## Statistics Settings

**Description** The settings of AUTO test, MANU test and SYSTEM saved by user can be initialized within this section.

**Steps**

1. Press the SYSTEM button on the front panel when the tester is under READY status in either MANU or AUTO test.



2. The SYSTEM page will be shown. Press the UP/DOWN arrow soft-keys to move the cursor to the STATISTICS setting where PASS and FAIL amounts and TOTAL amounts to date are shown in the green highlight below. Also, the detailed distributions of PASS and FAIL amounts from each test functions are well disclosed for viewing in the blue highlight below.



PASS, FAIL amounts & TOTAL amounts

DISPLAY SET:	TOTAL AMOUNT = 00032		↑	
BUZZER:	PASS AMOUNT = 00023			
INTERFACE:	FAIL AMOUNT = 00009			
CONTROL:	FUNCTION	PASS	FAIL	↓
SYSTEM TIME:	ACW	00003	00002	
DATA INIT:	DCW	00003	00002	
INFORMATION:	IR	00002	00003	
STATISTICS:	GB	00003	00002	
USB DISK	CONT	00012	00000	
				ENTER

PASS & FAIL amounts distributions in each test function

3. Press the ENTER soft-key to enter the statistics table. It is available to press the DATA INIT soft-key to initialize the accumulated statistics.

**ENTER**

**DATA  
INIT**

DISPLAY SET:	TOTAL AMOUNT = 00032			↑
BUZZER:	PASS AMOUNT = 00023			
INTERFACE:	FAIL AMOUNT = 00009			
CONTROL:	FUNCTION	PASS	FAIL	↓
SYSTEM TIME:	ACW	00003	00002	
DATA INIT:	DCW	00003	00002	DATA INIT
INFORMATION:	IR	00002	00003	
STATISTICS:	GB	00003	00002	EXIT
USB DISK	CONT	00012	00000	

DATA INIT soft-key



Note

After pressing the DATA INIT soft-key, all the statistics shown on this page will be initialized to 0 and the future tests will be re-accumulated from zero.

4. Press the UP/DOWN arrow soft-keys to move the cursor to the table below. Place the cursor in target test function followed by pressing ANALY soft-key to enter the specific analysis page.




**ANALY**

ANALY soft-key

DISPLAY SET:	TOTAL AMOUNT = 00032			↑
BUZZER:	PASS AMOUNT = 00023			
INTERFACE:	FAIL AMOUNT = 00009			
CONTROL:	FUNCTION	PASS	FAIL	↓
SYSTEM TIME:	ACW	00003	00002	
DATA INIT:	DCW	00003	00002	ANALY
INFORMATION:	IR	00002	00003	
STATISTICS:	GB	00003	00002	EXIT
USB DISK	CONT	00012	00000	

Selected target test function

5. The distributions of PASS and FAIL statistics are well illustrated in the histogram with table display in which the upper side reads the individual PASS and FAIL amounts for test function. The mid and lower side depicts FAIL amounts in the far-right red strip with number below, whilst the PASS amounts are described in strips of different colors with numbers below indicating the percentage of varied measured values in relation to the set HI & LOW range.

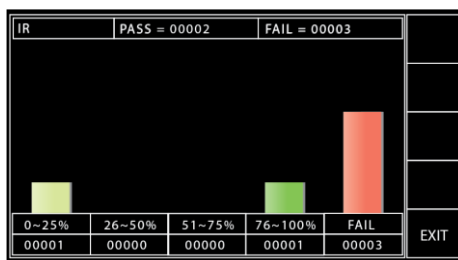

6. Press the EXIT soft-key to exit from the STATISTICS page.

**EXIT**

## USB Disk Settings

### Description


The measurements data can be stored in the connected USB disk. In this section user can determine a user-defined name for data to be saved into the inserted USB disk. Refer to page 14 for details on USB port in the front panel.

### Steps


1. Press the SYSTEM button on the front panel when the tester is under READY status in either MANU or AUTO test.

**SYSTEM**

- The SYSTEM page will be shown. Press the UP/DOWN arrow soft-keys to move the cursor to the USB DISK setting.

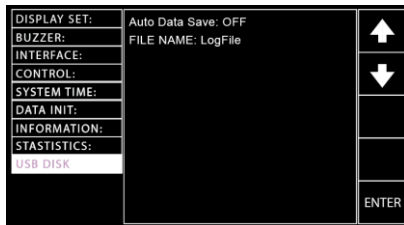


- Press the ENTER soft-key to enter the Auto Data Save setting followed by using the scroll wheel to set the Auto Data Save setting.

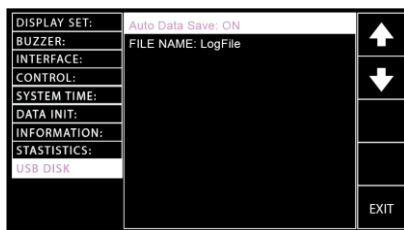

Auto Data Save setting      ON, OFF

- Press the UP/DOWN arrow soft-keys to move the cursor to the File Name filed, which sets file name for Auto Data Save. The characters table will appear beneath accordingly.



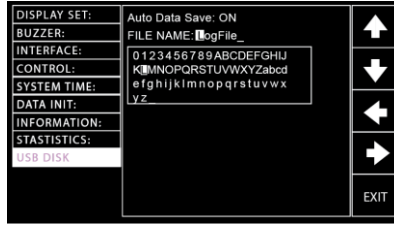

5. Use the scroll wheel to scroll through the available characters.



6. Press the LEFT / RIGHT arrow soft-keys to move the cursor to the next character.



7. The File Name is set when pressing the EXIT soft-key to exit from the USB DISK page.




Note

The changes in USB DISK setting are saved instantly.

Make sure an USB disk is plugged into GTP-10000 unit before saving measurement data into the disk. Once an USB disk is well inserted, the USB icon, in either MANU or AUTO mode, appears accordingly.


USB icon in MANU

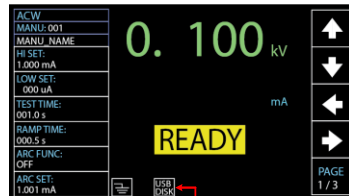

USB Disk Plugged in

USB icon in AUTO

USB Disk Plugged in

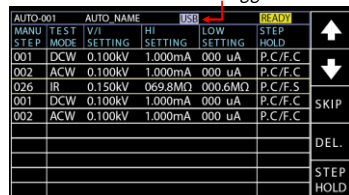

# E EXTERNAL CONTROL

The External Control chapter covers the  
REMOTE terminal and the SIGNAL I/O port.

---

<b>External Control Overview .....</b>	<b>145</b>
Remote Terminal Overview .....	145
Remote Controller Operation .....	146
SIGNAL I/O Overview .....	147
Using the SIGNAL I/O to Start/Stop Tests .....	149
Using the Interlock Key .....	150



# External Control Overview


The External Control section describes the front panel REMOTE terminal connection and the rear panel SIGNAL I/O port.

## Remote Terminal Overview

**Overview** The REMOTE terminal connector is a standard 5-pin DIN terminal suitable for a remote controller.

**! WARNING** Keep any cables that are connected to the REMOTE terminal away from the HIGH VOLTAGE and RETURN terminals.

### Pin Assignment and Connection

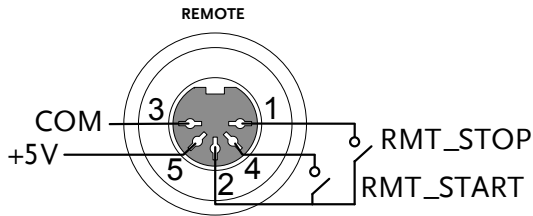

Pin	Pin name	Description
1	RMT_STOP	Remote Stop signal
2	COM	Common line
3	COM	Common line
4	RMT_START	Remote Start signal
5	+5V	+5V Output

Signal Properties	
High level input voltage	3.3V~5.0V
Low level input voltage	0~0.8V
Input period	minimum of 1ms

## Remote Controller Operation

---


**Description** The GPT-12000 accepts external remote controllers with a START and STOP button. To use the REMOTE terminal, the GPT-12000 must first be configured to accept a remote controller.

Operating a remote controller is the same as operating the START and STOP buttons on the front panel.

---

**Steps**

1. Insert the lead of remote controller into the REMOTE terminal.

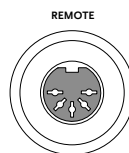

2. Configure the CONTROL option to Page 123 REMOTE in the SYSTEM mode.
  3. The tester will now only be able to start a test using a remote controller.
- 



Even if the GPT-12000 is configured to use the REMOTE option, the STOP button on the front panel can still be used to stop a test.

---

4. To return the operation control to the front panel, configure the CONTROL option to Front Panel. Page 123


## SIGNAL I/O Overview

**Overview**                      The SIGNAL I/O port can be used to remotely start/stop tests and monitor the test status of the instrument.

The SIGNAL I/O port is also used for the interlock function. Refer to page 150 for details.


The SIGNAL I/O port basically uses a DB-15 pin female connector.

### Pin Assignment

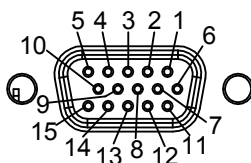


Pin name	Pin	Description
INTERLOCK1	1	When INTERLOCK is ON, a test is only allowed
INTERLOCK2	2	to start when both INTERLOCK pins are shorted.
INPUT_START	3	Start signal input
INPUT_STOP	4	Stop signal input
INPUT_COM	5	Common input line
NC	6	NC
OUTPUT_1	7	OUTPUT1 SIGNAL
OUTPUT_2	8	OUTPUT2 SIGNAL
OUTPUT_3	9	OUTPUT3 SIGNAL
OUTPUT_4	10	OUTPUT4 SIGNAL
OUTPUT_5	11	OUTPUT5 SIGNAL
NC	12	NC
NC	13	NC
NC	14	NC
OUTPUT_COM	15	Common output line


**Interlock connection**



**Input Connection**

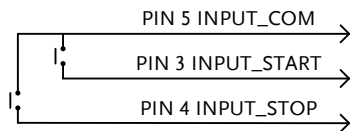

**Output Connection**

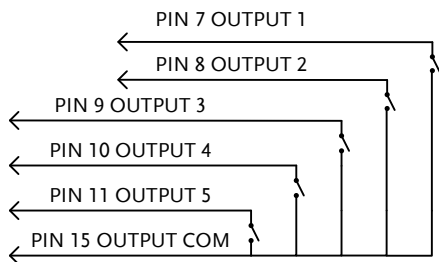

**Signal Properties**


**Input Signals**

High level input voltage	5V ~ 32V
Low level input voltage	0V ~ 1V
Low level input current	Maximum of -5mA
Input period	Minimum of 1ms


**Output Signals**

Output Type	Relay form A
Output Rated Voltage	30VDC
Maximum output current	0.5A

**Input Stop and Input Start Timing**



**Output Timing**

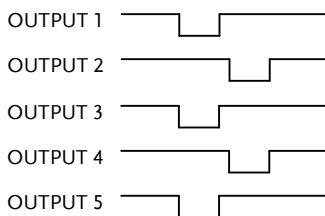

**Note**

Output is able to be deployed by programming.

## Using the SIGNAL I/O to Start/Stop Tests

---

Background                      To use the SIGNAL I/O port the CONTROL settings have to be set to SIGNAL IO in the SYSTEM mode.

---

- Panel operation                      1. Set the CONTROL option to SIGNAL IO in the SYSTEM mode.                      Page 122
2. Connect the Input/Output signals to the SIGNAL I/O port.
  3. To start the testing, short the INPUT\_STOP and INPUT\_COM line for a minimum of 1ms to put the tester into READY status.
  4. To start the testing, short the INPUT\_START and INPUT\_COM lines for a minimum of 1ms.
  5. To stop the testing, temporarily short the INPUT\_STOP and INPUT\_COM line again.
- 



Even if the GPT-12000 is configured to use the SIGNAL I/O interface, the STOP button on the front panel can still be used to stop a test.

---


## Using the Interlock Key

---

**Background** When the INTERLOCK function is set to ON, tests are only allowed to start when both Interlock pins on the signal I/O port are shorted. Using the Interlock key will short the INTERLOCK1 and INTERLOCK2 pins on the signal I/O port. See page 147 for the Signal I/O pin assignment.

---

**Panel operation** 1. Insert the Interlock key into the SIGNAL I/O port on the rear panel.

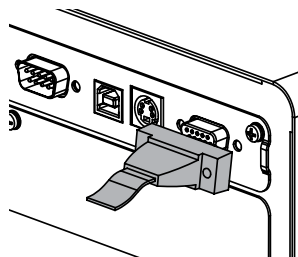

2. Set the Interlock option to ON in the SYSTEM mode. [Page 123](#)

---



Note

With INTERLOCK set to ON, the tester can now only start a test when the Interlock key is well connected. Do not remove the interlock after starting a test. It must be connected after a test has started or is running.

Set Interlock to OFF to disable this feature.

---

# REMOTE CONTROL

This chapter describes basic configuration of IEEE488.2 based remote control. The remote interface supports USB, RS232 and GPIB.

---


Interface Configuration .....	152
Command Syntax .....	156
Command List .....	159
Error Messages .....	208

## Interface Configuration

### USB Remote Interface

USB Configuration	PC side connector	Type A, host
	GPT-12000 side connector	Rear panel Type B
	USB Class	CDC (communications device class) (VCP, Virtual Com Port)

- Panel operation
1. Connect the USB cable to the rear panel USB B-Type port.



2. Set the Interface to USB from the SYSTEM mode. Page 120



When USB is used for remote control, an RS232 port is simulated. Check the Windows Device Manager for the baud rate and other RS232 settings. Check the RS232 configuration below for more details.

Note the baud rate is fixed to 115200 baud when using the USB interface.


### RS232 Remote Interface

RS232 Configuration	Connection	Null modem cable
	Baud rate	9600, 19200, 38400, 57600, 115200
	Parity	None
	Data bits	8



Stop bit 1  
 Flow control None

**Pin Assignment**




- 1: No connection
- 2: RxD (Receive Data)
- 3: TxD (Transmit Data)
- 4: No connection
- 5: GND
- 6-9: No connection

Connection	PC		Tester	
	DB9 Pin	Signal	Signal	DB9Pin
	2	RxD	TxD	3
	3	TxD	RxD	2
	5	GND	GND	5

**Panel operation**

1. Connect the Null modem cable to the rear panel RS232 port.
2. Set the Interface to RS-232 from the Page 120 SYSTEM mode.



**GPIB Remote Interface**

GPIB Configuration Address 0-31

**Panel operation**

1. Connect the GPIB cable to the rear panel GPIB port.
2. Set the Interface to GPIB and set the GPIB address from the Page 121 SYSTEM mode.



## USB/RS232/GPIB Remote Control Function Check

Functionality check

Invoke a terminal application such as RealTerm.

To check COM port number and other settings, see the Device Manager in PC. For WinXP; Control panel → System → Hardware tab.

Run this query command via the terminal after the instrument has been configured for USB, RS-232 or GPIB remote control.

\*idn?

This should return Model number, Serial number and Firmware version in the format below:

GPT-12004 ,GPT12000 ,T0.01I

Model number : GPT-12004

Serial number :8 characters serial number

Firmware version : T0.01I

CR, LF can be used as the terminal character when entering queries/commands from a terminal application. Refer to page 158 for details.

RMT Display

When the panel is being remotely controlled via the USB, RS232 or GPIB interfaces, the RMT indicator will be displayed on the screen.



RMT indicator

## Err Display

When an incorrect command is sent to the tester, the Err indicator will be displayed on the screen indicating there is an error in command.



Err indicator

---

## Return to Panel Control

## Background

When the instrument is remotely controlled all panel keys except the STOP button are disabled. Receive a stop signal from either mode of Control By (Front Panel, Remote, SIGNAL IO), while the RMT indicator is displayed, or simply send a RMTOFF command (page 207) to return the instrument back to the READY status.



Note

To put the tester back to the RMT, simply issue another remote control command.

---

## Command Syntax

Compatible Standard	IEEE488.2	Partial compatibility
	SCPI, 1999	Partial compatibility

**Command Structure** SCPI commands follow a tree-like structure, organized into nodes. Each level of the command tree is a node. Each keyword in an SCPI command represents each node in the command tree. Each keyword (node) of an SCPI command is separated by a colon (:).

For example, the diagram below shows an SCPI sub-structure and a command example.



**Command types** There are a number of different instrument commands and queries. A command sends instructions or data to the unit and a query receives data or status information from the unit.

**Command types**

**Setting** A single or compound command with/without a parameter

**Example** MANU:STEP 1

**Query**                      A query is a simple or compound command followed by a question mark (?). A parameter (data) is returned.

**Example**                      MANU:ACW:VOLTage?

**Command Forms**            Commands and queries have two different forms, long and short. The command syntax is written with the short form of the command in capitals and the remainder (long form) in lower case.


The commands can be written in capitals or lower-case, just so long as the short or long forms are complete. An incomplete command will not be recognized.

Below are examples of correctly written commands.

**Long form**                      SYSTem:BUZZer:KEYSound  
 SYSTEM:BUZZER:KEYSOUND  
 system:buzzer:keysound

**Short form**                      SYST:BUZZ:KEYS  
 syst:buzz:keys

**Command Format**

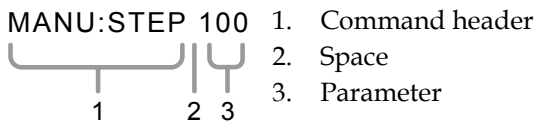

**Parameters**

Type	Description	Example
<Boolean>	Boolean logic	0, 1
<NR1>	integers	0, 1, 2, 3
<NR2>	decimal numbers	0.1, 3.14, 8.5

	<NR3>	floating point	4.5e-1, 8.25e+1
	<NRf>	any of NR1, 2, 3	1, 1.5, 4.5e-1
	<string>	ASCII text string	TEST_NAME
Message Terminator	CR, LF	Carriage Return, Line feed code	

---

## Command List

---

### System Commands

SYSTem:LCD:BRIGHtness .....	162
SYSTem:BUZZer:VOLUME .....	162
SYSTem:BUZZer:KEYSound .....	163
SYSTem:TIME .....	163
SYSTem:STATistics .....	163
SYSTem:ANALysis .....	164
SYSTem:USBDisk:AUTOsave .....	164
SYSTem:USBDisk:DataSave .....	165
SYSTem:ERRor .....	165

### Function Commands

FUNCTion:TEST .....	167
MEASure<x> .....	168
MAIN:FUNCTion .....	169

### Manual Commands

MANU:STEP .....	172
MANU:INITial .....	172
MANU:NAME .....	173
MANU:RTIME .....	173
MANU:EDIT:MODE .....	174
MANU:ACW:VOLTage .....	174
MANU:ACW:CHISet .....	175
MANU:ACW:CLOSet .....	175
MANU:ACW:TTIME .....	176
MANU:ACW:ARCFunctioN .....	176
MANU:ACW:ARCCurrent .....	177
MANU:ACW:ARCSpeed .....	177
MANU:ACW:FREQUency .....	177
MANU:ACW:WAITtime .....	178

MANU:ACW:RAMPdown .....	178
MANU:ACW:GROUNDMODE .....	178
MANU:ACW:MAXHold .....	179
MANU:ACW:PASShold .....	179
MANU:ACW:REF .....	180
MANU:ACW:INITvoltage .....	180
MANU:DCW:VOLTag .....	181
MANU:DCW:CHISet .....	181
MANU:DCW:CLOSet .....	181
MANU:DCW:TTIME .....	182
MANU:DCW:ARCFUNCTION .....	183
MANU:DCW:ARCCurrent .....	183
MANU:DCW:ARCSpeed .....	183
MANU:DCW:WAITtime .....	184
MANU:DCW:RAMPdown .....	184
MANU:DCW:GROUNDMODE .....	185
MANU:DCW:MAXHold .....	185
MANU:DCW:PASShold .....	185
MANU:DCW:REF .....	186
MANU:DCW:INITvoltage .....	186
MANU:IR:VOLTag .....	187
MANU:IR:RHISet .....	187
MANU:IR:RLOSet .....	187
MANU:IR:TTIME .....	188
MANU:IR:WAITtime .....	188
MANU:IR:RAMPdown .....	188
MANU:IR:GROUNDMODE .....	189
MANU:IR:MAXHold .....	189
MANU:IR:PASShold .....	190
MANU:IR:REF .....	190
MANU:IR:MODE .....	190
MANU:GB:CURRENT .....	191
MANU:GB:RHISet .....	191
MANU:GB:RLOSet .....	192
MANU:GB:TTIME .....	192
MANU:GB:FREQUENCY .....	192
MANU:GB:CONTACT .....	193
MANU:GB:GROUNDMODE .....	193
MANU:GB:MAXHold .....	193
MANU:GB:PASShold .....	194



MANU:GB:REF.....	194
MANU:GB:ZEROCHECK.....	195
MANU:CONTInuity:RHISet.....	195
MANU:CONTInuity:RLOSet.....	196
MANU:CONTInuity:TTime .....	196
MANU:CONTInuity:PASShold .....	197
MANU:CONTInuity:REF .....	198
MANU:CONTInuity:ZEROCHECK .....	198

### Auto Commands

AUTO:STEP .....	199
AUTO:NAME .....	200
AUTO:EDIT:ADD .....	200
AUTO<x>:EDIT:HOLD.....	201
AUTO<x>:EDIT:SKIP .....	201
AUTO:EDIT:DEL.....	202
AUTO:TEST:RETURN.....	202
AUTO:EDIT:SHOW .....	202

### Sweep Commands

SWEEP:DATA:STATus .....	204
SWEEP:DATA:SHOW .....	204
SWEEP:GRAPh:SHOW .....	205

### Common Commands

*CLS.....	206
*IDN .....	206
*SRE.....	207

### Remote Commands

*RMTOFF.....	207
--------------	-----

## System Commands

SYSTem:LCD:BRIGhtness .....	162
SYSTem:BUZZer:VOLUME .....	162
SYSTem:BUZZer:KEYSound .....	163
SYSTem:TIME .....	163
SYSTem:STATistics .....	163
SYSTem:ANALySis .....	164
SYSTem:USBDisk:AUTOsave.....	164
SYSTem:USBDisk:DataSave .....	165
SYSTem:ERRor .....	165

SYSTem:LCD:BRIGhtness (Set) →  
→ (Query)

Description	Sets the brightness of the LCD display from 1(dark) to 10(bright).
Syntax	SYSTem:LCD:BRIGhtness <NR1>
Query Syntax	SYSTem:LCD:BRIGhtness?
Parameter/ Return parameter	<NR1> 1 (dark) ~ 10 (bright)
Example	SYST:LCD:BRIG 10 Sets the display brightness to the brightest 10.

SYSTem:BUZZer:VOLUME (Set) →  
→ (Query)

Description	Sets buzzer volume from 1(low) to 3(high).
Syntax	SYSTem:BUZZer:VOLUME <NR1>
Query Syntax	SYSTem:BUZZer:VOLUME
Parameter/ Return parameter	<NR1> 1 (low) ~ 3 (high)
Example	SYST:BUZZ:VOLUME 3 Sets the buzzer volume to the highest 3.

**SYSTem:BUZZer:KEYSound** (Set) →  
→ (Query)

Description	Turns the buzzer on or off for key sound.	
Syntax	SYSTem:BUZZer:KEYSound {ON OFF}	
Query Syntax	SYSTem:BUZZer:KEYSound?	
Parameter/	ON	Buzzer Key Sound on.
Return parameter	OFF	Buzzer Key Sound off.
Example	SYST:BUZZ:KEYS ON Turns the buzzer on for key sound.	

**SYSTem:TIME** → (Query)

Description	Queries the system time.	
Query Syntax	SYSTem:TIME?	
Return parameter	<string>	Returns the system date & time as a string
Query Example	SYST:TIME? >2019-01-05 16:11:59	

**SYSTem:STATistics** → (Query)

Description	Queries the latest statistics of PASS and FAIL.	
Query Syntax	SYSTem:STATistics?	
Return parameter	<string>	Returns the latest statistics of all the function tests with counts of PASS and FAIL judgments respectively.

Query Example    SYST:STAT?

```

>TOTAL AMOUNT=00071
>PASS AMOUNT=00059
>FAIL AMOUNT=00012
>FUNC,PASS ,FAIL ,
>ACW ,00026,00009,
>DCW ,00000,00000,
>IR ,00017,00003,
>GB ,00000,00000,
>CONT,00016,00000,
    
```

### SYSTem:ANALysis

→ Query

Description	Queries the latest analysis of each test function.
Query Syntax	SYSTem:ANALysis {ACW   DCW IR GB CONT}
Return parameter	<string> Returns the latest analysis of the select test with PASS and FAIL judgments and distributions.

Query Example    SYST:ANAL IR

```

>IR,PASS=00017,FAIL=00003
>000~025%=00003
>026~050%=00000
>051~075%=00000
>076~100%=00014
>FAIL=00003
    
```

Set →

### SYSTem:USBDisK:AUTOsave

→ Query

Description	Sets the USB disk auto data save on or off.	
Syntax	SYSTem:USBDisK:AUTOsave {?   ON  OFF}	
Query Syntax	SYSTem:USBDisK:AUTOsave?	
Parameter	ON	Turns the USB disk auto save on.
	OFF	Turns the USB disk auto save off.
Return parameter	ON	USB disk auto save on.
	OFF	USB disk auto save off.

Example            SYST:USB:DISK:AUTO ON  
                          Turns USB disk auto save on.

**SYSTEM:USB:DISK:DATA:SAVE** → Query

Description       Save the current data into the inserted USB disk.

Syntax            SYSTEM:USB:DISK:DATA:SAVE

Parameter        N/A            No parameter is required.

Example           SYST:USB:DISK:DATA:SAVE  
                          The current data is saved into the inserted USB disk.

**SYSTEM:ERROR** → Query

Description       Returns error code of the previous error. See the error code table below for details.

Query Syntax     SYSTEM:ERROR ?

Return parameter <string>       Returns an error string that includes an error code and an error description.

**Error Code Table**

Error code, Error description

- 0, No Error
- 20, Command Error
- 21, Volume Error
- 22, String Error
- 23, Query Error
- 24, Mode Error
- 25, Time Error
- 26, DC Over 50W
- 27, GBV > 7.2V
- 28, ARC <= HI Set
- 29, HI Set => ARC
- 30, Voltage Setting Error
- 31, Current Setting Error
- 32, Current HI SET Error
- 33, Current LOW SET Error

34,Resistance HI SET Error  
35,Resistance LO SET Error  
36,REF Setting Error  
37,Frequency Setting Error  
38,ARC Setting Error  
39,RAMP Time Setting Error  
40,TEST Time Setting Error  
41,WAIT Time Setting Error  
42,RAMP Down Setting Error  
43,PASS Hold Setting Error  
44,GB Contact Setting Error  
45,Setting Over 200W  
46,CONT Setting Over 9V  
47,Auto Step Add Full  
48,This Is The Last Step  
49,Auto Connect Set Error

---

Example

SYST:ERR ?

>0,No Error

Returns "0,No Error" as the error message.

## Function Commands

FUNcTION:TEST .....	167
MEASure<x> .....	168
MAIN:FUNcTION.....	169

### FUNcTION:TEST

Set →

→ Query

**Description** Turns the currently selected test (output) on or off.

When HOLD is displayed on the screen during AUTO tests, use the FUNcTION:TEST command to move on to the next step.

Setting the FUNcTION:TEST command to OFF at the end of a test will also temporarily turn the PASS/FAIL buzzer sound off.

<b>Syntax</b>	FUNcTION:TEST {ON OFF}	
<b>Query Syntax</b>	FUNcTION:TEST?	
<b>Parameter</b>	ON	Turns the test on.
	OFF	Turns the test off.
<b>Return parameter</b>	TEST ON	Test is on.
	TEST OFF	Test is off.
<b>Example</b>	FUNC:TEST ON Turns the output on.	

**MEASure<x>**

→ **Query**

**Description** Returns the test parameters & results of the tester in either MANU or AUTO mode.

MANU mode: Returns the test parameters & results of a MANU test.

AUTO mode: Returns the test parameters & results of the selected step (1-50) of the AUTO test.

Return parameters: function, judgment/status, test voltage, test current/resistance, test time (time of completed test) or ramp time (elapsed time of test that has not been completed).

<b>Query Syntax</b>	MEASure<x>?	
<b>Parameter (MANU mode)</b>		No parameter needed for MANU mode.
<b>Parameter (AUTO mode)</b>	<x>	<NR1>1~50. MANU Step number.
<b>Return parameter</b>	<string>	Returns the test status of the test in the following format: function, judgment or status, test voltage, test current or resistance, test time or ramp time
	<b>Function</b>	ACW, DCW, IR, GB, CON
	<b>Judgment /Status</b>	PASS, FAIL VIEW
	<b>Test voltage</b>	voltage+unit
	<b>Test current /Test resistance</b>	current+unit resistance+unit
	<b>Test time /Ramp time</b>	T=time+S R=time+S

**Example (in MANU mode)** MEAS?  
> CON,FAIL ,100.0mA,99.99 ohm,T=000.1S  
Returns the test result of the current MANU test.



Example                    MEAS21?  
 (in AUTO mode)        > DCW,FAIL ,0.004kV, 000.0 uA ,T=000.3S  
                              Returns the step 21 of the current AUTO test result.

Set →

## MAIN:FUNCtion

→ Query

Description            Changes the mode between AUTO and MANU.

Syntax                    MAIN:FUNCtion {MANU|AUTO}

Query Syntax            MAIN:FUNCtion ?

Parameter/             MANU    Puts the tester mode to MANU.

Return parameter      AUTO    Puts the tester mode to AUTO.

Example                 MAIN:FUNC MANU

Sets the tester to MANU mode.

## Manual Commands

---

MANU:STEP.....	172
MANU:INITial .....	172
MANU:NAME.....	173
MANU:RTIME .....	173
MANU:EDIT:MODE.....	174
MANU:ACW:VOLTage .....	174
MANU:ACW:CHISet.....	175
MANU:ACW:CLOSet.....	175
MANU:ACW:TTIME .....	176
MANU:ACW:ARCFUNCTION .....	176
MANU:ACW:ARCCurrent.....	177
MANU:ACW:ARCSpeed .....	177
MANU:ACW:FREQuency .....	177
MANU:ACW:WAITtime.....	178
MANU:ACW:RAMPdown .....	178
MANU:ACW:GROUNDMODE.....	178
MANU:ACW:MAXHold.....	179
MANU:ACW:PASShold.....	179
MANU:ACW:REF .....	180
MANU:ACW:INITvoltage.....	180
MANU:DCW:VOLTage .....	181
MANU:DCW:CHISet.....	181
MANU:DCW:CLOSet.....	181
MANU:DCW:TTIME .....	182
MANU:DCW:ARCFUNCTION .....	183
MANU:DCW:ARCCurrent.....	183
MANU:DCW:ARCSpeed .....	183
MANU:DCW:WAITtime.....	184
MANU:DCW:RAMPdown .....	184
MANU:DCW:GROUNDMODE.....	185
MANU:DCW:MAXHold.....	185
MANU:DCW:PASShold.....	185
MANU:DCW:REF .....	186
MANU:DCW:INITvoltage.....	186
MANU:IR:VOLTage .....	187
MANU:IR:RHISet.....	187

MANU:IR:RLOSet.....	187
MANU:IR:TTime .....	188
MANU:IR:WAITtime.....	188
MANU:IR:RAMPdown .....	188
MANU:IR:GROUNDMODE.....	189
MANU:IR:MAXHold .....	189
MANU:IR:PASShold.....	190
MANU:IR:REF .....	190
MANU:IR:MODE .....	190
MANU:GB:CURRent .....	191
MANU:GB:RHISet .....	191
MANU:GB:RLOSet .....	192
MANU:GB:TTime .....	192
MANU:GB:FREQuency .....	192
MANU:GB:CONtact .....	193
MANU:GB:GROUNDMODE .....	193
MANU:GB:MAXHold .....	193
MANU:GB:PASShold .....	194
MANU:GB:REF.....	194
MANU:GB:ZEROCHECK.....	195
MANU:CONTInuity:RHISet.....	195
MANU:CONTInuity:RLOSet.....	196
MANU:CONTInuity:TTime .....	196
MANU:CONTInuity:PASShold .....	197
MANU:CONTInuity:REF .....	198
MANU:CONTInuity:ZEROCHECK .....	198

Set →

→ Query

**MANU:STEP**

Description	Sets the MANU test number.
Syntax	MANU:STEP <NR1>
Query Syntax	MANU:STEP?
Parameter/ Return parameter	<NR1> 0~100.
Example	MANU:STEP 100 Sets the manual test number to 100.

**MANU:INITial**

Set →

**Description** Loads the initial (default) settings for the selected MANU test number. The initial settings that are loaded depend on the test function (ACW, DCW, IR, GB or CONT).

<b>Syntax</b>	MANU:INITial					
<b>Initial Settings</b>		Function				
	Parameter	ACW	DCW	IR	GB	CONT
	REF#	0.000uA	0.000mA	000.0M Ω	000.0m Ω	00.00Ω
	FREQ	60Hz	X	X	60Hz	X
	HI SET	1.000mA	1.000mA	∞GΩ	100.0m Ω	01.00Ω
	LO SET	0.000mA	0.000mA	001.0M Ω	000.0m Ω	00.00Ω
	I or V	V=0.100 kV	V=0.100 kV	V=0.050 kV	03.00A	100mA
	TEST TIME	001.0S	001.0S	000.3S	000.3S	000.3s
	RAMP TIME	000.1S	000.1S	000.1S	X	X

**Example** MANU:INITial  
Loads the initial settings for the selected MANU number.

Set →

→ Query

**MANU:NAME**

**Description** Sets or returns the test name for the selected manual test. The test must be in MANU mode before this command can be used.  
 Note only alphanumeric characters (A-Z, a-z, 0-9) and the “\_” underscore character can be used to set the MANU test name.

**Syntax** MANU:NAME <string>

**Query Syntax** MANU:NAME?

**Parameter/Return parameter** <string> 10 character string. (first character must be a letter)

**Example** MANU:NAME test1  
 Sets the manual test name to “test1”.

Set →

→ Query

**MANU:RTIME**

**Description** Sets or returns the Ramp Time for the test in seconds.  
 Note: A “TIME OVER 240s” message will be shown if the Ramp Time + Test Time is ≥ 240 seconds when the HI SET limit is over 30mA. This applies to the ACW function only.  
 Note: When tester is in GB or CONT mode, due to without RAMP TIME setting, an “Err” message will be shown if issuing this remote command.

**Syntax** MANU:RTIME <NR2>

**Query Syntax** MANU:RTIME?

**Parameter/Return parameter** <NR2> 0.1~999.9 seconds

**Example** MANU:RTIM 0.5  
 Sets the ramp time to half a second.

**MANU:EDIT:MODE** 


Description	Sets or returns the mode (ACW, DCW, IR, GB, CONT) of the selected manual test.	
Syntax	MANU:EDIT:MODE {ACW DCW IR GB CONT}	
Query Syntax	MANU:EDIT:MODE?	
Parameter/	ACW	AC Withstand mode
Return parameter	DCW	DC Withstand mode
	IR	Insulation Resistance mode
	GB	Ground Bond mode
	CONT	Continuity mode
Example	MANU:EDIT:MODE ACW Sets the mode to ACW.	

**MANU:ACW:VOLTage** 


Description	Sets or returns the ACW voltage in kV. The test must first be in ACW mode before this command can be used.	
Syntax	MANU:ACW:VOLTage <NR2>	
Query Syntax	MANU:ACW:VOLTage?	
Parameter/	<NR2>	0.050 ~ 5.100 (kV)
Return parameter		
Example	MANU:ACW:VOLT 1 Sets the ACW voltage to 1 kV.	

Set →  
 → Query

## MANU:ACW:CHISet

---

**Description** Sets or returns the ACW HI SET current value in milliamps. The test must first be in ACW mode before this command can be used.

**Syntax** MANU:ACW:CHISet <NR2>

**Query Syntax** MANU:ACW:CHISet?

**Parameter/  
Return parameter** <NR2> 0.001 ~ 042.0

**Example** MANU:ACW:CHIS 30.0  
Sets the ACW HI SET current to 30 mA.

Set →  
 → Query

## MANU:ACW:CLOSet

---

**Description** Sets or returns the ACW LO SET current value in milliamps. The LO SET value must be less than the HI SET value. The test must first be in ACW mode before this command can be used.

The LO SET range must use the HI SET range. If all the digits in the LO SET range are outside the HI SET range, an Err message will be produced. All digits outside the HI SET range are ignored and will not be used.

For example:

HI SET value: 30.00

LO SET value: 30.01 → error

**Syntax** MANU:ACW:CLOSet <NR2>

**Query Syntax** MANU:ACW:CLOSet?

**Parameter/  
Return parameter** <NR2> 0.000 ~ 041.9

**Example** MANU:ACW:CLOS 20.0  
Sets the ACW LO SET current to 20 mA.

Set →

→ Query

**MANU:ACW:TTIME**

**Description** Sets or returns the ACW test time in seconds. The test must first be in ACW mode before this command can be used.

Note: A “TIME OVER 240s” message will be shown if the Ramp Time + Test Time is ≥ 240 seconds when the HI SET limit is over 30mA. This applies to the ACW function only.

<b>Syntax</b>	MANU:ACW:TTIME {<NR2> OFF}	
<b>Query Syntax</b>	MANU:ACW:TTIME?	
<b>Parameter</b>	<NR2>	0.3 ~ 999.9 seconds
	OFF	TIMER OFF
<b>Return parameter</b>	<NR2>	0.3 ~ 999.9 seconds
	TIME OFF	TIMER is OFF

**Example** MANU:ACW:TTIM 1  
Sets the ACW test time to 1 second.

Set →

→ Query



**MANU:ACW:ARCFUNCTION**

**Description** Sets or returns the ACW ARC function. The test must first be in ACW mode before this command can be used. Note that this command is only workable when ARC SET>HI SET.

<b>Syntax</b>	MANU:ACW:ARCFUNCTION	
<b>Query Syntax</b>	{OFF ON_CONT ON_STOP}	
	MANU:ACW:ARCFUNCTION?	
<b>Parameter/</b>	OFF	ARC function off
<b>Return parameter</b>	ON_CONT	ARC function ON & CONT
	ON_STOP	ARC function ON & STOP

**Example** MANU:ACW:ARCF OFF  
Sets the ACW ARC function off.



**MANU:ACW:ARCCurrent** 



**Description** Sets or returns the ACW ARC current value in mA. ARC must be enabled before the ARC current can be set. The test must first be in ACW mode before this command can be used.


**Syntax** MANU:ACW:ARCCurrent <NR2>

**Query Syntax** MANU:ACW:ARCCurrent?

**Parameter/Return parameter** <NR2> 1.000 ~ 080.0

**Example** MANU:ACW:ARCC 1.233  
Sets the ACW ARC value to 1.233 mA.

**MANU:ACW:ARCSpeed** 



**Description** Sets or returns the ACW ARC speed. ARC must be enabled before the ARC speed can be set. The test must first be in ACW mode before this command can be used.

**Syntax** MANU:ACW:ARCSpeed {FAST|NORMAL|SLOW}

**Query Syntax** MANU:ACW:ARCSpeed?

<b>Parameter/Return parameter</b>	FAST	ARC speed fast
	NORMAL	ARC speed normal
	SLOW	ARC speed slow

**Example** MANU:ACW:ARCS SLOW  
Sets the ACW ARC speed slow.

**MANU:ACW:FREQuency** 



**Description** Sets or returns the ACW test frequency in Hz. The test must first be in ACW mode before this command can be used.

Syntax	MANU:ACW:FREQuency {50 60}	
Query Syntax	MANU:ACW:FREQuency?	
Parameter/	50	50 Hz
Return parameter	60	60 Hz
Example	MANU:ACW:FREQ 50 Sets the ACW test frequency to 50Hz.	

Set →

**MANU:ACW:WAITtime**

→ Query

Description	Sets or returns the ACW wait time in seconds. The test must first be in ACW mode before this command can be used.	
Syntax	MANU:ACW:WAITtime <NR2>	
Query Syntax	MANU:ACW:WAITtime?	
Parameter/	<NR2>	0 ~ 999.9 seconds
Return parameter		
Example	MANU:ACW:WAIT 10.1 Sets the ACW wait time to 10.1 s.	

Set →

**MANU:ACW:RAMPdown**

→ Query

Description	Sets or returns the ACW Ramp Down Time in seconds. The test must first be in ACW mode before this command can be used.	
Syntax	MANU:ACW:RAMPdown <NR2>	
Query Syntax	MANU:ACW:RAMPdown?	
Parameter/	<NR2>	0 ~ 999.9 seconds
Return parameter		
Example	MANU:ACW:RAMP 999.9 Sets the ramp down time to 999.9 seconds.	

Set →

**MANU:ACW:GROUNDMODE**

→ Query

Description Sets or returns the ACW Ground Mode. The test must first be in ACW mode before this command can be used.

Syntax `MANU:ACW:GROUNDMODE {ON|OFF}`

Query Syntax `MANU:ACW:GROUNDMODE?`

Parameter/	ON	ACW Ground Mode ON
Return parameter	OFF	ACW Ground Mode OFF

Example `MANU:ACW:GROUNDMODE OFF`  
Sets the ACW Ground Mode off.

Set →

→ Query

### MANU:ACW:MAXHold

Description Sets or returns the ACW MAX Hold. The test must first be in ACW mode before this command can be used.

Syntax `MANU:ACW:MAXHold {ON|OFF}`

Query Syntax `MANU:ACW:MAXHold?`

Parameter/	ON	ACW MAX Hold ON
Return parameter	OFF	ACW MAX Hold OFF

Example `MANU:ACW:MAXH OFF`  
Sets the ACW MAX Hold off.

Set →

→ Query

### MANU:ACW:PASShold

Description Sets or returns the duration of ACW PASS Hold in seconds. The test must first be in ACW mode before this command can be used.

Syntax `MANU:ACW:PASShold <NR2>`

Query Syntax `MANU:ACW:PASShold?`

Parameter/	<NR2>	0 ~ 999.9 seconds
Return parameter		

Example `MANU:ACW:PASS 999.9`  
Sets the ACW PASS Hold time to 999.9 seconds.

Set →

→ Query

**MANU:ACW:REF**

**Description**      Sets or returns the ACW reference value in uA or mA. The test must first be in ACW mode before this command can be used.

The ACW reference value shares the identical limit of HI SET value, which is 42mA at the maximum. For instance, when HI SET value is set 10mA, the reference value can therefore be set up to 32mA.

**Syntax**              MANU:ACW:REF <NR2>

**Query Syntax**      MANU:ACW:REF?

**Parameter/**        <NR2>    0.000 ~ 41.00

**Return parameter**    [ ]

**Example**             MANU:ACW:REF 40  
                              Sets the ACW reference to 40 mA.

Set →

→ Query

**MANU:ACW:INITvoltage**

**Description**      Sets or returns the ACW percentage of initial voltage. The test must first be in ACW mode before this command can be used.

**Syntax**              MANU:ACW:INITvoltage <NR1>

**Query Syntax**      MANU:ACW:INITvoltage?

**Parameter/**        <NR1>    0 ~ 99%

**Return parameter**    [ ]

**Example**             MANU:ACW:INIT 87  
                              Sets the ACW Initial Voltage to 87%.

MANU:DCW:VOLTage (Set) →  
→ (Query)

**Description** Sets or returns the DCW voltage in kV. The test must first be in DCW mode before this command can be used.

Note: A “DC Over 50W” error will result if the DCW Voltage X HI SET value is > 50 watts.

**Syntax** MANU:DCW:VOLTage <NR2>

**Query Syntax** MANU:DCW:VOLTage?

**Parameter/  
Return parameter** <NR2> 0.050 ~ 6.100 (kV)

**Example** MANU:DCW:VOLT 6  
Sets the DCW voltage to 6 kV.

MANU:DCW:CHISet (Set) →  
→ (Query)

**Description** Sets or returns the DCW HI SET current value in milliamps. The test must first be in DCW mode before this command can be used.

Note: A “DC Over 50W” error will result if the DCW Voltage X HI SET value is > 50 watts.

**Syntax** MANU:DCW:CHISet <NR2>

**Query Syntax** MANU:DCW:CHISet?

**Parameter/  
Return parameter** <NR2> 0.001 ~ 11.00 (mA)

**Example** MANU:DCW:CHIS 5  
Sets the DCW HI SET current to 5mA.

MANU:DCW:CLOSet (Set) →  
→ (Query)

**Description** Sets or returns the DCW LO SET current value in milliamps. The LO SET value must be less than the HI SET value. The test must first be in DCW mode

before this command can be used.

The LO SET range must use the HI SET range. If all the digits in the LO SET range are outside the HI SET range, an Err will be produced. All digits outside the HI SET range are ignored and will not be used.

For example:

HI SET value: 10.99

LO SET value1: 11.00 → error



Syntax	MANU:DCW:CLOSet<NR2>
Query Syntax	MANU:DCW:CLOSet?
Parameter/ Return parameter	<NR2> 0.000 ~ 10.99
Example	MANU:DCW:CLOS 2.00 Sets the DCW LO SET current to 2mA.

Set →

→ Query

### MANU:DCW:TTIMe

Description	Sets or returns the DCW test time in seconds. The test must first be in DCW mode before this command can be used.
Syntax	MANU:DCW:TTIMe {<NR2> OFF}
Query Syntax	MANU:DCW:TTIMe?
Parameter	<NR2> 0.3 ~ 999.9 seconds OFF TIMER OFF
Return parameter	<NR2> 0.3 ~ 999.9 seconds TIME OFF TIMER is OFF
Example	MANU:DCW:TTIM 1 Sets the DCW test time to 1 second.


**MANU:DCW:ARCFunction** 

  


**Description** Sets or returns the DCW ARC function. The test must first be in DCW mode before this command can be used. Note that this command is only workable when ARC SET>HI SET.

**Syntax** MANU:DCW:ARCFunction  
**Query Syntax** {OFF|ON\_CONT|ON\_STOP}  
 MANU:DCW:ARCFunction?

<b>Parameter/ Return parameter</b>	OFF	ARC function off
	ON_CONT	ARC function ON & CONT
	ON_STOP	ARC function ON & STOP

**Example** MANU:DCW:ARCF OFF  
 Sets the DCW ARC function off.

**MANU:DCW:ARCCurrent** 

  


**Description** Sets or returns the DCW ARC current value in mA. ARC must be enabled to set the ARC current. The test must first be in DCW mode before this command can be used.

**Syntax** MANU:DCW:ARCCurrent <NR2>  
**Query Syntax** MANU:DCW:ARCCurrent?

<b>Parameter/ Return parameter</b>	<NR2>	1.000 ~ 80.00
--	-------	---------------

**Example** MANU:DCW:ARCC 10  
 Sets the DCW ARC value to 10mA.

**MANU:DCW:ARCSpeed** 


**Description** Sets or returns the DCW ARC speed. ARC must be enabled before the ARC speed can be set. The test must first be in DCW mode before this command can be used.

Syntax	MANU:DCW:ARCSpeed {FAST NORMAL SLOW}	
Query Syntax	MANU:DCW:ARCSpeed?	
Parameter/ Return parameter	FAST	ARC speed fast
	NORMAL	ARC speed normal
	SLOW	ARC speed slow
Example	MANU:DCW:ARCS SLOW Sets the DCW ARC speed slow.	

Set →

**MANU:DCW:WAITtime**

→ Query

Description	Sets or returns the DCW wait time in seconds. The test must first be in DCW mode before this command can be used.	
Syntax	MANU:DCW:WAITtime <NR2>	
Query Syntax	MANU:DCW:WAITtime?	
Parameter/ Return parameter	<NR2>	0 ~ 999.9 seconds
Example	MANU:DCW:WAIT 10.1 Sets the DCW wait time to 10.1 s.	

Set →

**MANU:DCW:RAMPdown**

→ Query

Description	Sets or returns the DCW Ramp Down Time in seconds. The test must first be in DCW mode before this command can be used.	
Syntax	MANU:DCW:RAMPdown <NR2>	
Query Syntax	MANU:DCW:RAMPdown?	
Parameter/ Return parameter	<NR2>	0 ~ 999.9 seconds
Example	MANU:DCW:RAMP 999.9 Sets the DCW ramp down time to 999.9 seconds.	



**MANU:DCW:GROUNDMODE**

Set →

→ Query

**Description** Sets or returns the DCW Ground Mode. The test must first be in DCW mode before this command can be used.

**Syntax** MANU:DCW:GROUNDMODE {ON|OFF}

**Query Syntax** MANU:DCW:GROUNDMODE?

<b>Parameter/</b>	ON	DCW Ground Mode ON
<b>Return parameter</b>	OFF	DCW Ground Mode OFF

**Example** MANU:DCW:GROUNDMODE OFF  
Sets the DCW Ground Mode off.

Set →

→ Query

**MANU:DCW:MAXHold**

**Description** Sets or returns the DCW MAX Hold. The test must first be in DCW mode before this command can be used.

**Syntax** MANU:DCW:MAXHold {ON|OFF}

**Query Syntax** MANU:DCW:MAXHold?

<b>Parameter/</b>	ON	DCW MAX Hold ON
<b>Return parameter</b>	OFF	DCW MAX Hold OFF

**Example** MANU:DCW:MAXH OFF  
Sets the DCW MAX Hold off.

Set →

→ Query

**MANU:DCW:PASShold**

**Description** Sets or returns the duration of DCW PASS Hold. The test must first be in DCW mode before this command can be used.

**Syntax** MANU:DCW:PASShold <NR2>

**Query Syntax** MANU:DCW:PASShold?

<b>Parameter/</b>	<NR2>	0 ~ 999.9 seconds
<b>Return parameter</b>		

Example            MANU:DCW:PASS 999.9  
                          Sets the DCW PASS Hold time to 999.9 seconds.

Set →

**MANU:DCW:REF**

→ Query

Description       Sets or returns the DCW reference value in uA or mA. The test must first be in DCW mode before this command can be used.

The DCW reference value shares the identical limit of HI SET value, which is 11mA at the maximum. For instance, when HI SET value is set 5mA, the reference value can therefore be set up to 6mA.

Syntax             MANU:DCW:REF <NR2>

Query Syntax     MANU:DCW:REF?

Parameter/  
Return parameter   <NR2>    0.000 ~ 10.00

Example            MANU:DCW:REF 10  
                          Sets the DCW reference to 10 mA.

Set →

**MANU:DCW:INITvoltage**

→ Query

Description       Sets or returns the DCW percentage of initial voltage. The test must first be in DCW mode before this command can be used.

Syntax             MANU:DCW:INITvoltage <NR1>

Query Syntax     MANU:DCW:INITvoltage?

Parameter/  
Return parameter   <NR1>    0 ~ 99%

Example            MANU:DCW:INIT 87  
                          Sets the DCW Initial Voltage to 87%.

## MANU:IR:VOLTage

**Description** Sets or returns the IR voltage in kV. The test must first be in IR mode before this command can be used.

**Syntax** MANU:IR:VOLTage <NR2>

**Query Syntax** MANU:IR:VOLTage?

**Parameter/Return parameter** <NR2> 0.05 ~ 1.2 (0.05kV to 1.2kV: steps of .05)

**Example** MANU:IR:VOLT 1  
Sets the IR voltage to 1 kV.

## MANU:IR:RHISet

**Description** Sets or returns the IR HI SET resistance value in M $\Omega$  or G $\Omega$ . The test must first be in IR mode before this command can be used.

**Syntax** MANU:IR:RHISet <NR2>|NULL

**Query Syntax** MANU:IR:RHISet?

**Parameter/Return parameter** <NR1> 001.1M ~ 50.00G  
NULL Sets the HI SET value to OFF.

**Example** MANU:IR:RHIS 10  
Sets the IR HI SET resistance to 10 M $\Omega$ .

## MANU:IR:RLOSet

**Description** Sets or returns the IR LO SET resistance value in M $\Omega$  or G $\Omega$ . The LO SET value must be less than the HI SET value. The test must first be in IR mode before this command can be used.

**Syntax** MANU:IR:RLOSet<NR2>

**Query Syntax** MANU:IR:RLOSet?

Parameter/ Return parameter <NR1> 000.2M ~ 50.00G

Example MANU:IR:RLOS 10  
Sets the IR LO SET resistance to 10MΩ.

Set →

**MANU:IR:TTIME**

→ Query

Description Sets or returns the IR test time in seconds. The test must first be in IR mode before this command can be used.

Syntax MANU:IR:TTIME <NR2>

Query Syntax MANU:IR:TTIME?

Parameter/ Return parameter <NR2> 0.3 ~ 999.9 seconds

Example MANU:IR:TTIM 1  
Sets the IR test time to 1 second.

Set →

**MANU:IR:WAITtime**

→ Query

Description Sets or returns the IR wait time in seconds. The test must first be in IR mode before this command can be used.

Syntax MANU:IR:WAITtime <NR2>

Query Syntax MANU:IR:WAITtime?

Parameter/ Return parameter <NR2> 0 ~ 999.9 seconds

Example MANU:IR:WAIT 10.1  
Sets the IR wait time to 10.1 s.

Set →

**MANU:IR:RAMPdown**

→ Query

Description Sets or returns the IR Ramp Down Time in seconds. The test must first be in IR mode before this command can be used.

Syntax	MANU:IR:RAMPdown <NR2>
Query Syntax	MANU:IR:RAMPdown?
Parameter/ Return parameter	<NR2> 0 ~ 999.9 seconds
Example	MANU:IR:RAMP 999.9 Sets the IR ramp down time to 999.9 seconds.

Set →

**MANU:IR:GROUNDMODE**

→ Query

Description	Sets or returns the IR Ground Mode. The test must first be in IR mode before this command can be used.
Syntax	MANU:IR:GROUNDMODE {ON OFF}
Query Syntax	MANU:IR:GROUNDMODE?
Parameter/ Return parameter	ON IR Ground Mode ON OFF IR Ground Mode OFF
Example	MANU:IR:GROUNDMODE OFF Sets the IR Ground Mode off.

Set →

**MANU:IR:MAXHold**

→ Query

Description	Sets or returns the IR MAX Hold. The test must first be in IR mode before this command can be used.
Syntax	MANU:IR:MAXHold {ON OFF}
Query Syntax	MANU:IR:MAXHold?
Parameter/ Return parameter	ON IR MAX Hold ON OFF IR MAX Hold OFF
Example	MANU:IR:MAXH OFF Sets the IR MAX Hold off.

Set →  
→ Query

---

<b>MANU:IR:PASShold</b>	
Description	Sets or returns the duration of IR PASS Hold. The test must first be in IR mode before this command can be used.
Syntax	MANU:IR:PASShold <NR2>
Query Syntax	MANU:IR:PASShold?
Parameter/ Return parameter	<NR2> 0 ~ 999.9 seconds
Example	MANU:IR:PASS 999.9 Sets the IR PASS Hold time to 999.9 seconds.

Set →  
→ Query

---

<b>MANU:IR:REF</b>	
Description	Sets or returns the IR reference value in MΩ or GΩ. The test must first be in IR mode before this command can be used.
Syntax	MANU:IR:REF <NR2>
Query Syntax	MANU:IR:REF?
Parameter/ Return parameter	<NR2> 0.0 ~ 50000
Example	MANU:IR:REF 900 Sets the IR reference to 900 MΩ.

Set →  
→ Query

---

<b>MANU:IR:MODE</b>	
Description	Sets or returns the IR Mode in IR. The test must first be in IR mode before this command can be used.
Syntax	MANU:IR:MODE
Query Syntax	{STOP_ON_FAIL STOP_ON_PASS TIMER} MANU:IR:MODE?
Parameter/ Return parameter	STOP ON FAIL IR Mode in Stop On FAIL

Return parameter	STOP ON PASS TIMER	IR Mode in Stop On PASS IR Mode in Timer
------------------	-----------------------	---

**Example**            MANU:IR:MODE TIMER  
Sets the IR Mode in Timer setting.

(Set) →

**MANU:GB:CURRent**

→ (Query)

Description	Sets or returns the GB current in A. The test must first be in GB mode before this command can be used.	
-------------	---	--

Syntax	MANU:GB:CURRent <NR2>	
--------	-----------------------	--

Query Syntax	MANU:GB:CURRent?	
--------------	------------------	--

Parameter/ Return parameter	<NR2>	3.00~33.00
--------------------------------	-------	------------

**Example**            MANU:GB:CURR 3.00  
Sets the GB current to 3.00A.

(Set) →

**MANU:GB:RHISet**

→ (Query)

Description	Sets or returns the GB HI SET resistance value in mΩ. The test must first be in GB mode before this command can be used.	
-------------	--	--

Syntax	MANU:GB:RHISet <NR2>	
--------	----------------------	--

Query Syntax	MANU:GB:RHISet?	
--------------	-----------------	--

Parameter/ Return parameter	<NR2>	000.1 ~ 650.0
--------------------------------	-------	---------------

**Example**            MANU:GB:RHIS 100.0  
Sets the GB HI SET value to 100mΩ.

 **Note**

If the GB current x (HI SET resistance + REF) > 7.2V, then an error will be generated (“GB OVER 200W”).

**MANU:GB:RLOSet**

Set →

→ Query

Description	Sets or returns the GB LO SET resistance value in mΩ. The LO SET value must be less than the HI SET value. The test must first be in GB mode before this command can be used.
Syntax	MANU:GB:RLOSet<NR2>
Query Syntax	MANU:GB:RLOSet?
Parameter/ Return parameter	<NR2> 0.000 ~ 649.9
Example	MANU:GB:RLOS 50 Sets the GB LO SET resistance to 50mΩ.

**MANU:GB:TTIME**

Set →

→ Query

Description	Sets or returns the GB test time in seconds. The test must first be in GB mode before this command can be used.
Syntax	MANU:GB:TTIME <NR2>
Query Syntax	MANU:GB:TTIME?
Parameter/ Return parameter	<NR2> 0.3 ~ 999.9 seconds
Example	MANU:GB:TTIM 1 Sets the GB test time to 1 second.

**MANU:GB:FREQuency**

Set →

→ Query

Description	Sets or returns the GB test frequency in Hz. The test must first be in GB mode before this command can be used.
Syntax	MANU:GB:FREQuency {50 60}
Query Syntax	MANU:GB:FREQuency?
Parameter/ Return parameter	50 50 Hz



Return parameter	60	60 Hz
------------------	----	-------

Example	MANU:GB:FREQ 50
	Sets the GB test frequency to 50Hz.

Set →

**MANU:GB:CONtact** → Query

Description	Sets or returns the GB Contact Time in seconds. The test must first be in GB mode before this command can be used.
-------------	--

Syntax	MANU:GB:CONtact <NR2>
--------	-----------------------

Query Syntax	MANU:GB:CONtact?
--------------	------------------

Parameter/ Return parameter	<NR2>	0 ~ 999.9 seconds
--------------------------------	-------	-------------------

Example	MANU:GB:CONtact 999.9
	Sets the GB Contact time to 999.9 seconds.

Set →

**MANU:GB:GROUNDMODE** → Query

Description	Sets or returns the GB Ground Mode. The test must first be in GB mode before this command can be used.
-------------	--

Syntax	MANU:GB:GROUNDMODE {ON OFF}
--------	-----------------------------

Query Syntax	MANU:GB:GROUNDMODE?
--------------	---------------------

Parameter/ Return parameter	ON	GB Ground Mode ON
	OFF	GB Ground Mode OFF

Example	MANU:GB:GROUNDMODE OFF
	Sets the GB Ground Mode off.

Set →

**MANU:GB:MAXHold** → Query

Description	Sets or returns the GB MAX Hold. The test must first be in GB mode before this command can be used.
-------------	---

Syntax	MANU:GB:MAXHold {ON OFF}	
Query Syntax	MANU:GB:MAXHold?	
Parameter/ Return parameter	ON OFF	GB MAX Hold ON GB MAX Hold OFF
Example	MANU:GB:MAXH OFF Sets the GB MAX Hold off.	

Set →

→ Query

**MANU:GB:PASShold**

**Description** Sets or returns the duration of GB PASS Hold. The test must first be in GB mode before this command can be used.

Syntax	MANU:GB:PASShold <NR2>	
Query Syntax	MANU:GB:PASShold?	
Parameter/ Return parameter	<NR2>	0 ~ 999.9 seconds

**Example** MANU:GB:PASS 999.9  
Sets the GB PASS Hold time to 999.9 seconds.

Set →

→ Query

**MANU:GB:REF**

**Description** Sets or returns the GB reference value in mΩ. The test must first be in GB mode before this command can be used.  
  
Beware that when ISET x (HIEST + REF) is greater than 7.2V, the “GBV OVER” warning message will be shown on display.

Syntax	MANU:GB:REF <NR2>	
Query Syntax	MANU:GB:REF?	
Parameter/ Return parameter	<NR2>	0.000 ~ 650.0

**Example** MANU:GB:REF 100  
Sets the GB reference to 100 mΩ.

## MANU:GB:ZEROCHECK

Set →

→ Query

**Description** Performs the zero check function. The test must first be in GB mode and in the Ready Status before this command can be used.

See page 69 for details on the ZERO function.

**Syntax** MANU:GB:ZEROCHECK {ON|OFF}

**Query Syntax** MANU:GB:ZEROCHECK?

<b>Parameter/</b>	ON	Zero function is active.
<b>Return parameter</b>	OFF	Zero function is not active.

**Example** MANU:GB:ZEROCHECK OFF  
Activates the GB ZERO function.

Set →

→ Query

## MANU:CONTinuity:RHISet

**Description** Sets or returns the CONT HI SET resistance value in  $\Omega$ . The test must first be in CONT mode before this command can be used.

**Syntax** MANU:CONTinuity:RHISet <NR2>

**Query Syntax** MANU:CONTinuity:RHISet?

<b>Parameter/</b>	<NR2>	00.01 ~ 90.00 $\Omega$
<b>Return parameter</b>		

**Example** MANU:CONT:RHIS 30.0  
Sets the CONT HI SET current to 30  $\Omega$ .

Set →

**MANU:CONTinuity:RLOSet**

→ Query

**Description** Sets or returns the CONT LO SET resistance value in  $\Omega$ . The LO SET value must be less than the HI SET value. The test must first be in CONT mode before this command can be used.

The LO SET range must use the HI SET range. If all the digits in the LO SET range are outside the HI SET range, an Err message will be produced. All digits outside the HI SET range are ignored and will not be used.

For example:

HI SET value: 10.00

LO SET value: 10.01 → error

**Syntax** MANU:CONTinuity:RLOSet <NR2>

**Query Syntax** MANU:CONTinuity:RLOSet?

**Parameter/Return parameter** <NR2> 00.00 ~ 89.99  $\Omega$

**Example** MANU:CONT:RLOS 20.0  
Sets the CONT LO SET current to 20  $\Omega$ .

Set →

**MANU:CONTinuity:TTIME**

→ Query

**Description** Sets or returns the CONT test time in seconds. The test must first be in CONT mode before this command can be used.

**Syntax** MANU:CONTinuity:TTIME {<NR2>|OFF}

**Query Syntax** MANU:CONT:TTIME?

**Parameter** <NR2> 0.3 ~ 999.9 seconds  
OFF TIMER OFF

**Return parameter** <NR2> 0.3 ~ 999.9 seconds  
TIME OFF TIMER is OFF

Example            MANU:CONT:TTIM 1  
                      Sets the CONT test time to 1 second.

MANU:CONTInuity:PASShold (Set) →  
→ (Query)

---

Description       Sets or returns the duration of CONT PASS Hold.  
                      The test must first be in CONT mode before this  
                      command can be used.

Syntax             MANU:CONT:PASShold <NR2>

Query Syntax      MANU:CONT:PASShold?

Parameter/  
 Return parameter   <NR2>    0 ~ 999.9 seconds

Example            MANU:CONT:PASS 999.9  
                      Sets the CONT PASS Hold time to 999.9 seconds.

**MANU:CONTInuity:REF**

Set →

→ Query

**Description**      Sets or returns the CONT reference value in Ω. The test must first be in CONT mode before this command can be used.

Note: when HI SET+REF VALUE is over 90 Ω, the message “CONT. TEST V OVER” will be shown indicating the limited 90 Ω is reached and beyond.

**Syntax**              MANU:CONTInuity:REF <NR2>

**Query Syntax**      MANU:CONTInuity:REF?

**Parameter/**        <NR2>      00.00 ~ 90.00 Ω

**Return parameter**

**Example**            MANU:CONT:REF 0.01  
 Sets the CONT reference to 00.01 Ω.

Set →

→ Query

**MANU:CONTInuity:ZEROCHECK**

**Description**      Performs the zero check function. The test must first be in CONT mode and in the Ready Status before this command can be used.

See page 69 for details on the ZERO function.

**Syntax**              MANU:CONTInuity:ZEROCHECK {ON|OFF}

**Query Syntax**      MANU:CONTInuity:ZEROCHECK?

**Parameter/**        ON          Zero function is active.

**Return parameter** OFF         Zero function is not active.

**Example**            MANU:CONT:ZEROCHECK OFF  
 Deactivates the CONT ZERO function.

## Auto Commands

AUTO:STEP .....	199
AUTO:NAME .....	200
AUTO:EDIT:ADD .....	200
AUTO<x>:EDIT:HOLD .....	201
AUTO<x>:EDIT:SKIP .....	201
AUTO:EDIT:DEL .....	202
AUTO:TEST:RETURN .....	202
AUTO:EDIT:SHOW .....	202

### AUTO:STEP

Set →

→ Query

Description	Sets or queries the AUTO number (automatic test number).
Syntax	AUTO:STEP <NR1>
Query Syntax	AUTO:STEP?
Parameter/ Return parameter	<NR1> 1~100.
Example	AUTO:STEP 100 Sets the current AUTO number to 100.

Set →

→ Query

**AUTO:NAME**

**Description**      Sets or returns the AUTO name for the selected automatic test. The test must be in AUTO mode before this command can be used.

Note only alphanumeric characters (A-Z, a-z, 0-9) and the “\_” underscore character can be used to set the AUTO test name.

**Syntax**              AUTO:NAME <string>

**Query Syntax**      AUTO:NAME?

**Parameter/Return parameter**      <string> 10 character string. (first character must be a letter)

**Example**              AUTO:NAME program1  
Sets the AUTO name to “program1”.

**AUTO:EDIT:ADD**

Set →

**Description**      Add the selected MANU test to the current AUTO number.

**Syntax**              AUTO:EDIT:ADD <NR1>

**Parameter/**      <NR1> 1~100

**Example**              AUTO:EDIT:ADD 7  
Adds MANU STEP 007 to the current AUTO number.



**AUTO<x>:EDIT:HOLD** 


Description	Sets or returns the actions for STEP HOLD of each MANU STEP in AUTO test.	
Syntax	AUTO<x>:EDIT:HOLD {<NR2> PH_FH PH_FS PH_FC PC_FH PC_FS PC_FC}	
Query Syntax	AUTO<x>:EDIT:HOLD?	
Parameter/	<NR2>	0.1 ~ 999.9 seconds
Return parameter	PH_FH	Sets Pass Hold & Fail Hold action
	PH_FS	Sets Pass Hold & Fail Stop action
	PH_FC	Sets Pass Hold & Fail Continue action
	PC_FH	Sets Pass Continue & Fail Hold action
	PC_FS	Sets Pass Continue & Fail Stop action
	PC_FC	Sets Pass Continue & Fail Continue action

**Example**      AUTO1:EDIT:HOLD PH\_FH  
 Sets the Pass Hold & Fail Hold action for MANU STEP 01 in the current AUTO test.

**AUTO<x>:EDIT:SKIP** 


Description	Sets or returns the SKIP action for each MANU STEP in AUTO test.	
Syntax	AUTO<x>:EDIT:SKIP {<NR1> ON OFF}	
Query Syntax	AUTO<x>:EDIT:SKIP?	
Parameter/	<NR1>	Sets MANU STEP from 1 - 10 for skip
Return parameter	ON	Turns SKIP action for the designated MANU STEP on
	OFF	Turns SKIP action for the designated MANU STEP off

**Example**      AUTO1:EDIT:SKIP ON  
 Enables SKIP function for MANU STEP 01 in AUTO test.

**AUTO:EDIT:DEL**

Set →

Description	Deletes the designated MANU STEP within the current AUTO test.	
Syntax	AUTO:EDIT:DEL {<NR1> ALL}	
Parameter	<NR1>	Deletes selected MANU STEP from 1 - 10
	ALL	Deletes all the MANU STEPs
Example	AUTO:EDIT:DEL 3 Deletes the MANU STEP 3 from the current AUTO test.	

**AUTO:TEST:RETURN**

→ Query

Description	Returns the number of AUTO test and MANU STEP that is being tested currently.	
Query Syntax	AUTO:TEST:RETURN?	
Return parameter	String	The returned string will be in the format of AUTO number followed by MANU STEP number. AUTO-XXX,STEP-XX
Example	AUTO:TEST:RETURN? AUTO-004,STEP-03 The MANU STEP-03 of AUTO-004 is being tested.	

**AUTO:EDIT:SHOW**

→ Query

Description	Returns all the information of the current AUTO test page. v	
Query Syntax	AUTO:EDIT:SHOW?	
Return parameter	String	The returned strings will be shown in the way almost identical to the contents displayed on an AUTO test page.

Example            AUTO:EDIT:SHOW?  
>AUTO-001 AUTO\_NAME  
>STEP,MODE,V/I SET,HI SET ,LOW SET,STEP HOLD  
> \_\_\_\_\_  
>001 ,ACW ,0.100kV,1.000mA,000 uAs,P.C/F.C  
>001 ,ACW ,0.100kV,1.000mA,000 uA,P.C/F.C  
>001 ,ACW ,0.100kV,1.000mA,000 uA,P.C/F.C  
>001 ,ACW ,0.100kV,1.000mA,000 uA,P.C/F.C  
>001 ,ACW ,0.100kV,1.000mA,000 uA,P.C/F.C  
>001 ,ACW ,0.100kV,1.000mA,000 uA,P.C/F.C  
>001 ,ACW ,0.100kV,1.000mA,000 uA,P.C/F.C  
>001 ,ACW ,0.100kV,1.000mA,000 uA,P.C/F.C  
>001 ,ACW ,0.100kV,1.000mA,000 uA,P.C/F.C  
>001 ,ACW ,0.100kV,1.000mA,000 uA,P.C/F.C

## Sweep Commands

SWEEP:DATA:STATus .....	204
SWEEP:DATA:SHOW .....	204
SWEEP:GRAPH:SHOW .....	205

### SWEEP:DATA:STATus

→ Query

Description	Returns the basic status of get data.
Query Syntax	SWEEP:DATA:STA?
Return parameter	<String> The returned string will be in the format below: STEP, TEST MODE, V SET, HI SET, TOTAL DATA
Example	SWEEP:DATA:STA? > STEP, MODE, V SET , HI SET , TOTAL DATA 000 , DCW , 0.450kV, 1.700mA, 00076

### SWEEP:DATA:SHOW

→ Query

Description	Returns the full measured readings of get data.
Query Syntax	SWEEP:DATA:SHOW<NR1>
Return parameter	<NR1> 0~10000. 0 stands for the full steps. 1~10000 indicates the designated step.
Example	SWEEP:DATA:SHOW 0 > TIMER , READ V, READ I 0000.1s , 0.003kV, 007uA 0000.2s , 0.008kV, 026uA 0000.3s , 0.019kV, 064uA 0000.4s , 0.028kV, 095uA 0000.5s , 0.037kV, 126uA 0000.6s , 0.045kV, 153uA

**SWEEP:GRAPh:SHOW**

Set →

→ Query

Description      Displays or turns off Sweep graph on LCD screen.  
Also Returns if Sweep graph is shown on LCD.

Syntax              SWEEP:GRAPh:SHOW {ON|OFF}

Query Syntax      SWEEP:GRAPh:SHOW?

Parameter/ Return parameter	ON	To enable Sweep graph on LCD
	OFF	To disable Sweep graph on LCD
	?	Returns if Sweep graph is shown on LCD

Example            SWEEP:GRAP:SHOW?  
                         > OFF  
                         Sweep graph is Not displayed on LCD screen.

## Common Commands

*CLS.....	206
*IDN.....	206
*SRE.....	207

### \*CLS

Set →

**Description**      The \*CLS command clears the internal registers and error message, if any.

**Syntax**            \*CLS

### \*IDN

→ Query

**Description**      Queries the model number, serial number, and firmware version of the tester.

**Query Syntax**     \*IDN?

<b>Return parameter</b>	<string>	Returns the instrument identification as a string in the following format: >GPT-12004 ,GPT12000 ,T0.011 Model number : GPT-12004 Serial number :8 characters serial number Firmware version : T0.011
-------------------------	----------	--

**\*SRE**

→ Query

---

**Description**      AUTO MODE only. Use this command to get measurement step number at the current point in time during AUTO MODE testing.

---

**Query Syntax**      \*SRE?

---

**Return parameter** <NR1>    00~50

---

**Example**            \*SRE?

>5

The current test step is number 5. This indicates that steps 1~4 have already been completed and the results for those steps can now be retrieved.

## Remote Commands

---

\*RMTOFF.....207

**\*RMTOFF**

Set →

---

**Description**      This command can be used to terminate a remote session. When this command is used "RMT" will no longer be displayed on the front panel, indicating that remote mode has been terminated.

---

**Syntax**            \*RMTOFF

## Error Messages

---

Background            The possible error messages returned from SYST:ERR? query are well listed below.

Error	Error Code
No Error	0
Command Error	20
Value Setting Error	21
String Setting Error	22
Query Error	23
MODE Setting Error	24
Time Error	25
DC Over 50W	26
GBV > 7.2V	27
ARC <= HI Set	28
HI Set => ARC	29
Voltage Setting Error	30
Current Setting Error	31
Current HI Set Error	32
Current LO Set Error	33
Resistance HI Set Error	34
Resistance LO Set Error	35
REF Setting Error	36
Frequency Setting Error	37
ARC Setting Error	38
RAMP Time Setting Error	39
TEST Time Setting Error	40
WAIT Time Setting Error	41
RAMP Down Setting Error	42
PASS Hold Setting Error	43
GB Contact Setting Error	44
Setting Over 200W	45
CONT Setting Over 9V	46
Auto Step Add Full	47
This Is The Last Step	48
Auto Connect Set Error	49



# F FAQ

- 
- The tester will not turn on.
  - The panel keys are not working.
  - The measured value of IR or GB test does not match the specification.
  - When I press the START button the tester will not start testing?

## The tester will not turn on?

---

Ensure the power cord is connected. Check and make sure the fuse is not blown and properly installed. See page 211.

## The panel keys are not working?

---

Ensure the tester is not in the SIGNAL I/O or Remote Control mode (page 122). If it is, refer to page 155 for how to return to front panel control. Also, if Key Lock is enabled, all panel keys except START and STOP are disabled. Refer to page 123 for details.

## The measured value of IR test does not match the specification?

---

Make sure the tester is powered on for warm-up of at least 30 minutes, within +15°C~+35°C. This is necessary to stabilize the tester to match the specification. After warm-up, please proceed to Ground Check procedure.

## The measured value of GB test does not match the specification?

---

Make sure the tester is powered on for warm-up of at least 30 minutes, within +15°C~+35°C. This is necessary to stabilize the tester to match the specification. After warm-up, please proceed to Zero Check procedure. Refer to page 69 for details.

When I press the START button the tester will not start testing?

---

The tester must first be in the READY status before a test can be started. Ensure the tester displays READY before pressing the START button, page 76 (manual test), 104(automatic test).

If Double Action is enabled, the START button must be pressed within 0.5 seconds after the STOP button is pressed, otherwise the tester will not start testing.

If Interlock is enabled, the interlock key must be inserted into the signal I/O port on the rear before a test starts. See page 150.

Lastly, if Start Click For 1 Second is enabled, it is required to press and hold the START button for 1 second above to initiate a test. Pressing the START button below 1 second will not start a test.

For more information, contact your local dealer or GWInstek at [www.gwinstek.com](http://www.gwinstek.com) / [marketing@goodwill.com.tw](mailto:marketing@goodwill.com.tw).


# APPENDIX

## Fuse Replacement


---

Steps


1. Turn the instrument off.

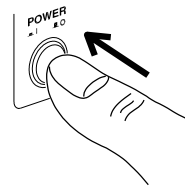


2. Remove the power cord.

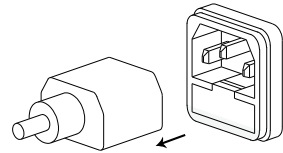

3. Remove the fuse socket using a flat screwdriver.

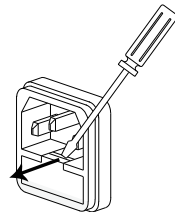

4. Replace the fuse in the fuse holder.

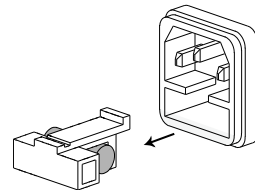

---

Fuse Rating

T 4A, 250V

## Test Errors

The following test error messages highlighted in red may appear on the GPT-12000 display when completing a running test.

Error Messages	Description
HI FAIL	Test result is beyond the HI SET value
LOW FAIL	Test result is below the LOW SET value
V OVER	Measured voltage is beyond the set value by 1.1 times
V LOW	Measured voltage is below the set value by 0.9 time
SHORT	Voltage short-circuit detected
GBI OVER	Measured current is beyond the set value by 1.1 times
GBI LOW	Measured current is below the set value by 0.9 time
GBV OVER	Measured GB voltage is beyond 7.2V
CONT V ERR	Measured CONT voltage is beyond 9.0V
ARC ERR	ARC abnormality detected
GFCI ERR	Ground fault circuit interrupt

The following setup error messages highlighted in red may appear on the GPT-12000 display when abnormality occurs in the settings of MANU steps.

Error Messages	Description
TEST MODE ERROR	Setting error in ACW/DCW
VOLTAGE SET ERROR	Setting error in voltage
CURRENT SET ERROR	Setting error in current
MANU STEP ERROR	Setting error in MANU STEP value
MANU NAME ERROR	Setting error in MANU NAME
HI SET ERROR	Setting error in HI SET value
HISET <= LOWSET	Set value of HI SET is less than or equal to LOW SET value
HISET >= ARC	Set value of HI SET is greater than or equal to ARC SET value
LOW SET ERROR	Setting error in LOW SET

TEST TIME ERROR	Setting error in TEST TIME
RAMP TIME ERROR	Setting error in RAMP TIME
ARC FUNC ERROR	Setting error in ARC FUNC
ARC SET ERROR	Setting error in ARC SET
ARC SPEED ERROR	Setting error in ARC SPEED
FREQ SET ERROR	Setting error in FREQ of ACW/GB
WAIT TIME ERROR	Setting error in WAIT TIME
GB CONTACT ERROR	Setting error in GB CONTACT
RAMP DOWN ERROR	Setting error in RAMP DOWN
GROUND ERROR	Setting error in GROUND MODE
MAX HOLD ERROR	Setting error in MAX HOLD
PASS HOLD ERROR	Setting error in PASS HOLD
REF SET ERROR	Setting error in REF VALUE
GBV OVER	Setting Error in ISET x (HI SET + REF) > 7.2V of GB Mode
INIT VSET ERROR	Setting error in INIT VOLTAGE
IR MODE ERROR	Setting error in IR MODE
DCW OVER 50W	Setting error in $V * I > 50W$ of DCW Mode
GB OVER 200W	Setting error in $V * I > 200W$ of GB Mode
ZERO SET ERROR	Setting Error in ZERO CHECK
CONT. TEST V OVER	Setting Error in ISET(100mA) x (HI SET + REF) > 9V of CONT Mode
TIME OVER 240s	TIME OVER 240s is displayed when, under ACW test mode, HI SET is greater than 30mA and the RAMP TIME plus the TEST TIME setting is > 240 seconds.
POWER GND FAIL	Power cord fails to connect with earth ground

## GPT-12000 Specifications

The specifications apply when the GPT-12000 is powered on for at least 30 minutes at 15°C~35°C.

### Specifications

#### General

DISPLAY	7" color LCD
MEMORY	AUTO/MANU mode 100 memory blocks total
POWER SOURCE	AC 100V~240V ± 10%, 50Hz/60Hz
ACCESSORIES	Power cord x1, Quick Start Guide x1 User Manual x1 (CD) GHT-115 x1 for GPT-12001/2/3 GHT-115 x1, GTL-215 x1 for GPT-12004
DIMENSIONS & WEIGHT	Approx. 380(W) x 148(H) x454(D) / 15kg

#### Environment

Range	Temperature	Humidity
Warranty	15°C ~ 35°C	≤70% (No condensation)
Operation	0°C ~ 40°C	≤70% (No condensation)
Storage	-10°C ~ 70°C	≤85% (No condensation)
Installation Location	Indoors at an amplitude of up to 2000m.	

## AC Withstanding Voltage

Output Voltage Range	0.050kV~ 5.000kV <sup>1</sup>
Output Voltage Resolution	1V
Output Voltage Accuracy	± (1% of setting +5V) with no load
Maximum Rated Load(Table1)	200VA (5kV/40mA)[GPT-12XXX]
Maximum Rated Current	40mA[GPT-12XXX] 0.001mA~10mA(0.05kV≤V≤0.5kV) 0.001mA~40mA(0.5kV<V≤5kV)
Output Voltage Waveform	Sine wave
Frequency	50 Hz / 60 Hz
Voltage Regulation	± (1% +5V)[Maximum rated load →no load]
Voltmeter Accuracy	± (1% of reading+ 5 V)
Current Measurement Range	0.001mA~40.00mA [GPT-12XXX]
Current Best Resolution	1uA 1uA (1uA~9.999mA) 10uA(10.00mA~40.00mA)
Current Measurement Accuracy	± (1.5% of reading+30uA)
Judgment Accuracy	± (3% of setting+30uA)
Window Comparator Method	Yes
ARC DETECT	Yes
Rise-time Control Function	Yes
RAMP TIME (Rise Time)	0.1~999.9S
Fall-time Control Function	Yes
RAMP DOWN Time	0.0~999.9S
TIMER (Test Time) <sup>2</sup>	OFF, 0.3S~999.9S
GND	ON/OFF
WAIT TIME	0.0~999.9S

<sup>1</sup> At least 0.3 seconds is needed to reach a set voltage of 50V/10mA.

<sup>2</sup> Timer can only be turned off when the upper current is set below 30mA.

## DC Withstanding Voltage

Output Voltage Range	0.050kV~ 6.000kV <sup>1</sup>
Output Voltage Resolution	1V
Output Voltage Accuracy	±(1% of setting +5V) With no load
Maximum Rated Load	50W(5kV/10mA) [GPT-12xxx]
Maximum Rated Current	10mA [GPT-12XXX] 0.001mA~2mA(0.05kV≤V≤0.5kV) 0.001mA~10mA(0.5kV<V≤6kV)
Voltmeter Accuracy	± (1% of reading+ 5 V)
Voltage Regulation	± (1% +5V)[Maximum rated load ->no load]
Current Measurement Range	0.001mA-10.00mA
Current Measurement Best Resolution	0.1uA 0.1uA (0.1uA~999.9uA) 1uA(1uA~9.999mA) 10uA(10.00mA)
Current Measurement Accuracy	±(1.5% of reading+3uA) when I<1mA ±(1.5% of reading+30uA) when I≥1mA
Judgment Accuracy	± (3% of setting+30uA)
Window Comparator Method	Yes
ARC DETECT	Yes
Rise-time Control Function	Yes
RAMP TIME (Rise Time)	0.1~999.9S
Fall-time Control Function	Yes
RAMP DOWN Time	0.0~999.9S
TIMER (Test Time)	OFF, 0.3S~999.9S
GND	ON/OFF
WAIT TIME	0.0~999.9S
Maximum Capacitive Load DC Mode	1uF

<sup>1</sup> At least 0.3 seconds is needed to reach a set voltage of 50V/2mA.



## Insulation Resistance Test

Output Voltage	50V-1200V	
Output Voltage Resolution	50V	
Output Voltage Accuracy	$\pm(1\%$ of setting +5V) with no load	
Resistance Measurement Range	0.1M $\Omega$ ~50G $\Omega$	
Test Voltage	Measurement Range	Accuracy
50V $\leq$ V $\leq$ 450V	0.1M $\Omega$ ~1M $\Omega$	5% of reading + 3 count
	1M $\Omega$ ~50M $\Omega$	5% of reading + 1 count
	51M $\Omega$ ~2G $\Omega$	10% of reading + 1 count
500V $\leq$ V $\leq$ 1200V	0.1M $\Omega$ ~1M $\Omega$	5% of reading + 3 count
	1M $\Omega$ ~500M $\Omega$	5% of reading + 1 count
	501M $\Omega$ ~9.999G $\Omega$	10% of reading + 1 count
	10G~50G $\Omega$	20% of reading + 1 count <sup>1</sup>
Test Voltage	Display Range	
50V $\leq$ V $\leq$ 100V	000.1M $\Omega$ ~10.00G $\Omega$	
150V $\leq$ V $\leq$ 450V	000.1M $\Omega$ ~20.00G $\Omega$	
500V $\leq$ V $\leq$ 1200V	000.1M $\Omega$ ~50.00G $\Omega$	
Voltage regulation	$\pm(1\%$ +5V) [Maximum rated load ->no load]	
Voltmeter Accuracy	$\pm(1\%$ of reading +5V)	
Short-Circuit Current	10mA max.	
Output Impedance	2k $\Omega$	
Window Comparator Method	Yes	
Rise-time Control Function	Yes	
RAMP TIME (Rise Time)	0.1~999.9S	
Fall-time Control Function	Yes	
RAMP DOWN Time	0.0~999.9S	
WAIT TIME	0.0~999.9S	
TIMER (Test Time)	0.3S~999.9S <sup>2</sup>	
GND	ON/OFF	


NOTE: It is required to implement GND OFFSET action when IR Ground Mode is On.

<sup>1</sup> When IR Ground Mode is On, the maximum 30Gohm measurement range is guaranteed.

<sup>2</sup> When IR Ground Mode is On, test time starts from 0.5 second.

**Ground Bond Test**

Output Current Range	3.00A~32.00A
Output Current Accuracy	±(1% of setting+0.2A) when 3A≤I ≤8A ±(1% of setting+0.05A) 8A < I ≤ 32A
Output Current Resolution	0.01A
Test Voltage	Approximately max. 8VAC (open-circuit)
Frequency	50Hz/60Hz selectable
Ohmmeter Measurement Range	1mΩ ~ 650mΩ

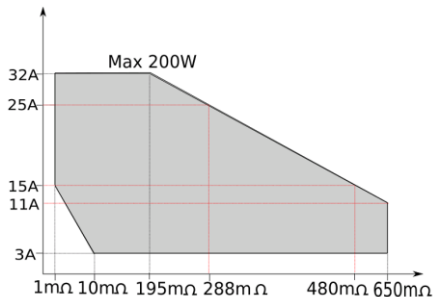

Ohmmeter Measurement Resolution	0.1mΩ
Ohmmeter Measurement Accuracy	±(1% of reading+2mΩ)
Ohmmeter Judgment Accuracy	±(1% of setting+2mΩ)
Window Comparator Method	Yes
TIMER (Test Time)	0.3S~999.9S
GND	ON/OFF

**Continuity Test**

Output Current	100mA(DC)
Ohmmeter Measurement Range	0.10Ω~70.00Ω
Ohmmeter Measurement Resolution	0.01Ω
Ohmmeter Measurement Accuracy	±(10% of reading+2Ω)
Ohmmeter Judgment Accuracy	±(10% of setting+2Ω)
Window Comparator Method	Yes
TIMER (Test Time)	0.3S~999.9S

## Interface




REMOTE (Remote terminal)	Yes
SIGNAL IO	Yes
RS232	Yes
USB (Device)	Yes (USB 2.0)
Rear Output	Yes
USB (Host) for data output port	Yes (USB 2.0)
GPIB	Yes (Optional)

**Table 1: Output Limitation in Withstanding Voltage Testing**

Function	Upper Current	Pause	Output Time
AC	$30\text{mA} \leq I \leq 40\text{mA}$	At least as long as the output time	Maximum 240 seconds
	$0.001\text{mA} \leq I < 30\text{mA}$	Not necessary	Continuous output possible
DC	$0.001\text{mA} \leq I \leq 10\text{mA}$	Not necessary	Continuous output possible
GB	$15\text{A} < I \leq 32\text{A}$	At least as long as the output time	999.9 seconds
	$3\text{A} \leq I \leq 15\text{A}$	Not necessary	999.9 seconds


NOTE: Output Time = Ramp Time + Test Time.

# GPT-12001/12002/12003 Dimensions

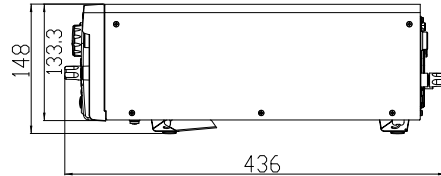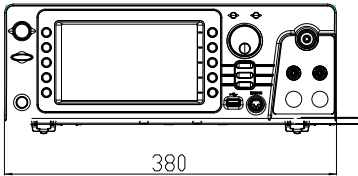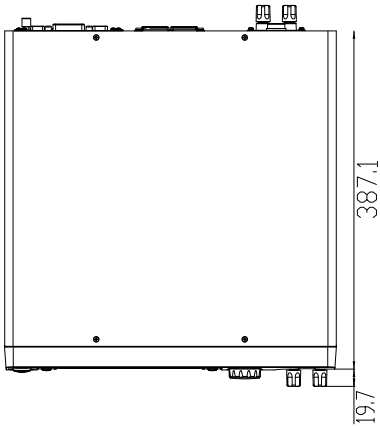

# GPT-12004 Dimensions

---

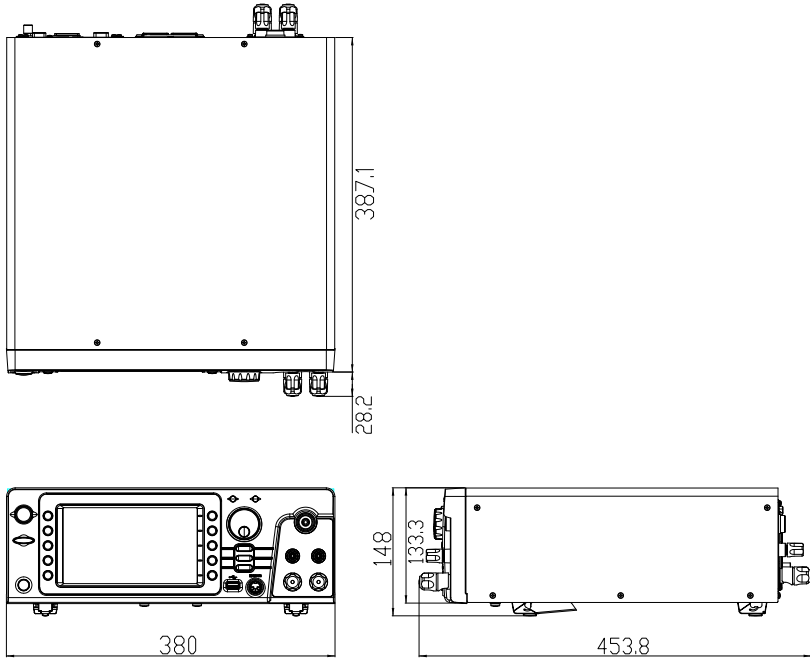

## Declaration of Conformity

We

**GOOD WILL INSTRUMENT CO., LTD.**

declare that the below mentioned product

Type of Product: Electrical Safety Analyzer

Model Number: **GPT-12001 / GPT-12002/ GPT-12003 / GPT-12004**

satisfies all the technical relations application to the product within the scope of council:

**Directive:** 2014/30/EU; 2014/35/EU; 2011/65/EU; 2012/19/EU

The above product is in conformity with the following standards or other normative documents:

◎ **EMC**

<b>EN 61326-1:</b>	Electrical equipment for measurement, control and laboratory use -- EMC requirements (2013)	
<b>EN 61326-2-1:</b>		
Conducted & Radiated Emission EN 55011: 2016+A1:2017 Class A	Electrical Fast Transients EN 61000-4-4: 2012	
Current Harmonics EN 61000-3-2: 2014	Surge Immunity EN 61000-4-5: 2014	
Voltage Fluctuations EN 61000-3-3: 2013	Conducted Susceptibility EN 61000-4-6: 2014	
Electrostatic Discharge EN 61000-4-2: 2009	Power Frequency Magnetic Field EN 61000-4-8: 2010	
Radiated Immunity EN 61000-4-3: 2006+A2:2010	Voltage Dip/ Interruption EN 61000-4-11: 2004	

◎ **Safety**

<b>Low Voltage Equipment Directive 2014/35/EU</b>	
Safety Requirements	EN 61010-1: 2010 EN 61010-2-030: 2010

# INDEX

- Accessories ..... 12
- Automatic test
  - add test .....95
  - load.....93
  - page view .....97, 99
  - results.....110
  - running a test .....104
  - test file name .....94
- Caution symbol..... 5
- Cleaning the instrument ..... 7
- Declaration of conformity ..... 221
- Dimensions ..... 219, 220
- Disposal instructions ..... 8
- EN61010
  - measurement category .....7
  - pollution degree.....8
- Environment
  - safety instruction .....7
- External control..... 143
  - Interlock key.....149
  - overview .....144
  - remote operation .....145
  - remote terminal .....144
  - signal I/O operation .....148
  - signal I/O overview .....146
- FAQ ..... 208
- Front panel diagram..... 14
- GPIB installation ..... 23
- Ground
  - symbol.....5
- Interlock key..... 149
- Line voltage selection..... 22
- List of features..... 11
- Manual tests
  - ARC mode.....58
  - fail mode.....54, 63
  - ground mode.....72
  - max hold.....61
  - overview .....38
  - pass hold.....62
  - ramp up time.....46, 48, 56
  - results ..... 81
  - running a test.....76
  - special mode..... 87, 89
  - test filename..... 41
  - test frequency ..... 52
  - test function ..... 39
  - test limits..... 42
  - test reference..... 53
  - test selection..... 40
  - test time ..... 44
  - test voltage..... 50
  - timing diagrams..... 82
- Marketing
  - contact ..... 209
- Menu tree ..... 30
- Operating precautions.....25
- Overview .....10
- Package contents .....13
- Power on/off
  - safety instruction..... 7
- Rear panel diagram ..... 18
- Remote control ..... 150
  - Command list ..... 158
  - Command syntax ..... 155
  - function check ..... 153
  - interface configuration ..... 151
- Service operation
  - about disassembly..... 6
  - contact ..... 209
- Specifications ..... 213
- Test errors ..... 211
- Tilt stand ..... 21
- Utility settings
  - buzzer ..... 119
  - Control settings123, 130, 134, 137, 138, 140
  - double action123, 130, 134, 137, 138, 140
  - GPIB..... 121
  - interface..... 121
  - key lock 123, 130, 134, 137, 138, 140
  - LCD.....117
  - RS232 ..... 121

start control	123, 130, 134, 137, 138, 140	Workplace precautions .....	24
USB .....	121	Zeroing.....	65, 67, 69
Warning symbol .....	5		