

DESCO TECHNICAL BULLETIN TB-3059

Ionizer Motion Sensor Installation, Operation and Maintenance



Made in the United States of America

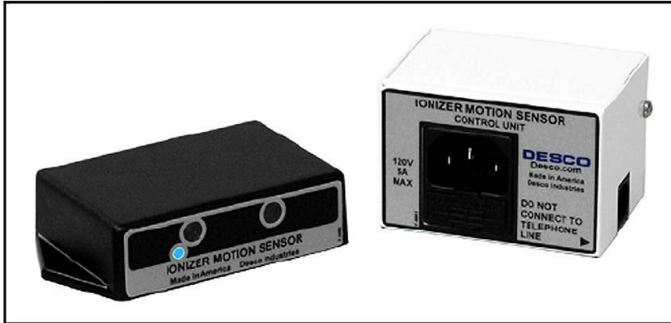


Figure 1. Desco [60509](#) Ionizer Motion Sensor

Description

The Desco [60509](#) Ionizer Motion Sensor is designed to automatically activate an ionizer when an operator is present at a workstation and turn off when the workstation is vacant. This product ensures that the ionizer is activated when required. It also conserves energy and increases maintenance intervals of the ionizer by deactivating it when the workstation is vacant. The Control Unit is capable of switching up to 5 amps at 120VAC and is fuse protected.

The Ionizer Motion Sensor consists of two components: the Sensor Unit and Control Unit. The control unit connects between the AC power cord and the ionizer power input using standard IEC type (C13/C14) connectors. The sensor unit is placed in a position to “detect” an operator up to three feet away. The sensitivity levels can be adjusted to: low (12 inches), medium (24 inches) or high (36 inches). The Sensor Unit should be mounted flush with the front edge of the mounting surface whenever possible. This is done to prevent reflected light from the mounting surface. The two components communicate using a standard 6-pin modular cable.

The Ionizer Motion Sensor utilizes a unique infrared light and band pass filter to prevent interference from other light sources. The band pass filter uses a reflected infrared light with the specific frequency to sense the presence of the operator. It does not require continuous motion to remain activated. The deactivation delay time can be set to 1 minute, 10 minutes or 1 hour periods. This delay prevents the ionizer from turning on and off frequently if an operator is only away from the workstation momentarily.

The Ionizer Motion Sensor is compatible with the following Desco ionizers:

Item	Description
50663	Benchtop Zero Volt Ionizer, Stainless Steel, 120VAC
50670	Benchtop Zero Volt Ionizer, Stainless Steel, 220VAC
50690	Benchtop Zero Volt Ionizer, Powder Coat, 120VAC
50691	Benchtop Zero Volt Ionizer, Powder Coat, 220VAC
60500	Chargebuster® Jr Benchtop Ionizer, 120VAC
60505	High Output Benchtop Ionizer, 120VAC
60515	High Output Benchtop Ionizer, 220VAC
50664	Overhead Zero Volt Ionizer, 2-Fan, 120VAC
50665	Overhead Zero Volt Ionizer, 3-Fan, 120VAC
50671	Overhead Zero Volt Ionizer, 2-Fan, 220VAC
50672	Overhead Zero Volt Ionizer, 3-Fan, 220VAC
60640	Chargebuster® Overhead Ionizer, 2-Fan, 120VAC
60473	Chargebuster® Overhead Ionizer, 3-Fan, 120VAC
50682	Chargebuster® Overhead Ionizer, 2-Fan, 220VAC
50681	Chargebuster® Overhead Ionizer, 3-Fan, 220VAC
60467	Chargebuster® Overhead Ionizer with Lights, 2-Fan, 120VAC
60468	Chargebuster® Overhead Ionizer with Lights, 3-Fan, 120VAC
50602	Chargebuster® Overhead Ionizer with Lights, 2-Fan, 220VAC
50603	Chargebuster® Overhead Ionizer with Lights, 3-Fan, 220VAC

Packaging

- 1 Sensor Unit
- 1 Control Unit, 120VAC
- 1 Modular Cable, 2'
- 1 Modular Cable, 7'
- 2 Hook and Loop Fastener Strips
- 2 Screws

Features and Components



Figure 2. Sensor Unit features and components



Figure 3. Control Unit features and components

- A. Power LED:** This LED will illuminate blue when an operator or object has activated the device.
- B. Infrared Emitter and Receiver:** Detects when an operator or object is present. Movement by the operator is not necessary.
- C. Communication Jacks:** Use the included modular cables to connect the Sensor Unit to the Control Unit.
- D. DIP Switch:** Use to adjust the sensor's sensitivity and deactivation delay time. See the installation instructions on page 2 for more information.
- E. IEC C14 Style Inlet:** Connect the ionizer's power cord here.
- F. Fuse Drawer:** Accepts 5A, 250V slow blow fuses.
- G. IEC C13 Style Outlet:** Connect into the ionizer's power inlet.

Sensor Configuration

The Sensor's sensitivity and deactivation delay time are controlled by the DIP switches located on the back of the Sensor Unit. Use the following tables for the DIP switch settings and their corresponding values.

NOTE: Be sure to disconnect the power from the Sensor Unit before making any changes to the DIP switch. Failure to do so may result in damage to the Sensor Unit.

SENSITIVITY

DIP switches 1-3 control the sensitivity of Sensor.

Switch 1	Switch 2	Switch 3	Approximate Sensitivity
ON	OFF	OFF	Low (0-12")
OFF	ON	OFF	Medium (12-24")
OFF	OFF	ON	High (24-36")

DEACTIVATION DELAY TIME

DIP switches 4-6 control the deactivation delay time.

Switch 4	Switch 5	Switch 6	Approximate Delay Time
ON	OFF	OFF	1 minute
OFF	ON	OFF	10 minute
OFF	OFF	ON	1 hour

default setting

Installation

- Ensure that the ionizer does not exceed the maximum power rating of 120VAC, 5A. Insert the Control Unit into the ionizer's IEC power inlet.
NOTE: If using the Desco High Output Benchtop Ionizer or EMIT Benchtop Zero Volt Ionizer, set its power switch to ON before connecting the Control Unit. The Control Unit covers its power switch.
- Determine the mounting location of the Sensor Unit. Place it where only the operator can come into its field of view. Do not place it where a fixture or item can obstruct its line of sight. Use either the included hook and loop fastener strips or screws to secure the sensor to a surface. The Sensor Unit should be mounted flush with the front edge of the mounting surface whenever possible.
- Use either the 2 foot or 7 foot modular cable to connect the Control Unit to the Sensor Unit.
- Connect the ionizer's power cord to the Control Unit and the opposite end into an appropriate power outlet.
- Power the ionizer.

Operation

Enter the sensor's field of view. The blue LED will illuminate upon activation. The ionizer will remain powered as long as something is in the sensor's view. Movement is not necessary.

Leave the sensor's field of view to activate the shutoff delay timer. The Ionizer Motion Sensor's LED will turn off and unpower the ionizer once the preset deactivation delay time is reached.



Figure 4. Using the Ionizer Motion Sensor with the [60505](#) High Output Benchtop Ionizer



Figure 5. Using the Ionizer Motion Sensor with the [60473](#) Chargebuster® 3-Fan Overhead Ionizer

Maintenance

The fuse located in the Control Unit may be replaced by removing the power cord and opening the fuse drawer at the IEC inlet. The Control Unit uses one 5A, 250V slow blow fuse. DO NOT use other ratings as it may pose a safety hazard.



Figure 6. Replacing the fuse in the Control Unit

Specifications

Maximum Input Voltage and Frequency	5A @ 120VAC, 50/60 Hz
Operating Temperature	50 to 95°F (10 to 35°C)
Environmental Requirements	Indoor use only at altitudes less than 6500 ft. (2 km) Maximum relative humidity of 80% up to 85°F (30°C) decreasing linearly to 50% @ 85°F (30°C)
Dimensions (Sensor)	3.0" L x 2.0" W x .9" H (76 mm x 51 mm x 23 mm)
Dimensions (Control)	2.7" L x 2.0" W x 1.8" H (69 mm x 51 mm x 46 mm)
Weight (Sensor)	0.1 lbs. (0.05 kg)
Weight (Control)	0.3 lbs. (0.1 kg)
Fuse	5A, 250V, slow blow
Country of Origin	United States of America