



TestEquipmentDepot.com

HS10 Heat Stress Meter /Wet Bulb Global Temperature (WBGT) and Heat Index (HI) Monitor



CE

Introduction

Congratulations on your purchase of the Triplett HS10 Heat Stress Wet Bulb Global Temperature (WBGT) and Heat Index (HI) Monitor . This compact checker measures air temperature, globe temperature, and humidity to give heat stress index for using in control of physical activity in hot environment to limit the danger of heat-related injuries.

WBGT (wet-bulb globe temperature) was developed as a monitoring basis at US military training camps and became widespread for the use in workplaces and sports situations.

It is suggested in an international standard ISO 7243 and many governments such as OSHA (US Occupational Safety & Health Administration), SMA(Sports Medicine Australia)and Japan Society for Occupational Health in establishing the permissible heat exposure limits in occupational health, sports or other physical activities.


The applications of the heat index can be in construction, iron and steel foundries, bricks-firing plants, glass facilities, boiler rooms, mining sites, army training, marathon, beach activities and so on.

The heat index was developed by the US National Weather Service to help people avoid heat illness. Prolonged exposure and/or physical activity at a high heat index is likely to lead to sun stroke, heat cramps, heat exhaustion and even death. However, please be aware that heat index is not an exact science. The values reached are approximations. Ultimately, the final decision of whether or not to exercise or work belongs to the individual, athletic trainer or employer.

Features

- Simultaneously display WBGT/HI, Temperature & RH
- For outdoor & indoor heat stress measuring
- Programmable buzzer & red LED danger zone warning
- Audible alarm volume adjustable (75dB / 60dB / mute)
- 4 level dangerous level indicator on LCD
- Wearable design with arm strap included
- Display updates every 20 seconds

METER DESCRIPTION (Front and Rear View)

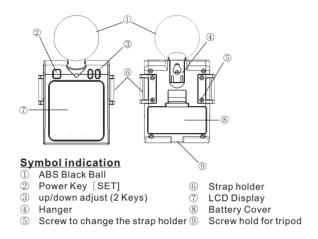

LCD DISPLAY DESCRIPTION

		WBGT	Wet Bulb Globe
			Temperature
		TEMP	Air Temperature
		RH%	Relative Humidity
		°C/°F	Celsius/Fahrenheit
		IN	Indoor (no sun)
	HUMIDITY	OUT	Outdoor (full sun)
	€	Alarm indicator	
	Ô	Battery Indicator	
		– (1)	Sound Level
		HI	Heat Index

FUNCTION BUTTONS



- Press the **POWER/SET** button to turn **ON**.
- Press and hold the **POWER/SET** button for 2 seconds to turn **OFF**.
- In NORMAL MEASURMENT MODE press [SET] button [▲] and [▼] button simultaneously for 3 seconds to enterSETTING Mode.
- In power off status, press [SET] button, [▲] and [▼] simultaneously for 5 seconds till entering RESET Mode.
- In NORMAL MEASURMENT MODE, press [▲] or [▼] button to adjust the sound level.
- In **SETTING MODE** press [▲] or [▼] button to adjust the value of thresholds or ON / OFF the alarm.

Operation


POWER

Press () to turn **ON** (press1 second) and turn **OFF** (press 2 seconds) the meter. All indicators are shown on the LCD when powered ON and the meter enters measurement mode. The firmware revision is displayed on the LCD for 1 second when powered ON.



MEASUREMENT

When in measurement mode, the WBGT value, temperature and humidity values are displayed on the LCD.




SOUND LEVEL

The user can press the [\blacktriangle] or [\lor] key to adjust the volume of the alarm. In measuring mode, press [\bigstar] or [\lor] key to adjust the volume in 0dB > 60dB >75dB respectively. The buzzer icon will be displayed.

Note: No Buzzer icon is displayed on the LCD when the sound is 0dB.

DANGER ZONE INDICATOR

For both WBGT and HI there are 4 levels of heat stress danger zone indications at the top of the LCD.

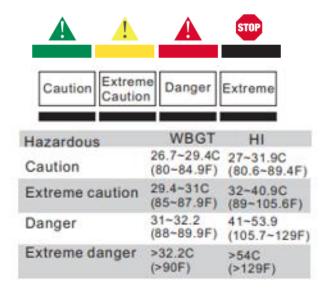

ALARM

When the measured heat stress value is over alarm threshold, the red LED, buzzer and measured value will all blink every second as a reminder. After 30 seconds, it beeps 1 time per minute. The user can disable beep sound at any time when pressing $[\Psi]$ key. The alarm threshold value can be reprogrammed. Check "SETUP" Mode in the following section in this manual for further instruction.

SETUP MODE


This function allow users to customize their own default settings. Press the $\bigcirc_{\mathtt{ET}}$ button + [A]+ [V] buttons simultaneously for 3 seconds to enter **SETUP Mode**. The meter will return to normal display while keys are inactive for 30 sec in setup mode. Display for either WBGT & HI (Heat Index) is switchable by the user.

IN/OUT SWITCH (ONLY for WBGT mode)

This function serves to calculate WBGT without [IN] or with [OUT] direct sun exposure.

Under IN/OUT modes, press [▲] or [▼] to switch

[IN / OUT] then press (to confirm



ALARM THRESHOLD SETTING


This function allows users to customize alarm threshold or stay at factory default alarm threshold. While choosing to stay at factory default alarm threshold, please select [OFF]. [OFF] means to turn off customization function.



The default alarm-threshold is defined in below and each range has different buzzer frequence to distinguish.

If user decides to customize their own alarm threshold, select [ON], [ON] means the alarm threshold setting is turned ON by user.

The adjustment range is listed below.




Hazardous	WBGT	ні	Alarm Customize OFF	Alarm Customize ON
Caution	26.7~29.4C (80~84.9F)	27~31.9C (80.6~89.4F)	Silent	Urgent beep-
Extreme caution	29.4~31C (85~87.9F)	32~40.9C (89~105.6F)	Веер	upon the measured
Danger	31~32.2 (88~89.9F)	41~53.9 (105.7~129F)	Urgent Beep	reading is over the
Extreme danger	>32.2C (>90F)	>54C Urgent (>129F) Beep		threshold

Press the [\bullet] or [\bullet] button to adjust alarm value. Press the $\bigoplus_{n=1}^{\infty}$ button to save the value. The adjustment is 0.1 per step. The adjustment range is 68°F to 122°F (20 to 50°C) for WBGT and 50°F to 140°F(10~60°C) for HI

Note: If user prefers to monitor the heat stress in a complete silent mode


the following procedure can disable the alarm function so LED, buzzer and alarm related icons are all OFF. While adjusting alarm threshold value, pressing [\blacktriangle] and [\triangledown] key simultaneously. The alarm threshold will show [--.-] on the LCD Press [\blacktriangle] and [\triangledown] again to revert the status.



TEMPERATURE UNIT °C /°F

Press [▲] and [▼] key to switch ^oC (degrees Celcius)


or ^o F (degrees Farhenheit). Press () key to save the selection.)



WBGT / HI SWITCHING

For HS10, the main displayed heat stress index can be WBGT or HI. While the temp unit setting completed, pressing [\blacktriangle] or [\checkmark] key to switch WBGT(H) and then press set key to confirm

Then, the checker will return to measurement mode after upon all setting are completed.



RESET FUNCTION

This allows user RESET the meter to default setting. In **POWER OFF** status, press [SET], [**^**] and [**v**] key simultaneously for 5 seconds till [rSt] symbol show on the LCD in 5 seconds. Then full display will be turned on and go to measurement mode automatically.

The Default settings for the meter are:

Description	Default Value
IN/OUT	OUT
ALARM THRESHOLD SETTING	OFF
°C/°F	°C
WBGT/HI	WBGT
SOUND LEVEL	4 »)

Battery Installation and Replacement

The meter is powered by (2)1.5V AAA batteries. First, check the batteries when:

- 3. First time using the meter
- 4. The battery symbol appears on LCD
- 5. The meter does not power ON.

To install the batteries

- 1. Turn off the meter.
- 2. Remove the battery cover
- 3. Replace the old batteries with two new batteries
- 4. Make sure the batteries are in the place and the polarity is correct.
- 5. Replace the battery cover.

Low Battery Indication

f appears on the LCD when battery voltage gets low. Please replace battery by opening the compartment on the rear of the meter.



Specifications

32 to 122°F(0~50°C) Temp. range 0.1°C/°F Temp. resolution +/-1.8°F(+/-0.6°C) Temp. accuracy 0.1%~99.9%RH Humidity, range Humidity resolution 0.1%RH Humidity accuracy 10.0%~90.0% @ 25°C: Typical 5%. Others 7% Globe Temp.(inside black ball) 32 to 158°F(0~70°C) 32 to 122°F(0~50°C) WBGT temp. range 32 to 140°F(0~60°C) HI temp. range WBGT Alarm Range 68°F to 122°F(20~50°C) HI Alarm Range 68°F to 122°F (20~60°C) Black ball size(mm) Dia. 40 Stabilization time 15~25 minutes typical **Battery life** ~300hour LCD size (mm) 40(H)x39(W) (1.6x1.5") 32 to 122°F(0~50°C) Operation temp. **Operation RH%** Humidity < 80% Storage temp. -4°F 122°F(-20~50°C) Humidity < 90% Storage RH% 2.8" x 2.4"x0.8" Dimension(mm) (70(H)x60(W)x22(D)) Weight 3.17 oz (~90g) Standard Package AAA x2pcs Meter/Battery/Manual/Paper box Battery

Appendix

WBGT & Physical exercise

WBGT Flag		Activity Intensity	
< 80°F < 26.7°C	White	Normal activity. Caution should be taken.	
80-84.9° ⁰ F 26.7-29.4°C	Green	Discretion is required in planning intense physical activity.	
85-87.9°F 29.4-31°C	Yellow	Intense activity for new and acclimatized persons should be curtailed.	
88-89.9°F 31-32.2°C	Red	Intense exercise must be curtailed for those with less than 12 weeks training in hot weather. Be on high alert	
> 90°F > 32.2°C	Black	Cancel all outdoor exercise.	

Source: Manual of Naval Preventive Medicine (NAVMED P-5010)

Heat Index Chart

Category	Heat Index	Possible heat disorders for people in high risk groups Extreme
Danger	54°C or highe	er Heat stroke or sunstroke likely
Danger	41-54°C	Sunstroke, muscle cramps, and/or heat exhaustion likely. Heatstroke possible with prolonged exposure and/or physical activity.
Extreme	32-41°C	Sunstroke, muscle cramps, and/or heat exhaustion possible with prolonged exposure and/or physical activity
Caution	27-32°C	Fatigue possible with prolonged exposure and/or physical activity.