
LinkSprinter Symbols What is tested? າງ uetAlly 6. TCP port open or ping the cloud (www) Internal **Wi-Fi** server three times ລາ netAlly LINKSPRINTER[™] LINKSPRINTER Flashing Blue LED: Wi-Fi Power button: Tap to turn on. enabled **Network Tester** 5. Pings the Tap again to enable Wi-Fi. gateway ō ō ō ē 4. Tests Hold 2 seconds three times DHCP server, to turn off. The Cloud \bigcirc ച്ച netAlly acquires an (www) can LINKSPRINTER address be reached User Gateway can ഹ 3. Discovers be reached DHCP IP address £ Ethernet Guide switch name received DHCP model. Link acquired ന slot, port, Ø **VI ΔΝ** The LinkSprinter ථ Ļ PoE runs a Ĵ Green: Power 2. Tests Link speed connectivity over Ethernet is DHCP and duplex test and sends powering the unit. Ø the test results Off: No PoE 1. Tests Power to the Link-Live Ļ over Ethernet Flashing LED: The test is in progress. (PoE) Cloud Service. Green LED: The test passed. Red LED: The test failed. Red PoE: Low PoE voltage. Yellow Link LED: Detected downshift from Max advertised speed. Yellow Gateway or Cloud: 1 or 2 pings missed or TCP handshakes failed.

Claiming Your LinkSprinter to Link-Live Cloud Service

Prepare to Claim

If Power over Ethernet (PoE) is not available to you, insert two AA batteries into the back of your LinkSprinter (but do not power it on yet).

Ensure that you have an Ethernet cable connected to an active network with access to the Internet (but not connected to the LinkSprinter yet).

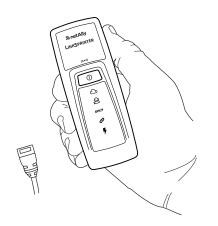

Link-Live Cloud Service is a free, online system for viewing, organizing, and reporting your LinkSprinter test results. Once your LinkSprinter is claimed, your test results are automatically uploaded to Link-Live.

2 Sign Up and Sign In

Create your user account at: Link-Live.com


Follow the instructions to activate your account, then sign in.



To claim, Link-Live needs the Unit number (last 6 digits of MAC) from the back of vour device.

3 Claim

to claim your device.

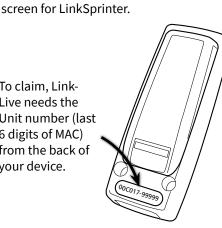

The first time you sign in to Link-Live, a

pop-up window appears prompting you

Follow the claiming instructions on the

Connecting LinkSprinter to Your Mobile Device

1 Turn on Link-Sprinter Wi-Fi

Tap the LinkSprinter power button, then tap again.

The blue Wi-Fi icon flashes when Wi-Fi is enabled and stays on when the LinkSprinter is connected to a mobile device.

2 View Networks

On your mobile device, navigate to the list of Wi-Fi networks.

0 ON <u>ج</u> HPE710.8

Connect to LinkSprinter SSID Select the LinkSprinter SSID.


called "LinkSprinter" + last 6 digits of the MAC Address.

4 Open Mobile Interface

Open your mobile device browser, and input the IP address 172.16.9.9.

The mobile device is now linked to your LinkSprinter and ready to begin testing.

Detailed test results are also sent by email. Send a Reply to the Results email to add a comment or photo attachment to the result in the cloud.

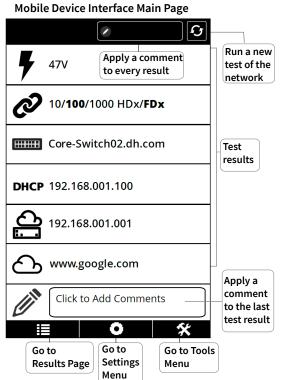


Desults Page

Results Page				
ţ	47V	Power over Ethernet voltage		
47V	10/100/1000 HDx/FDx	Bold indicates actual link speed and duplex		
Rx Pair: 1,2 Polarity: n	10/100/1000 HDx/FDx	Advertised Link Speed and Duplex, Receive Pair and polarity		
	Core-Switch02.dhr.com	Name of nearest switch		
Port: Gigat VLAN: 21 Model: cisc	o WS-C2960S-48TS-L 2.031.163.010	Switch Port Advertisement from LLDP or CDP (optional)		
DHCP	192.168.001.100	DHCP address received		
Subnet: 25 DNS1: 192.	3.211.132.127 5.255.254.000 181.002.170 181.002.173	DHCP server, subnet and DNS server address		
<u>ර</u>	192.168.001.001	Gateway IP address		
2ms, 5ms,-		Ping response times (3) means no response		
Ð	www.google.com	Target DNS name or IP address		
Type: TCP Port: 80(H1		Ping or TCP port		
IP: 172.016. 84ms, 89ms		IP address if DNS name TCP or PING response times (3)		

Mobile Interface

Settings Menu				
Test at 1 Gb when advertised. Off by default.	Test 1Gb	Off		
3-minute Auto-off	Auto-off	On		
Send test results to cloud	Cloud Service	On		
Set units for cable test	Cable Unit	Feet		
Configure DHCP or static IP address		>		
Configure target DNS name or IP address and Configure PING or	www.google.com:80(HTTP)	>		
TCP port test type	Wi-Fi LinkSprinter, <ch2></ch2>	>		
Configure SSID and channel of built-in AP	Proxy	>		
Configure web proxy settings (if required by network administrator)		*		

Tools Menu

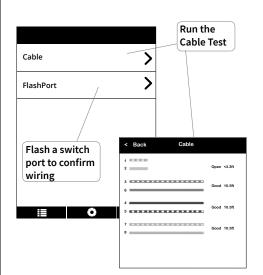

Environmental and Regulatory Specifications

Environmental				
Operating Temperature	32°F to 122°F (0°C to 50°C), Relative			
and Relative Humidity	Humidity 5% to 90%, Non-condensing			
Storage temperature	-4°F to 140°F (-20°C to 60°C)			
Shock and vibration	Random 2g, 5Hz - 500 Hz (class 2), 1 m drop			
Safety	IEC 61010-1, CAT none, Pollution degree 2			
Operating altitude	13,123 ft (4,000 m)			
Storage altitude	39,370 ft (12,000 m)			
EMC	IEC 61326-1, Portable			
Wireless				
Specification Com- pliance	IEEE 802.11 b/g			
Frequency Channels	802.11 Channels 1 thru 11, default is 11			
Operating Frequency	2.412~2.484 Ghz, ISM Band			
Regulatory Domain	EN 301 489-1/17			
General				
Dimensions	4.36"x 1.6" x 1.28" (11.07 cm x 4.06 cm x 3.25 cm)			
Weight with batteries	0.255 lb (0.116 kg)			
Battery	2 AA Alkaline, IEC LR6, or ANSI/NEDA 15A			
Browser	Internet Explorer 9.0, Firefox 3.6, Chrome 5.0, Safari 5.1 (minimum revision).			

99 Washington Street Melrose, MA 02176 800.517.8431 TestEquipmentDepot.com

lwIP is licensed under the BSD license

Software Notice

Copyright (c) 2001-2004 Swedish Institute of Computer Science. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copy right notice, this list of conditions and the following disclaimer. 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following dis claimer in the documentation and/or other materials provided with the distribution.

3. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission. THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT. IN-DIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS: OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright 2013 jQuery Foundation and other contributors http://jquery.com

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sub-license, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions: The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software. THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.



FCC Statement

FC

device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Note: This equipment has been tested and found to comply with the limits for a Class A digital

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. The manufacturer is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



This device complies with Industry Canada li cense-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélec-trique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The radio transmitter has been approved by Industry Canada to operate only with the antenna supplied. Use of any other antenna is strictly pro-hibited for use with this product.

L'émetteur radio a été approuvé par Industrie Canada pour fonctionner uniquement avec l'antenne fournie. L'utilisation de toute autre antenne est strictement interdit d'utiliser ce produit

The term "IC" before the radio certification number only signifies the device meets Industry's Canada IC technical specifications.

PN 770-000046 07/2019 © 2019 NetAlly Wi-Fi^{*} is a registered trademark of the Wi-Fi Alliance.