



Mastercool®
"World Class Quality"


English




[OPERATING INSTRUCTIONS](#)

CHARGING AND TESTING MANIFOLD


(4-WAY)

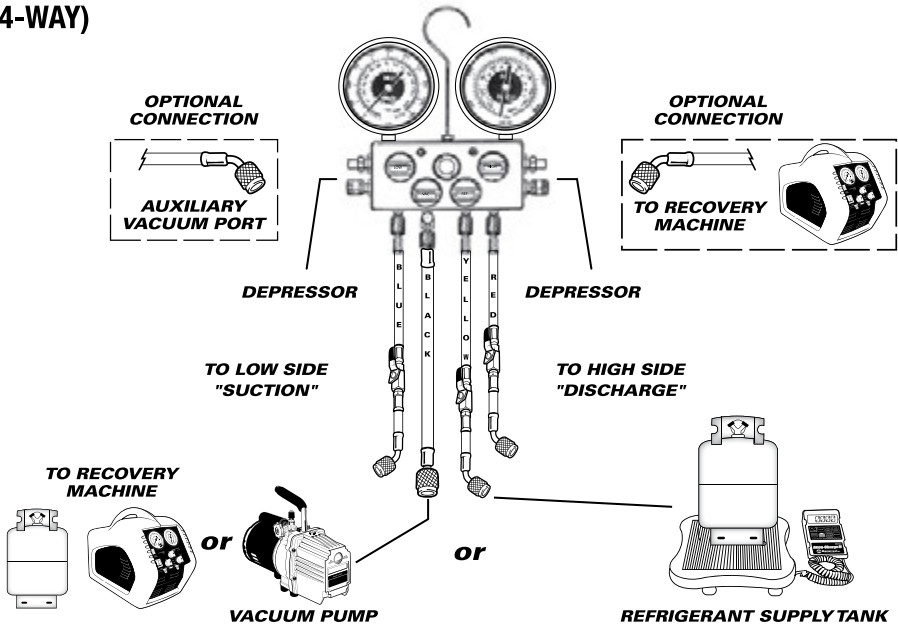

(3-WAY)

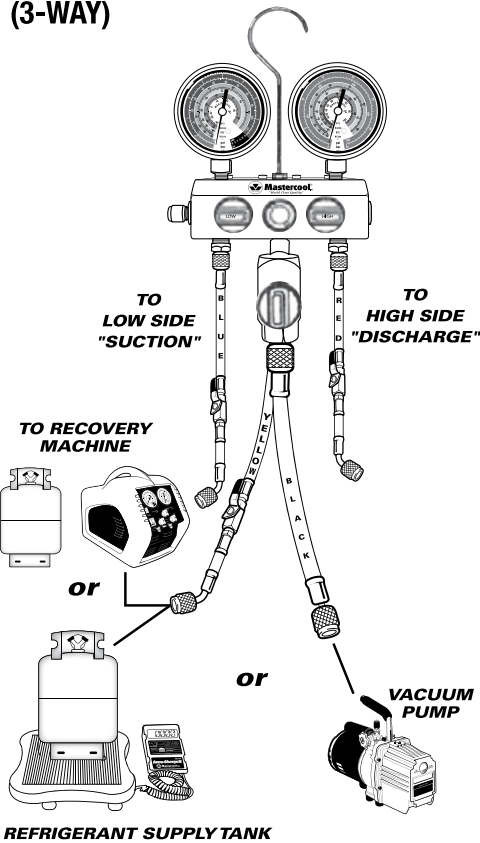

(2-WAY)

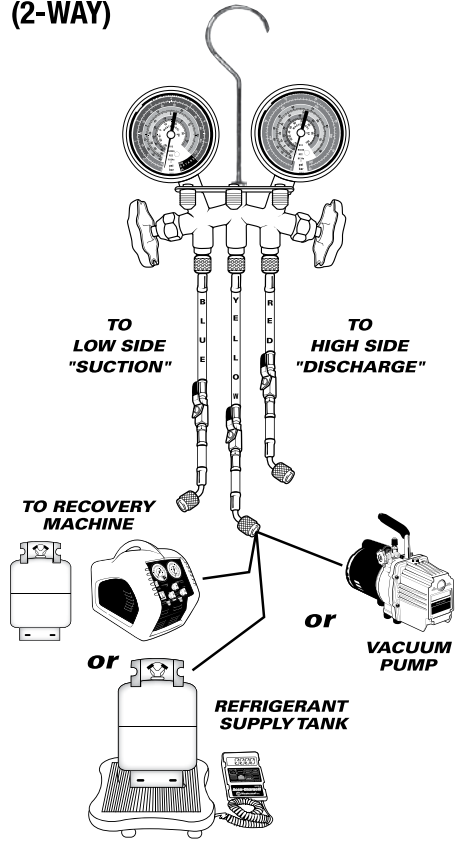



WARNING

Wear Safety Goggles
Avoid Contact with Refrigerant

NOTE (R744): CO2 systems work under extremely high pressures. Only professional technicians are recommended to service these systems. Please use proper safety equipment while servicing.

PRE-SERVICE INSTRUCTIONS

1. Close both valves on the manifold gauge set by turning the high and low knobs clockwise.
2. The gauges are correctly calibrated at the factory before shipment. If calibration is required, remove the lens and insert a straight blade screwdriver into the adjusting screw on the gauge face (except liquid filled gauges.)
3. Connect the (red) hose to the high port and the (blue) hose to the Low port on the manifold gauge.

TESTING AND CHARGING

To properly diagnose the problem in the R/AC system, first check the system's overall performance. This includes monitoring the system's pressure as well as leak testing. Your manifold gauge set will give accurate readings of your system's pressure.

NOTE: Be sure that the hand valves on the manifold gauge set are in the closed position. Always wear gloves and safety goggles when working with refrigerant.

1. Remove the protective caps from the system ports. Check for leaks at the ports.
2. Connect the low side service hose (blue) to the suction side of the compressor. Connect the high side service hose (red) to the discharge side of the compressor.
3. If using adapters, make sure that they are fully tightened and piercing the access valve. Failure to properly access the valve core will prohibit refrigerant flow.

IMPORTANT NOTES

- A system that has been opened or one that is found to be excessively low on refrigerant pressure as a result of a leak, must be fully evacuated by means of recovery and deep vacuum. **NOTE:** Send recovered refrigerant for reclamation.
- A system that has been evacuated must be repaired, leak tested and evacuated to a required level of vacuum.
- If charging on the liquid or high side, use only the high side valve on the manifold gauge set. Make sure the low side valve is closed.
- After charging, test the system by turning it on and running the A/C with both valves closed on the manifold.
- After testing, disconnect the hoses from the system and make sure to use a recovery/recycling machine to evacuate any refrigerant remaining in the hoses or manifold.

⚠ WARNING: This product can expose you to chemicals including lead and lead compounds, which are known to the State of California to cause cancer and birth defects or other reproductive harm.

BRASS & ALUMINUM GAUGE SET PARTS

(2-WAY)

Fig.	Description	Part#	Fig.	Description	Part#
1.	Piston Seal Assembly w/ O-rings (2 pcs.)	34216	10.	Knob only	93211
2.	Piston Seal O-ring (2 pcs.)	34215	11.	Stem, Nut and Stem O-ring	85218
3.	Stem and Nut	34218	12.	Stem O-ring (2 pcs)	85217
4.	Handwheel	34212	13.	Piston Seal O-ring (4 pcs.)	85215
5.	Stem Assembly W/Knob (2 pcs.)	34219	14.	Piston Seal Assembly W/O-rings (2 pcs.)	85216
6.	High Side Gauge (Red) Low Side Gauge (Blue)	-----	(4-WAY)		
7.	O-ring for Shut Off Valve	90336	15.	Repair Kit for 4-Way Ball Valve Manifold	95215
8.	Gasket for Hose Assembly	42010	(3-WAY)		
9.	Stem Assembly w/Knob (2 pcs.)	93210	16.	Repair Kit for 3-Way Ball Valve Manifold	58218

CO2 GAUGE SET

17.	Piston Assembly	55103-A-FX	20.	O-Ring 5 x 1.5	55103-A-FX-07
18.	Valve Stem	55103-A-FX-05	21.	70mm High Side Oil Filled Gauge for CO2	55102-2400
19.	Valve Stem Nut	55103-A-FX-06	22.	70mm Low Side Oil Filled Gauge for CO2	55102-1400

