



MT-7610

Optical Time Domain Reflectometer

USER'S GUIDE

English

Test Equipment Depot - 800.517.8431 - 99 Washington Street - Melrose, MA 02176
TestEquipmentDepot.com

WARNING

You are cautioned that changes or modifications not expressly approved in this document could void your authority to operate this equipment.

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.



NOTE

As the laser is harmful to the eyes, do not attempt to disassemble the cabinet.

Precautions for Use

Use batteries

At the same time, can not use different style or different capacitance batteries. And only charge the rechargeable batteries.

Avoiding condensation problems

As much as possible, avoid sudden temperature changes. Do not attempt to use the drive immediately after moving it from a cold to a warm location, to raising the room temperature suddenly, as condensation may form within the drive. If the temperature changes suddenly while using the drive,

Stop using it and take out batteries for at least an hour.

Storage

When long time no use, must take out the batteries to avoid destroying the device.

Contents

1. Warning and Note	1
2. Standard	3
3. Product presentation	4
3.1 Description	4
3.2 On/off	5
3.2 Measurement Interface	6
3.3 Real-time and average measurement	7
3.4 Event list	8
3.5 Real-time measurement tips	9
3.6 Cursor selection and waveform zoom in/out	10
3.5 Menu	11
3.5.1 Menu-File menu	12
3.5.2 Menu-Measure settings	16
3.5.3 Menu-System settings	17
3.5.4 Menu-Module settings	18
3.5.5 Menu- About	19
3.6 TF card and USB communication	20
3.7 User upgrading	21
3.8 Charging	22
3.9 Detail parameters	23

Standard



Lithium battery



Carrying bag



Host(with TF card)



Power adapter



Power cable




USB cable

Description



1	OTDR optic fiber connector
2	VFL optic fiber connector
3	LCD
4	Zoom control button
5	Full screen button
6	Menu button
7	Power button
8	Confirming button
9	Cancel button
10	Real-time measurement button
11	Average measurement button
12	Up button
13	Left button
14	Right button
15	Down button
16	File operation button
17	Cursor select button
18	Power adapter socket
19	Charge indicator
20	Anti-dust cover
21	USB interface
22	TF(micro SD) card slot
23	Support frame


On/off

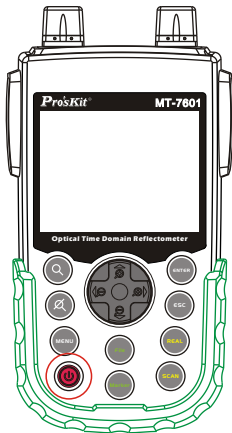

“ ” Button is used to turn on/off the device. Keppressing it for 2 seconds to turn on device. Short press it again to turn off the device.



Press “ ” button to start measuring. But user should modify measurement setting by real requirement before test start.

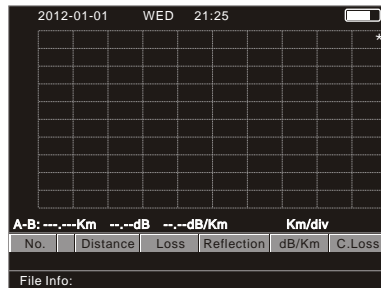


Measurement Interface

2012-01-01 WED 21:25
Date and time


Power

There are 10x10 grids in waveform region.
Horizontal grids mean distance, vertical grids mean dB value. As shown in figure, each horizontal grid represents 0.2km, each vertical grid represents 4dB.

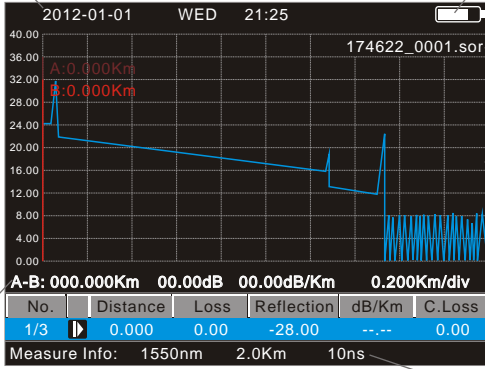

174622_0001.sor
File name


Waveform region




Events list



A-B: 000.000Km 00.00dB 00.00dB/Km 0.200Km/div
The distance and Attenuation between A and B cursor
Every horizontal grid is 0.2Km

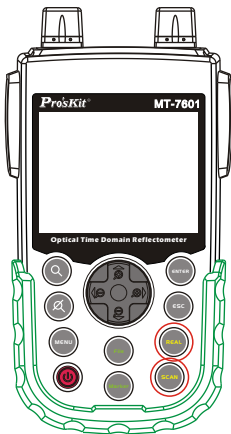Measure info: 1550nm 2.0Km 10ns
Measurement setting info


Real-time and average measurement









Real-time measurement can quickly judge basic faults of optical fiber. Press “  ” button to start real-time measuring. During measuring, you can change range, zoom in or zoom out. Press “  ” button again or “  ” button to stop. The device will not analyse event after real-time measurement in default. Unless you turn on RT analyse in System settings, the device will analyse events according to the last refreshed waveform.

Average measurement can judge the line condition more accurate. It can get a better SNR and fits high requirement circuit. Press “  ” button to start. User can set measurement time from 5 second to 180 second. The device analyses events and generates event list automatically. Press “  ” button during measuring, device will stop measuring, analyses events and generates event list automatically.

Event list


No.		Dis.	Loss	Ref.	dB/Km	C.Loss
1/3		0.000	0.00	-28.00	--:--	0.00







Event list on main interface



Event List						
No.		Dis.	Loss	Ref.	dB/Km	C.Loss
1/6		0.000	0.00	-51.74	--:--	0.00
2/6		0.940	0.08	-51.74	0.24	0.26
3/6		4.301	0.12	-54.67	0.28	1.18
4/6		5.589	--:--	--:--	--:--	--:--
5/6		18.712	-0.05	-41.03	0.22	4.07
6/6		39.809	--:--	-46.02	0.21	9.41

Press key ENTER to locate the corresponding event.


Event List

After measurement or open a waveform in memory, there is event list on the bottom of waveform interface. Press “” button to show the whole event list. Six types of events as followed:

-  Optic fiber start
-  Reflection event
-  Attenuation event
-  Mix event
-  Gain event
-  optic fiber ending

Press Up or Down button to select an event which needs to be located by cursor on the waveform. Then press “” button to return to waveform interface. The cursor will stay on the position of the selected event. Press “” button to return to waveform interface.


Real-time measurement tips

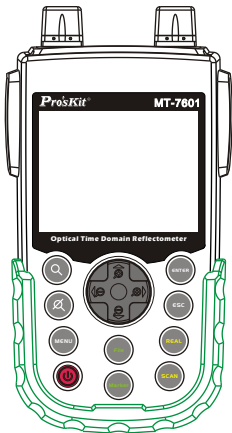





The device supports users to change measurement range during real-time measurement. Start Real-time measuring function and press Up or Down button to increase or decrease the range. And it also supports to change the cursor position and zoom in/out waveform in real-time, which means you can zoom in partial waveform while measuring to judge the network fault.

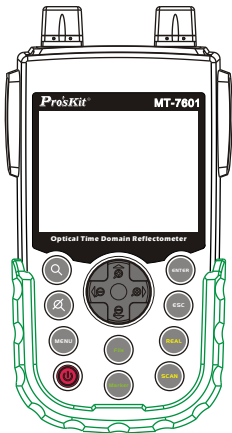
Test Equipment Depot - 800.517.8431 - 99 Washington Street - Melrose, MA 02176
TestEquipmentDepot.com

Cursor selection and waveform zoom in/out





This device has two cursors, A and B. Default distance is 0m, activated cursor turned to bright red. Press “” button switch to another cursor. Press Left or Right button to move cursor. Press Up or Down button to previous or next event. You can calculate the distance and attenuation between two cursors.

Keep pressing “”, then press and Up/Down button to zoom in or out waveform vertically. Keep pressing “”, then press Left/Right button to zoom in or out horizontally. Press “” button to return to full screen display. Notice: the focus of zooming is the location of the activated cursor.

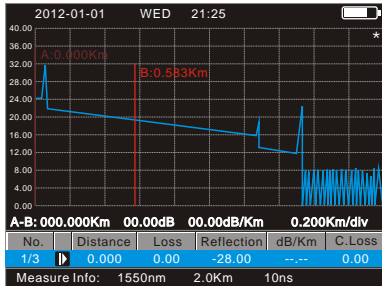

Menu

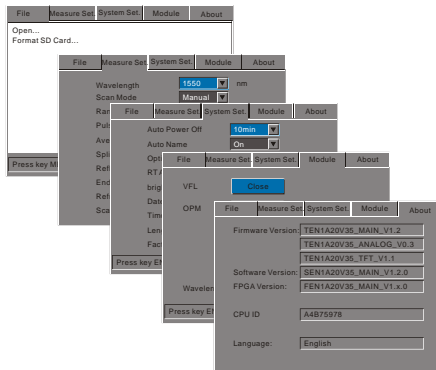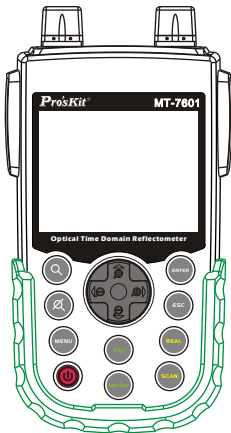

There are five pages of menu which used to configure parameters.

Under waveform interface, press





“MENU” button to switch the five menus cyclically.

The five menus are:

1. File menu
2. Measure settings menu
3. System settings menu
4. Module settings menu
5. About


Menu-File menu

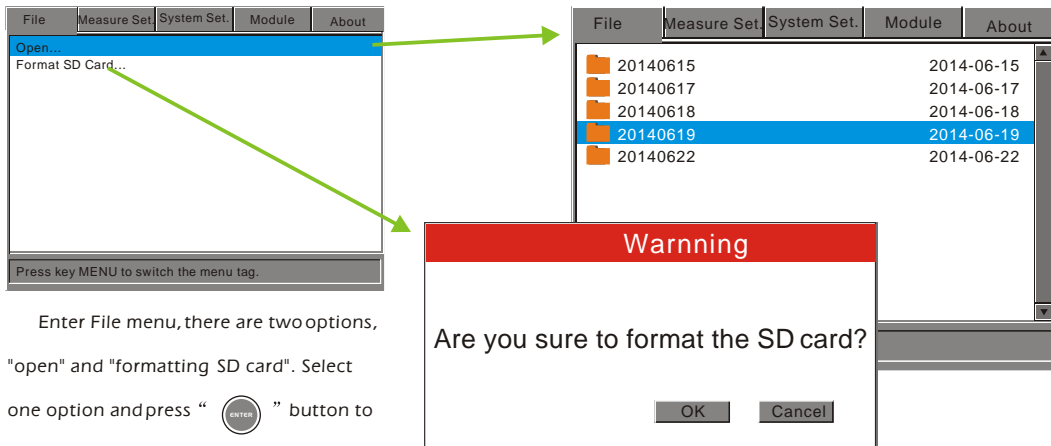





Enter File menu, there are two options, "open" and "formatting SD card". Select one option and press “” button to enter the corresponding operation.

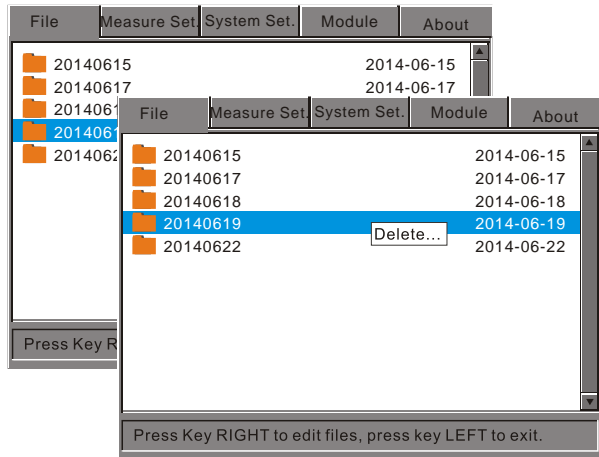Attention: formatting SD card operation will delete all files and cannot recover, please be cautious.


Menu-File menu





Select "open" option, there are folders. The folder name is the date of the file saved, which is generated automatically by system. Files measured in the same day will be stored in the same folder. Folder can only be deleted, but not renamed. And must delete all files before deleting the folder.

Press Up or Down button to select a folder and press “” button to open delete tip. Then press “” button to finish deleting, or press “” or “” button to cancel.

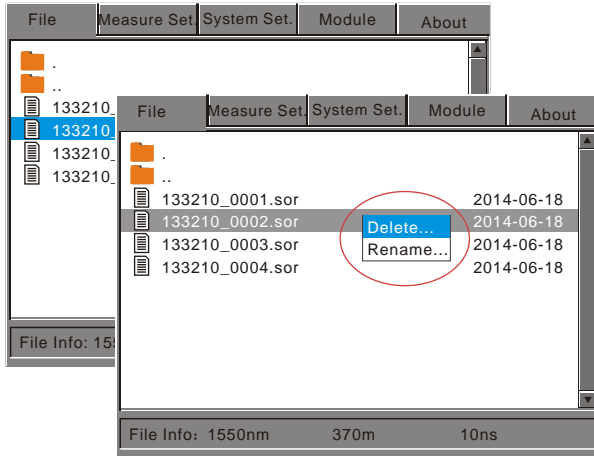
Menu-File menu




Select one folder to display all files inside. Press Up or Down button to select one file and press “” button to display it in main interface. The file information at the bottom is the file's main measurement setting.

Press “” button can delete or rename the file. Filename can be made up of 23 digits, alphabets and special symbols at most. The last four numbers _xxxx is generated by "Automatic naming" function. Shut down this function will not generate.

Menu-File menu

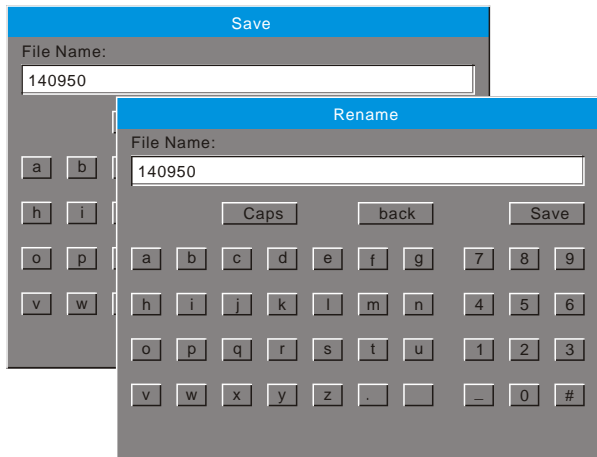

When finish measuring an optic fiber, press

“  ” button to enter storage interface.

Default filename is hour/minute/second of first time storage. Press Up/Down/Left/Right button to select alphabets, digits and symbols on soft keyboard. You can input 23 alphabets at most. If "Automatic naming" is enabled, the filename will automatically generated with four digits. Without shutting down the device, the following stored file's name will automatically plus 1. The file format is .SOR.

On file recalling interface, press Right button can Modify filename, as the same operations above.

Menu-Measure settings

File	Measure Set	System Set.	Module	About
	Wavelength	1550	▼	nm
	Scan Mode	Manual	▼	
	Range	40	▼	Km
	Pulse Width	1000	▼	ns
	Average Time	120	▼	s
	Splice Loss	0.05		dB
	Reflection Threshold	65.0		dB
	End Threshold	2.0		dB
	Refractive Rate	1.46832		
	Scatter Coefficient	52.1		dB

Measure settings menu is used to set relative measurement data, which the judgment of events list is based on. Wrong setting might lead to wrong or missing events.

Wavelength---wavelength of laser

Scan mode---manual and auto mode. Under auto mode, it will match the distance, range and pulse width.

Range---match with the length of measured optic fiber, usually over one level.

Pulse width---set the pulse width of output laser. Usually, small pulse width can measure close event, large pulse width can measure remote distance, but enlarge event's blind area.

Average time--- can set between 5 second and 180 second as average measurement time.

Splice loss---treat as an event when the loss is higher than setting value.

Reflection threshold---treat as an event when the reflection is higher than setting value.

End threshold---treat as the end of optic fiber when the loss is higher than setting value.

Refractive rate---represent the average refractive index of entire optic fiber.

Scatter coefficient--- the intrinsic value of Rayleigh Scattering.

Menu-System settings

File	Measure Set	System Set.	Module	About
Auto Power Off		10min		
Auto Name		On		
Optical Dectector		On		
RT Analyse		Off		
Brightness		60		
Date		2013 - 11 - 02		
Time		21 : 57		
Length Unit		Metric		
Factory Settings		No		
Press key ENTER to edit settings.				

System settings menu is used to set the device's basic functions.

Auto Power Off---set time of automatic off or cancel this function.

Auto Name---name automatically when file is saving, can cancel this function.

Optical Dectector --- detect whether there is signal in optic fiber or not before measuring.

RT Analyse --- set whether analyses events after real-time measuring or not.

Brightness--- adjust brightness of LCD.

Date--- set year, month, day.

Time ---set hour, minute.

Length unit --- default is metric units.

Factory settings --- is used in resetting to default, and has no effect on the set time and stored data.

Menu-Module settings

File	Measure Set	System Set.	Module	About						
VFL	<input type="button" value="Close"/>									
OPM	<input type="button" value="Off"/>									
	<table border="1"> <tr> <td>Power</td> <td><input type="text" value="--.--"/></td> <td>dBm</td> </tr> <tr> <td></td> <td><input type="text" value="--.--"/></td> <td>mw</td> </tr> </table>				Power	<input type="text" value="--.--"/>	dBm		<input type="text" value="--.--"/>	mw
Power	<input type="text" value="--.--"/>	dBm								
	<input type="text" value="--.--"/>	mw								
Wavelength	<input type="text" value="1310"/>	nm								
Press key ENTER to enable the VFL.										

Module settings menu is used to set the Visual Fault Laser, Optical Power Meter and wavelength.

VFL--- cyclically control the red laser Open -- Blink-- Close.

OPM(Optional) ---used as an ordinary optical power meter, detect range is from -60dBm to +3dBm, press Enter button to set the OPM function On or Off, display dBm and mw values. There are six calibration wavelengths: 850/1300/1310/1490/1550/1625nm.

Test Equipment Depot - 800.517.8431 - 99 Washington Street - Melrose, MA 02176
 TestEquipmentDepot.com


Menu- About

File	Measure Set	System Set.	Module	About
Firmware Version:	TEN1A20V35_MAIN_V1.2			
	TEN1A20V35_ANALOG_V0.3			
	TEN1A20V35_TFT_V1.1			
Software Version:	SEN1A20V35_MAIN_V1.2.0			
FPGA Version:	FEN1A20V35_MAIN_V1.x.0			
CPU ID	A4B75978			
Language:	English			


This menu is version details about device's configuration of hardware and software. CPU number is used to generate upgrading code, which should inform distributor or factory before software upgrading.

TF card and USB communication

All measured waveforms are stored in TF card. Using mini USB cable can store data to PC. PC will show a new disk icon, data inside. According to filename, user can store or recall files.

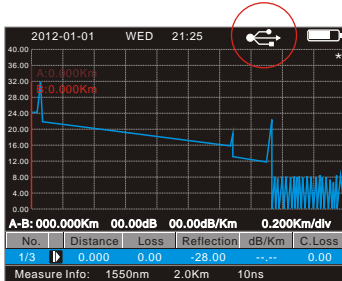

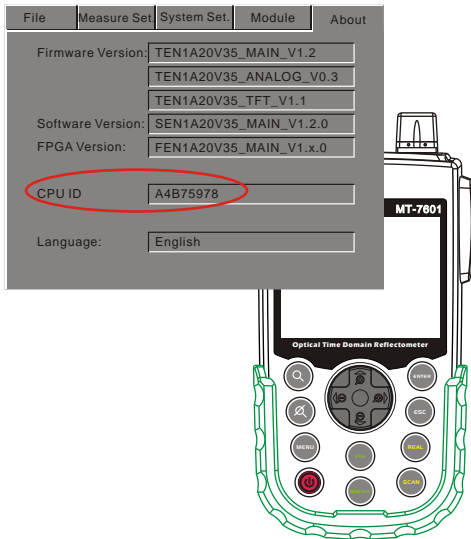


User upgrading




When device needs upgrading, user does not need to send it back to factory. Prepare materials before upgrading as followed:

1. CPU ID
2. TF(micro SD) card, capacity is less than 16GB

Inform the CPU ID to distributor or factory, you can get upgrading firmware only for your device. Store the firmware to TF card through computer. Insert TF card to device when it is power off. Press “  ” and “  ” button and hold them, then press “  ” button to turn on the device, upgrading is starting. You can delete upgrading file in TF card when finish upgrading.

Charging

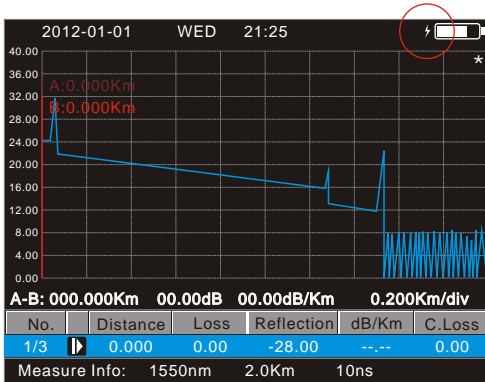




This device has lithium batteries inside, and can only use the power adapter from factory to charge it. Insert the adapter to device, and finish charging in 8-10 hours. Red charge indicator means charging, while green means finish.



Detail parameters

	MT-7610A	MT-7610F	MT-7610G
Optical fiber type	SM optical fiber		
Dynamic range	24dB(1310nm)/22dB(1550nm)		
Wavelength	1310nm±20nm, 1550nm±20nm		
Optical fiber connector	SC/PC (FC/PC、ST/PC Optional)		FC/PC (SC/PC、ST/PC Optional)
Display	3.5 inch color LCD		
Display resolution	320x240		
Distance range (km)	0.37~80		
Distance uncertainty (m)	±(0.8+0.005%*distance+Sampling resolution)		
Pulse width	10ns~10us		
Measurement time	5s~180s		
Attenuation blind area	15m(@minimum plus width)		
Event blind area	3m(@minimum plus width)		
Loss threshold (dB)	0.05dB		
Loss resolution (dB)	0.01dB		
Sampling resolution (m)	0.4 to 1.6		
Sampling points	Up to 70866		
Typical real-time refresh(Hz)	2		
data storage	micro SD card(4GB), support 16GB , 25000 records		
communication connector	Mini USB		

Detail parameters

	MT-7610A	MT-7610F	MT-7610G
VFL power	1mW(650nm±10nm)		
Connector	FC/PC 2.5mm UPP		
Power Source	Lithium Polymer battery 7.4v3100mAh		
Battery worktime	standby>15hours, mesurement>8 hours		
Power supply	adapter: INPUT AC 100~24050/60Hz; OUTPUT:DC10.5V/1.9A		
Plug type			
Auto power Off	Yes		
Low Battery Warning	Low battery energy		
Operation Voice Prompts	No		
Back Light	Yes		
Body Protection	Yes		
Operation Temperature	0~+50°C; <90%RH		
Storage Temperature	-20~+70°C; <90%RH		
Size	195 * 110 *60mm		
Weight	600g		
Individual packing	Color box		

Test Equipment Depot - 800.517.8431 - 99 Washington Street - Melrose, MA 02176
 TestEquipmentDepot.com