WATCHMAN® AREA VOLTAGE DETECTOR

Featuring WAVi® Voltage Indication Technology

Operating & Instruction Manual



Making the Invisible Visible®

Test Equipment 99 Washington Street Melrose, MA 02176 Phone 781-665-1400 Toll Free 1-800-517-8431





Featuring WAVi® Voltage Indication Technology

Operating & Instruction Manual

GENERAL DESCRIPTION
POINTS TO UNDERSTAND BEFORE PROCEEDING
SAFETY / WARNINGS
HOW IT WORKS5
HOW TO USE IT
WHEN TO USE IT6
A WORD ABOUT ELECTRIC FIELDS
WARNING DISTANCE CHARTS9-11
BATTERY REPLACEMENT
TECHNICAL SPECIFICATIONS
ACCESSORIES
TERMS AND CONDITIONS OF SALE

GENERAL DESCRIPTION

The Watchman Work Area Voltage Detector uses WAVi® voltage indication technology to detect strong electric fields surrounding high voltage conductors and power distribution equipment. It is typically placed in the vicinity of power lines or high voltage equipment. The Watchman provides an extra level of safety for trained personnel working on or near high voltage systems.



POINTS TO UNDERSTAND BEFORE PROCEEDING

The Watchman Area Voltage Detector detects electric fields. Make sure you understand these points before proceeding:

- Electric fields surround every energized AC conductor.
- The closer you are to a conductor, the stronger the field will be.
- Higher voltage means a stronger electric field and a greater warning distance. Lower voltage means a reduced warning distance.
- Electric fields are NOT blocked by plastics, dry wood or clothing.
- Electric fields ARE blocked by ANY conductor such as a metal cabinet or door, wet wood, metal fences, green trees, a growing shrub or hedge and tall wet grass.
- The detector will not find cables buried under the ground. The ground is a conductor and will block electric fields.
- Insulation on a wire does not block the electric field and does not affect warning distances.
- Underground primary cables are both insulated AND shielded. The shield is a conductor, is grounded, and will block the electric field.
- Molded cable terminators such as elbows are, like the cables they are installed on, both insulated and shielded and will block electric fields.
- Your body will block electric fields. Placing yourself between a high voltage source and the Watchman Detector may prevent it from detecting the high voltage.
- Do not use the Watchman Detector while holding it in your hand. Wrapping your fingers around the Detector will block electric fields, preventing it from working properly.

SAFETY

- Always use proper high voltage procedures, including personal protective equipment, when working near or around high voltage equipment or conductors.
- Do not rely on the Detector as your sole source of high voltage detection.
 Risk of electrocution is inherent in or around high voltage.
- · Always use proper high voltage procedures for testing and grounding.
- Grounded equipment can appear to be live in close proximity to energized conductors.

WARNING



NOT FOR USE BELOW 2400 VOLTS AC.

OPERATIONAL IMPAIRMENT

If the Detector is used in a manner not described in this instruction manual, the protection and effective operation of this equipment may be impaired.

The Detector will not detect DC voltage or stored charge such as in charged capacitors or underground cable. Always use proper high voltage procedures, including personal protective equipment, when working near or around high voltage equipment or conductors. Always use proper high voltage procedures for testing and grounding. Do not rely on the Watchman Area Voltage Detector as your sole source of high voltage detection. Risk of electrocution is inherent in or around high voltage.

HOW IT WORKS

The Watchman Area Voltage Detector works by sensing the presence of the electric field surrounding anything that conducts high voltage electricity.

Spinning lights indicate an electric field and nearby energized conductor. The Watchman Detector has a power and self-test button on the top of the unit to verify battery power and proper functioning of the device. The short flashing lights "heartbeat" indicate that the Watchman Detector is on, checking for the presence of high voltage electric fields.

For more information, refer to the A Word About Electric Fields section on page 7.

HOW TO USE IT

The Watchman Area Voltage Detector should be placed in the vicinity of high voltage conductors that are either energized or could possibly become energized for the purpose of warning those in the vicinity of the presence of high voltage. Refer to the charts starting on page 9 for determining the appropriate placement distances.

The Watchman Area Voltage Detector can be placed as described in these examples:

- 1. The Watchman Detector can be placed on the ground. The Detector will detect energized high voltage conductors on all sides and above it. Refer to the charts starting on page 9 for determining the detection range and appropriate placement distances.
- The Detector can be placed on top of a typical traffic cone using the available accessory cone bracket. When a Watchman Detector is placed on a branded green traffic cone, overall visibility is improved and the Detector is positioned for best visibility.
- 3. The Watchman Detector can be applied to a fence or other similar structure using the accessory hanger bracket. When applied to a metal fence the Detector will only detect conductors on the side of the fence it is hanging from.
- 4. The Detector can be applied directly to a bare or insulated overhead conductor up to 35kV using this same accessory hanger bracket. In this application the Detector will provide a direct indication of the presence of voltage on either the conductor to which it is applied or on other nearby conductors.

WHEN TO USE IT

The Watchman Area Voltage Detector can be used anytime, anyplace and for any reason. The decision of when to use the Detector is made by the user and by your company's safety and work practices. When used properly, the Detector can provide an additional warning to users exposed or working around energized high voltage electricity and equipment. Awareness of the presence of a high voltage electric field allows the user to take additional precautions against accidental contact with energized equipment.


The Watchman Area Voltage Detector provides an early warning of the proximity of potentially hazardous high voltage electricity and equipment. The Detector lights will spin when an electric field is detected and will continue to spin for as long as the electric field is present.

A WORD ABOUT ELECTRIC FIELDS


Electric fields surround every energized conductor. The Watchman Area Voltage Detector measures the strength of these electric fields to warn the user when fields are strong enough to indicate the presence of nearby high voltage conductors.

A downed power line is a typical hazardous situation where the Detector can provide a warning. This power line lying

on the ground sets up a high voltage field surrounding the conductor that the Detector will sense and warn the user.

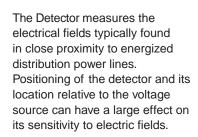

The Watchman Detector detects voltages above it and on all sides. The cone mount conveniently places the Detector for best visibility. The Detector can be mounted on the top of this bracket for best sensitivity above and to the sides. It can also be mounted on the side of this bracket for best detecting conductors in one direction. Typical detection distance is 10 feet from a 7kV conductor.

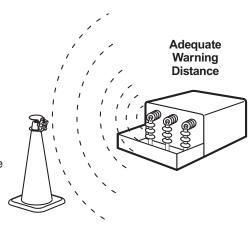

The Watchman Area Voltage Detector measures only the strength of the electric field. It cannot directly measure distance to the source of the electric field such as an energized conductor.


The higher the voltage, the stronger the field and the greater the alarm distance.

The reverse is also true; the detector may alarm due to the very close proximity of low voltage such as from a computer terminal or a desk lamp. It may even alarm if it is placed up against a typical 120 volt wall outlet.

Electrically conductive objects located underneath power lines can appear to be live. A metal fence or a growing hedge can cause a distortion of the electric field under these lines and result in high electric field strength near the ground. The Watchman Area Voltage Detector will provide an early warning of high electric fields, but not all fields are directly caused by nearby energized objects. To prevent the Detector from issuing too many false alarms, it should not be used in typical office or factory environments where all the equipment is low voltage and there is no danger of contacting energized high voltage conductors.


Conductors of different phases in close proximity will also reduce warning distances due to field cancellation effects.

Placing the Watchman Area Voltage Detector in environments such as substations or under transmission lines may result in continuous voltage indication.

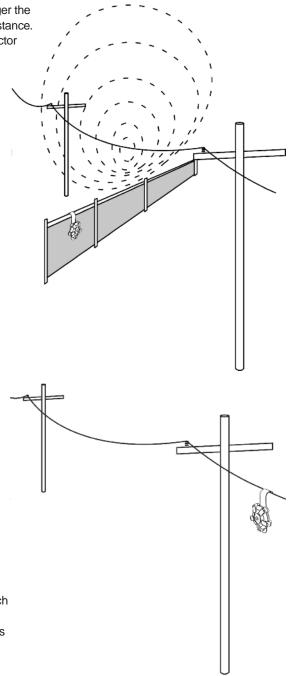

WARNING DISTANCE CHARTS

Watchman Detector on Side of Cone Bracket

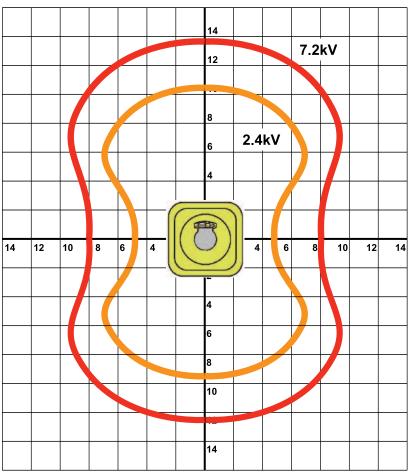

Warning Distance Feet


Each grid square is two feet.


Test conductor is 1 inch diameter bar, three ft. long, three ft. above the ground. Lines show detection distance at line to ground voltages.

WARNING: Treat all conductors as live unless or until there is a visible break from a live source and a ground is in place.

Be aware of unique conditions that may be present around three phase delta systems. Unlike grounded Y systems, a single phase of a delta system can become grounded without causing an outage and the delta system can continue to operate with this grounded phase. If this phase is grounded as a result of a downed conductor or other storm damage, it may be grounded only temporarily and could become reenergized if moved or disturbed. The Watchman Area Voltage Detector will not detect any grounded conductor, whether it is a grounded delta phase conductor, a guy wire or a pole ground.

WARNING DISTANCE CHARTS

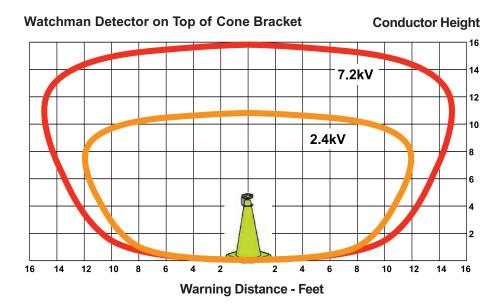

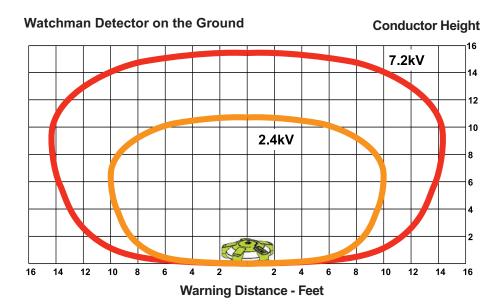

Each grid square is two feet.
Test conductor is 1 inch diameter bar.
Lines show detection distance at line to ground voltages.



NOT FOR USE BELOW 2400 VOLTS AC.

Before using, read the instruction manual and review product labeling.

Make certain that the Detector is equipped with 3 AAA batteries. Press the Power / Self Test button on the top of the Detector to turn it on and verify spinning lights before and after each use. The test circuitry generates an internal voltage which the Detector then detects by turning on the lights. DO NOT USE the Watchman Area Voltage Detector if the On/Test button fails to activate the lights. Remove from service and contact the factory to arrange for repair.



CAUTION – Press and hold the On/Test button before and after each use to ensure proper operation.

The detector will show spinning lights when it detects high voltage. For more details, refer to the Warning Distance Charts starting on page 9.

WATCHMAN



Work Area Voltage Indicator

Read instructions before use. To power on and self-test this unit, hold button for a few seconds. If the chasing lights do not turn on, or do not remain on while button is held, the batteries are low and must be replaced. While on, an intermittent "heartbeat" flash will be visible. If the heartbeat stops, batteries must be replaced. Unit may be magnetically fixed to certain metal surfaces, or other objects using separate accessories. Do not hold this device while in use. Use extreme caution during use as high voltage may be nearby. Three (3) AAA batteries needed for operation.



CAUTION: Strong Magnets. Keep away from credit cards,hard drives, and magnetic strips. **WARNING:** Do not rely on this device as your only indication of high voltage.



DANGER: Chasing lights indicate proximity to high voltage and associated risks of arcing and electrocution.

www.HDElectricCompany.com

WM-01

9/16

BATTERY REPLACEMENT

The Watchman Area Voltage Detector will indicate if it has low batteries. When the batteries get low the Detector stops the heartbeat lights. The Detector will continue to detect voltage until the remaining battery life is exhausted, in about 4 hours.

To replace the batteries, access the batteries through the door on the bottom. A coin may be required to open the battery compartment door. Remove and dispose of the old batteries, replacing them with a fresh, new set of AAA alkaline or lithium batteries. Be sure to connect the proper battery polarity and replace the cover. Press and hold the On button to confirm proper operation. If after changing the batteries the On button fails to confirm proper operation, DO NOT USE the Watchman Area Voltage Detector. Remove it from service and contact the factory to arrange for repair.

CLEANING

To clean, wipe with a damp cloth with water. Do not use harsh chemicals or solvents.

TECHNICAL SPECIFICATIONS

MODEL NUMBER: WM-01

SENSITIVITY: Factory set at 50/60Hz sensing threshold. The Detector will only detect

AC voltage. Do not use below 2400 Volts.

TYPICAL WARNING DISTANCE: 7 feet (2.13m) from a 4kV AC conductor. For more details, refer to the Warning Distance Charts starting on page 9.

OPERATING FREQUENCY: 50Hz/60Hz

BATTERIES: AAA ANSI 24A, IEC LR03 or AAA lithium ANSI 24-LF, IEC-FR03. Life 2 years in storage, 1,000 hours standby heartbeat mode, 10 hours continuous voltage indication.

voltage indication.

WEIGHT WITH BATTERY: 8 oz. (227g.)

DIMENSIONS: 3.8 in. (9.7cm.) diameter x 1.4 in. (3.6cm.) high

VOLTAGE RANGE: 2400VAC and above ENCLOSURE MATERIAL: ABS UL 94-HB PRINTED CIRCUIT BOARDS: FR-4 UL94V-0

INGRESS PROTECTION: IP67

ENVIRONMENTAL CONDITIONS

CONDITIONS: Indoor and outdoor use, IP67

ALTITUDE: Up to 6,566 ft. (2000M)

OPERATING TEMPERATURE: -20°F to +140°F (-29°C to +60°C)

HUMIDITY: 95% to 60°C (non-condensing)


OVERVOLTAGE CATEGORY: II Non-contact

POLLUTION DEGREE: PD4


ACCESSORIES


WM-CB1 Cone Mount Bracket

The WM-CB1 Cone Mount Bracket accessory allows the Watchman Detector to be placed on a safety cone above the the ground for better visibility and sensitivity to overhead conductors. Use the Detector mounted on the top of this bracket for best sensitivity above and to the sides. The Detector can also be mounted on the side of this bracket for best detecting conductors in the direction facing the Watchman Area Voltage Detector.

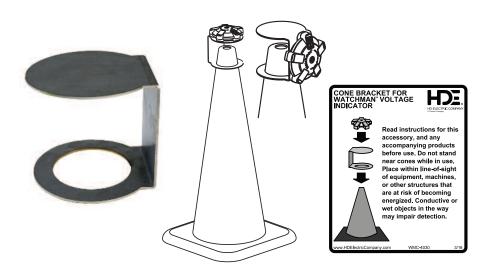



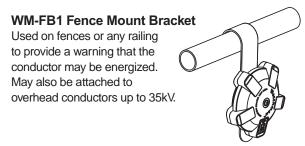

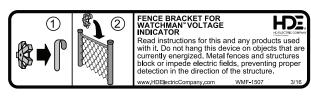



WM-BGL Storage Bag Large storage bag; holds 12 Watchman Detectors and accessory brackets.



WM-BGS Storage BagSmall storage bag; holds 6 Watchman
Detectors and accessory brackets.

TERMS AND CONDITIONS OF SALE

HD Electric Company is herein referred to either as "HDE" or "Seller" and the customer or person or entity purchasing goods or services (hereinafter collectively referred to as "Goods") is referred to as the "Buyer". These Terms and Conditions, any price list or schedule, quotation, acknowledgment or invoice from HDE relevant to the sale of the Goods and all documents incorporated by specific reference therein, constitute the complete and exclusive statement of the terms of the agreement governing the sale of Goods by HDE to Buyer, Buyer's acceptance of the Goods will make buyer's assertance to these terms and conditions without variation or addition. Any different or additional terms in Buyer's purchase order or other Buyer documents are hereby objected to. HDE reserves the right in its sole discretion to refuse orders.

1. PRICES AND TAXES: Unless a fixed price is quoted, the price at which this order is accepted is subject to adjustment to HDE's price in effect at the time of order. Any current or future tax or governmental charge (or increase in same) affecting Seleri's costs or production, sale or delivery or which Seleri is otherwise required to pay or collect in connection with the sale, purchase, delivery, storage, processing, use or consumption of Goods (but excluding any fave on Seleri's net increase in some or profit) shale be for Buyer's account and shall be added to the price.

2. TERMS OF PAYMENT: Terms are stated on HDE's invoice in U.S. currency. HDE shall have the right, among other remedies, either to terminate this agreement or to suspend further performance under this and/or other agreements with the Buyer in the event Buyer falls to make any payment when due, which other agreements Buyer and Seleth hereby in earned accordingly, or HDE otherwise deems itself insecure. Buyer shall be liable for all expenses, including attorneys' less, retaining to the collection of past due amounts. Should Buyer is financial responsibility become unastiended to HDE. Cash payments or security staffscarlory to HDE may be required by HDE for fluture deliveries and for the goods therefolder delivered. If such cash payment or security is not provided, in addition to HDE's other rights and remedies, HDE may discontinue deliveries. HDE may apply a finance charge for payments made by credit card.

3. SHPMENT AND DELNERY. Unless otherwise expressly provided, shipments are made F.O.B. HDE's shipping point, Risk of loss or dramaps and responsibility shall pass from HDE to Buyer topon delivery to and inceptly promormor carriers. Any claims for shortages or dramages and selfered in transit are the responsibility of buyer and shall be sub-unified by the Buyer directly to the carriers. Shortages or dramages must be acknowledged and signed for at the time of delivery, While HDE will use all responsible commercial efforts to maintain the delivery date(s) acknowledged or quoted ship HDE, all shipping dates are approximate and not guaranteed. HDE reserves the right to make partial shipments. HDE, at the principal carriers are provided ship with the ship and the ship of the

4. HDE LIMITED WARRANTY: HDE covers is products with a manufacturer's warranty against defects in material or workmanship or the versus to expend or fire years in the case of Capacitor Controls and in all other circumstances for a period of new years in the case of Capacitor Controls and in all other circumstances for a period of new years in the case of Capacitor Controls and in all other circumstances for a period of new years in the case of Capacitor Controls and in all other circumstances or a period of the years in the case of Capacitor Controls and in all other circumstances or a period of the years in the case of Capacitor Controls of a period of the years in the Case of Capacitor Controls of the years of the Capacitor Controls of the Years of Yea

5. LIMITATION OF REMEDY AND LIABILITY: THE SOLE AND EXCLUSIVE REMEDY FOR BREACH OF ANY WARRANTY HEREUNDER SHALL BE LIMITED TO REPAIR, CORRECTION, REPLACEMENT OF CREDIT UNDER SECTION 4. HID SHALL NOT BE LIABIL FOR DAMAGES CAUSED BY DELAY IN PERFORMANCE, AND IN NO EVENT, REGARDLESS OF THE FORM OF THE CHAIN OF THE CHAIN OF ACTION WHITE THE PROPERTY OF THE CHAIN OF THE C

6. EXCUSE OF PERFORMANCE (FORCE MAJEURE): HDE shall not be liable for delays in performance or for non-performance due to acts of God, acts of Buyer, war, fire; flood; weather; sabotage, strikes, labor disputes, o'dil disturbances or rioks; governmental requests, restrictions, allocations, laws, regulations, orders or actions; unavailability of or delays in transportation; default of suppliers; or unforeseen circumstances or events beyond HDE's reasonable control. Deliverse or other performance may be suspended for a naceportage bend or cancelled by HDE govon force to the event of any of the foregoing, but the belance of this agreement shall otherwise remain unaffected. IHDE determines that its ability to supply the total demand for the Goods, or to obtain material used directly or indirectly in the manufacture of the Goods, is hindered, limited or made impranticable use to causes set forth herein, HDE may allocate its available supply of the Goods or such material (without obligation to acquire other supplies of any such Goods or materials) among itself and its purchasers on such basis as HDE determines to be equitable without liability for any failure of performance which may result therefrom.

7. CHANGES: HDE reserves the right to change designs and specifications for standard Goods without prior notice to Buyer, but not with respect to custom Goods being made for Buyer. HDE shall have no obligation to install or make such change in any Goods manufactured prior to the date of such change.

8. ASSIGNMENT: Buyer shall not assign its rights or delegate its duties hereunder or any interest herein without the prior written consent of HDE, and any such assignment, without such consent, shall be void.

9. INSTALLATION: Buyer shall be responsible for receiving, inspecting, testing, storing, installing, starting up and maintaining all Goods

10. NSPECTIONTESTING: Buyer, at its exposes, agrees that it will promptly inspect the Goods upon receipt thereof, and in no event inset than thirty (30) days from the date of receipt of the Goods. Buyer shall deliver in IDE within iffeen its (15) days of inspection, but in or event let than Instyle (36) days from the date of receipt of the Goods so received by Buyer. In the event no such written notice of any and all deficiencies, deficiency, existings reformance, price or appearance of the Goods so received by Buyer. In the event no such written notice is received by HDE. Buyer shall be deemed conclusively to have inspected and such Goods unconditionally any and lit rights and claims, including withintion any right to reject the Goods or local michanges in respect the resource of calm damages in respect the resource of calm damages in respect the resource of calm damages in respect the resource of the Condition of the VIDE of the resource therefore, obtaining from HDE a material authorization number and observing such instructions as HDE may give in authorizing such return. In the event a return is authorized by HDE, are resourcing for any Goods requiring repackaging or maintenance a term promote (2017) restording fee shall be assessed to Buyer in the final credit amount.

11. SERVICEs: If this agreement requires HDE to perform or provide any services, HDE (including without limitation its successors, assigns, agents or any person or entity acting at HDE's direction) shall not be responsible for any damages, claims, liabilities or expenses of any nature arising out of such services.

12. U.S. EXPORT CONTROL LAWS: All Goods sold to Buver by HDE hereunder are subject to U.S. Export Control Laws. Buver hereby agrees not to re-sell or divert any goods contrary to such laws.

13. COMPLIANCE: Selevic/contractor shall comply with all applicable federal, state or local laws, nules, regulations, or orders. Selevic/contractor shall comply with Executive Order 11246, as amended by Executive Order 11367, and the applicable provisions or of the Office of Federal contract Compliance Programs (OFCCP), 41 CFR Part Roll, which are incorporated therein by their efference, Buyer shall comply with all applicable federal, state, or local laws, nules, regulations or orders including but not limited to the Foreign Corrupt Practices Act of 1977, as amended. HDE reserves the right to delay or refuse delivery if requests for reasonable assurances of Buyer's compliance are not tendered as requested.

14. MISCELLANEOUS: These terms and conditions supersede all other communications, negotiations and prior or all or written statements regarding the subject matter hereof. No change, modification, rescision, dischange, bandorionment, or waiver of these terms and conditions shall be binding upon HDE unless made in writing and signed on its behalf by its duy authorized representative. No conditions, usage or trade, course of dealing or performance, undestanding or agreement purporting to modify, vary, explain, or supplement these terms and conditions shall be binding unless hereafter made in writing and signed by Seller. No modification shall be effected by HDE's receipt or acceptance of Buyer's purchase orders, shipping instruction forms, of other documentation containing terms at variance with or in addition to those self forth herein, all of which are objected by HDE. No waiver by HDE with respect to any threat or default of any order of dealing, shall be deemed to constitute a continuing waiver of any other breach or default of any other right or remedy, unless such waiver be expressed in writing and signed by HDE. All typographical or derical errors made by HDE in any quotation, acknowledgment or of the signed enter shall be governed by such of the state of limits without regard to its conflict of law principles.

15. DISPUTE RESOLUTION: In the event of any dispute INCLUDING, BUT NOT LIMITED TO, BREACH OF CONTRACT, BREACH OF WARRANTY, CLAIMS BASED IN TORT, NEGLIGENCE, PRODUCT LIABILITY, FRAUD, MARKETING, STATE OR FEDERAL REGULATIONS, ANY CLAIMS REGARDING THE ENFORCEABILITY OF THIS LIMITED WARRANTY, AND THE WAIVER OF CLASS ACTION TRIALS between Buyer and Seller, either may choose to resolve the dispute by binding arbitration, as described below, instead of in out. THIS MEANS IF EITHERY OR SELLER CHOOSE BINDING ARBITRATION, DIFFIER PARTY SHALL HAVE THE RIGHT TO LITIGATE SUCH CLAIM IN COURT OR HAVE A JURY TRIAL. DISCOVERY AND APPEAL RIGHTS ARE LIMITED IN BINDING ARBITRATION. Buyer and Seller agree that the proper wanter Arbitration in sits or shorten by Buyer or Seller of all actions arising in connection herewith shall be only in the state of liminos and the gaine size bush invision state. On the connection the seventh arbitration of the discovered by the property of the property of the international Sales of Goods shall not anyly to this connection.

16. CLASS ACTION WAIVER: BINDING ARBITRATION MUST BE ON AN INDIVIDUAL BASIS. THIS MEANS NEITHER BUYER NOR SELLER MAY JOIN OR CONSOLIDATE CLAIMS IN ARBITRATION BY OR AGAINST OTHERS, OR LITIGATE IN COURT OR ARBITRATE ANY CLAIMS AS A REPRESENTATIVE OR MEMBER OF A CLASS OR IN A PRIVATE ATTORNEY GENERAL CAPACITY. ADMINISTRATION OF ARBITRATION OF ARBITRATION AND A COURT OF A COURT OF ARBITRATION. THE ARBITRATION AND A COURT OF A CO

HD Electric Company is committed to ongoing review and improvement of its product lines, and thus reserves the right to modify product design and specifications without notice.

HD Electric Company® products are available through HDE® sales representatives worldwide.

HD Electric products receive final assembly and shipment from HDE's production facility at

Suite 400 - 4320 Executive Drive, Southaven, MS 38672.

HD Electric Company is ISO 9001:2015 certified